

## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.









 
## NOTICE

\* Please make sure that you have all parts indicated before you begin assembly of this item

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly

\* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Front Leg Leg		1x
B	Front Right Leg		1x
C	Back Left Leg		1x
D	Back Right Leg		1x
E	Seat Panel		1x
①	Screw		12x
②	Lock Washer		12x
③	Screw Washer		12x
M	Allen Key		1x

**ASSEMBLY INSTRUCTIONS APPLICABLE FOR ALL DINING CHAIRS.**  
**THE DESIGN OF THE CHAIR IN THE DRAWINGS MAY VARY FROM YOUR ACTUAL CHAIR, BUT ASSEMBLY IS THE SAME ON ALL MODELS.**



**Weight Capacity: 275 lbs**

**WARNING: DO NOT STAND ON CHAIR**

**WARNING: DO NOT OVER TORQUE BOLTS/SCREWS**



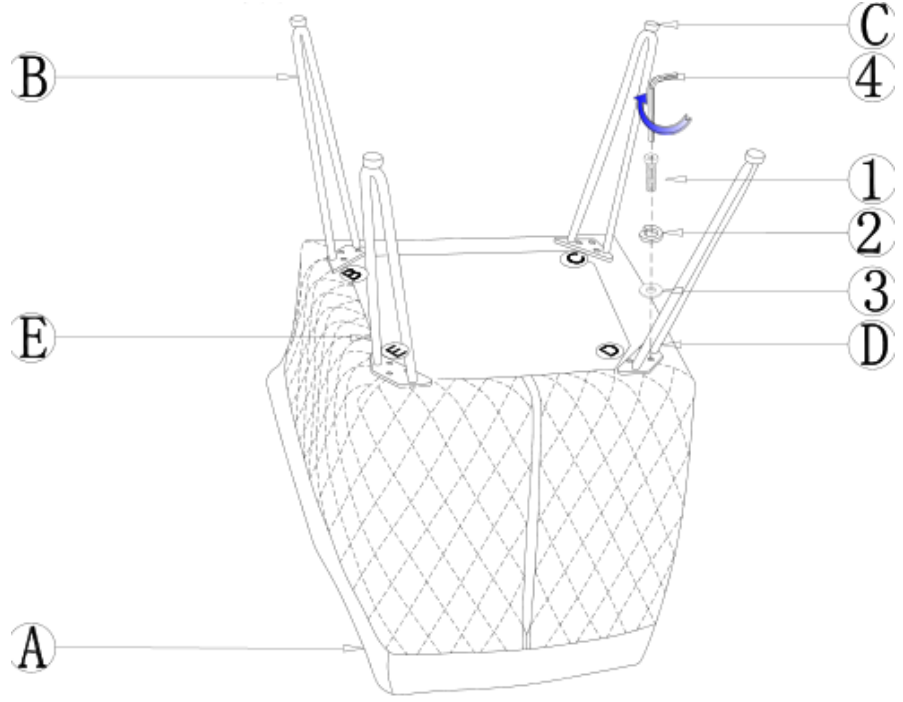

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

	
<p><b>STEP 1</b> ATTACH LEGS(A),(B),(C),(D)TO SEAT PANEL(E),USING HARD WARE ①,②,③, TIGHTEN WITH ALLEN KEY ④.SEE PICTURE ABOVE.</p>	<p><b>STEP 2</b> TURN OVER THE PRODUCTS. THE ASSEMBLY IS FINISHED.</p>