 


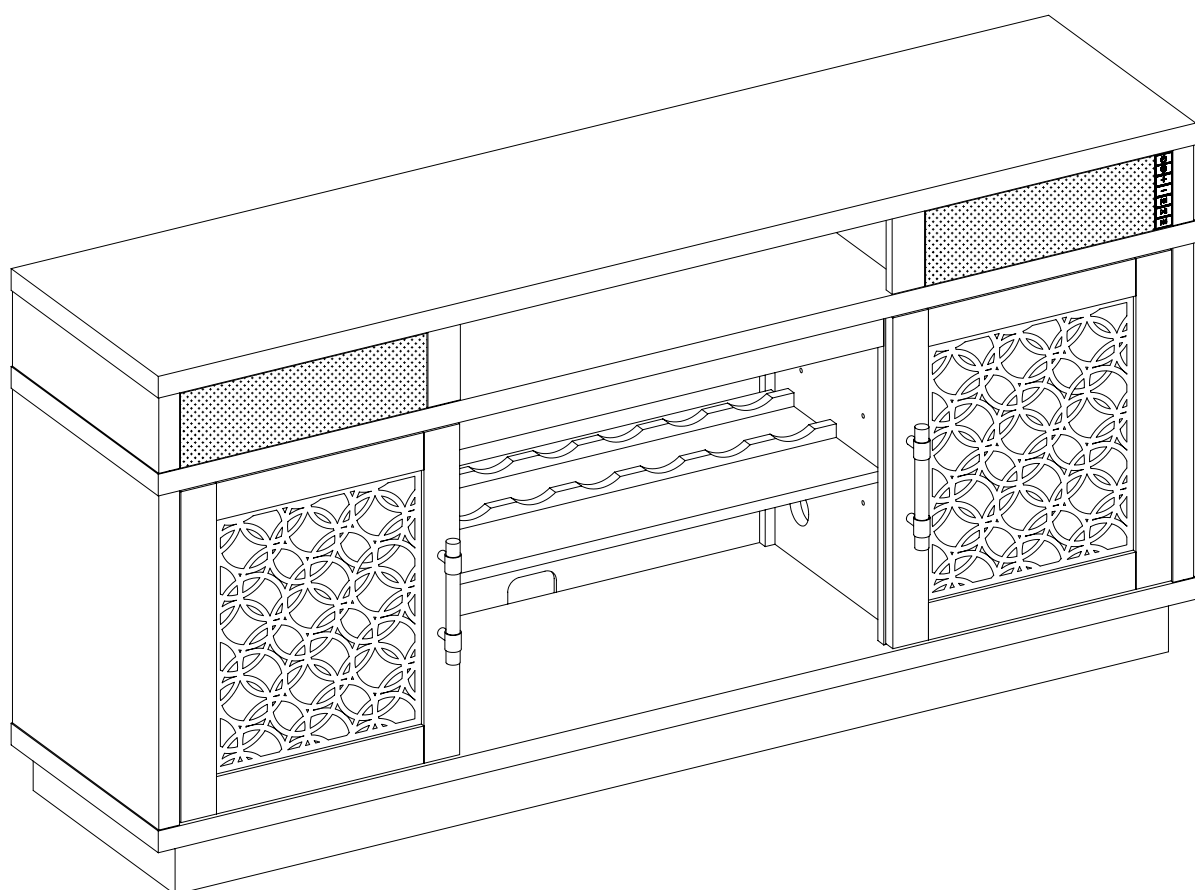

REGISTER PRODUCT INFO

Thank you for purchasing our product. Please take a moment to register your new purchase so that you can:

- Order parts
- Download user manuals
- Request product information or

When registering your product, be sure to sign up for our updates to receive important service information and helpful tips. We value your privacy and will never share your personal information with other organizations. The information you submit is used only for providing product related services to you.

If you are unable to register your product, please save your proof of purchase for part replacement.

DEPENDABLE CUSTOMER SERVICE

Questions?

IMPORTANT:
Retain for future reference.
Read carefully.

ENREGISTREMENT INFO PRODUIT

Nous vous remercions d'avoir acheté un produit, conçu aux États-Unis.

Veuillez prendre un moment pour enregistrer votre nouvel achat

Pour les nouveaux utilisateurs, sélectionnez simplement la catégorie qui s'applique au produit que vous avez acheté et remplissez le formulaire d'enregistrement du produit. Une fois le processus d'enregistrement complété, uniquement pour vous fournir des services en relation avec

d'enregistrement du produit. Une fois le processus d'enregistrement complété, uniquement pour vous fournir des services en relation avec

UN SERVICE À LA CLIENTÈLE FIABLE

Des questions?

IMPORTANT:
Conserver pour référence
future. Lisez correctement

REGISTRAR LA INFORMACIÓN DEL PRODUCTO INFO

Gracias por comprar un producto, diseñado en los E.U.A.

Esperamos que le brinde tómesese un momento de su tiempo para registrar su compra nueva

Para los usuarios nuevos, simplemente seleccione la categoría que se nunca compartirá su información personal con otras organizaciones. La información que usted envíe sólo se utiliza para fines de proporcionarle

Para los usuarios nuevos, simplemente seleccione la categoría que se nunca compartirá su información personal con otras organizaciones. lamente seleccione la categoría que se nunca compartirá su información personal con otras organizaciones. La información que usted envíe sólo se utiliza para fines de proporcionarle

SERVICIO DE ATENCIÓN AL CLIENTE FIABLE

¿Tiene preguntas?

IMPORTANTE:
Conservar para
futuras consultas. Lea
cuidadosamente.

Place of purchase/Lieu de l'achat/Lugar de compra:

Date of purchase/Date de l'achat/Fecha de compra:

Model #/No de modèle/Número de modelo:

Notes/Remarque/Notas:

SAFETY INFORMATION



Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING

- Some steps are more easily handled with two adults.

CAUTION

- Before assembly and/or installation, carefully unwrap all parts.
- Locate and set aside the hardware kit before discarding packaging.
- Use care when assembling your new product. Take your time and follow assembly instructions closely.

INFORMATION DE SÉCURITÉ



Assurez-vous de lire et de comprendre l'intégralité du présent manuel avant de tenter d'assembler, d'utiliser ou d'installer le produit..



AVERTISSEMENT

- Certaines étapes sont plus faciles à effectuer avec l'aide.

MISE EN GARDE

- Avant l'assemblage et/ou l'installation, vous devez déballer minutieusement toutes les pièces.
- Localisez et mettez de côté le jeu de quincaillerie avant de jeter l'emballage.
- Soyez vigilant lorsque vous assemblez le nouveau produit. Prenez votre temps et suivez attentivement ces instructions.

INFORMACIÓN DE SEGURIDAD



Lea y comprenda completamente este manual antes de intentar ensamblar, usar o instalar el producto.

 


 
ADVERTENCIA

- Algunos de los pasos se pueden realizar con mayor facilidad entre dos adultos.

PRECAUCIÓN

- Antes del ensamblaje y/o instalación, desenvuelva cuidadosamente todas las piezas.
- Localice y separe el equipo de accesorios antes de desechar el embalaje.
- Tenga cuidado al ensamblar el nuevo producto. Tómese su tiempo y siga detenidamente las instrucciones de ensamblaje.

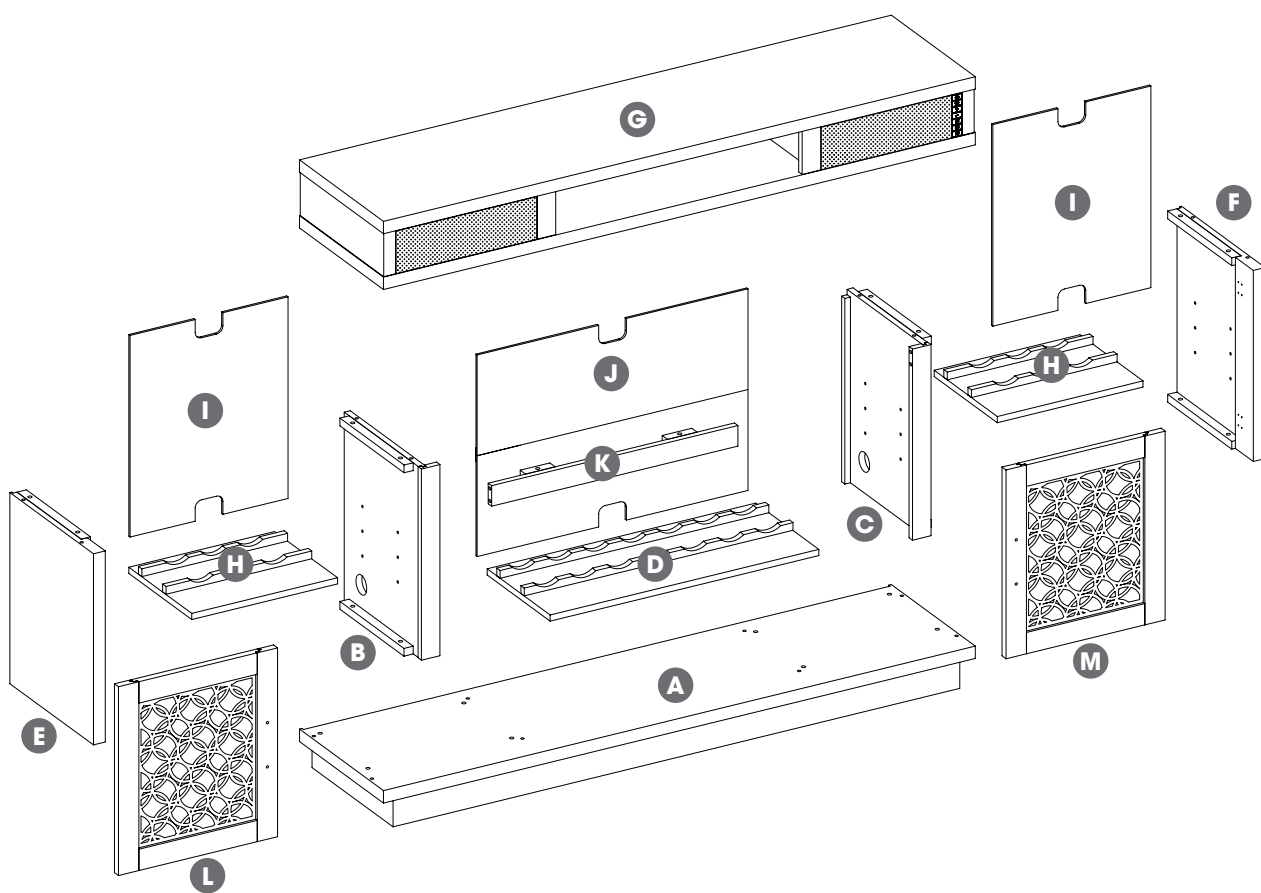

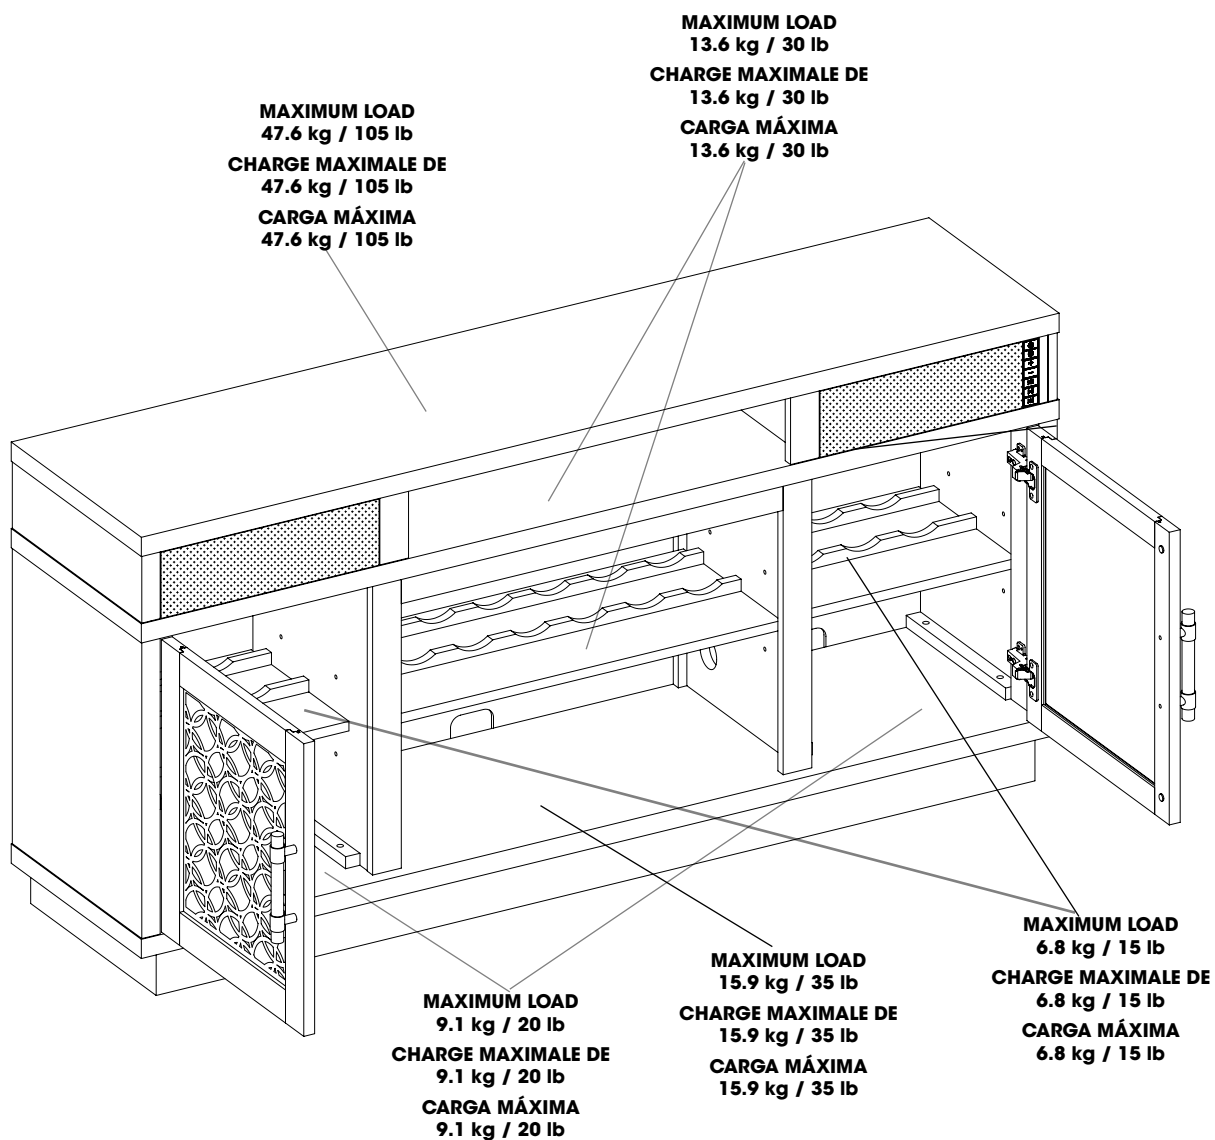

WARNING:

For use with most flat panel televisions weighing 47.6 kg / 105 lb or less. Usage with televisions or loads heavier than the maximum weights specified may result in instability causing tip over resulting in death or serious injury.

ATTENTION:

Destiné à la plupart des téléviseurs à écran plat panel pesant 47.6 kg / 105 lb ou moins. L'utilisation avec des téléviseurs ou des charges dont le poids dépasse les valeurs spécifiées peut entraîner l'instabilité et le basculement pouvant provoquer la mort ou des blessures graves.

 
PRECAUCIÓN:

Para usar con la mayoría de televisiones de flat panel, con peso de 47.6 kg / 105 lb o inferior. Colocar televisores o cargas mayores que los pesos máximos especificados puede generar inestabilidad y, en consecuencia, desplomes que pueden causar la muerte o lesiones graves.

HARDWARE/QUINCAILLERIE/FERRETERÍA

AA

[x18]




Ø6.3x32mm

PH-BLTBLK001

BB

 [x18]

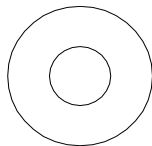


Ø19mm

PH-WSRBLK001

CC

 [x20]



Ø8x30mm

PH-DWLNTL001

DD

[x24]

 


Ø3.5x16mm

PH-SCRNKL008

EE

[x46]




Ø3x16mm

PH-SCRBLK001

FF

 [x12]

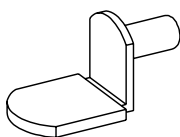

PH-SPNPCSPLB2

GG

 
[x4]



PH-BMPCLR001

HH


[x4]

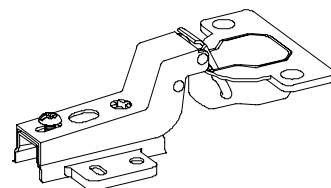

PH-HNGPC35CS95

II

 
[x2]



O-8224-T/ACR-8246-T

JJ

 [x2]

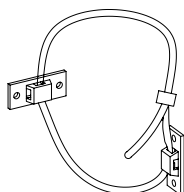

PH-BKTWHT003

KK

[x2]

 


Ø4x15mm

PH-SCRBLK009

LL

[x2]



PH-BKTBLK007

HARDWARE/QUINCAILLERIE/FERRETERÍA

ER

[x1]



Y16-RC-0843

EX


[x1]



Y17-OP-001

ZZ1

 [x1]




Y16-PC-0843V1

1


CC



 [x8]

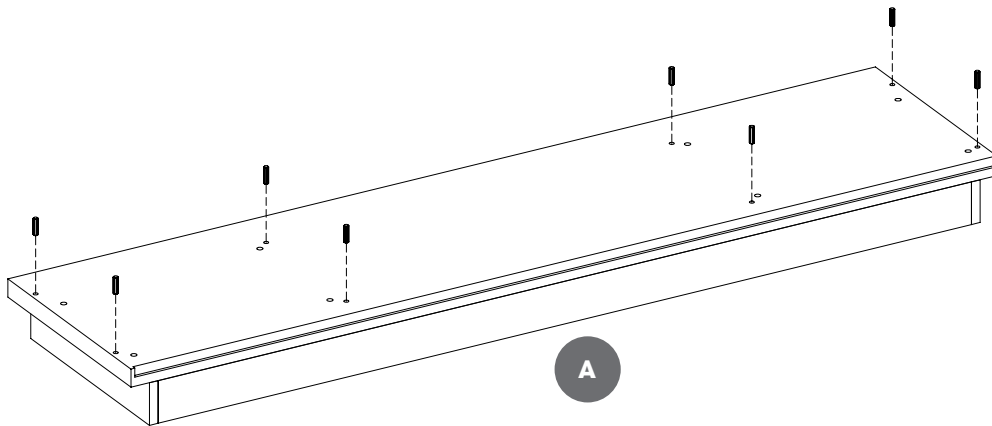


2

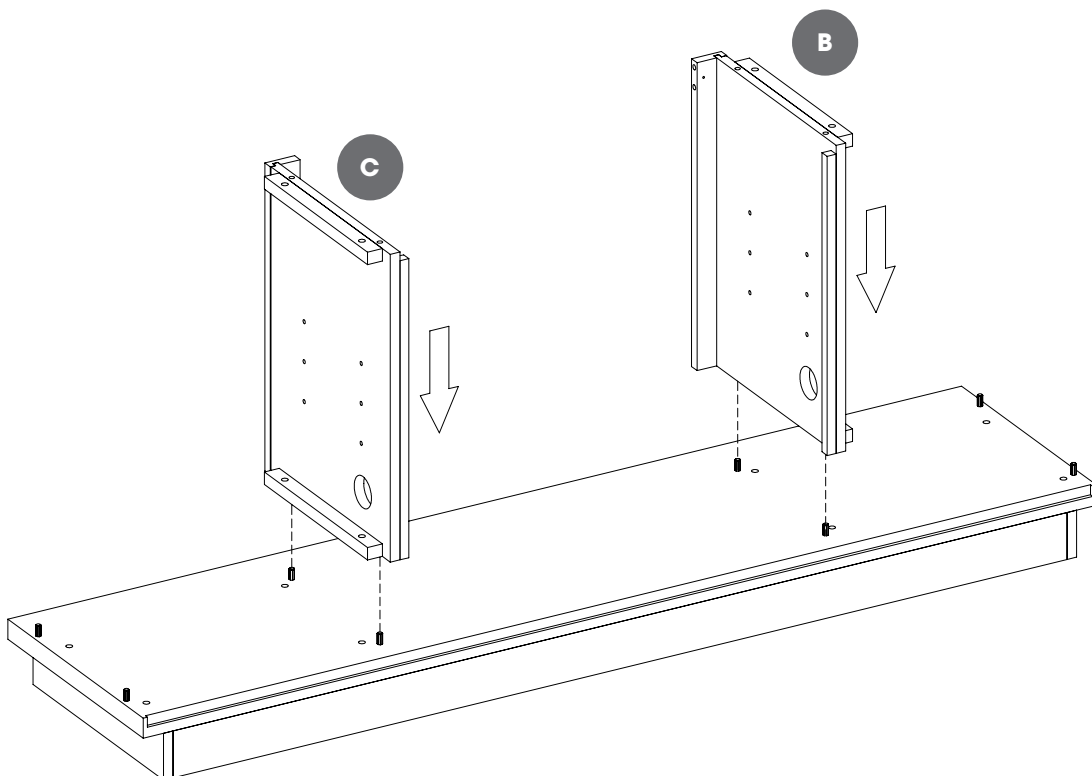 


3

 CC




[x4]


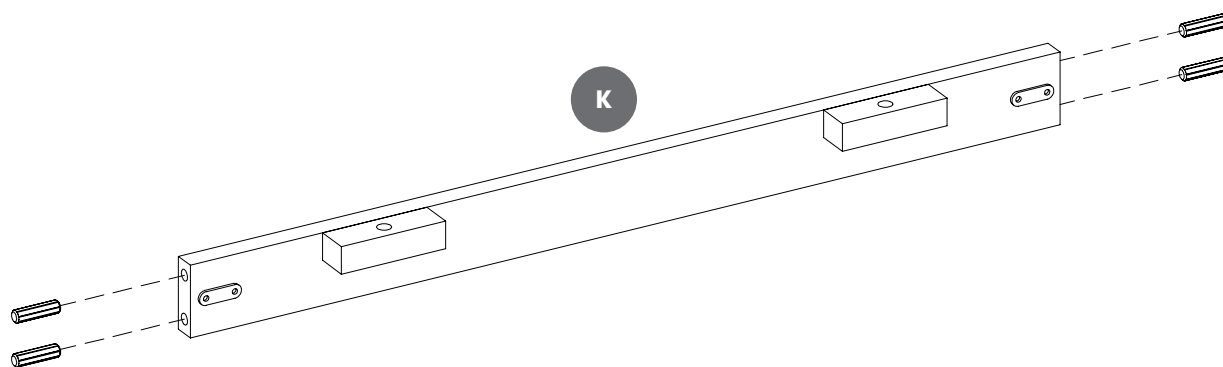 


4

 
EE




[x2]

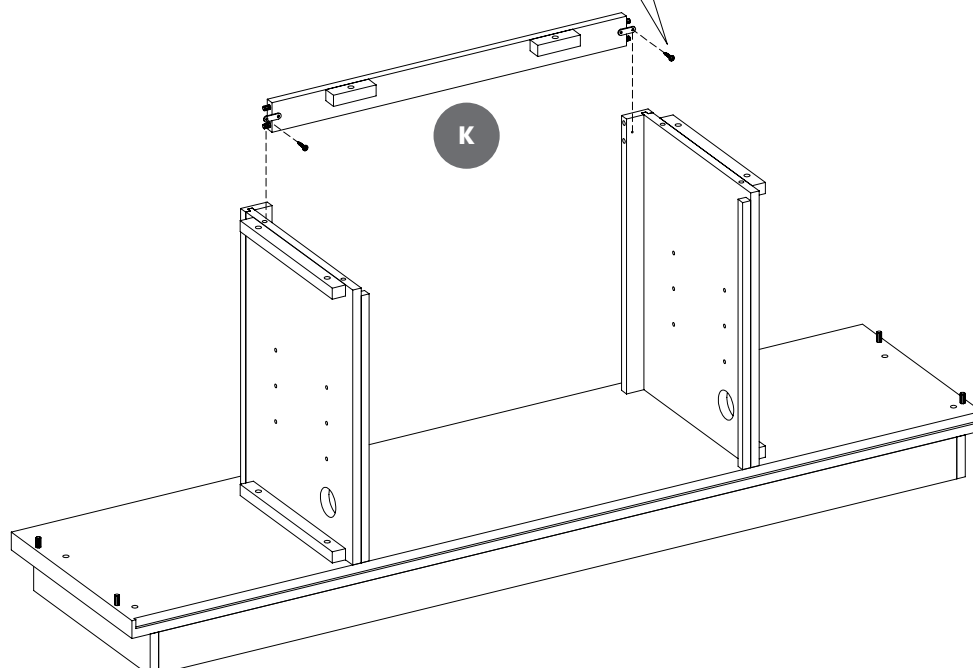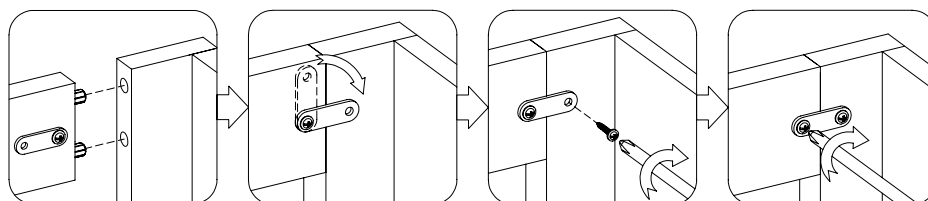  

5

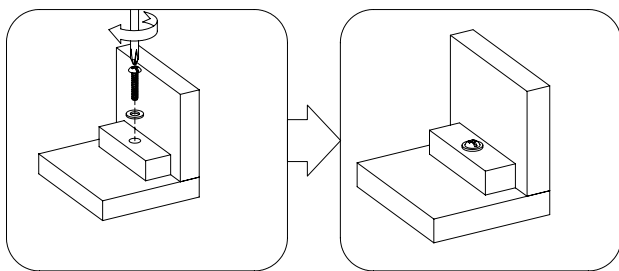 


AA

 


[x4]

 
BB

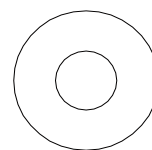


[x4]

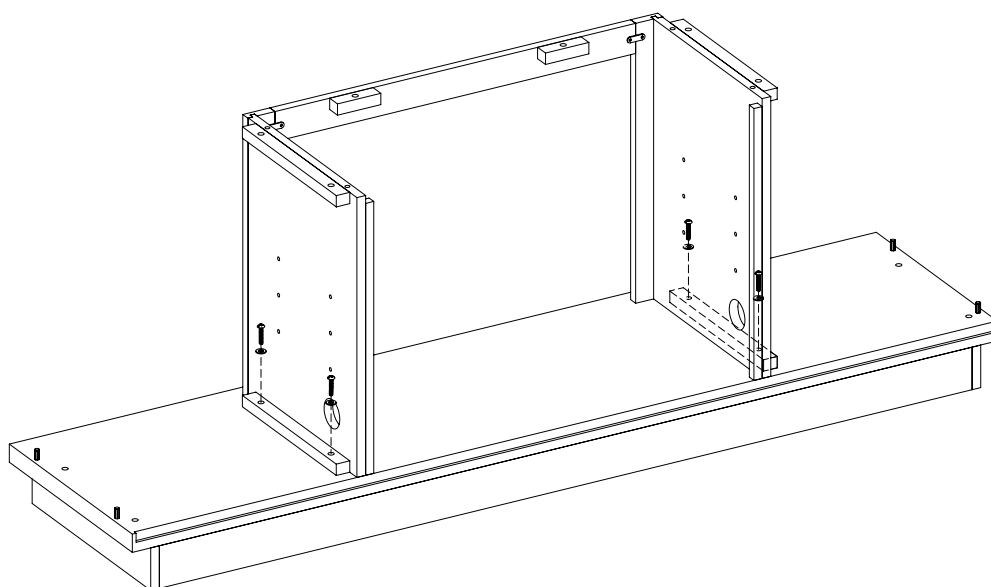 

6

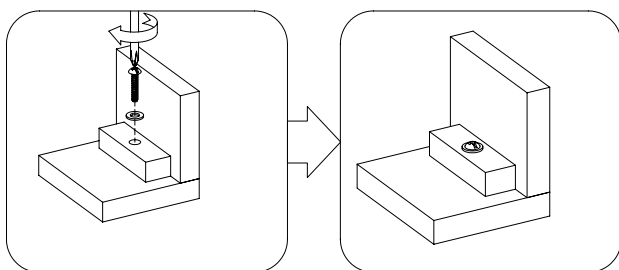 


AA

 


[x4]

 BB

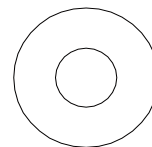

[x4]

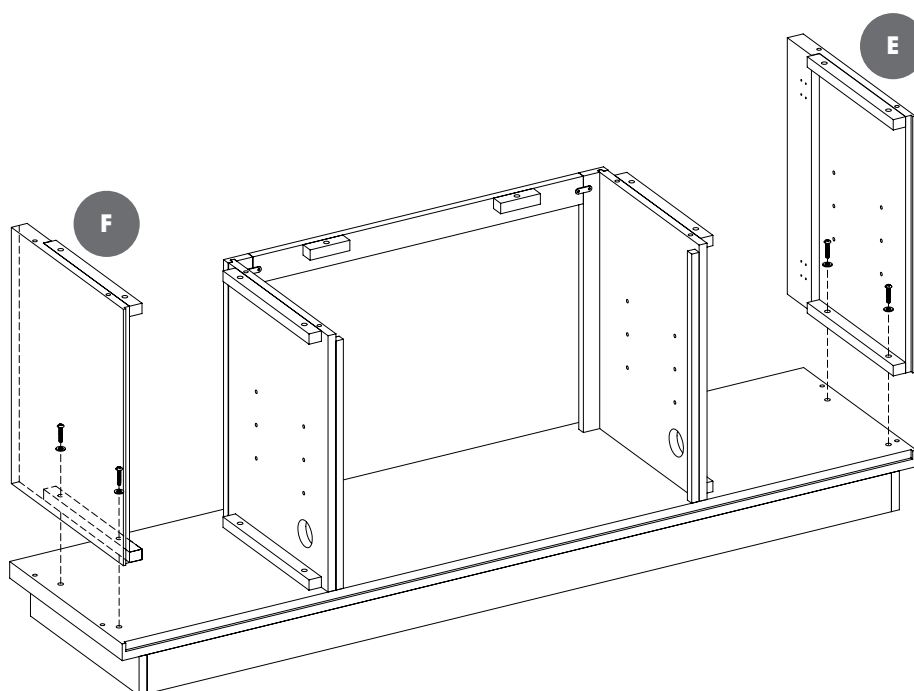 


7

CC




 [x8]

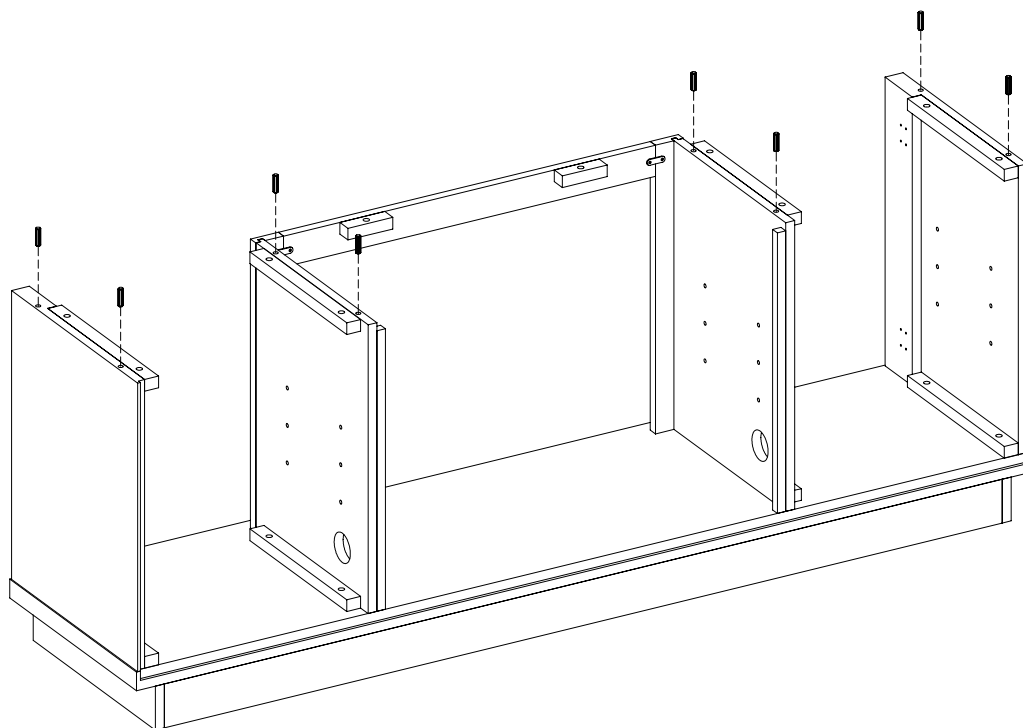


8

 AA




[x10]

 BB

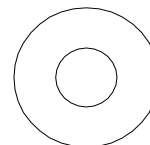


[x10]

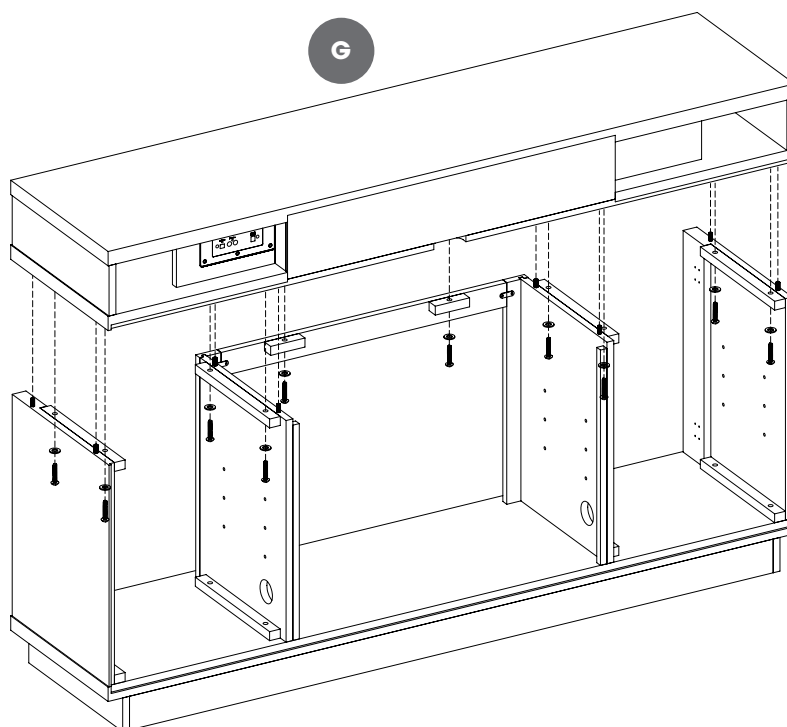 


9

 EE




[x28]

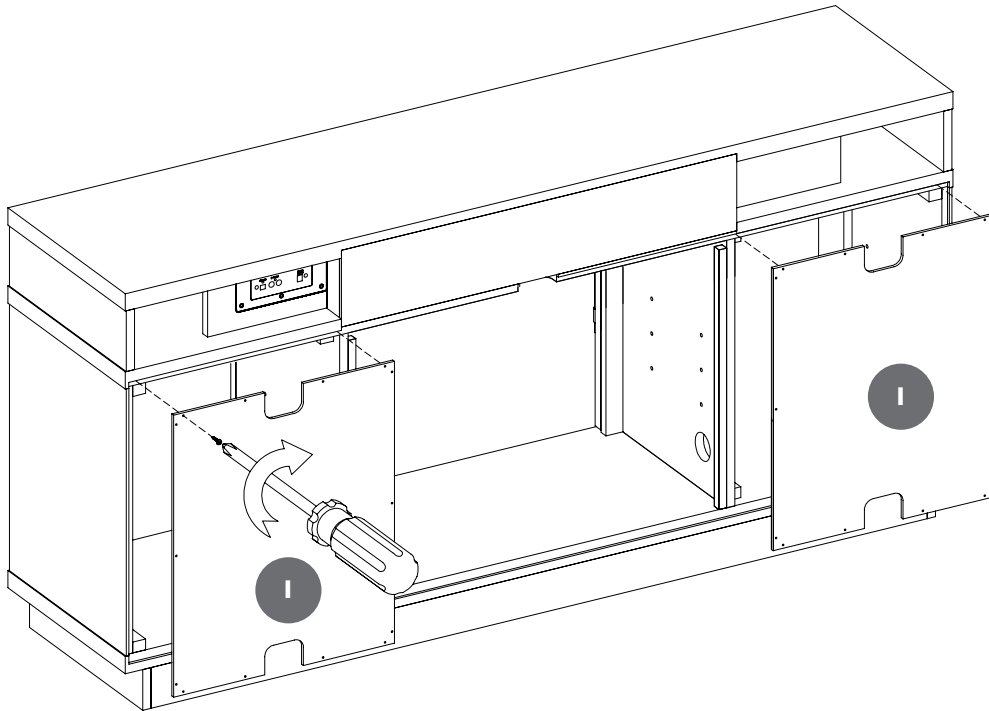 

10

 DD




[x8]

GG




[x4]

 
HH

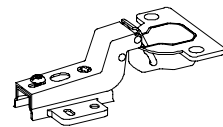

[x4]


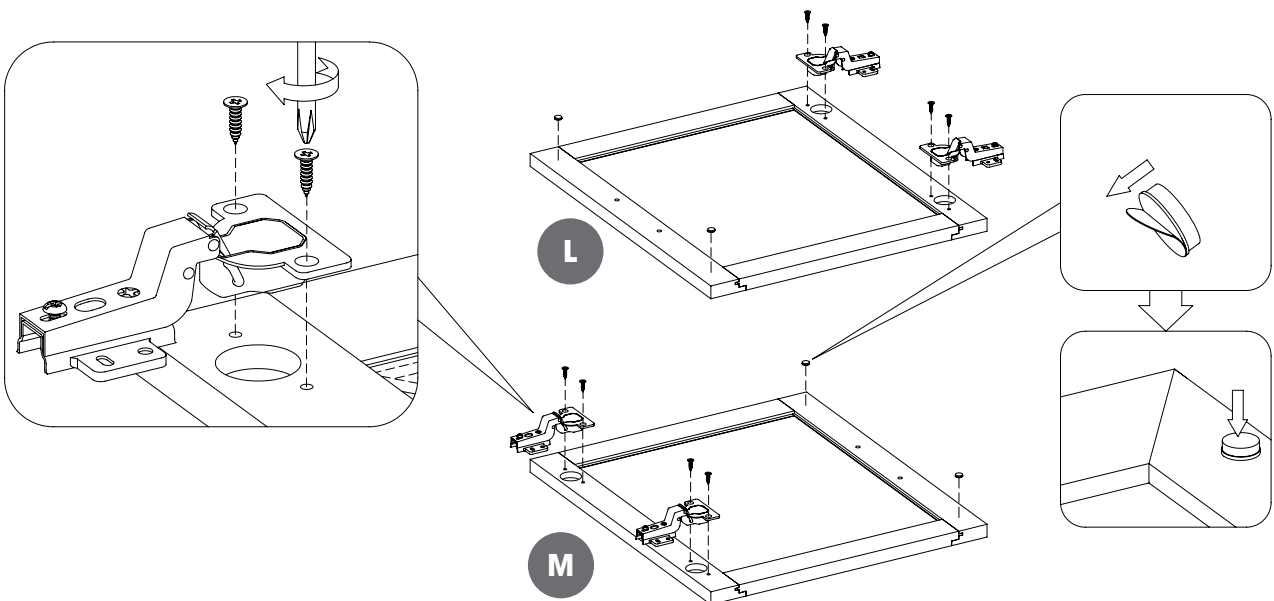 


11

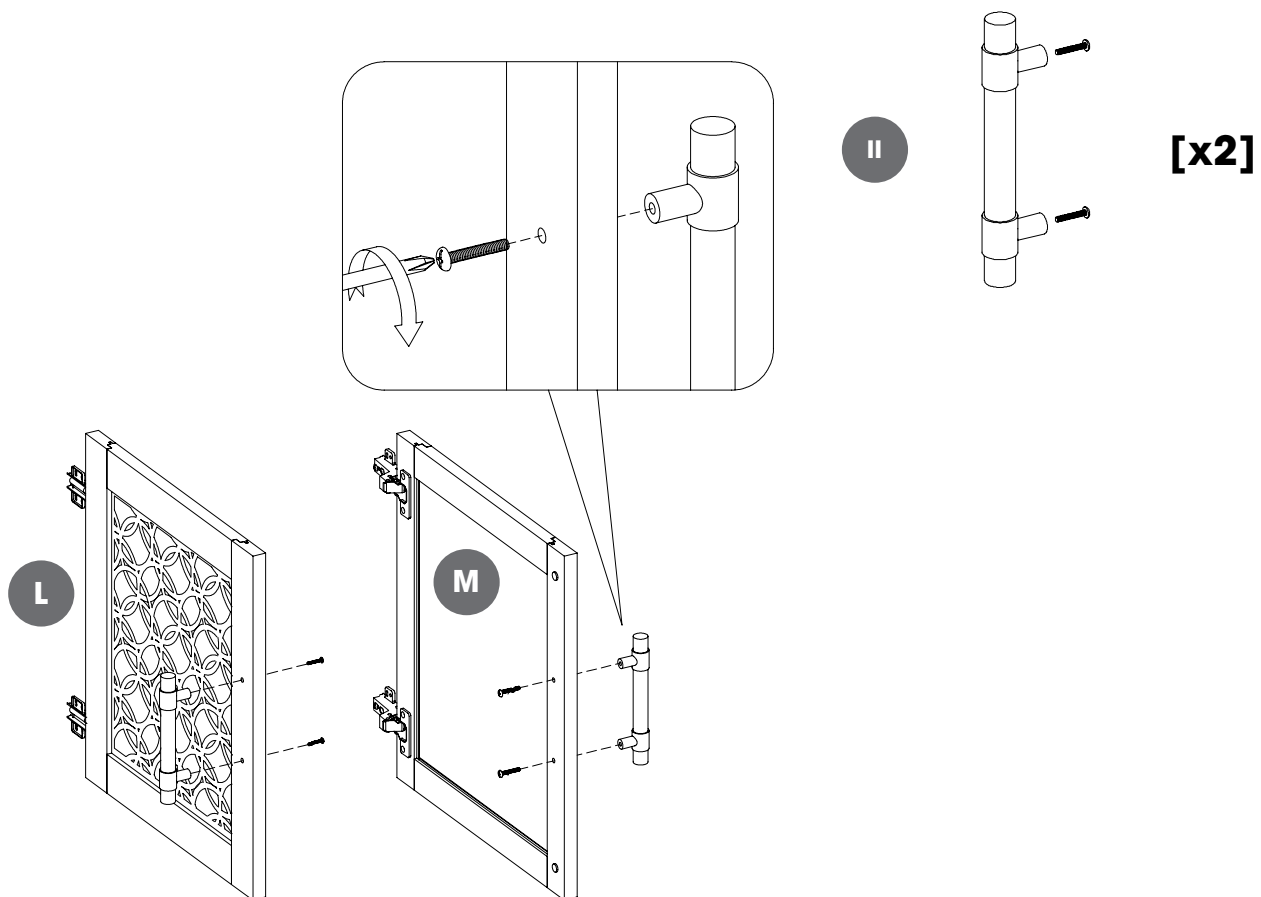 


12

  DD [x16]

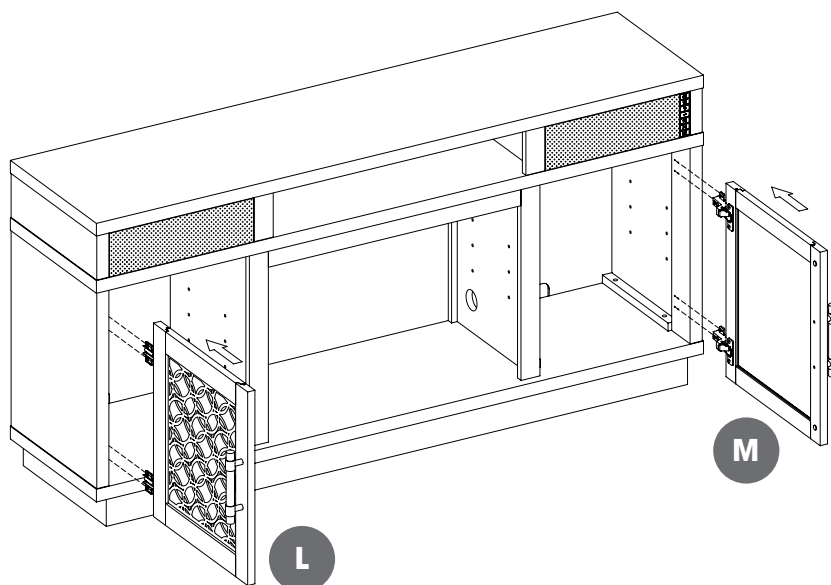
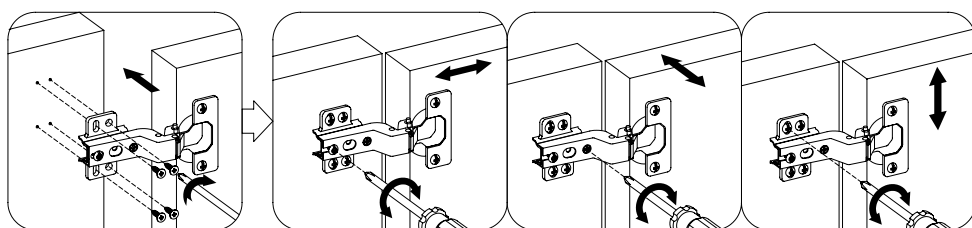



13

 FF



[x8]

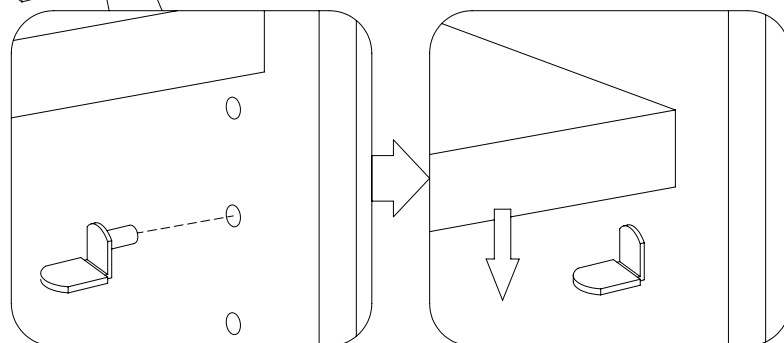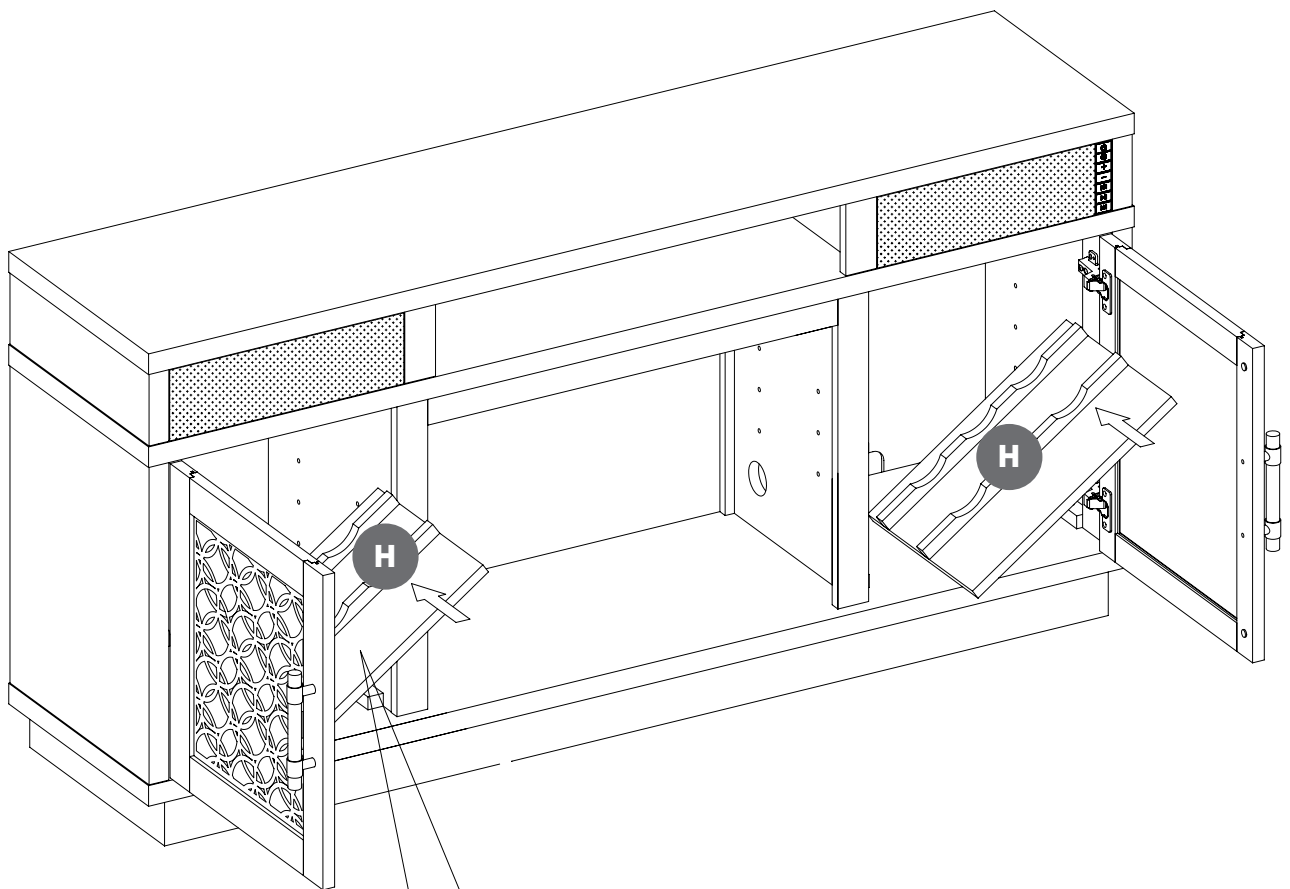  


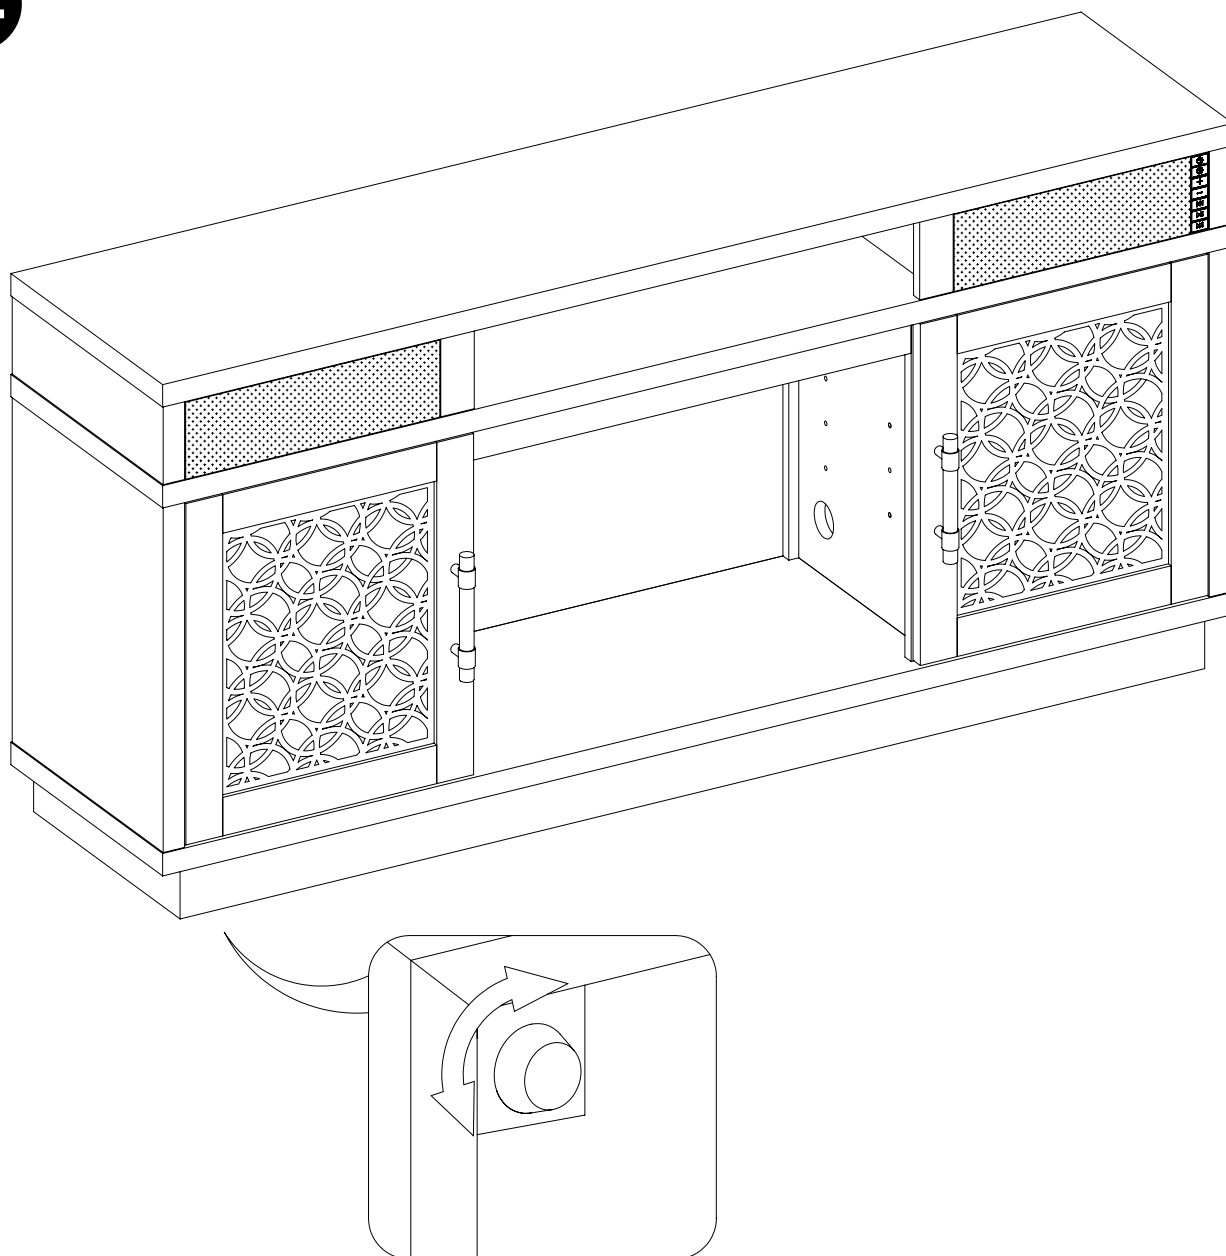 


Note: It is very important that your unit is level in order for your doors to function properly. After moving your unit to its final location, you may need to adjust the floor levelers.

Remarque : Pour que les portes fonctionnent correctement, il est très important que l'appareil soit bien horizontal. Une fois que l'appareil sera arrivé sur son emplacement définitif, vous aurez peut-être besoin d'ajuster les réglages des pieds.

 Nota: Para que las puertas funcionen correctamente, es muy importante que la unidad esté nivelada. Una vez que la unidad llegue a su ubicación final, es posible que necesite ajustar la configuración de los pies..

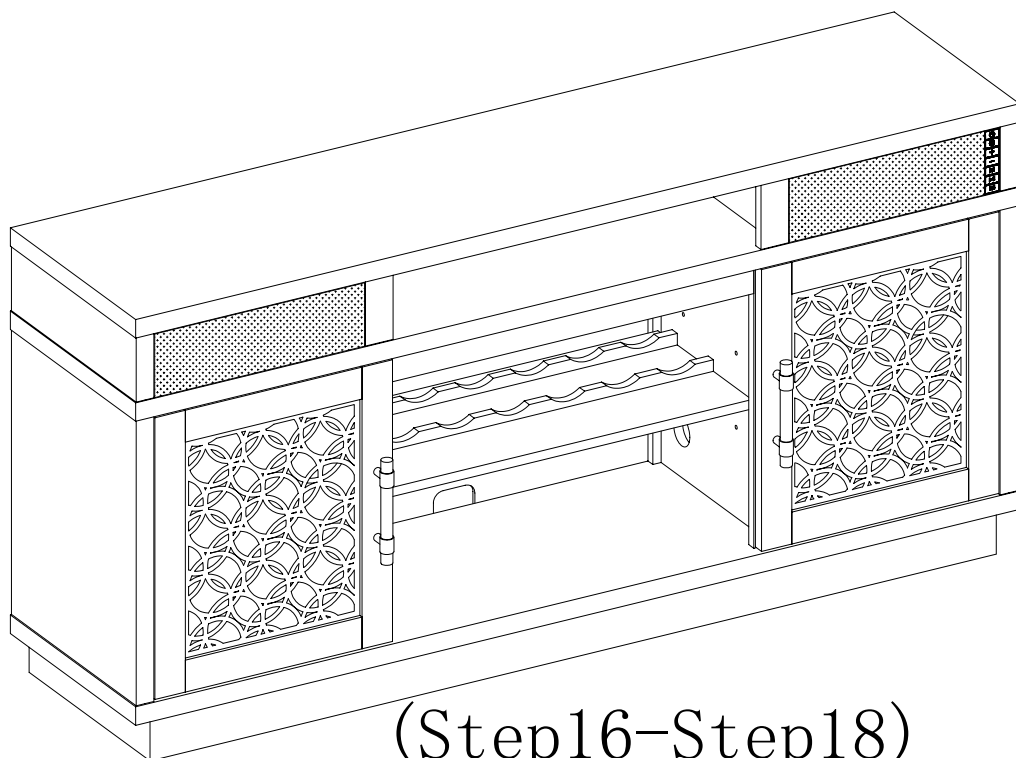

(Step16–Step18)

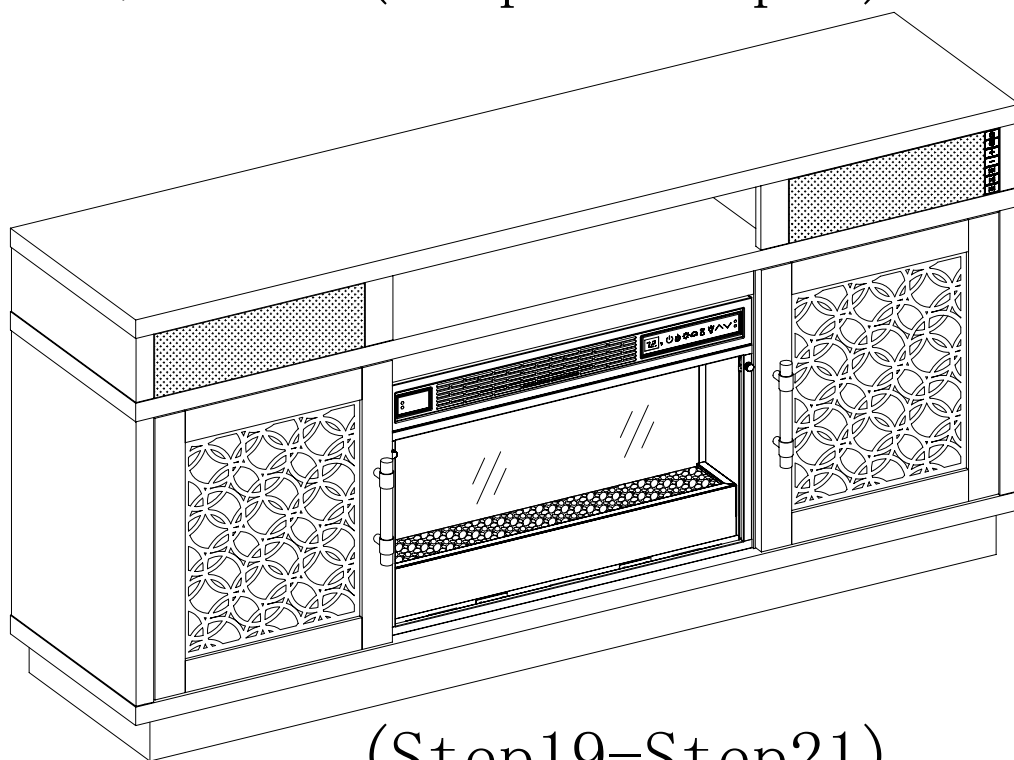 


(Step19–Step21)

If you haven't purchased the optional fireplace insert, please go to step 16 - step 18.
 Si vous n'avez pas acheté le foyer encastrable optionnel, veuillez passer à l'étape 16 - étape 18.
 Si no ha comprado la chimenea empotrable opcional, vaya a los pasos 16 - 18.



If you have purchased the optional fireplace insert, please go to step 19 - step 21.
 Si vous n'avez pas acheté le foyer encastrable optionnel, veuillez passer à l'étape 19 - étape 21.
 Si ya compró la chimenea empotrable opcional, vaya a los pasos 19 - 21.

16

 FF




[x4]

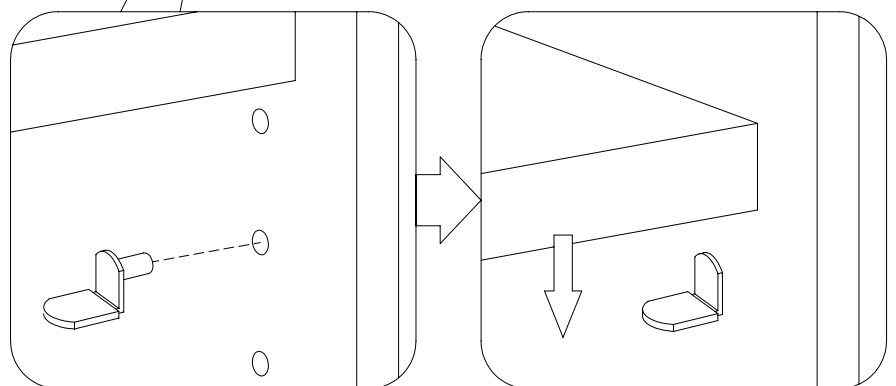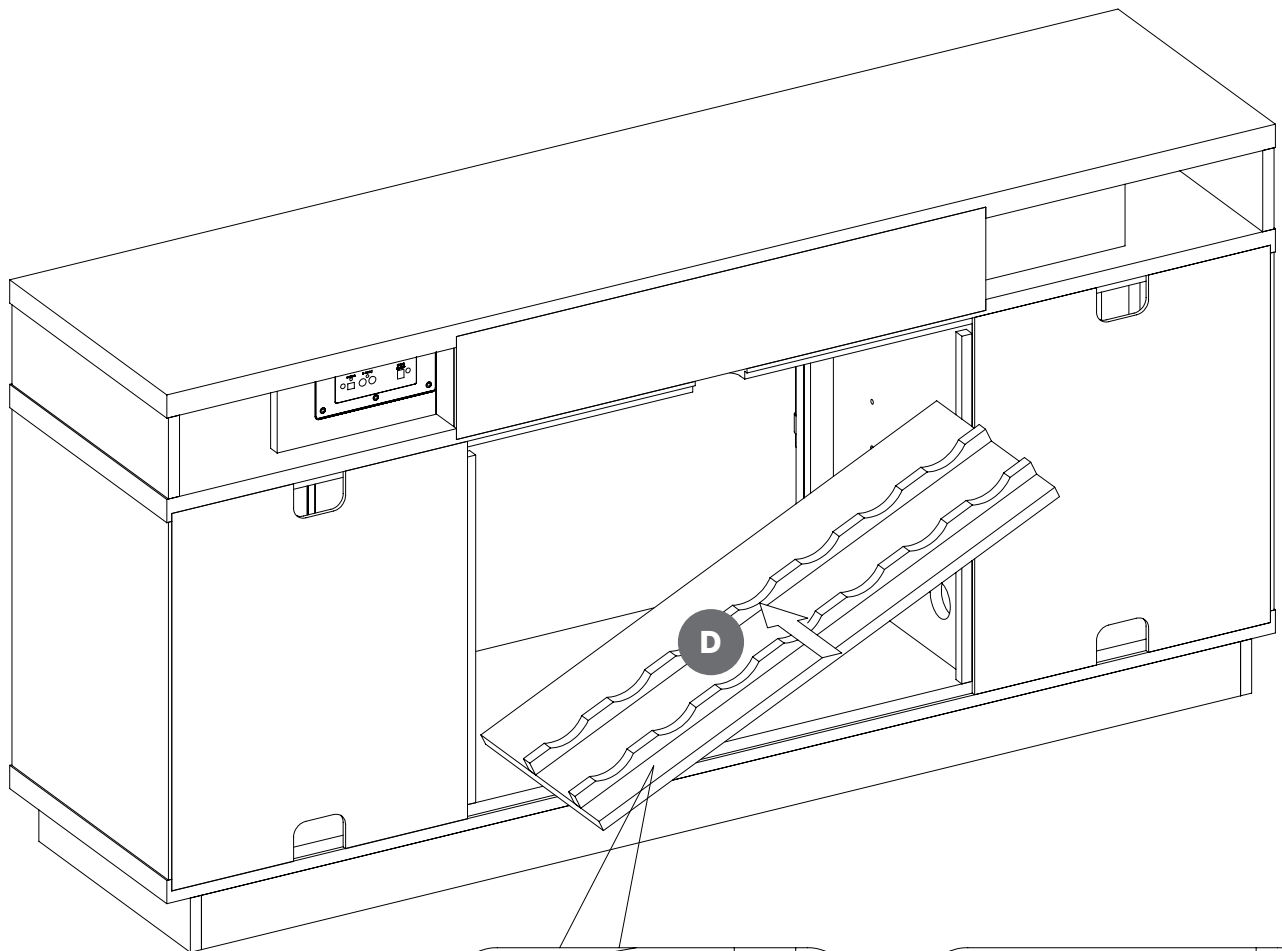  




17

 EE



[x16]

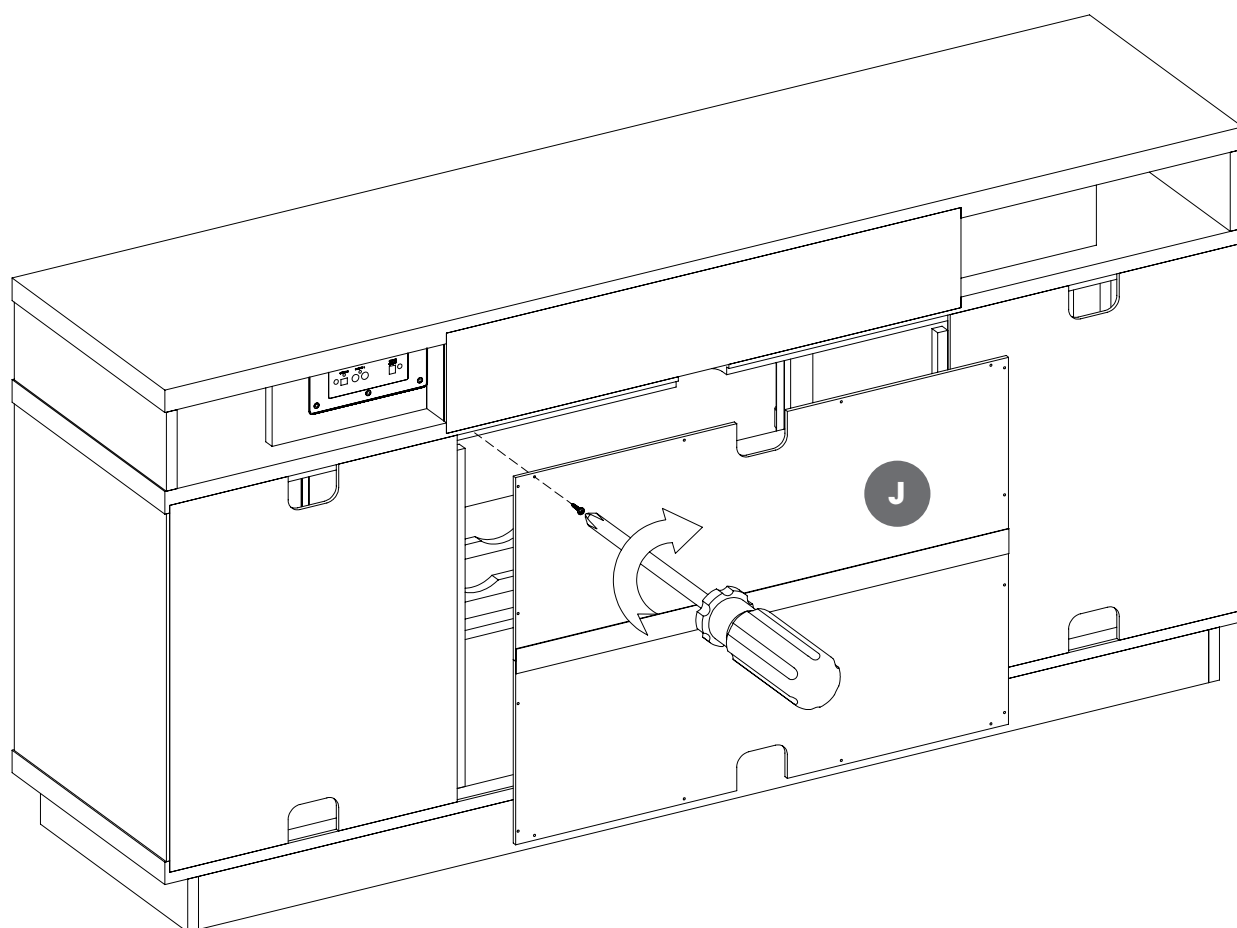 


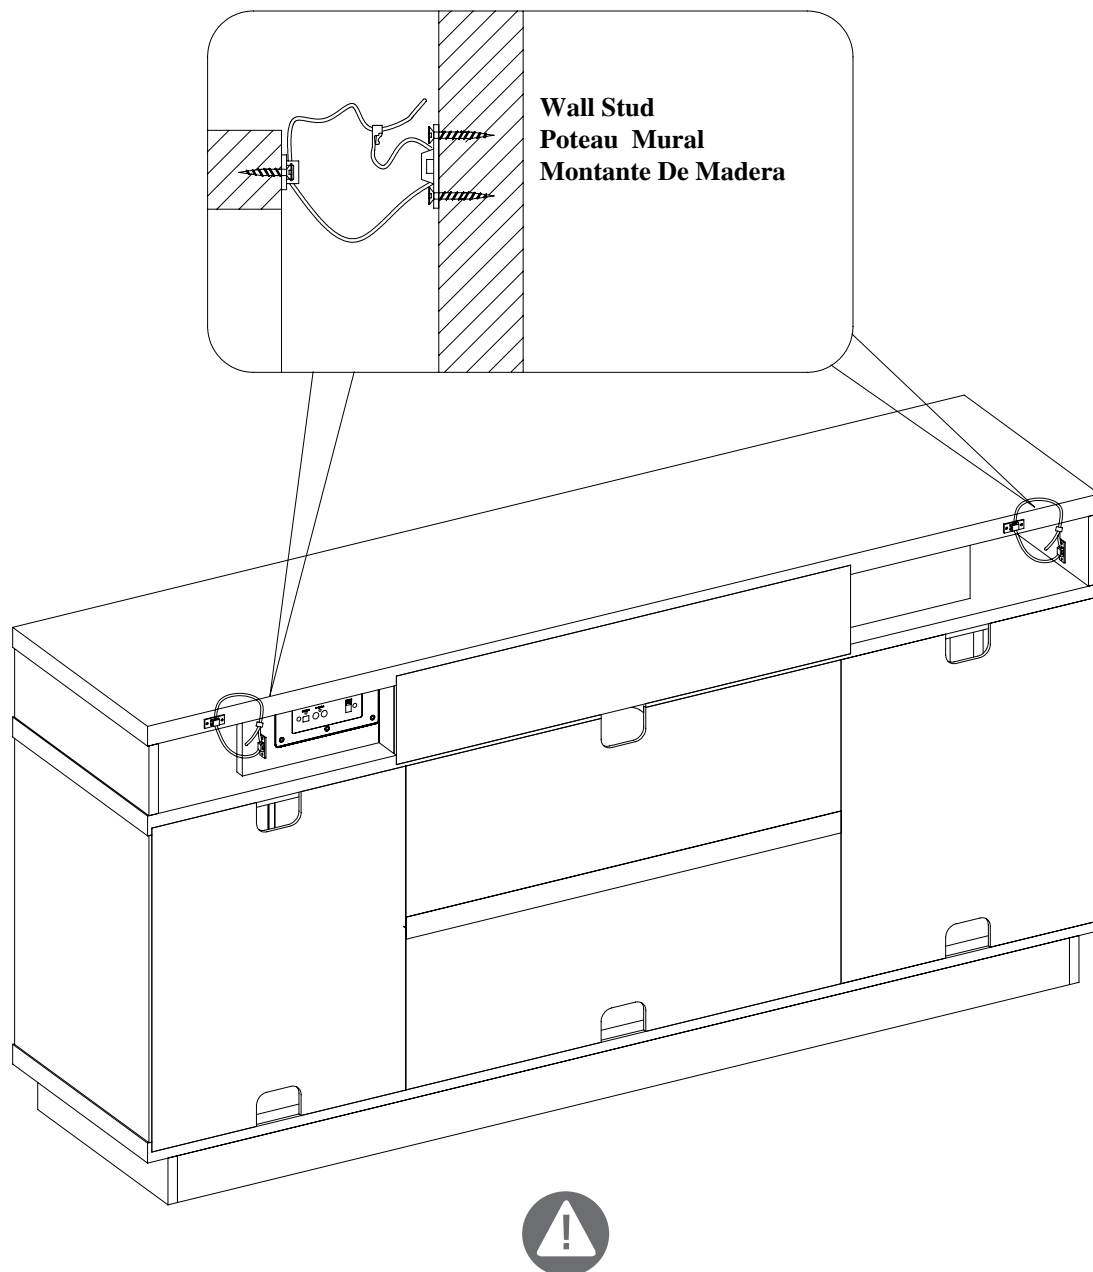  

Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.


Avertissement: Il est nécessaire d'installer les pièces d'arrimage anti basculement pour prévenir les accidents ou les dommages à l'unité.
« Nous vous recommandons fortement de fixer le support avec retenue anti-basculement à un poteau mural et à votre unité. » En ce qui concerne tous les autres types de murs, veuillez visiter votre quincaillerie pour obtenir les articles appropriés.

 Advertencia: Debe instalar el Herraje contra Caídas para evitar accidentes o que se dañe la unidad.
«Recomendamos enfáticamente sujetar el extremo de la herramienta de retención a un perno de pared y su unidad». Respecto de todos los demás tipos de pared, vaya a su ferretería local para obtener las herramientas adecuadas.

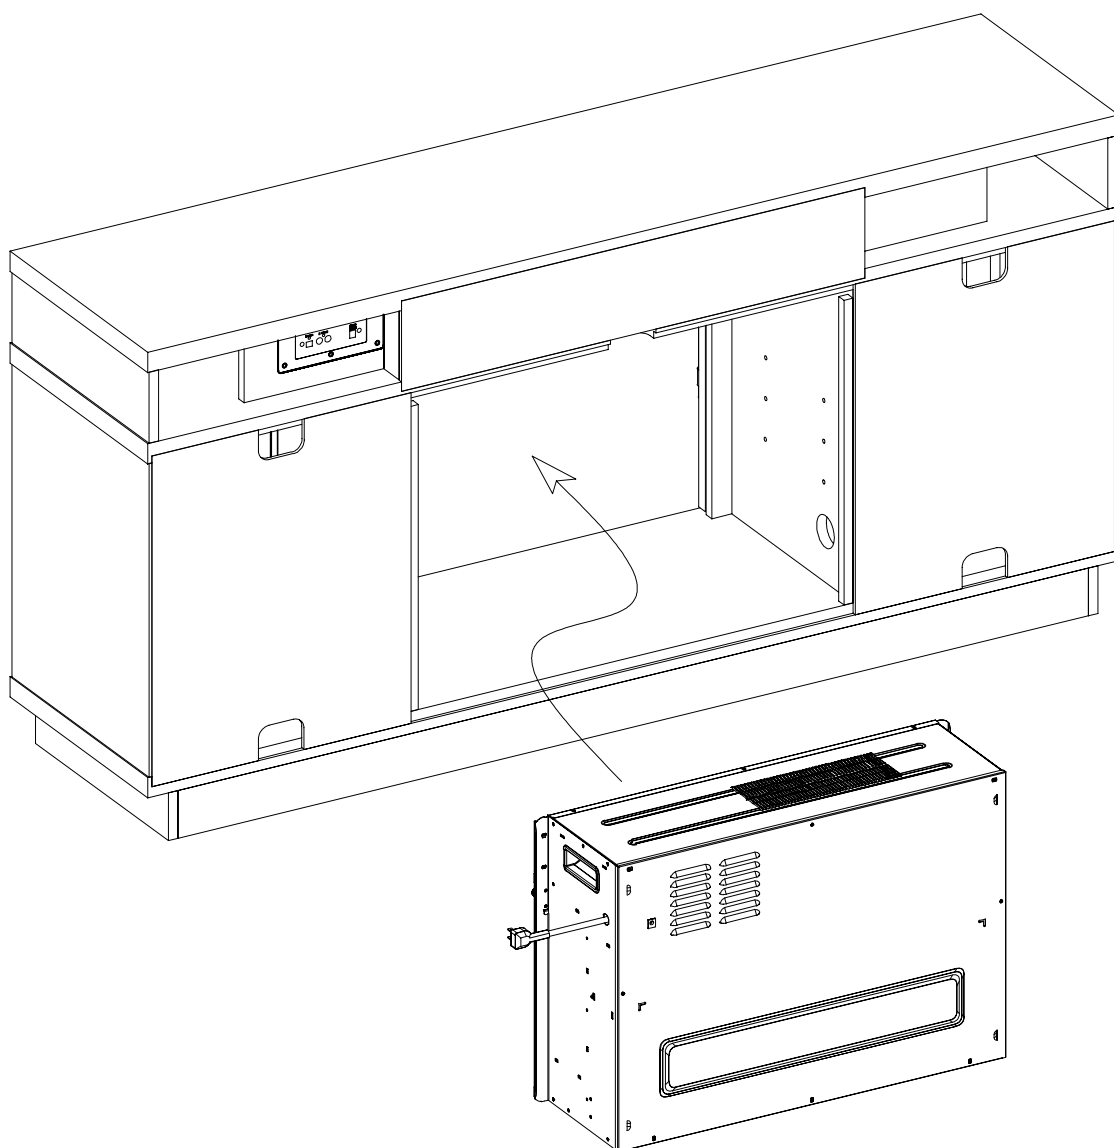


20

 KK







[x2]

 LL




[x2]

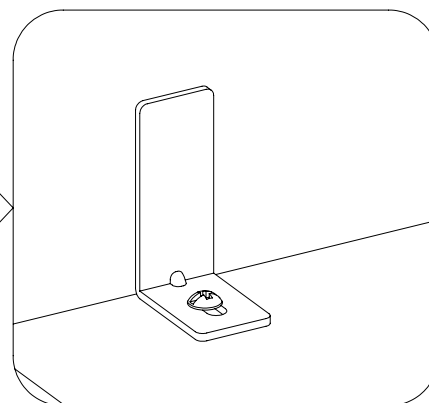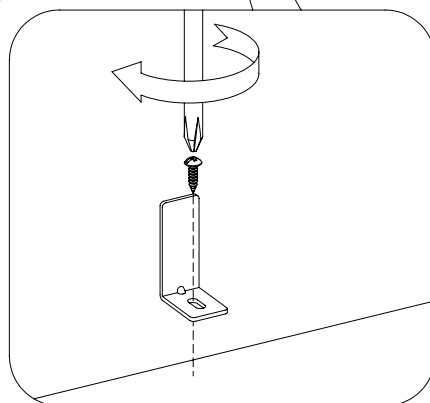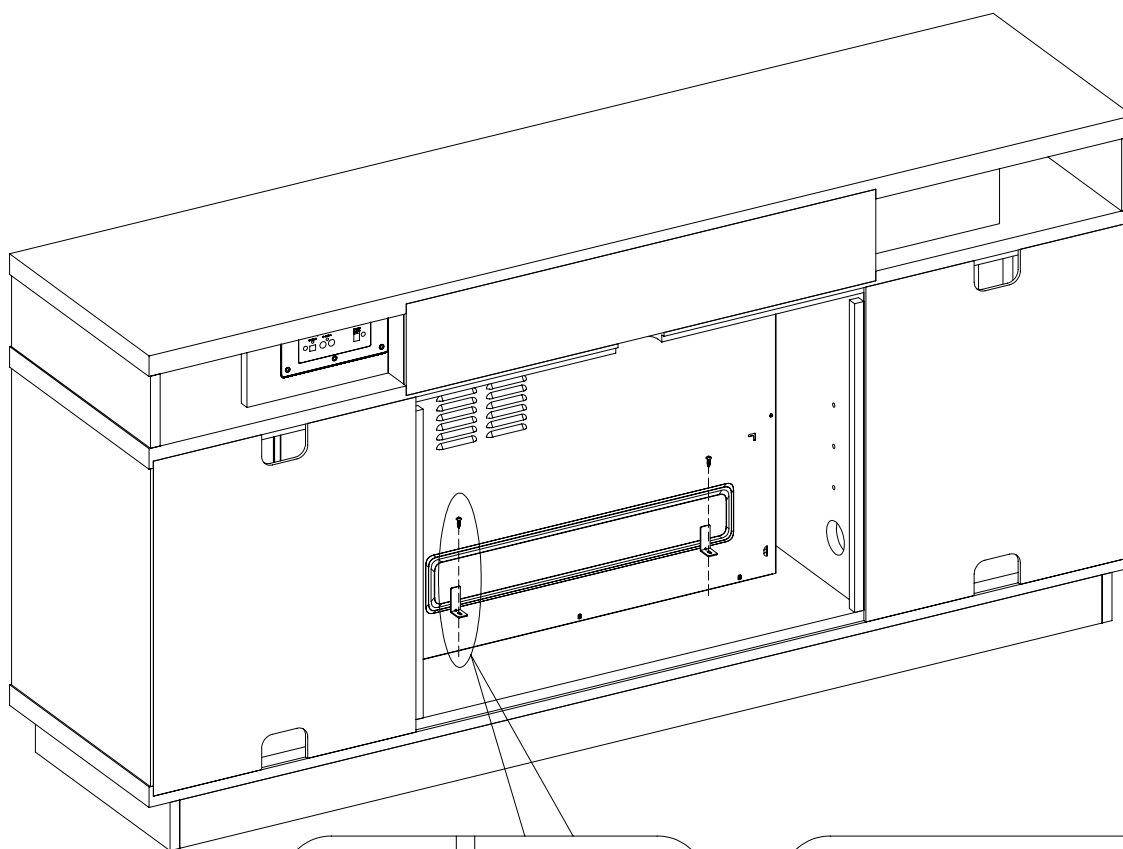    


21

 JJ



[x2]

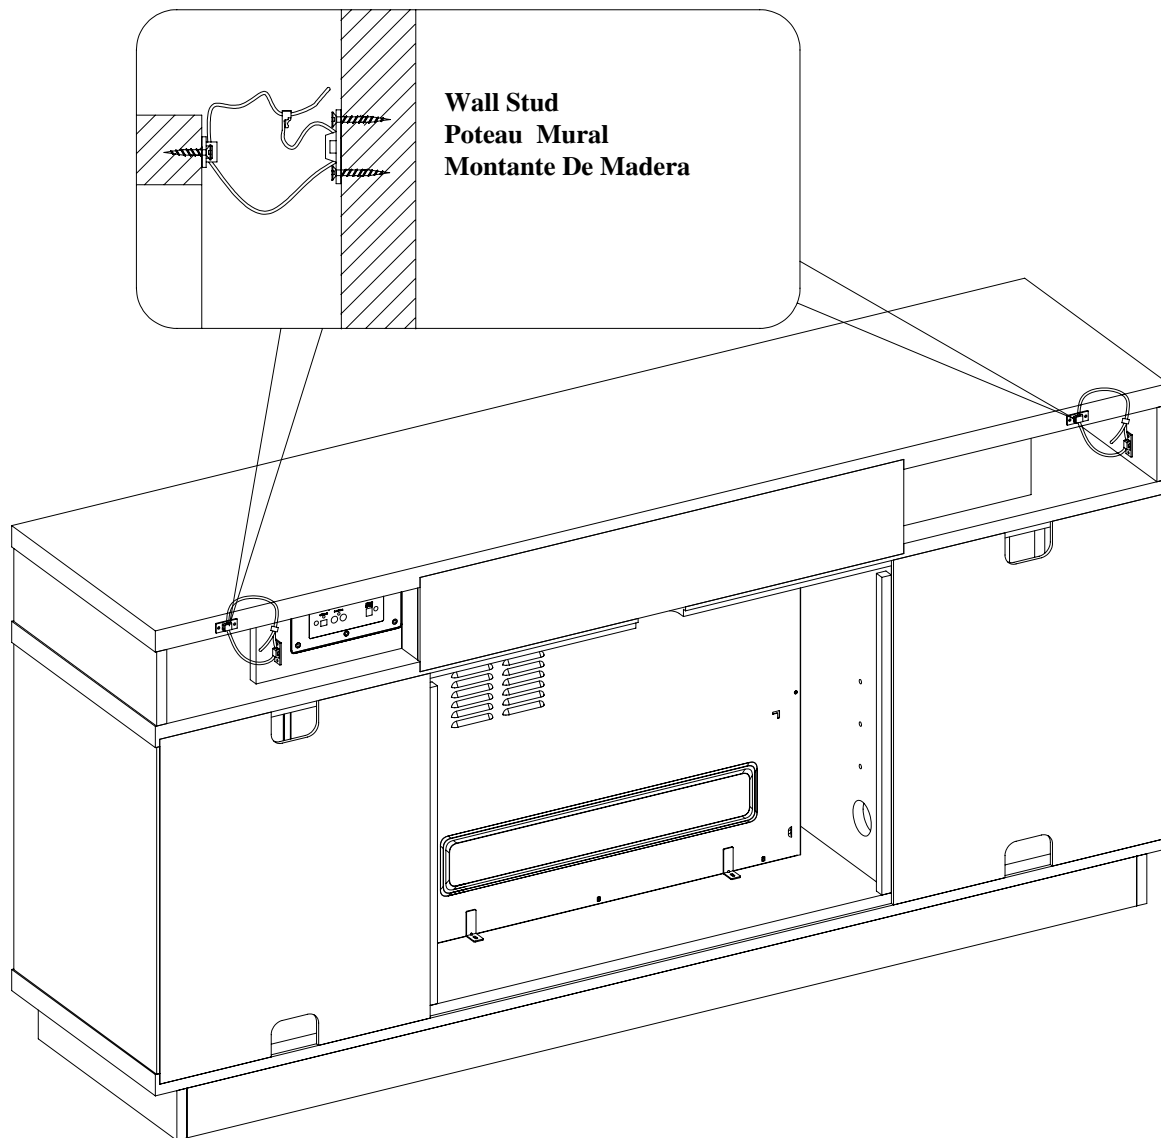 

Wall Stud
Poteau Mural
Montante De Madera



Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

Avertissement: Il est nécessaire d'installer les pièces d'arrimage anti basculement pour prévenir les accidents ou les dommages à l'unité.
« Nous vous recommandons fortement de fixer le support avec retenue anti-basculement à un poteau mural et à votre unité. » En ce qui concerne tous les autres types de murs, veuillez visiter votre quincaillerie pour obtenir les articles appropriés.

Advertencia: Debe instalar el Herraje contra Caídas para evitar accidentes o que se dañe la unidad.
«Recomendamos enfáticamente sujetar el extremo de la herramienta de retención a un perno de pared y su unidad». Respecto de todos los demás tipos de pared, vaya a su ferretería local para obtener las herramientas adecuadas.

CARE / MAINTENANCE

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately, as it may damage the furniture. Use a soft, clean cloth and blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish. Proper care and cleaning at home will extend the life of your purchase.

We hope you enjoy your purchase for many years. Thank you for your purchase!

SOIN / ENTRETIEN

Soin / Entretien

- Lors de l'époussetage, utilisez un chiffon doux et propre qui n'égratigne pas la surface.
- Il n'est pas nécessaire d'utiliser du poli à meuble. Si vous décidez d'utiliser du poli à meuble, veuillez d'abord en faire l'essai dans un endroit moins en évidence.
- L'utilisation de solvant de quelque sorte sur votre ameublement peut endommager le fini.
- Ne jamais utiliser d'eau pour nettoyer votre ameublement car cela peut endommager le fini.
- Utilisez toujours des dessous de verre sous les verres/tasses des breuvages et sous les pots à fleur.
- Tout déversement de liquide doit être enlevé immédiatement car cela peut endommager l'ameublement. Utilisez un chiffon doux et propre et éponger délicatement le déversement. Évitez de frotter.
- Utilisez toujours des tampons protecteurs sous les plats et les assiettes chaudes. La chaleur peut causer des changements chimiques qui peuvent créer des taches sur l'ameublement.

Autres conseils sur l'entretien du bois

Il est préférable de conserver votre ameublement dans un environnement dont le climat est contrôlé. Les changements de température et d'humidité peuvent causer une décoloration, un gauchissement, un rétrécissement et un fendillement du bois. Il est conseillé de garder l'ameublement éloigné des rayons directs du soleil puisque le soleil peut endommager son fini. Un nettoyage et un entretien approprié à domicile permettra d'allonger la durée de vie de votre achat.

Nous vous souhaitons des années de plaisir avec l'utilisation de votre achat. Nous vous remercions pour votre achat!

CUIDADO / MANTENIMIENTO

Cuidado / Mantenimiento

- Use un paño suave y limpio que no raye la superficie cuando elimine el polvo.
- El uso de cera para muebles no es necesario. Si elige utilizar la cera, realice primero una prueba en un área discreta.
- Usar solventes de cualquier clase en sus muebles puede dañar el acabado.
- Nunca utilice agua para limpiar sus muebles, ya que puede causar daños en el acabado.
- Siempre utilice posavasos para colocar los vasos de bebidas y las macetas.
- Los derrames de líquidos se deben de secar inmediatamente, ya que pueden dañar el mueble. Use un paño suave y limpio y seque el derrame con cuidado. Evite frotar.
- Siempre utilice almohadillas protectoras debajo de los platos y vajillas calientes. El calor puede causar cambios químicos los cuales pueden crear manchas en los muebles.

Más consejos sobre el cuidado de los muebles de madera

 
Es mejor mantener sus muebles en un entorno climatizado. Los cambios en la temperatura y la humedad pueden desteñir, alabear, encoger y fragmentar la madera. Se recomienda mantener los muebles lejos de la luz directa del sol, pues el sol puede dañar el acabado. La limpieza y el cuidado adecuados en el hogar extenderán la vida útil de su compra.

Esperamos que disfrute su compra durante muchos años. ¡Gracias por su compra!

INSTALLED REPLACEMENT PARTS PIÈCES DE REMPLACEMENT INSTALLÉES PIEZAS DE REPUESTO INSTALADAS

MM

[x6]



PH-LVRBLK001

NN

[x2]



PH-PLTBLK001

OO

 
[x24]



PH-THRZNC001

PP


[x1]

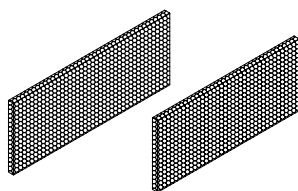

Y16-SG-08430380

QQ

 
[x1]

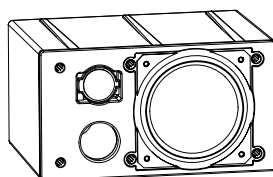

Y16-SBR-0843

RR

 [x1]

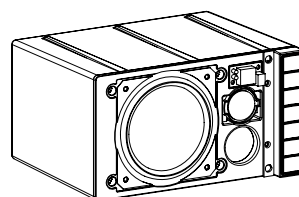

Y16-SBL-0843

Sound System

PRODUCT SPECIFICATIONS

Adapter Input	AC100-240V, 50/60Hz
Adapter Output	DC15V 2.5A
Power Consumption	30 Watts
Standby Power Consumption	< 1 W

WIRING

1. OPTICAL IN - Input for digital fiber-optic cable.
2. AUX IN R/L - Input for RCA cable (not included).
3. DC IN - Input for the power supply.



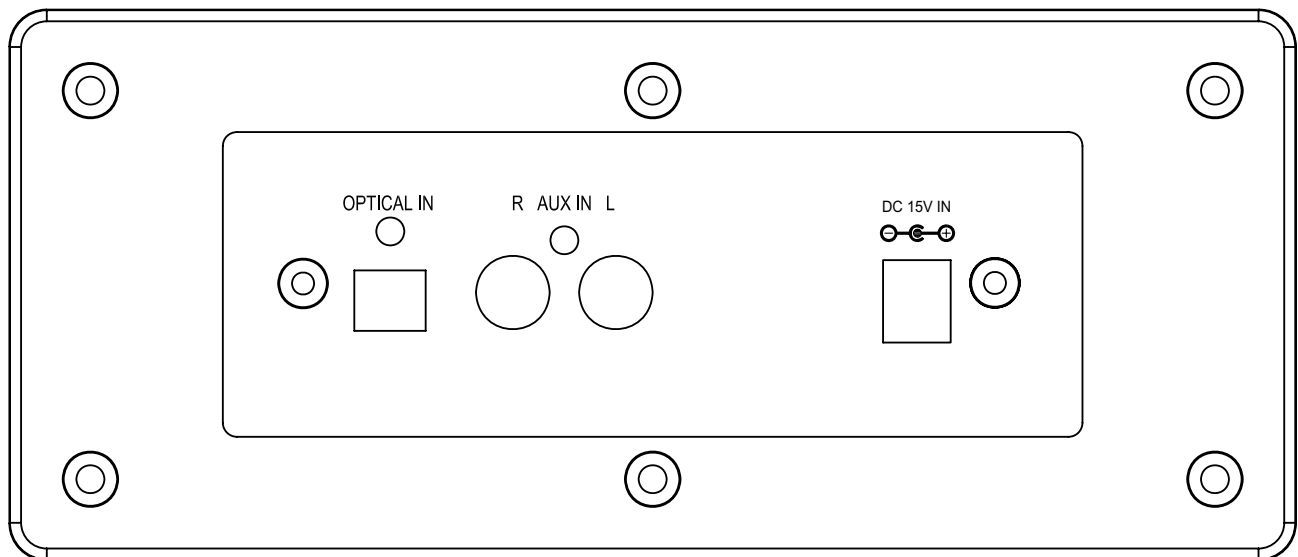 


Fig.1 Back Panel

 OPERATION INSTRUCTIONS

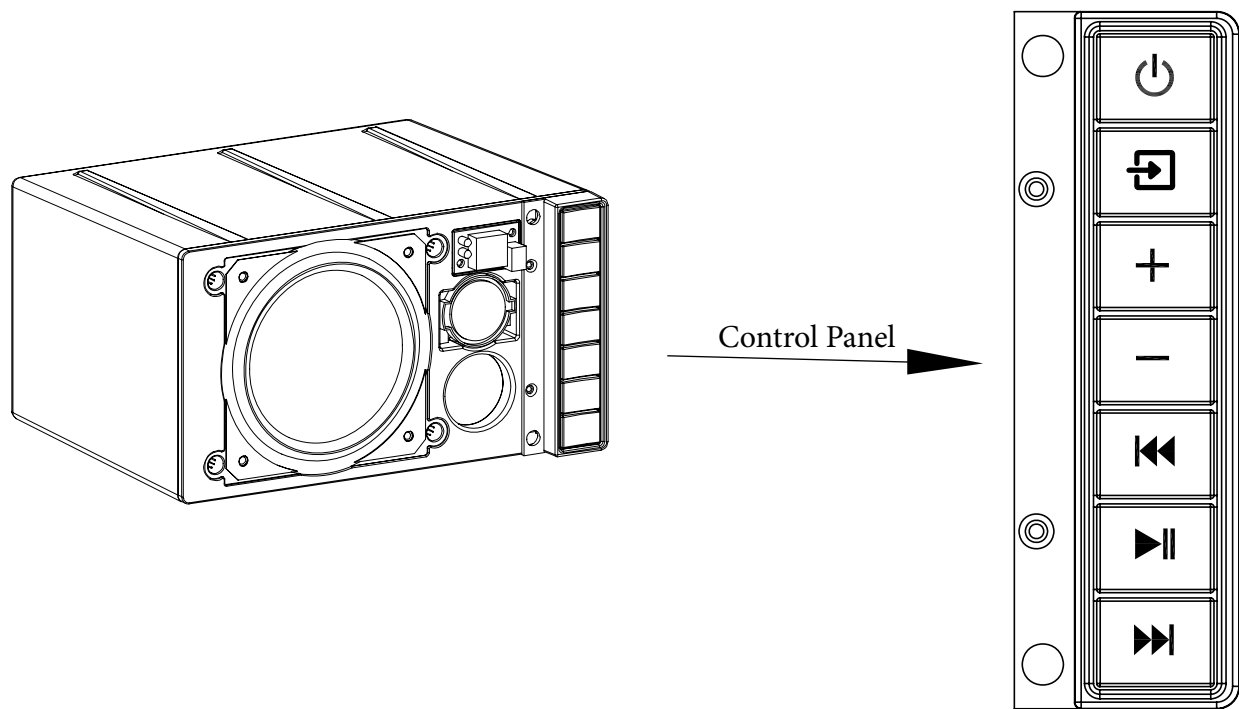

 The speaker can be operated by either the remote control or the control panel.

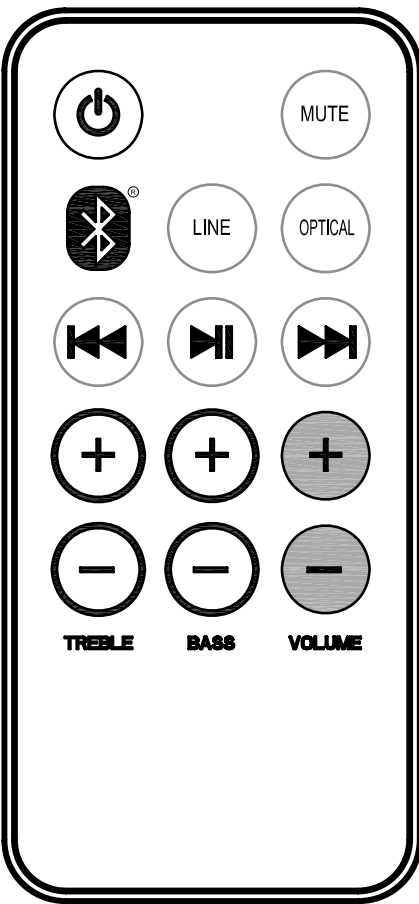

OPERATION INSTRUCTIONS

FUNCTION	ICON	DESCRIPTION
POWER		The POWER button supplies power to all the functions of the unit.
SOURCE		To scroll through the different input options: BT - Bluetooth® Search for other smartphones and devices. The blue flashing light indicates the unit is searching for devices with a WPAN (Bluetooth®) function activated. Selecting TS-0843 from your device will link it to the console and allow you to stream sound from up to 10 meters away. The light will stay continuously lit once a connection has been made to the device. OP - Optical Input Play sound from your television or other device that is connected to the speaker at the back panel by Optical cable. AU - AUX Input Play sound from your television or other device that is connected to the speaker at the back panel by RCA cables.
ADJUSTMENT		Adjust the volume if Speaker is ON
PREV/NEXT		In Bluetooth® mode, press PREV/NEXT buttons to change previous or next songs.
PLAY/PAUSE		In Bluetooth® mode, press PLAY/PAUSE button to play or pause the selected track. Pressing and holding this button for 3 seconds on Bluetooth® mode will enable Bluetooth® pairing.
MUTE	MUTE	Press MUTE button on the remote to mute and un-mute the volume.

OPERATION INSTRUCTIONS

FUNCTION	ICON	DESCRIPTION
BLUE		Press  button on the remote to switch to Bluetooth® input.
LINE IN	LINE	Press LINE button on the remote to switch to Aux In input.
OPTICAL	OPTICAL	Press OPTICAL button on the remote to switch to Optical input.
TREBLE		Press TREBLE button on remote to adjust the TREBLE up or down.
BASS		Press BASS button on remote to adjust the BASS up or down.
VOLUME		Press VOLUME button on remote to adjust the volume.

OPERATION INSTRUCTIONS

Learning Function

The learning function allows your Sound System to be controlled by your TV remote control (Note: Remote must send infrared signals). Any unused button on your TV remote control can be used to control the Sound System. For example, when you connect your TV to the Sound System using the RCA Stereo cables or Digital Fiber Optic Cable, the TV volume and mute will no longer be controlled by the remote that came with it. Some TV remotes also come with extra buttons. These buttons can also be used for any of the learning options below.

Some of the programmable functions need to be selected from the remote control as noted below. Note: It is able to learn most IR protocols, not all remote can be programmed.

To start the learning function:

- While powered on, press  for 5 seconds to enter learn mode. SEL will start flashing.
- Select the function to learn on the control panel or remote.
 - o The function (below) will flash. Point your TV remote at the flashing LED on the sound System and hold down the button you want it to learn from.
 - o When learning is complete, the function goes solid for 3 seconds (stops flashing) and SEL will now start flashing.
 - o You can now select the next function to learn or end the process by pressing the  for 5 seconds.

V	Volume up [control panel or remote control]
V-	Volume down [control panel or remote control]
SI	Mute [remote control]
ON	Power [control panel or remote control]
SO	Source [control panel]
AU	Aux [remote control]
OP	Optical [remote control]
BL	Bluetooth® [remote control]
BA	Track Back [control panel or remote control]
FO	Track Forward [control panel or remote control]
PL	Play [control panel or remote control]
T	Treble up [remote control]
T-	Treble down [remote control]
B	Bass up [remote control]
B-	Bass down [remote control]

TROUBLESHOOTING

PROBLEM	SOLUTION
1. Sound is distorted.	1a. Decrease the volume. 1b. If the iPhone/iPod original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD. 1c. If you are using an external sound source like an older generation iPod, try reducing the output volume on the device itself. 1d. Try changing the bass and treble settings using the remote control.
2. Unit gets warm after extended play at high volume.	2a. Turn the unit off for a period of time or lower the volume.

CARE AND MAINTENANCE

Warning:

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. Only a qualified service person should repair this product.
3. Do not use outdoors.
4. Do not insert or allow foreign objects to enter the system as this may cause an electric shock, fire or damage to the appliance.
5. Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

Replacing the Remote Control Battery

When the remote control stops operating or its range seems reduced, it is time to replace the battery with a new one.

1. The battery compartment is located on the back end of the remote.
2. Press and slide the battery door open and remove the old battery.
3. Insert 1pc CR2025 battery, checking that the + and - sides of the battery match inside the battery compartment.
4. Replace the battery compartment door.

CAUTION:

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.

Note: Caution do not ingest batteries. If batteries are swallowed, immediately call poison control.

Disposal of Used Batteries

Battery may contain hazardous substances which could be endangering to environment and human health.



This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead, it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. Interference can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by trying one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.