



CLEAR LIGHTS

USER MANUAL CHRISTMAS TREE



A long time ago, on a winter night, a Christmas tree illuminated the dreams of a small family, marking the beginning of our brand story.



Over a decade ago, our founder, Audrey, crafted the first Christmas trees in a small village in China with dedication and creativity. In the early days, Audrey and his team worked tirelessly for more than ten hours a day, hand-cutting leaves, meticulously assembling branches, and overcoming countless challenges to bring the joy and warmth of the holiday season to others. This spirit of relentless effort has become the essence of our brand.

Today, we are a leader in the medium and high-end Christmas tree production industry, exporting tens of thousands of Christmas trees worldwide each year. Despite the changing times, our commitment remains steadfast. We use high-quality materials to perfect every detail, striving to make each family's Christmas truly special. May our Christmas trees continue to accompany happy families, welcoming the dawn of the new year together.



 
ASSEMBLY INSTRUCTIONS

WARNING - Risk of Fire and Electric Shock



- 1. Read carefully all instructions and warning tags.**
- 2. Do not place near source of fire or heat.**
- 3. Disconnect tree's light sets from power before starting.**
- 4. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.**
- 5. Do not press or grasp bulbs during assembly or installation.**
- 6. Make sure the tree is stable after final assembly.**
- 7. Do not use candles on tree. Use only the included mini lights.**
- 8. Do not overload extension cords or power strips.**
- 9. Always fully insert electrical plugs into the receptacle.**
- 10. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.**
- 11. Retain the instructions for future use and save the carton for storing tree.**

Please remove all packaging such as cardboard or plastic, before beginning.

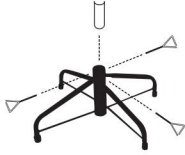

Remove the tree stand. The metal stand opens into an "X" shape.

Place it on a flat surface.

Insert the pole with the tapered end of the lower part of the tree into the stand and tighten the three screws on the stand.



 
Gently lower all the main branches on each section of the tree.

Be careful not to apply excessive pressure to the brackets while straightening and separating all the branch tips.




Starting from the bottom, begin to gently bend and open the branches one by one.

Assemble the middle section and top section in the right way

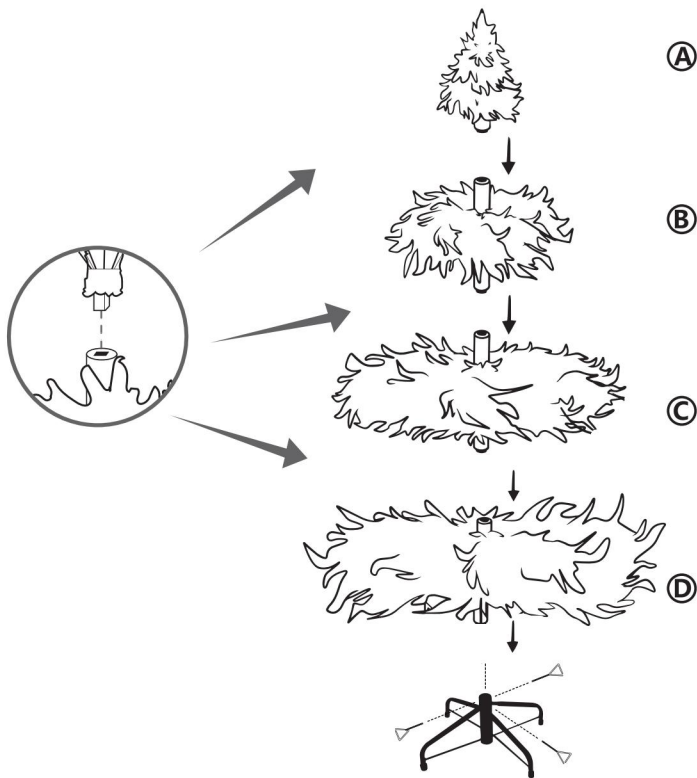


NOTE: The bottom section is wider than the middle section, make sure all sections are assembled in the right way.

 ELECTRICAL CONNECTIONS UL CLEAR LIGHT (WARM WHITE COLOR)

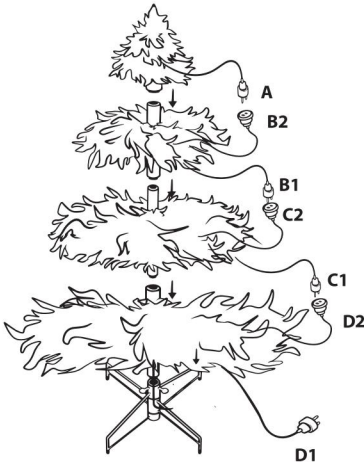

FOR 6FT

 
1. Plug the connector to the one on the below. (**A** into **B2**)
2. Plug the connector to the one on the below. (**B1** into **C2**)
3. Plug the connector to the one on the below. (**C1** into **D2**)
4. Plug **D1** into the power outlet

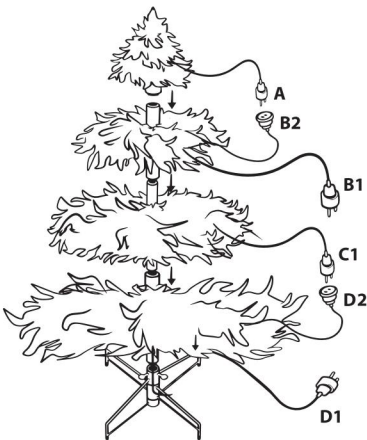

FOR 7.5/10FT

1. Plug the connector to the one on the below. (**A** into **B2**)
2. Plug **B1** into the power outlet
3. Plug the connector to the one on the below. (**C1** into **D2**)
4. Plug **D1** into the power outlet

 ELECTRICAL CONNECTIONS UL CLEAR LIGHT (WARM WHITE COLOR)

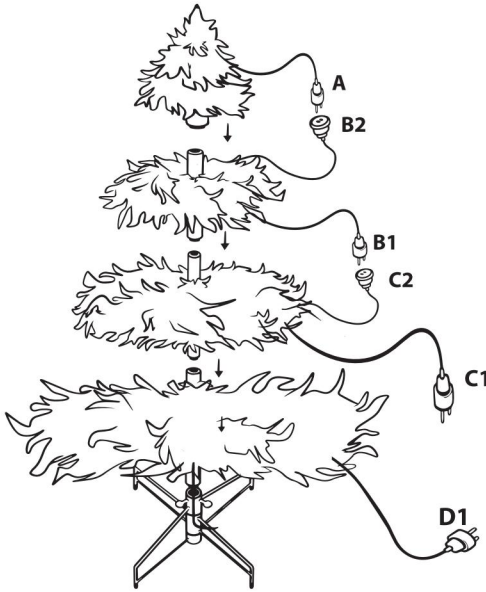

FOR 9FT

1. Plug the connector to the one on the below.
(**A** into **B2**)
2. Plug the connector to the one on the below.
(**B1** into **C2**)
3. Plug **C1** into the power outlet
Plug **D1** into the power outlet

TROUBLESHOOTING

• Fuse Replacement Instructions:

1. Grasp plus and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Turn fuseholder over to remove fuse. Remove fuse carefully.
4. Risk of fire. Replace fuse only with 3 Amp, 125 volts fuse (provided with product)
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse), that should not be removed. Discard product if the attachment plug is damaged.



• Lamp Replacement Instructions:

To replace burned-out bulbs, follow the steps and illustrations below:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. To remove pull burned-out lamp and plastic base straight out of lampholder.



3. To replace align base of new lamp with rectangular hole in socket and push into lampholder until firmly seated.

 


If the new lamp base does not fit in lampholder, follow the step below.

To exchange lamp base: 1. Remove the base of both burned-out and new lamps by straightening lamp leads and then gently pulling lamp out.

2. Thread leads of new lamp through holes in old base with one lead in each hole.

3. After lamp is fully inserted into base, bend each lead up, like other lamp in the light set so that the lamp may be ready for replacement. Replace lamp with only 2.5 Volt regular bright type lamp (provided with product).



TROUBLESHOOTING

The tree does not light when plugged in:

1. Check to make sure that all plus and adapters are properly connected. (The tree comes with a foot switch, try stepping on the on/off button)
2. Check if the light cord is loose or broken, and contact customer service to send replacement accessories as needed.

Christmas tree tilted:

1. Check whether the tree stand and eyebolts are connected properly. Make sure the bottom section of the tree stands straight in the tree stand by adjusting the eye screws.
2. Check whether the tree stand is deformed or broken, and contact customer service to send replacement accessories as needed.

Loose branches:

1. Extra Hinge Pins are included to repair the hinge of the branch. Place the branch into the slot in the bracket.
2. With the hook facing up, align the hook with the hole in the bracket and insert the new hinge pin into the hole, keeping the pin loose but not falling out, then securing the pin in place. (See Figure ABCD)



Disassembly and Storage Instructions:

To be carried out carefully and under adult supervision.

1.Warning - Disconnect power from the lights.

2.Remove all decorations.

3.Starting from the top, carefully remove each section. Gently press the branches back up against the pole.

4.Place the branch sections back into the carton, putting the longest one on the bottom. Remove the screws from the stand and fold for easy storage. Tape the screws to the stand so they don't get misplaced.

5.Store the product in a cool, dry location protected from sunlight, where the temperature does not exceed 104°F (40°C).



KEEP DRY



ADULT SUPERVISION



KEEP AWAY FROM
HIGH TEMPERATURE



NO HEAVY WEIGHT
ON IT