 
 

Assembly Guide

TS012 TV stand

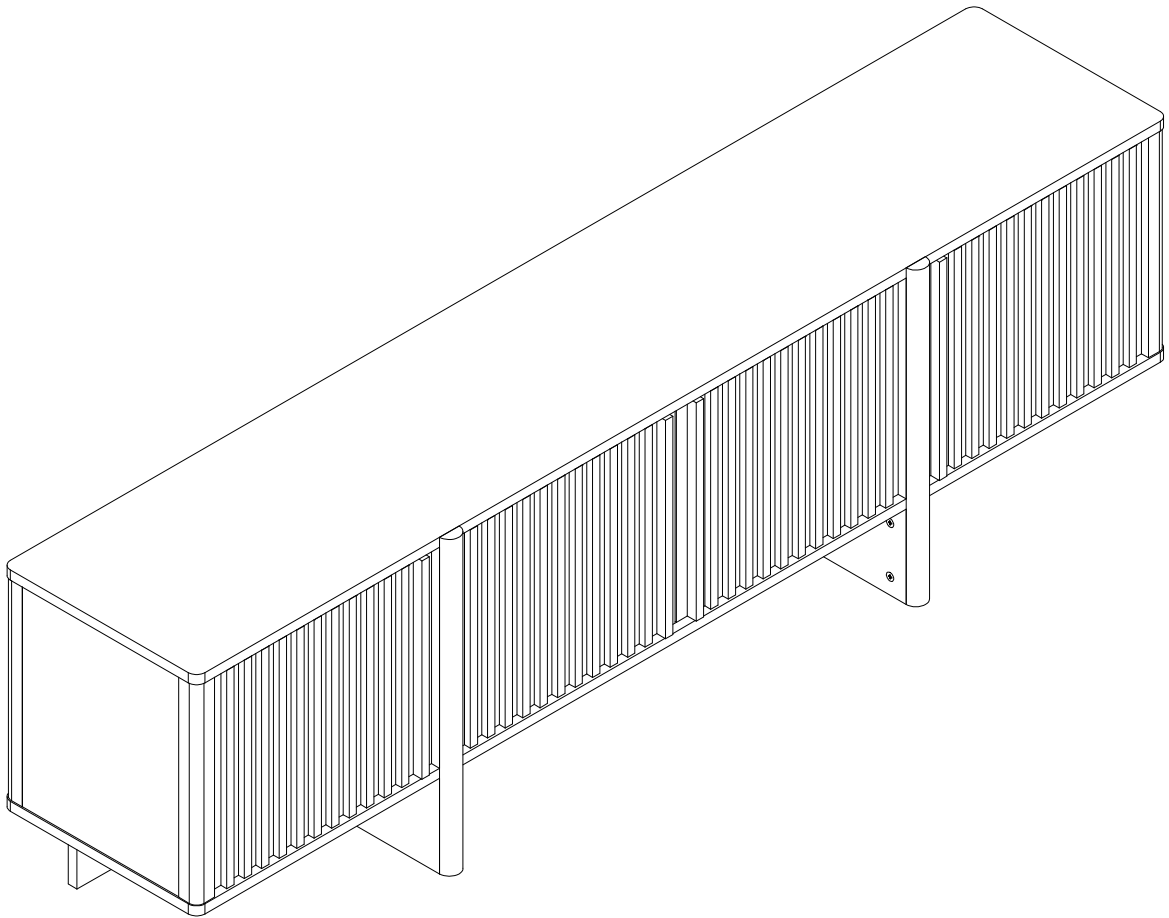

Tips: Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us. Assemble this item on a soft surface, such as carpet to protect the finish.

Before You Start

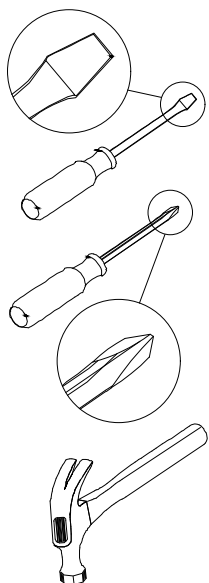

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process

Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. Assembly speed can be increased by using electric screwdriver

 
Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

PARTS LIST


① x1

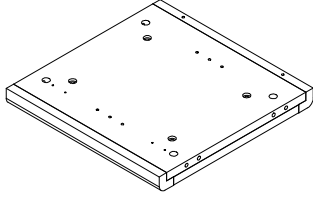


② x1

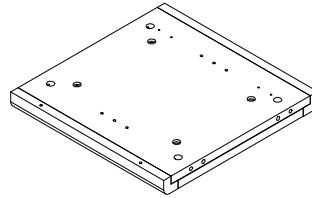 


③ x1

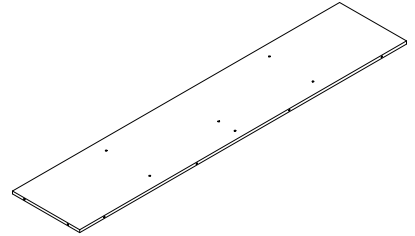 


④ x1

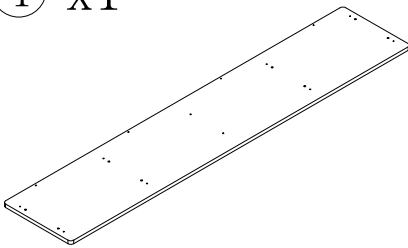 


⑤ x1

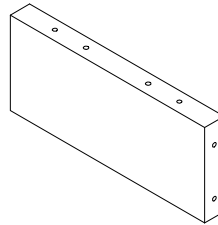 


⑥ x1

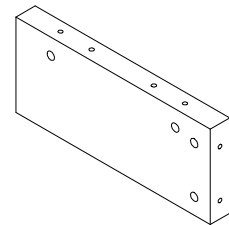 


⑦ x2

 


⑧ x1

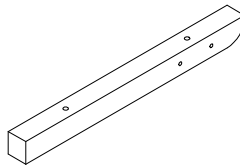 


⑨ x1

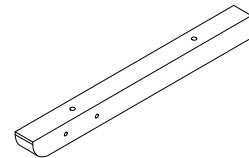 


⑩ x1

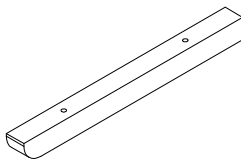 


⑪ x1

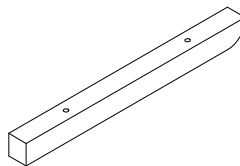 


⑫ x2

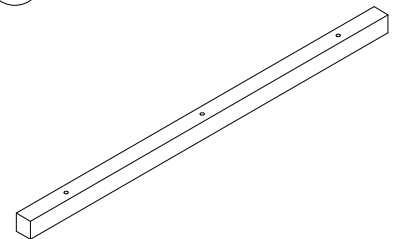 


⑬ x1

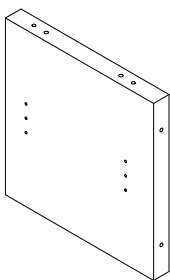 

⑭ x1

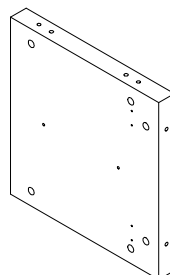 


⑮ x1













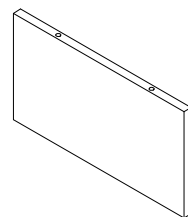 


PARTS LIST		
①⑥ x1	①⑦ x2	①⑧ x2
①⑨ x1	②⑦ x4	


 
PARTS LIST




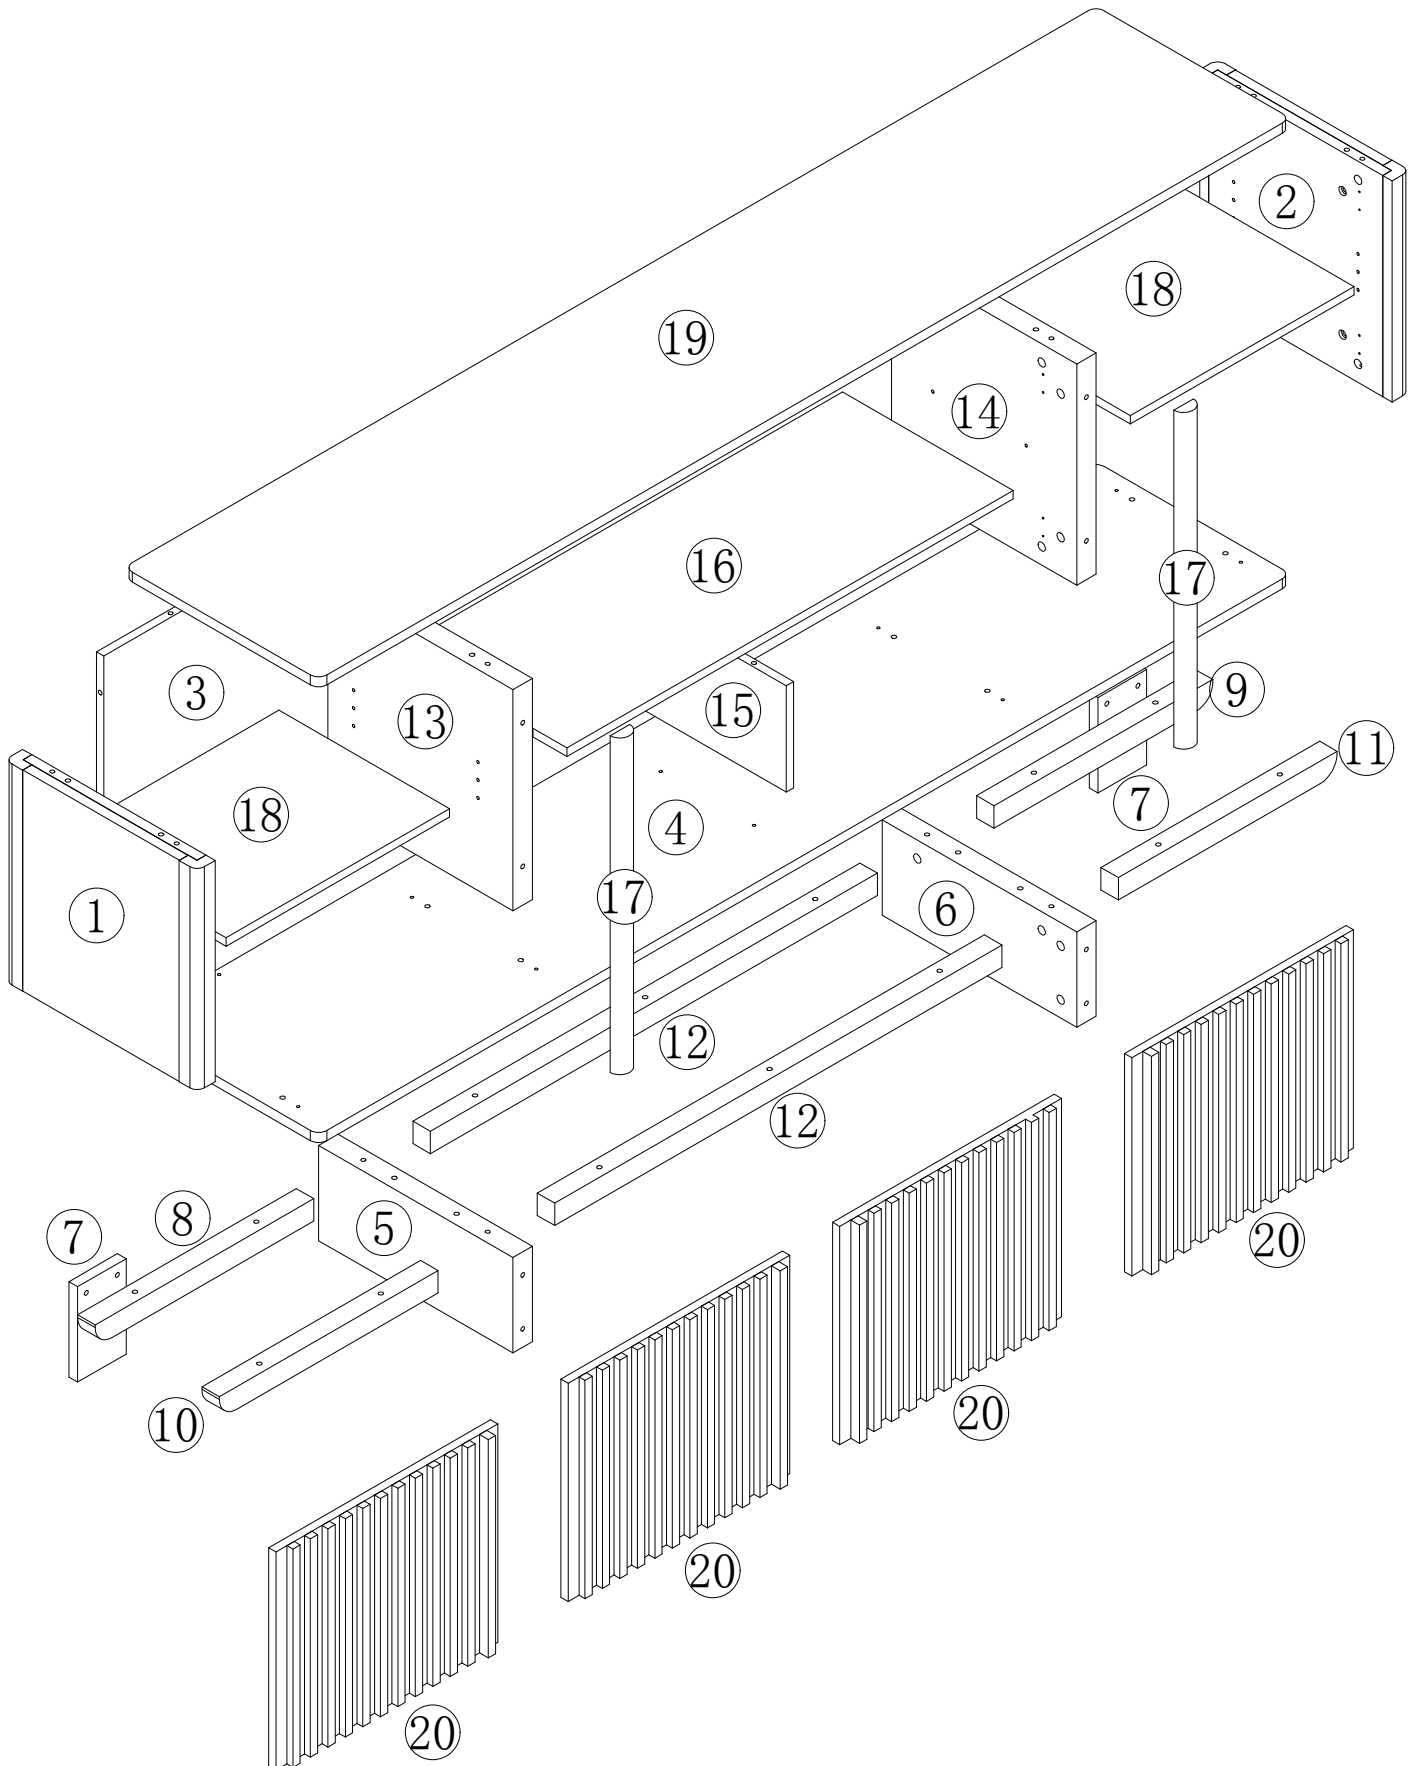


PARTS LIST

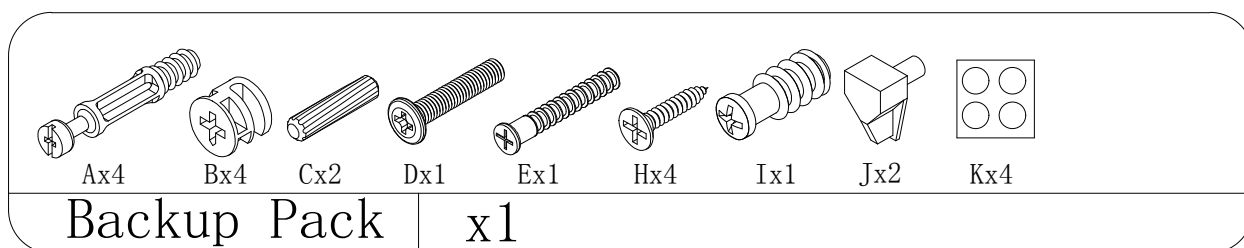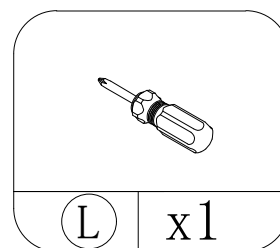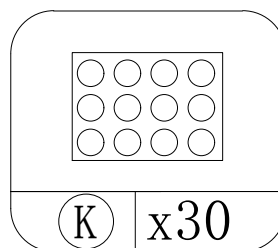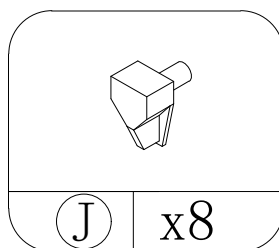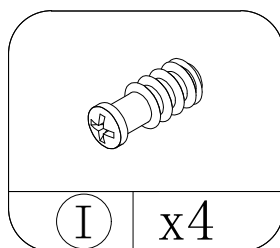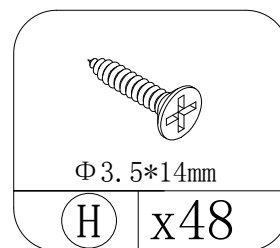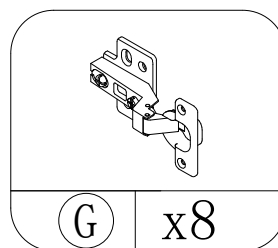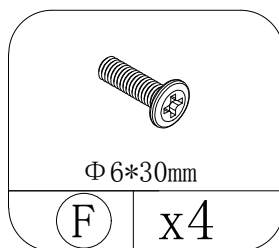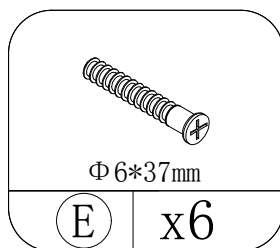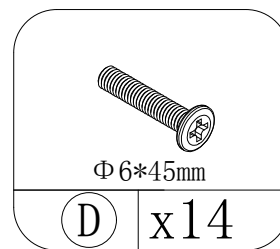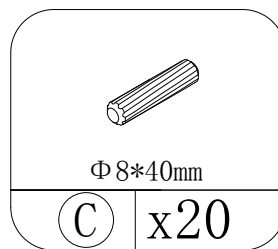           
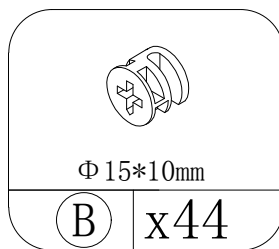 
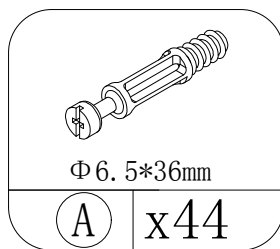 


PARTS LIST

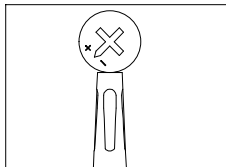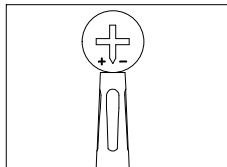  
 Bolt	 X	 ✓
 Connecting piece	Adjust connecting piece direction until it is properly lined up with the hole.	
Insert bolt when connecting piece direction is properly lined up.		

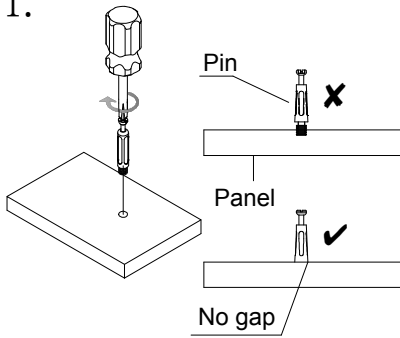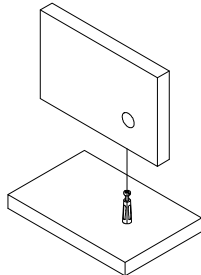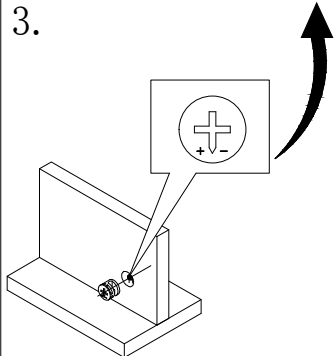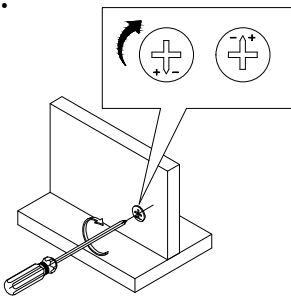    1. 	2. 	3. 	4. 
--	--	---	--

   
Step 1

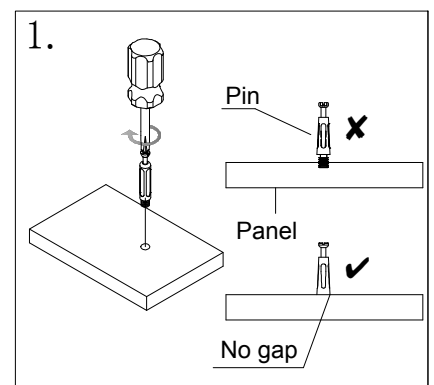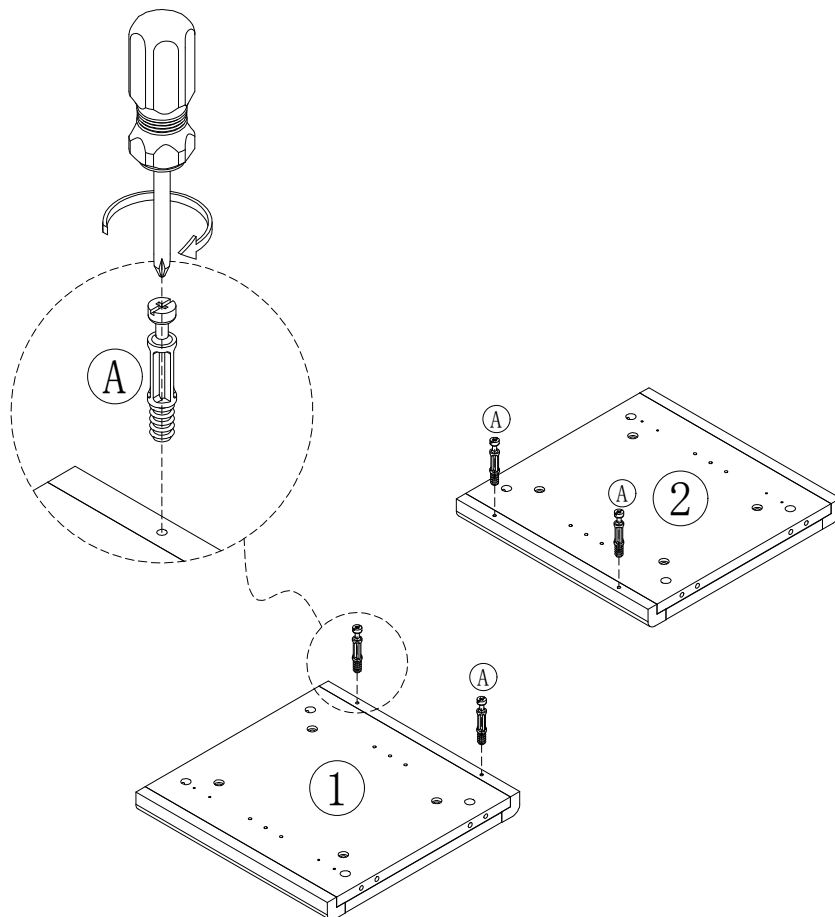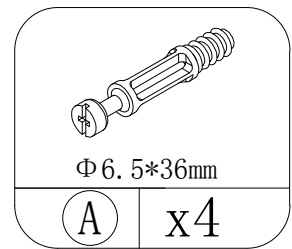



 
Step 2

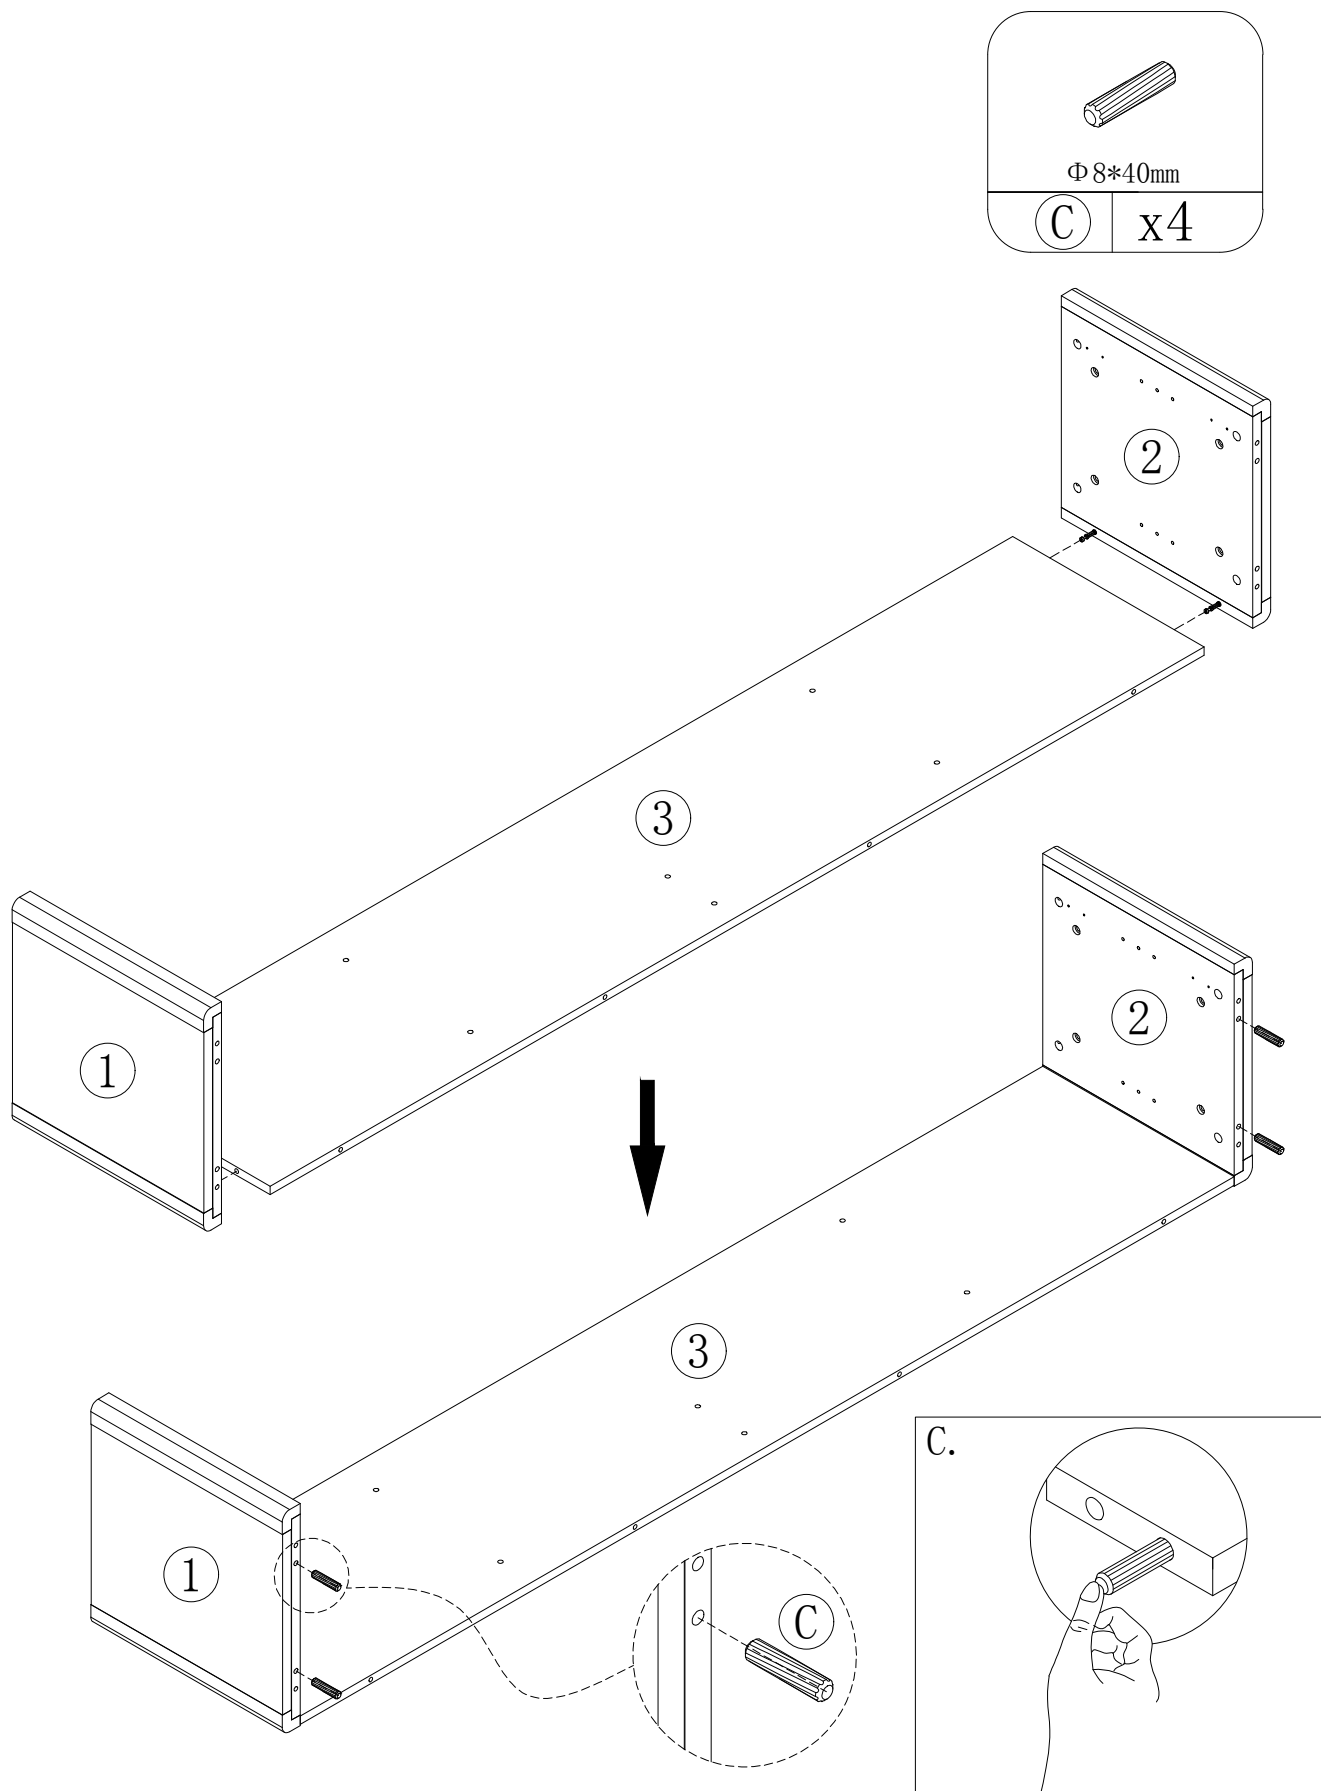


 
Step 3

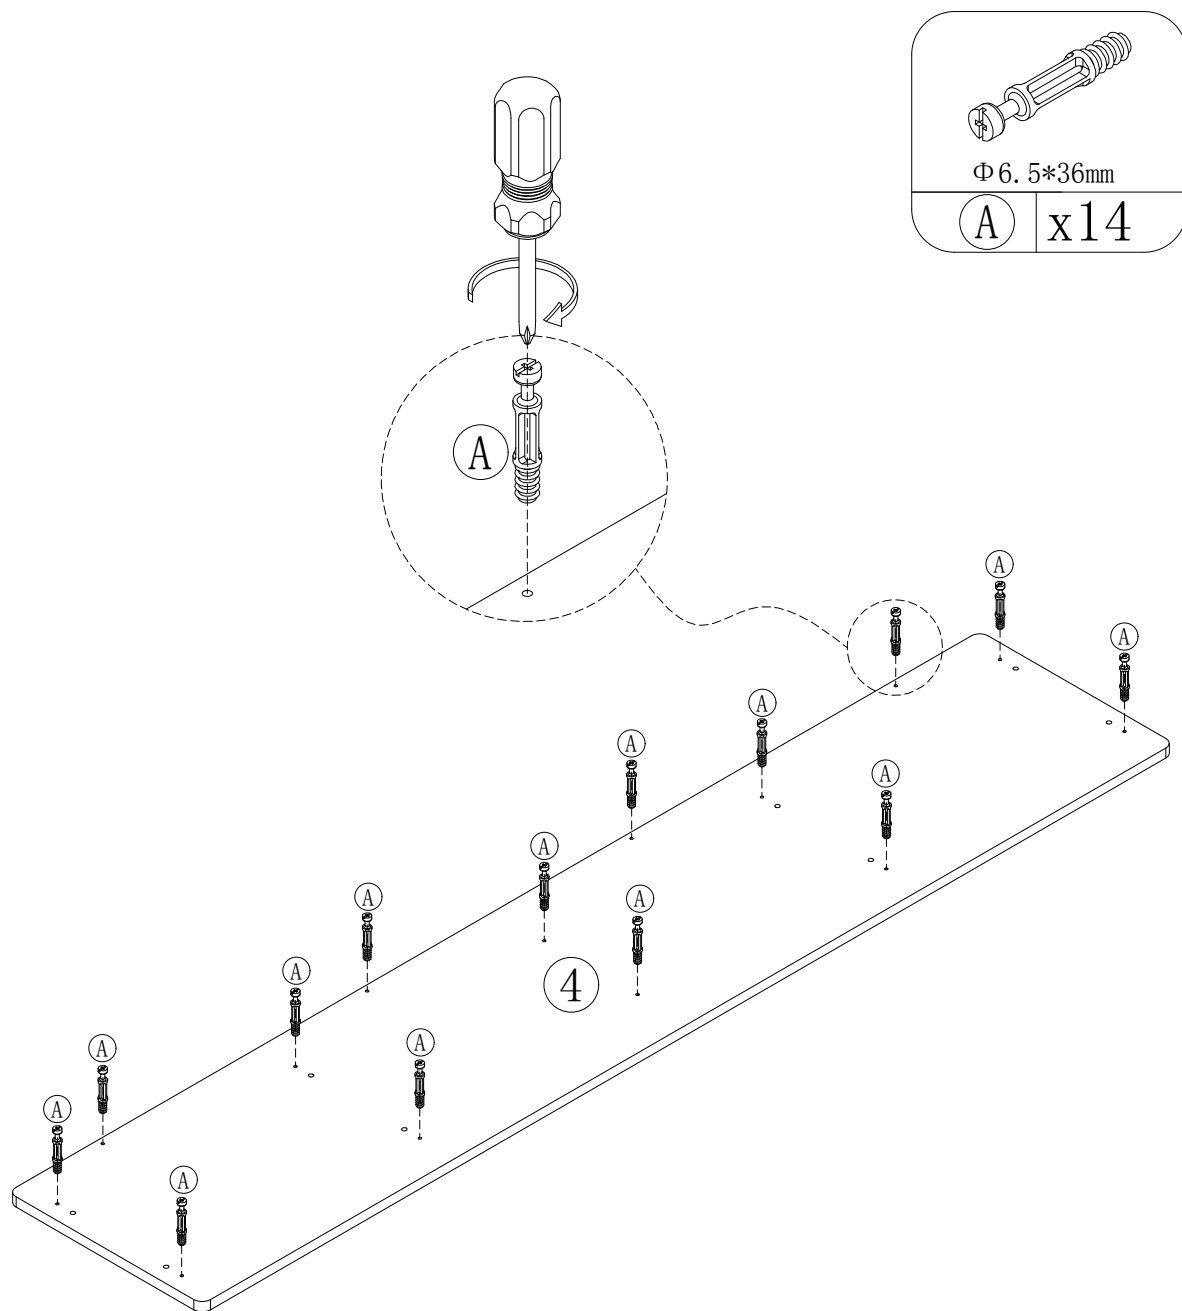

   
Step 4

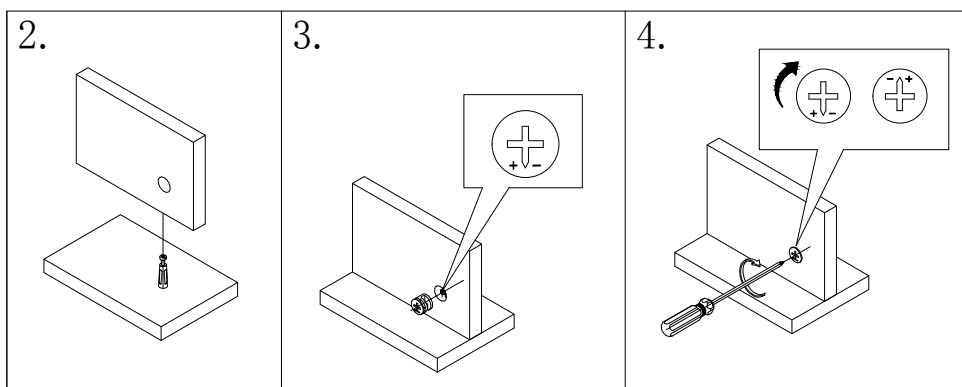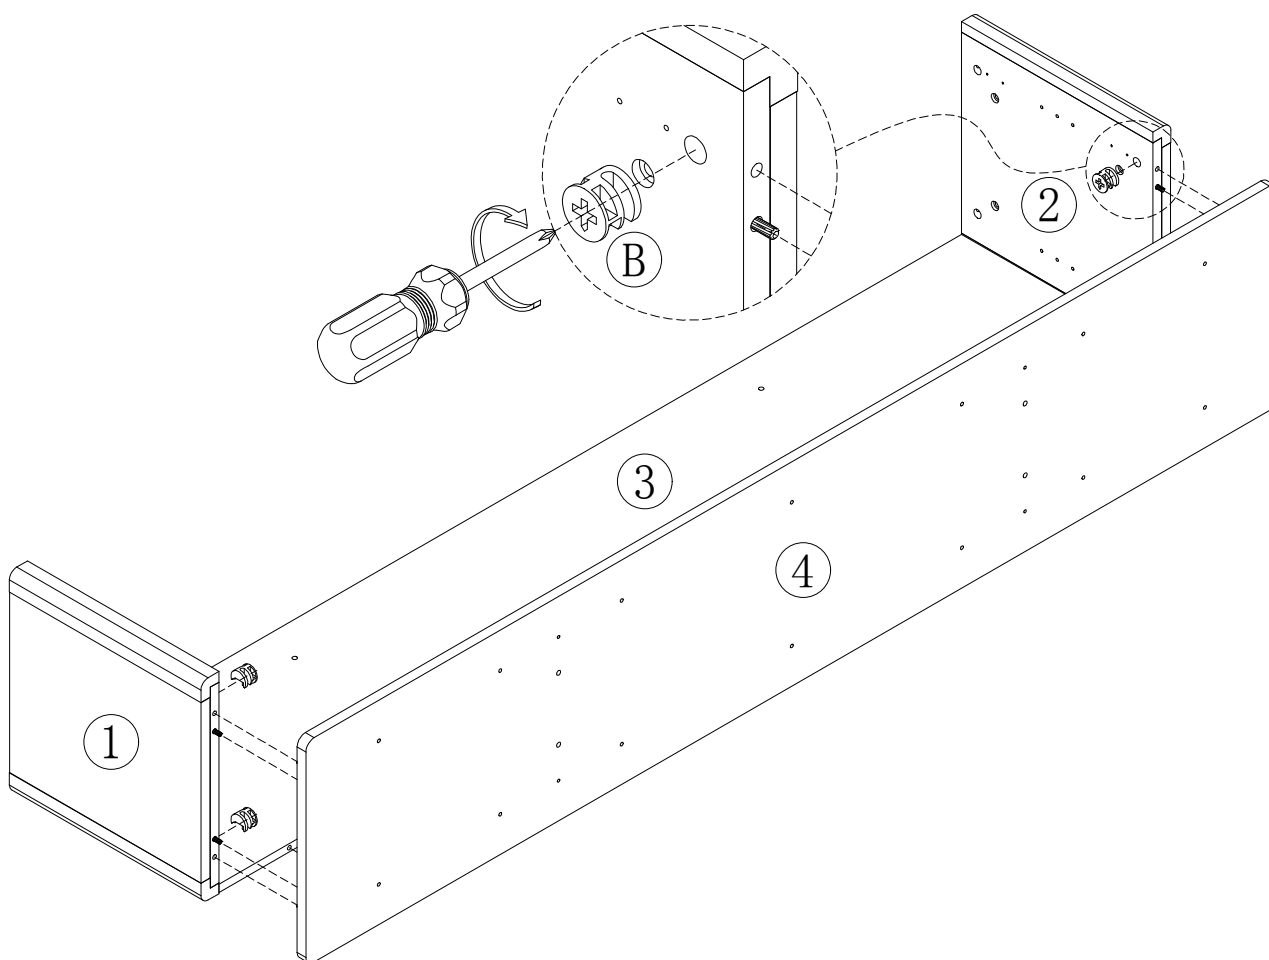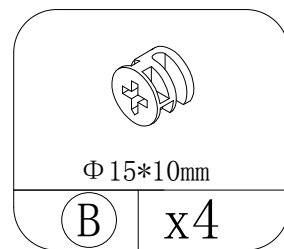

  
Step 5

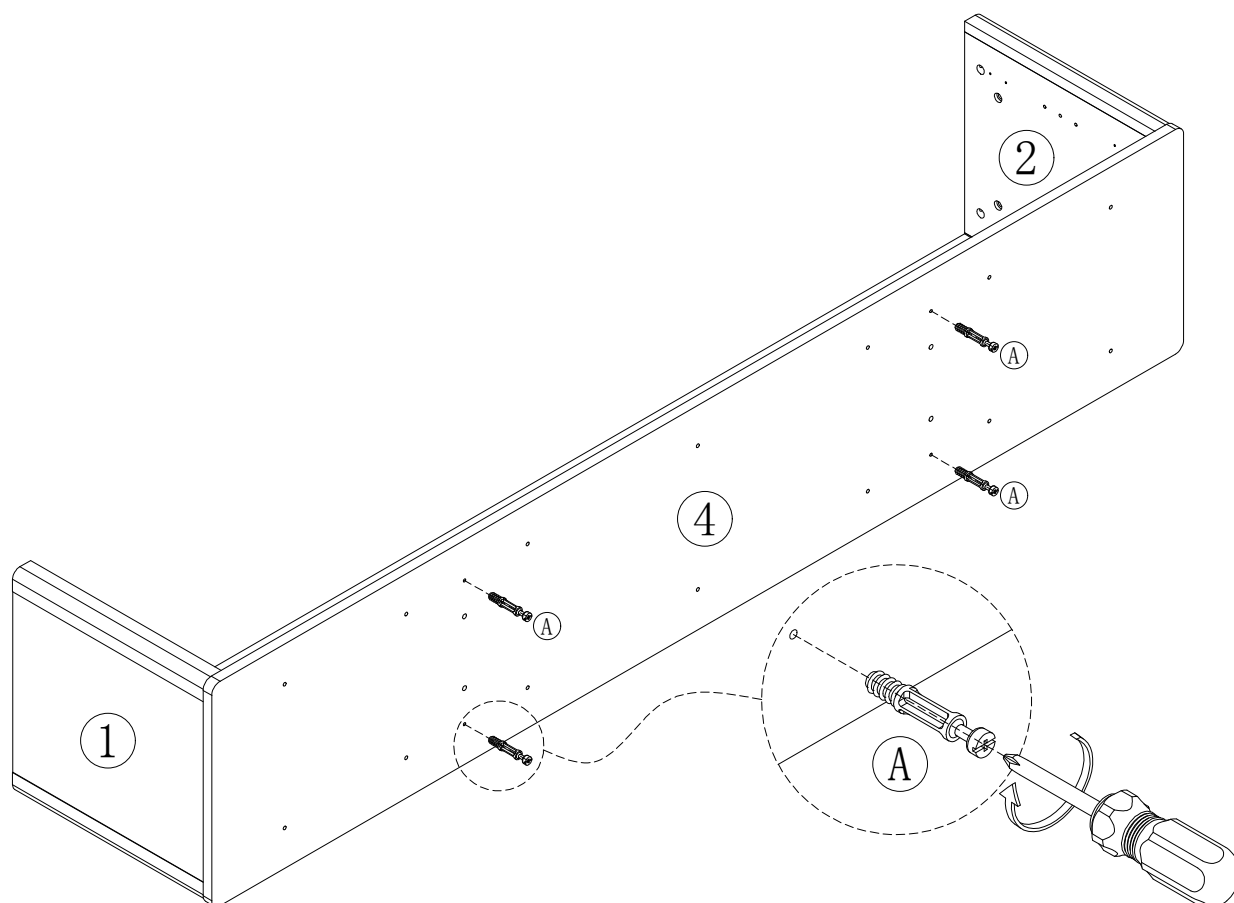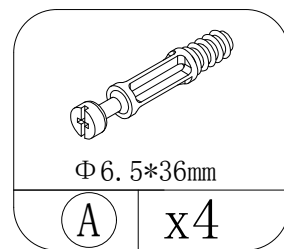

 
Step 6

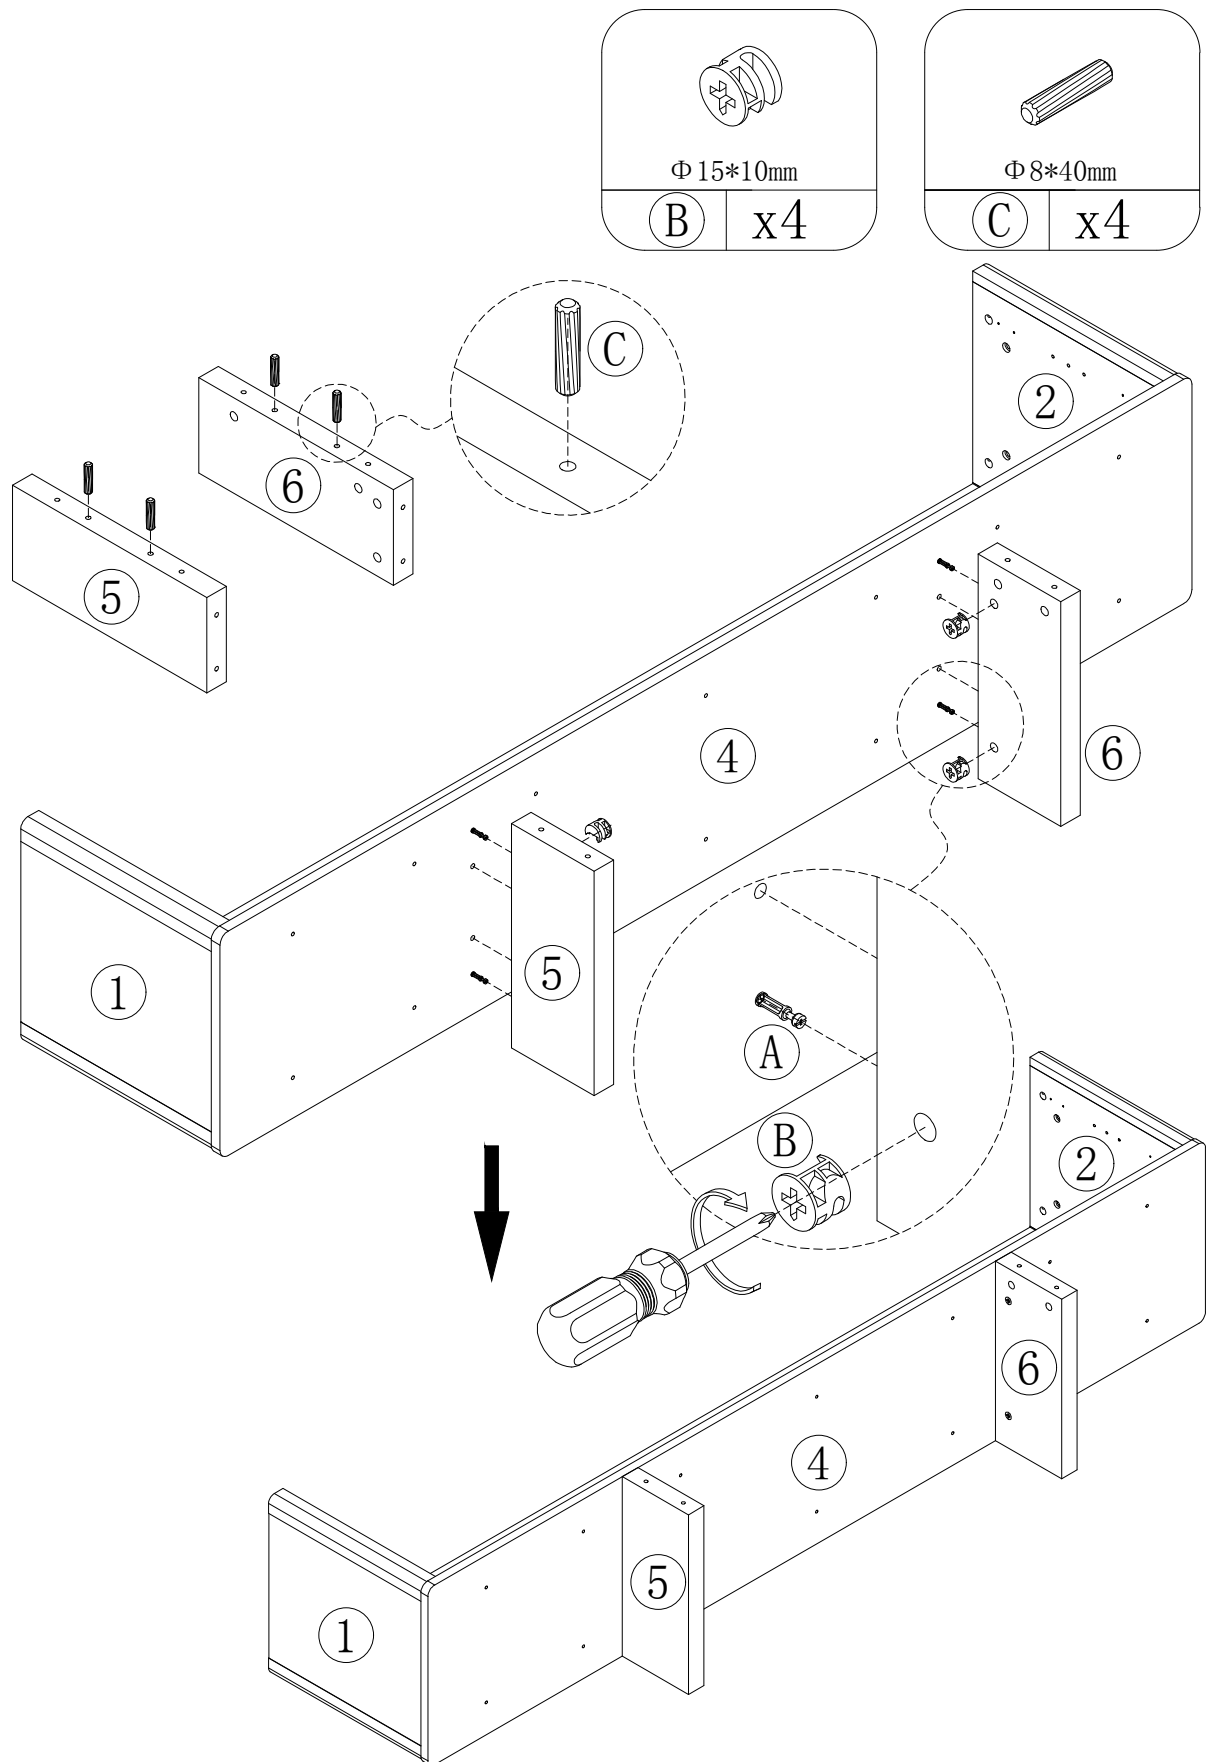


 
Step 7

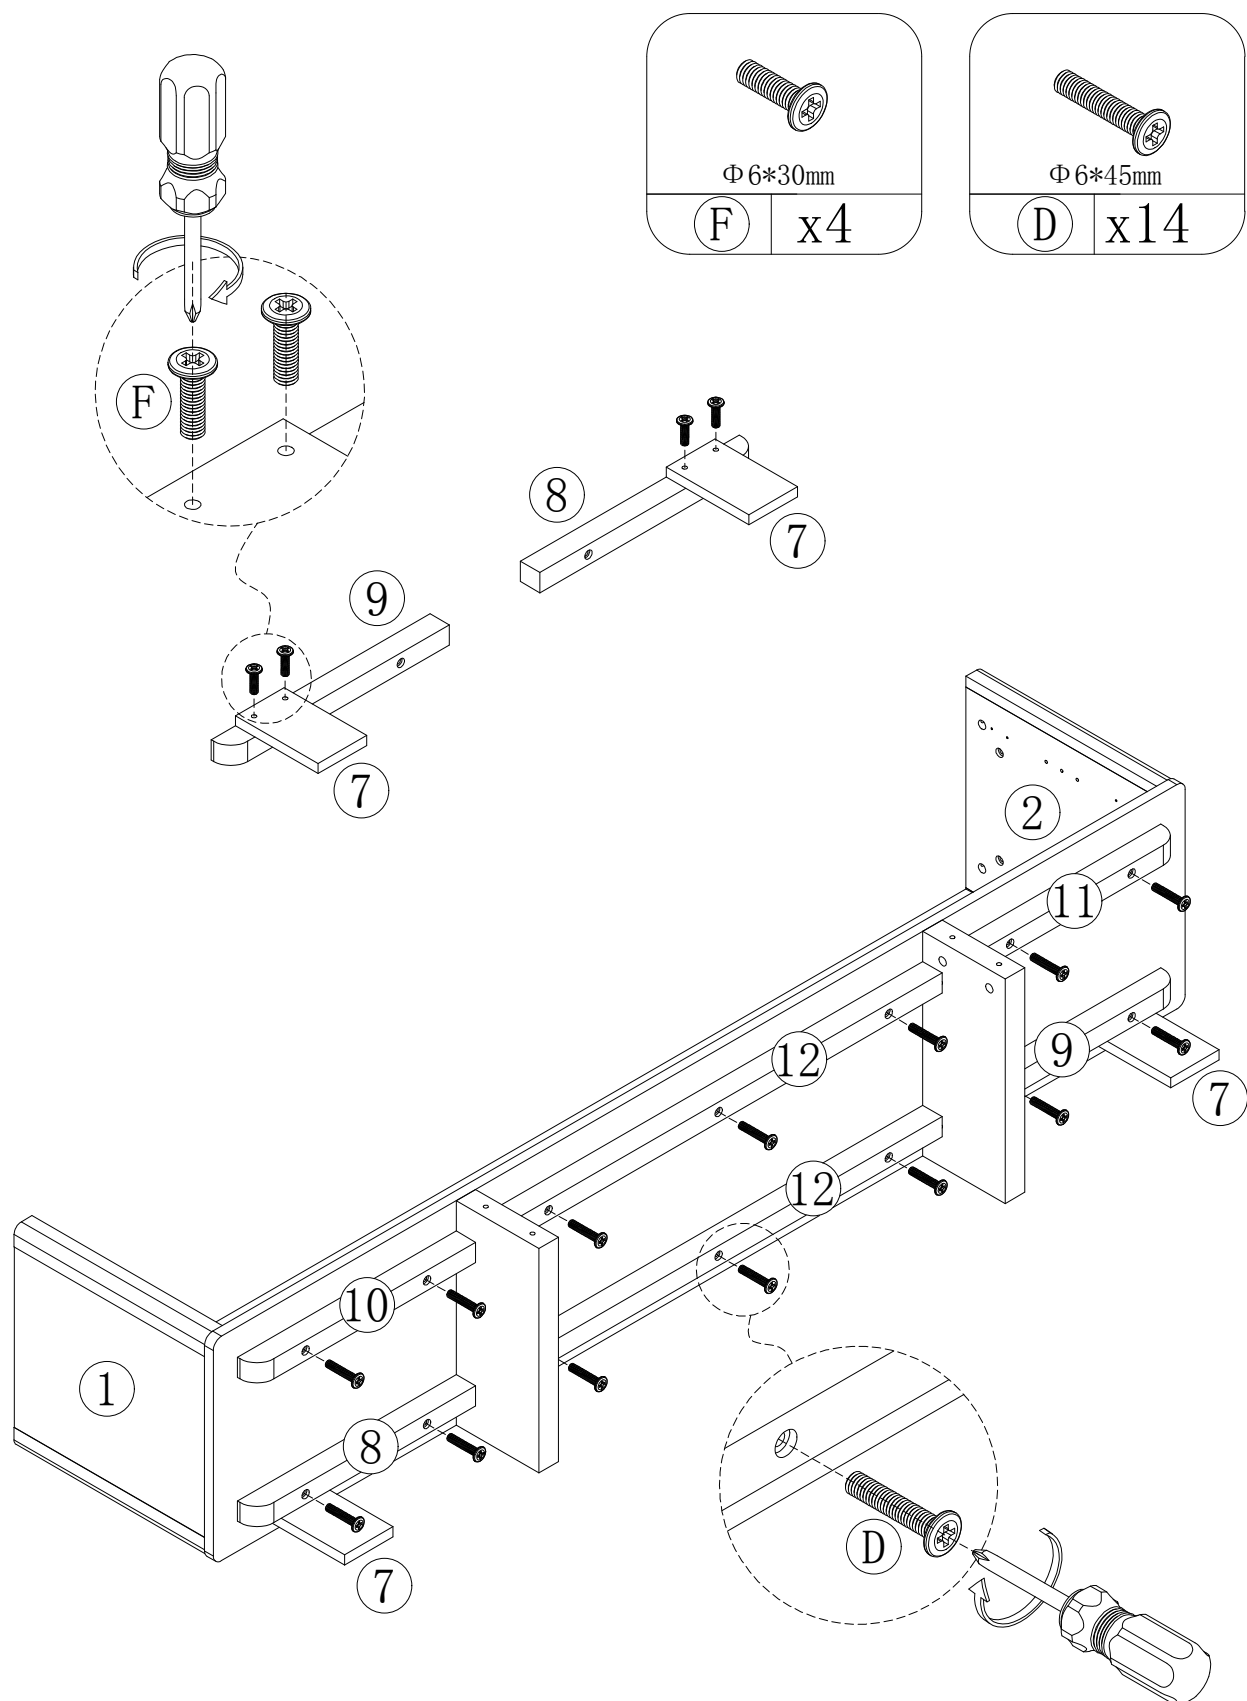


 Step 8



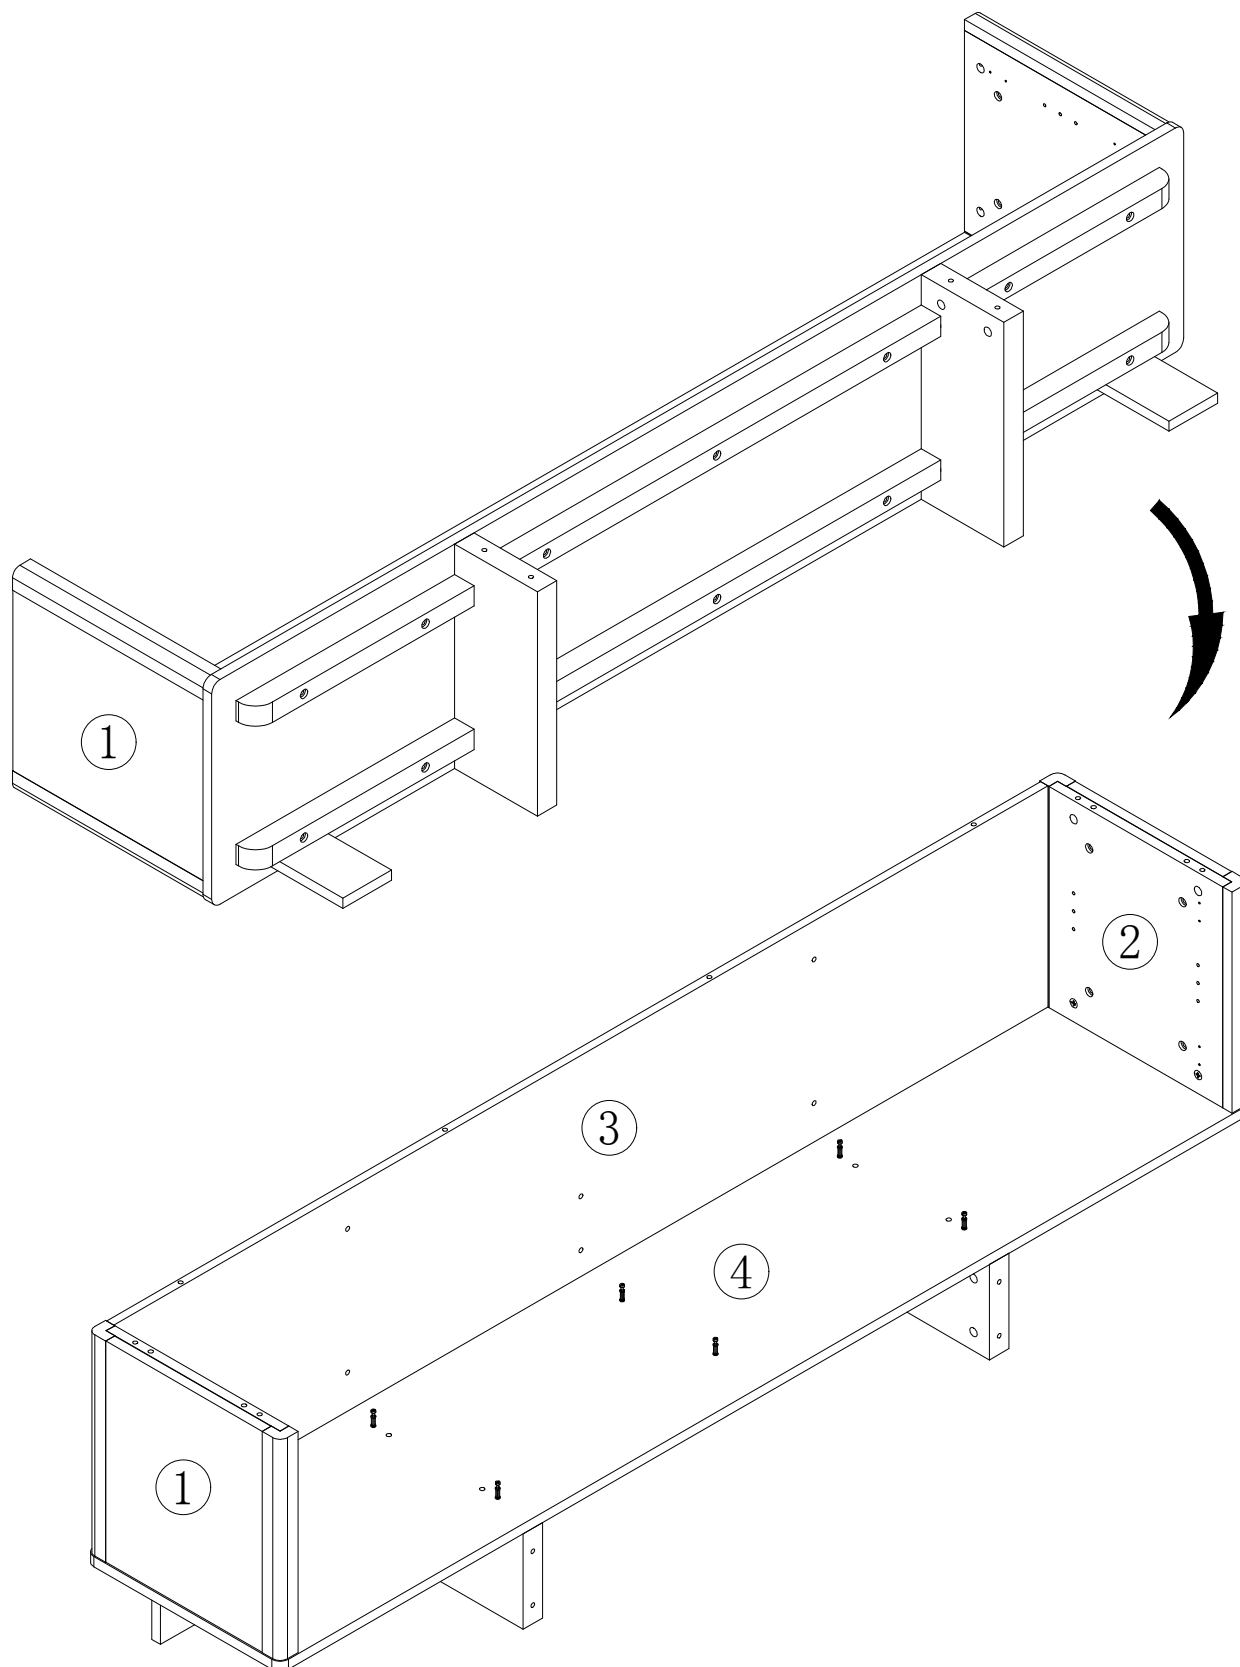


   Step 9

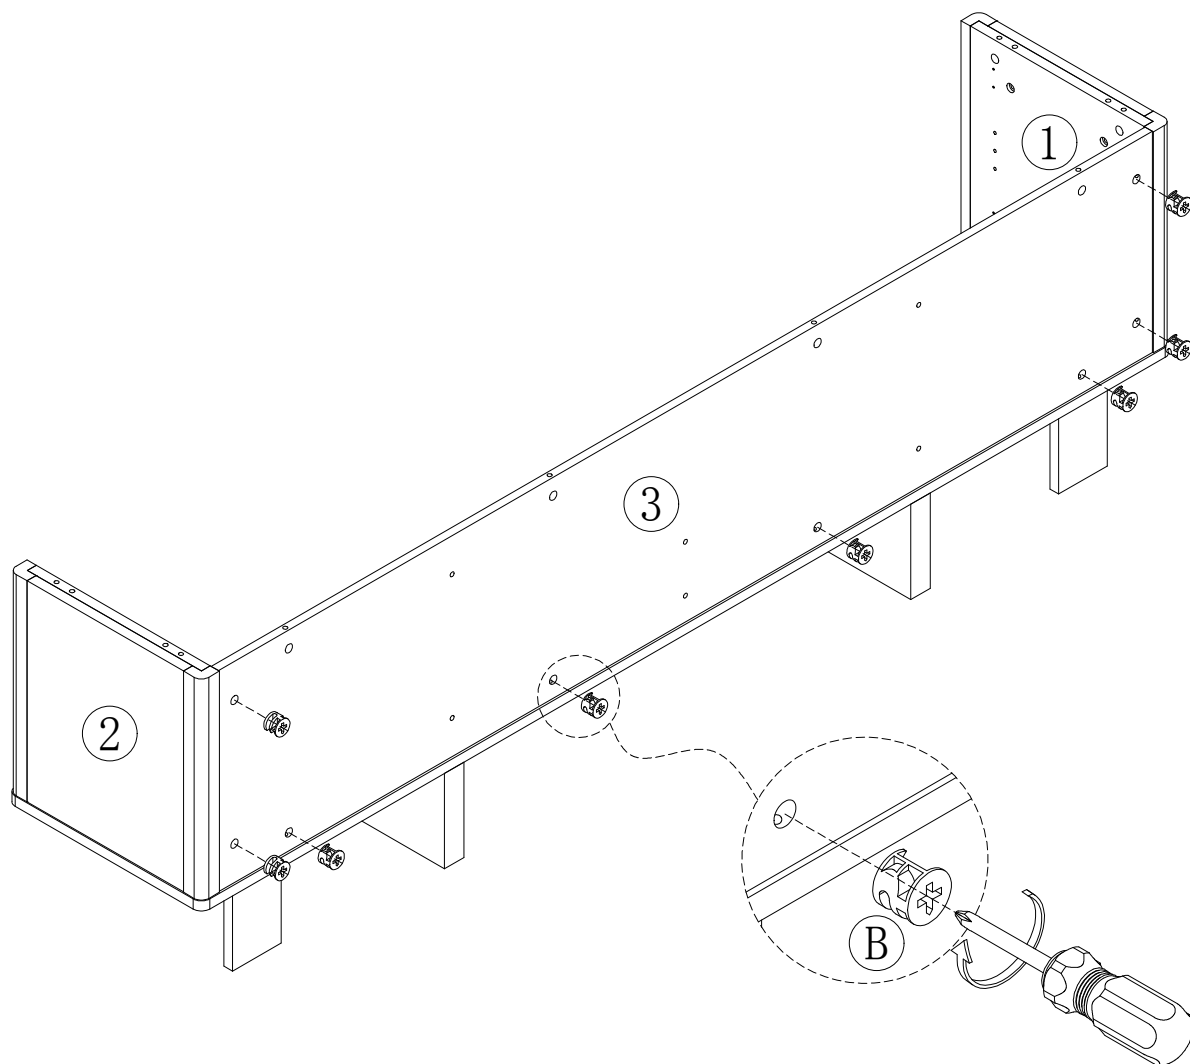
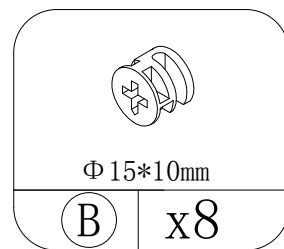


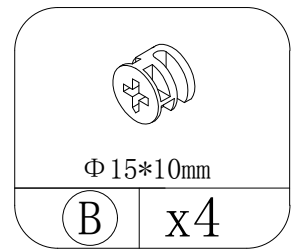

   
Step 11

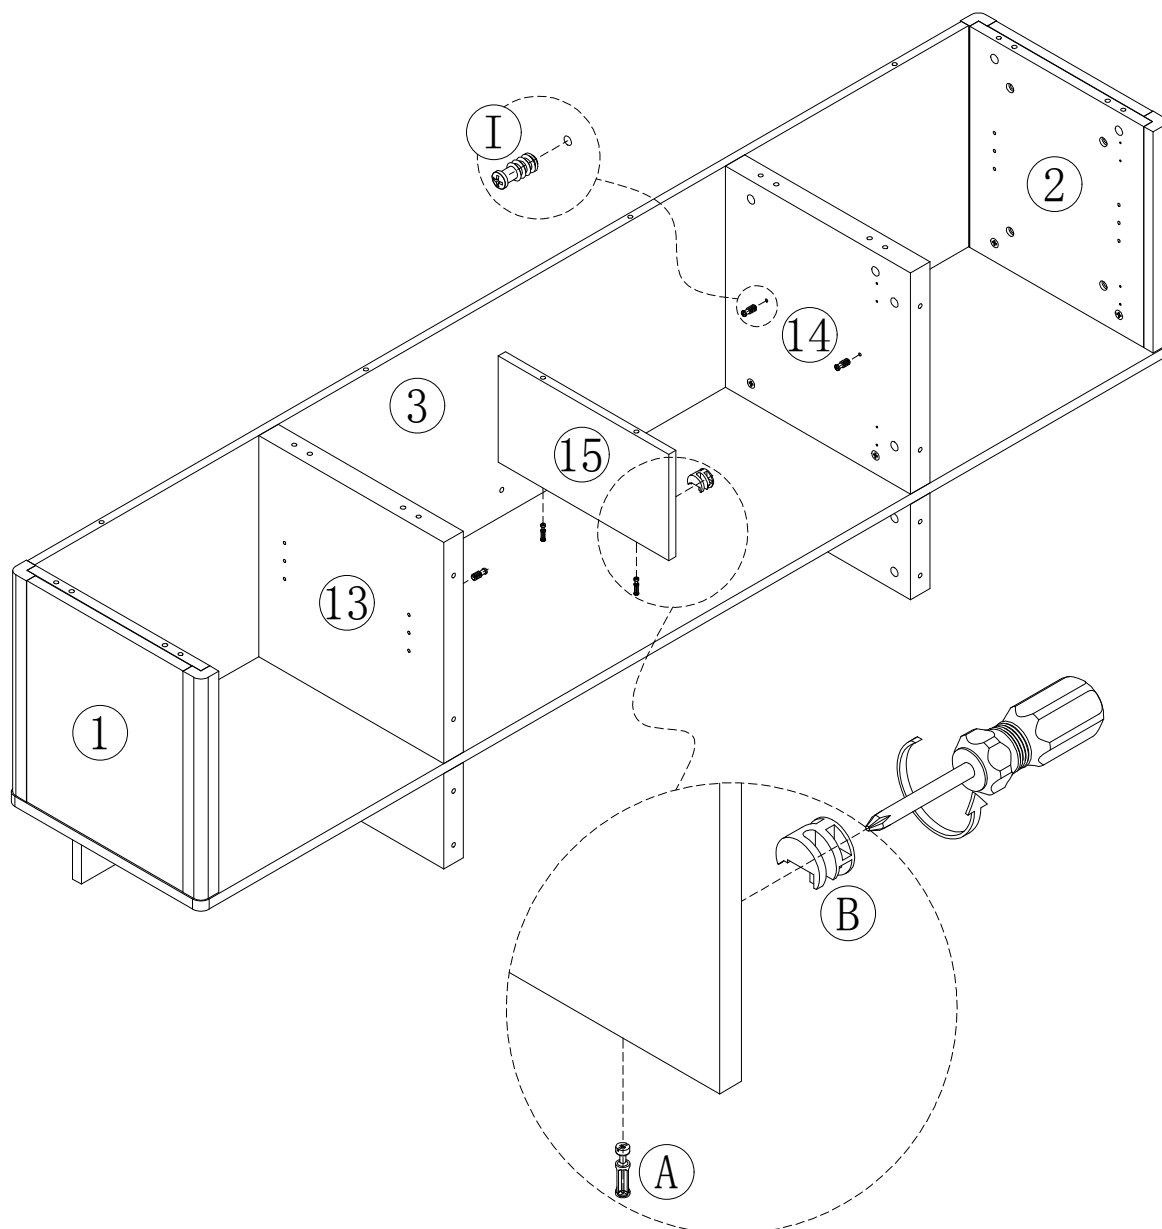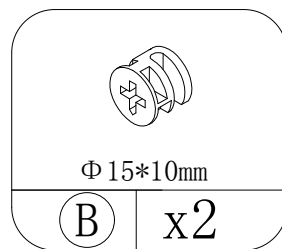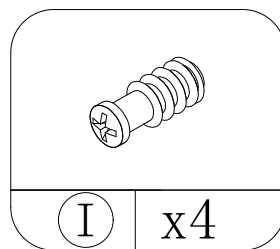

  
Step 12

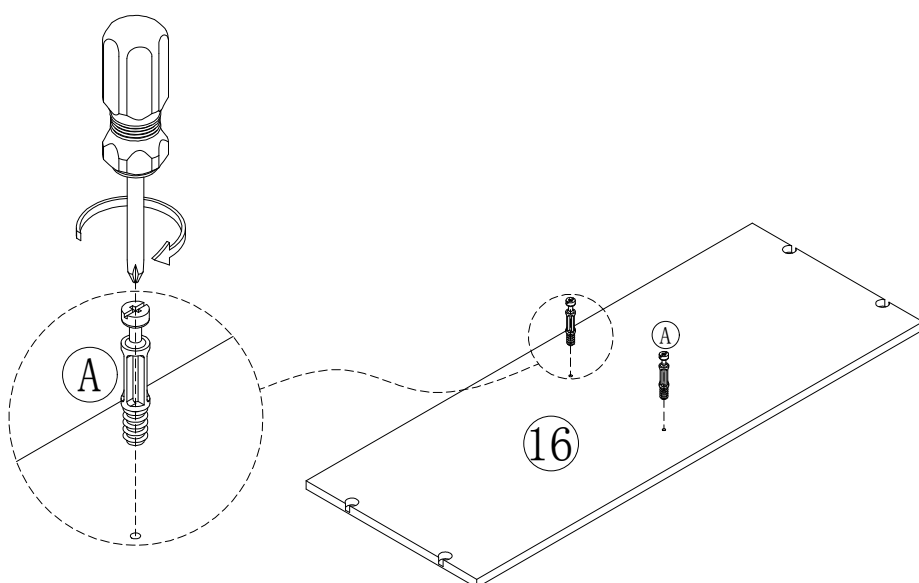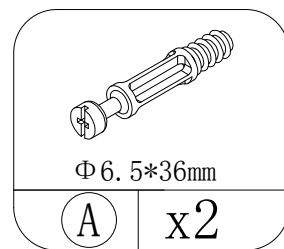


 
Step 13

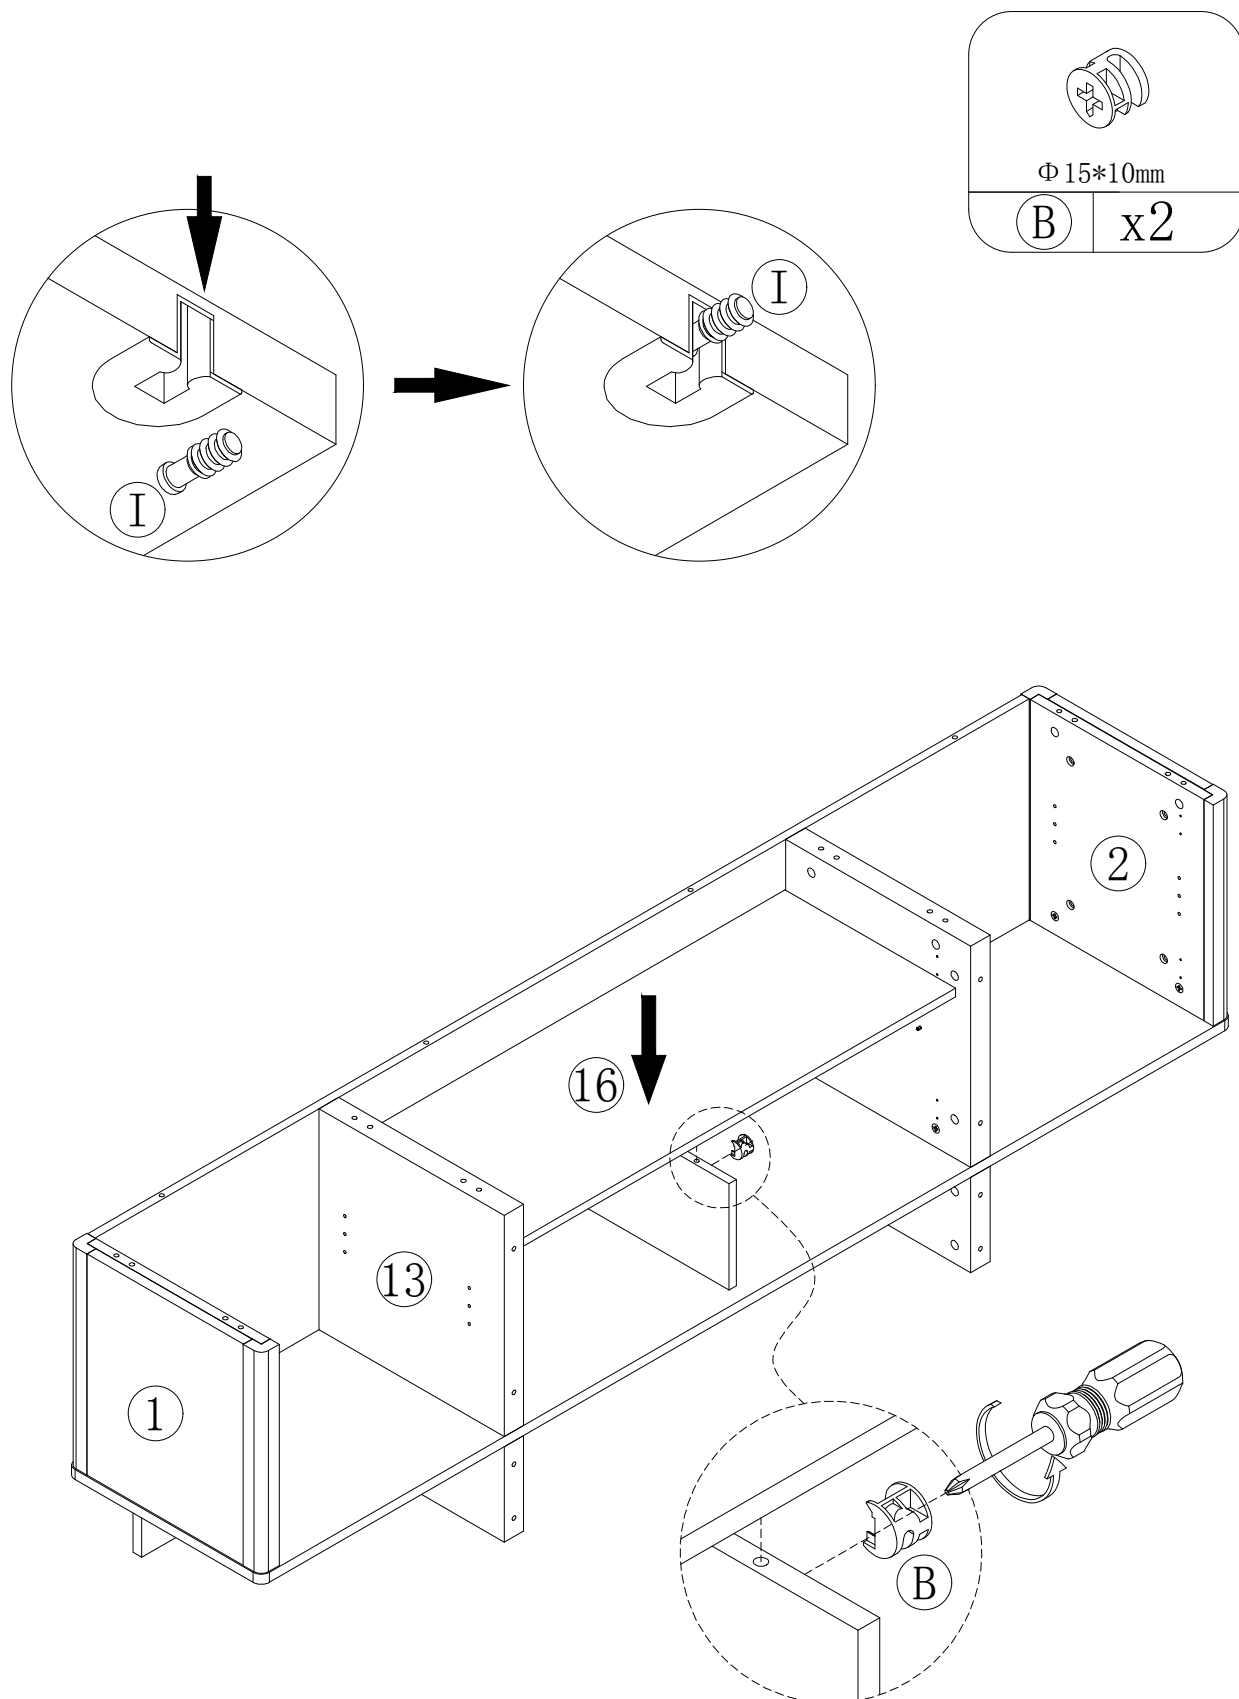


 
Step 14

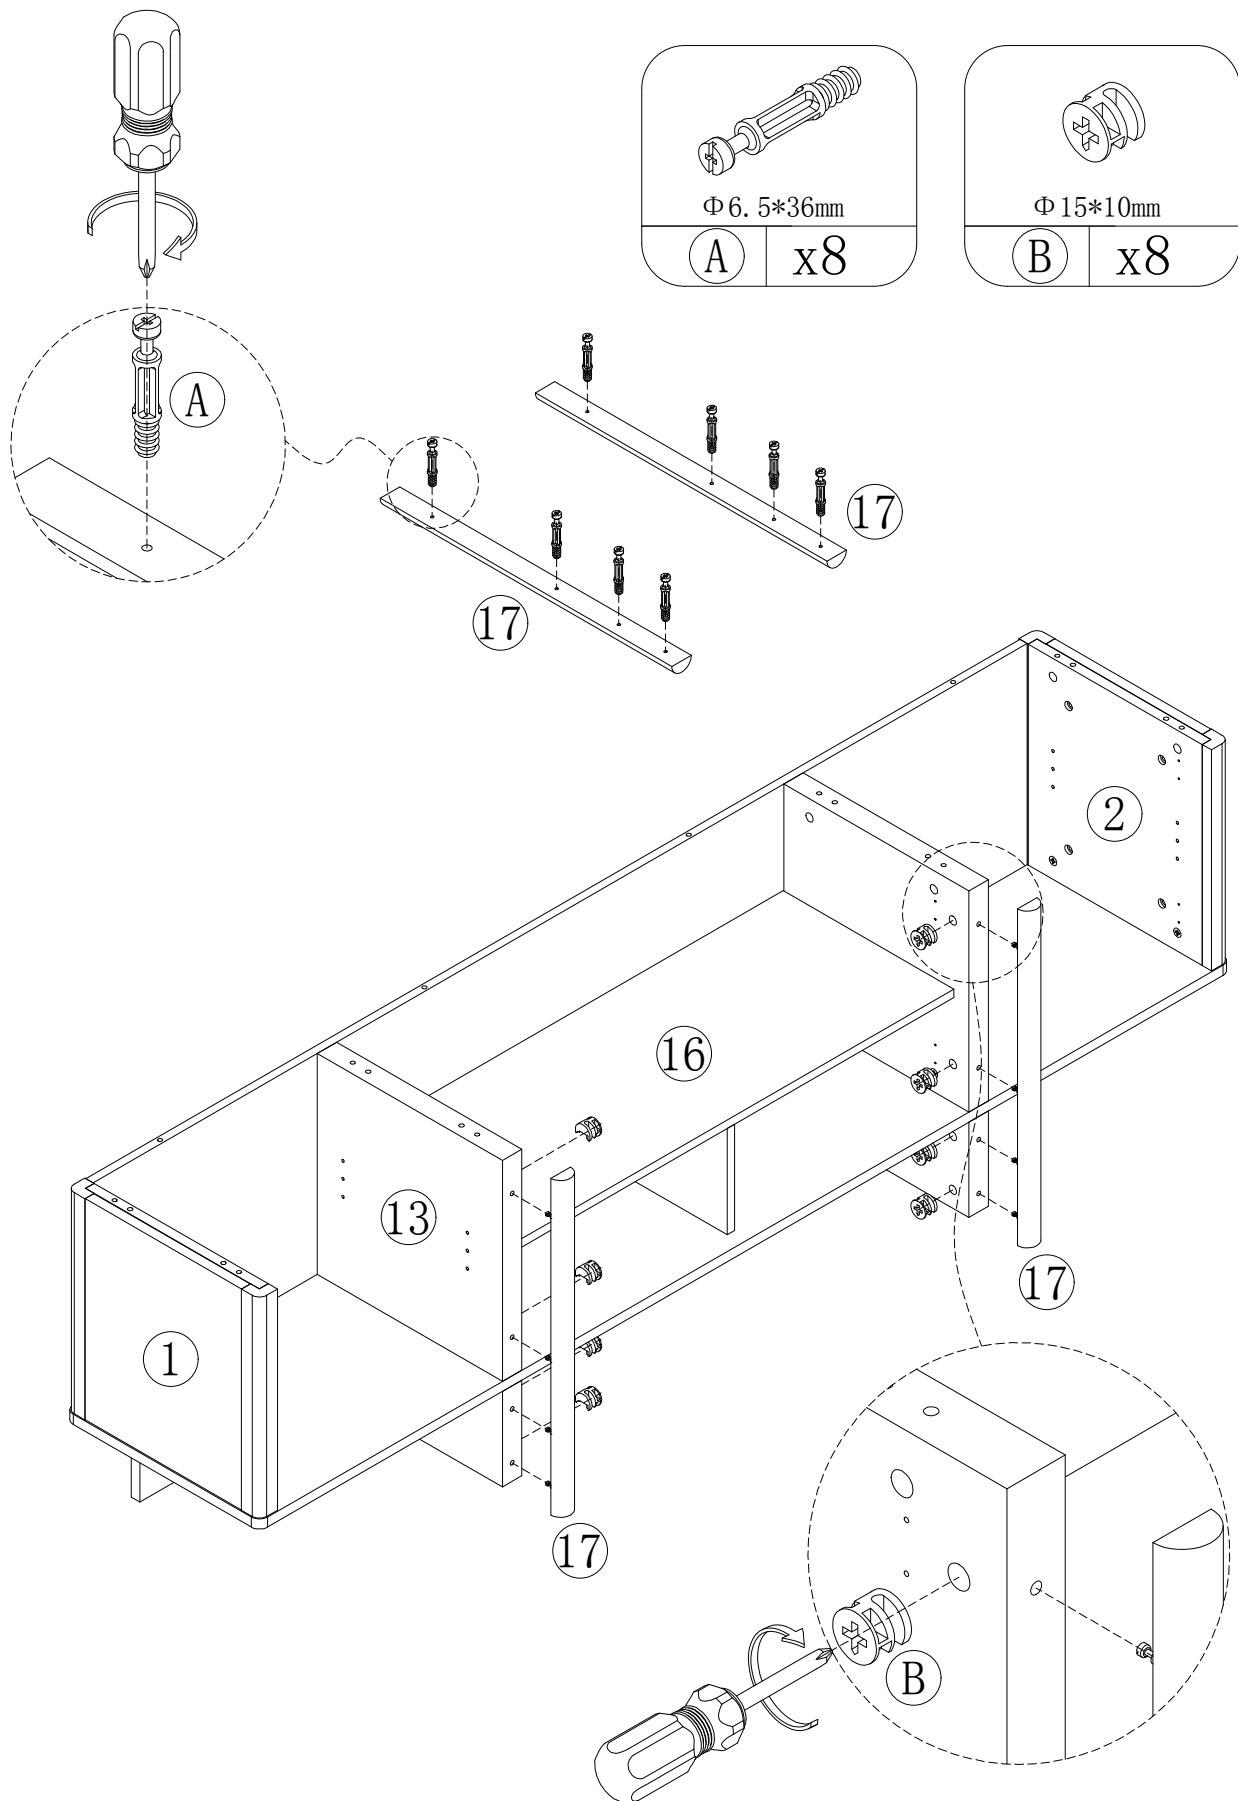

 
 
Step 15

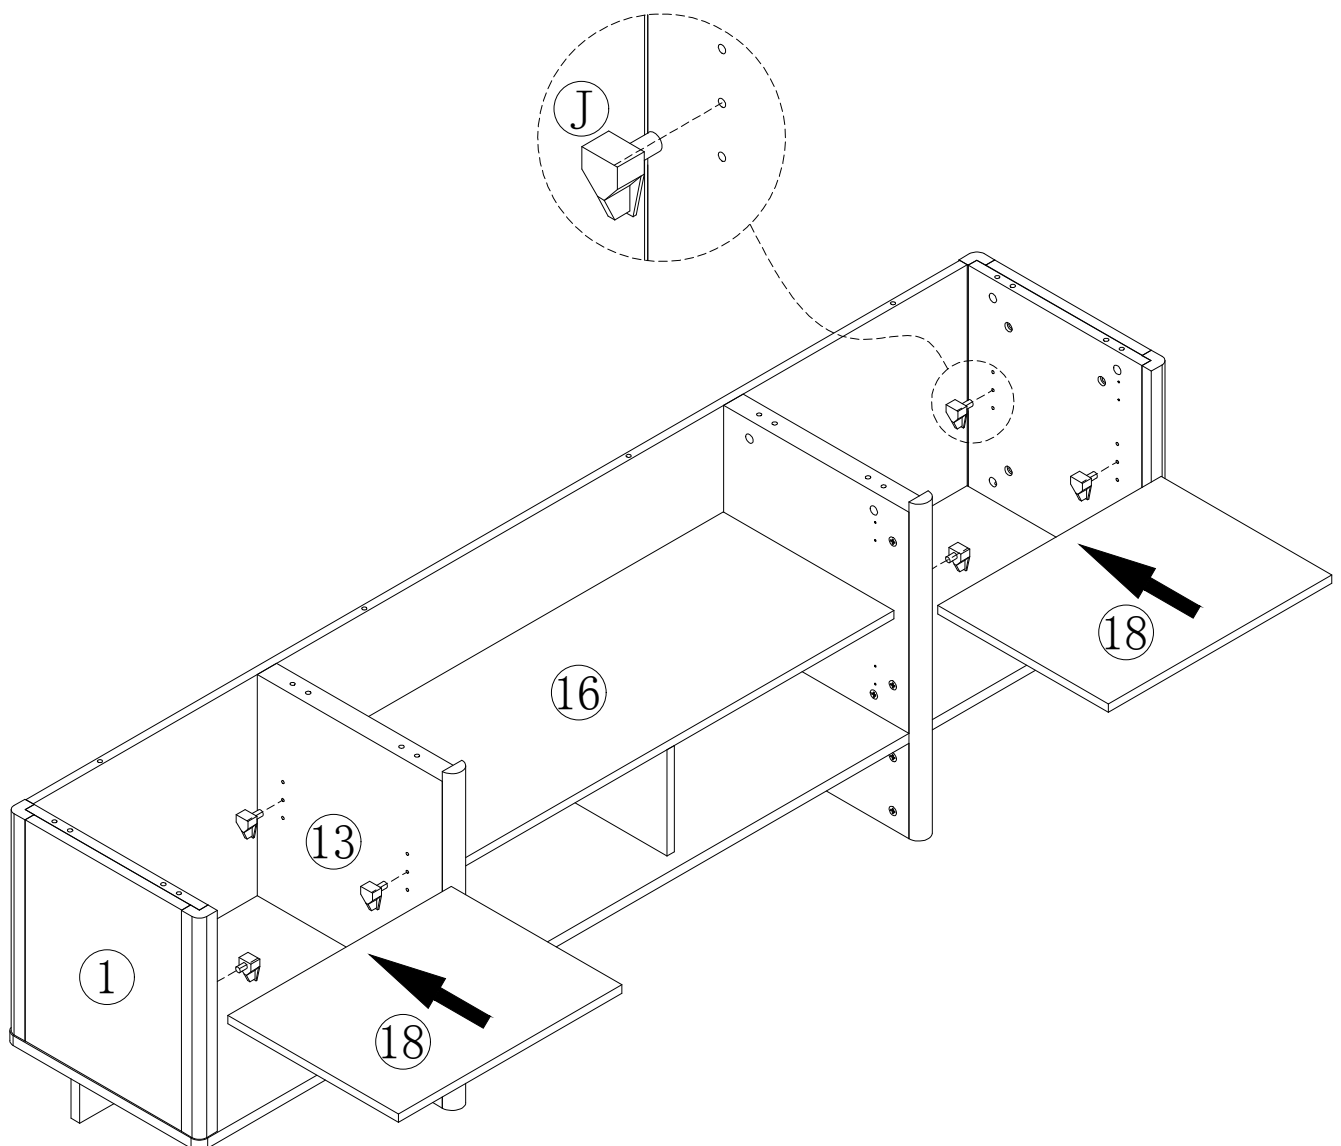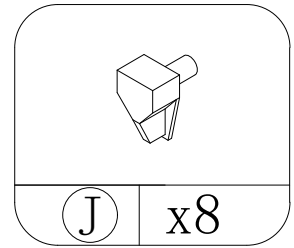


 
 
Step 16

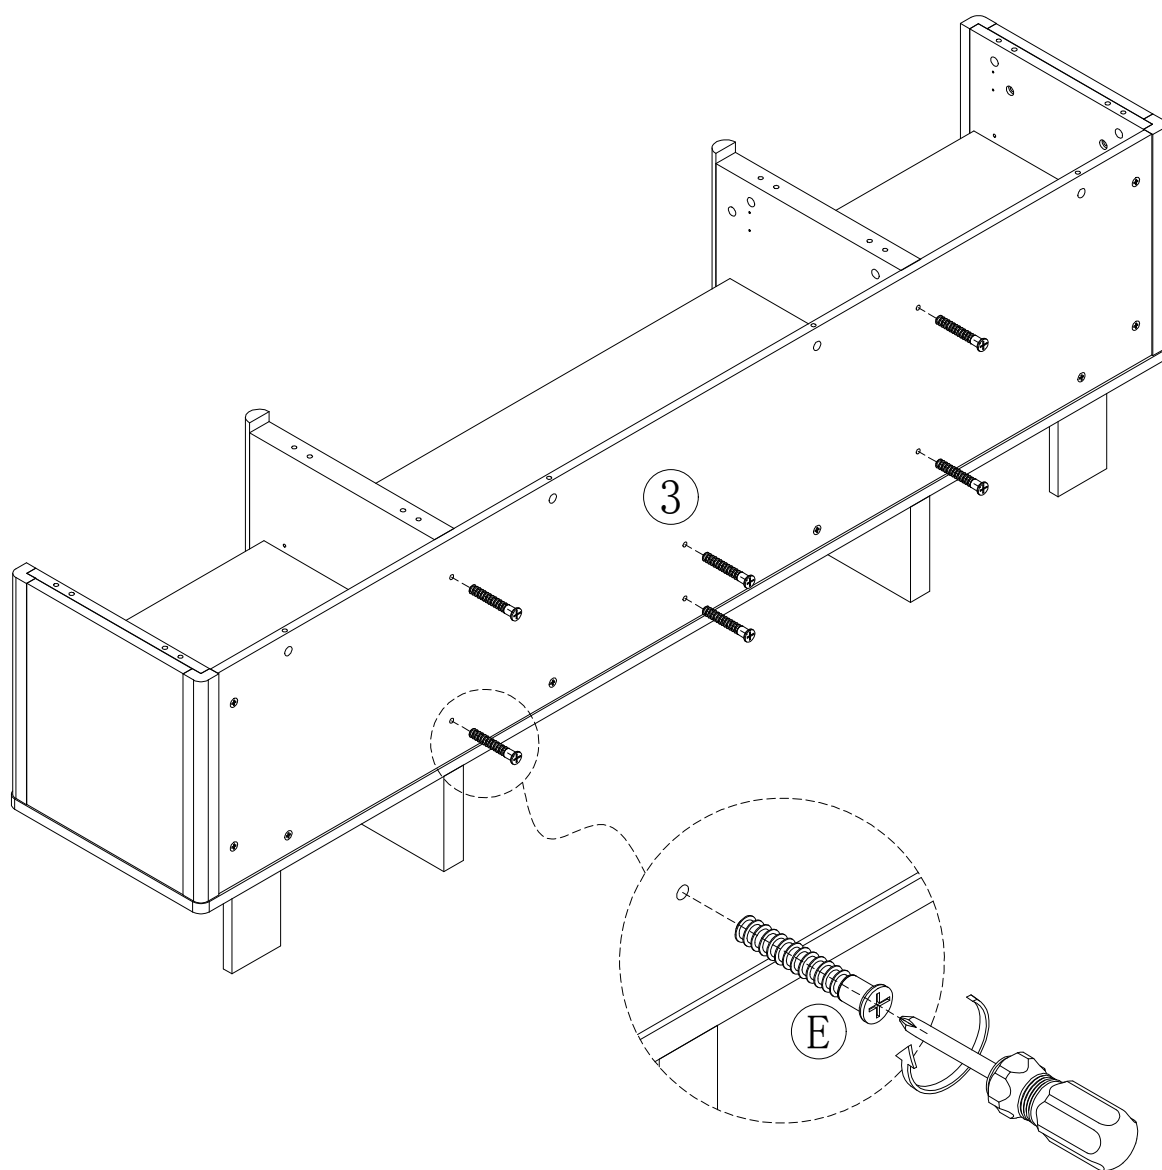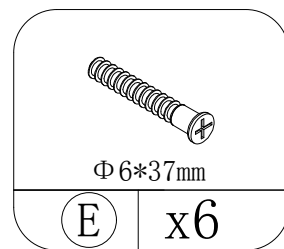

  
Step 17

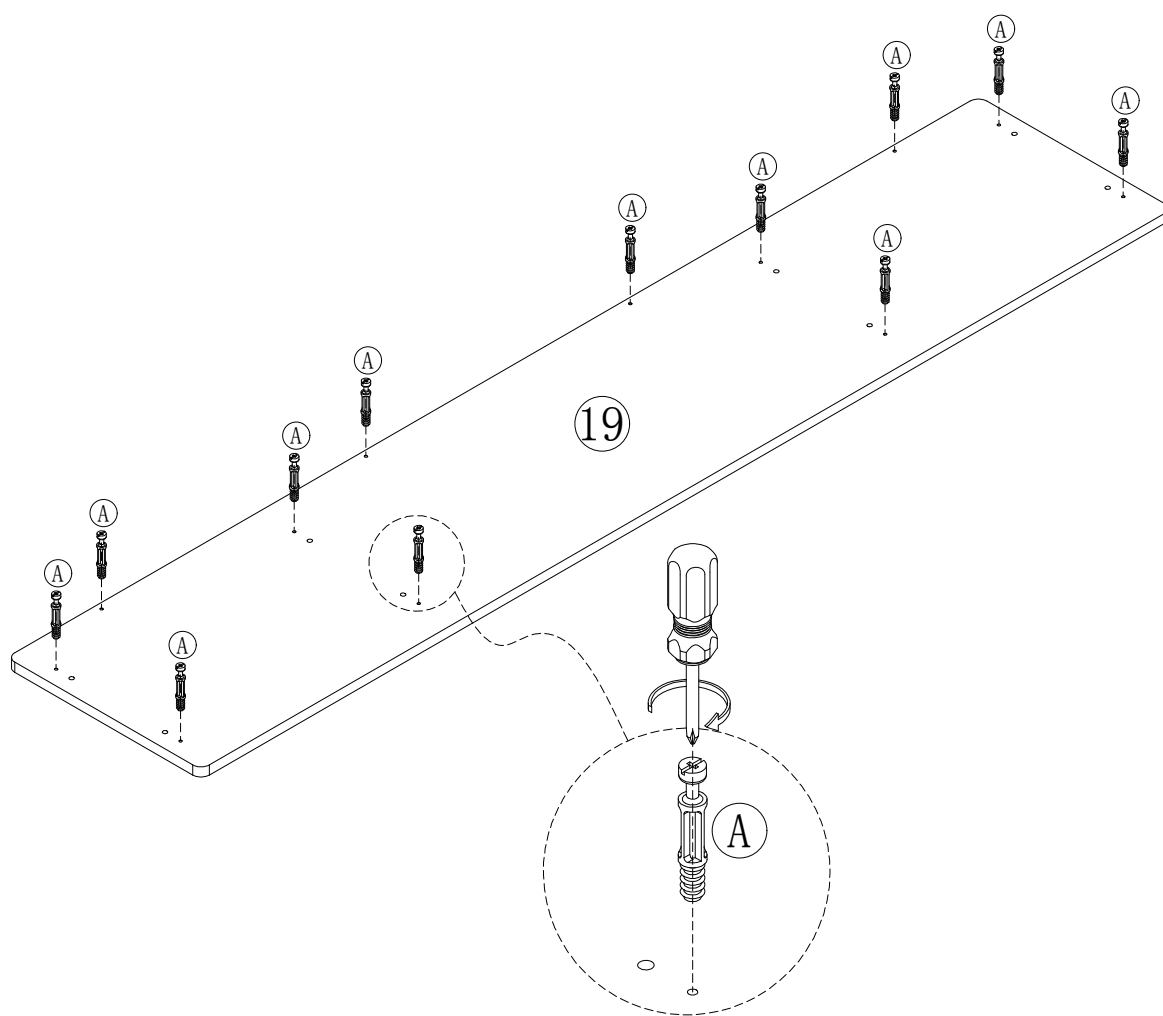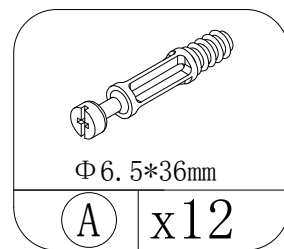

   Step 18


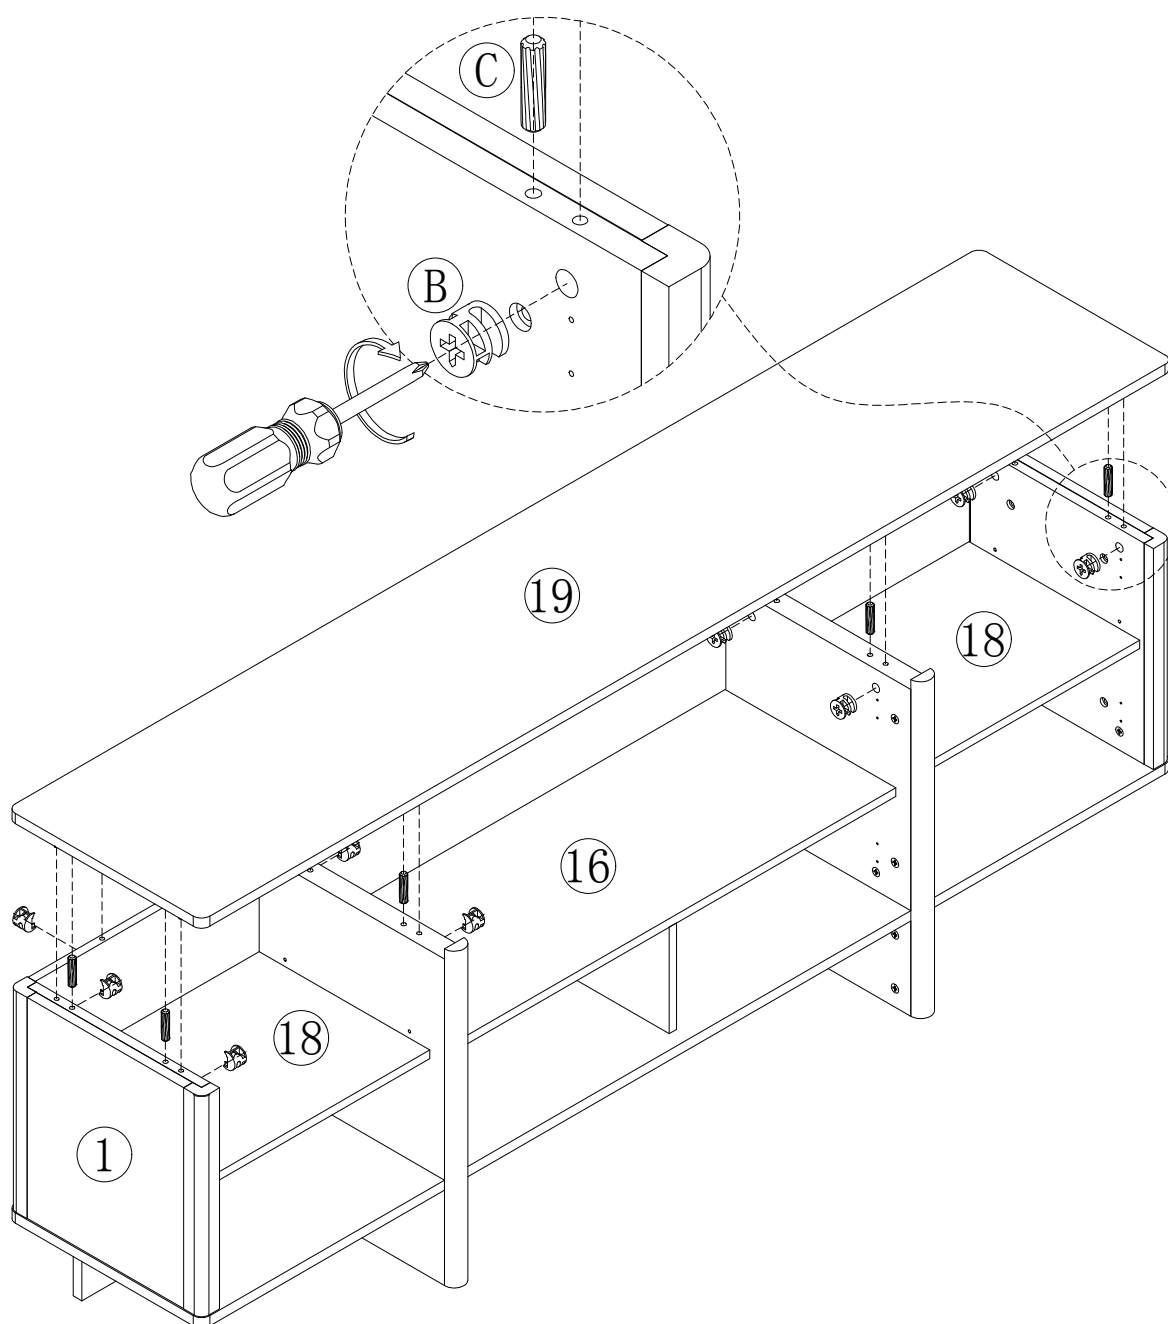
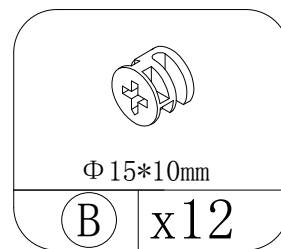
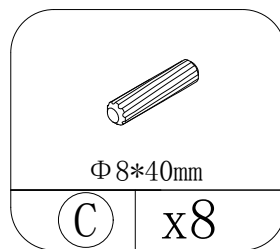


 Step 19

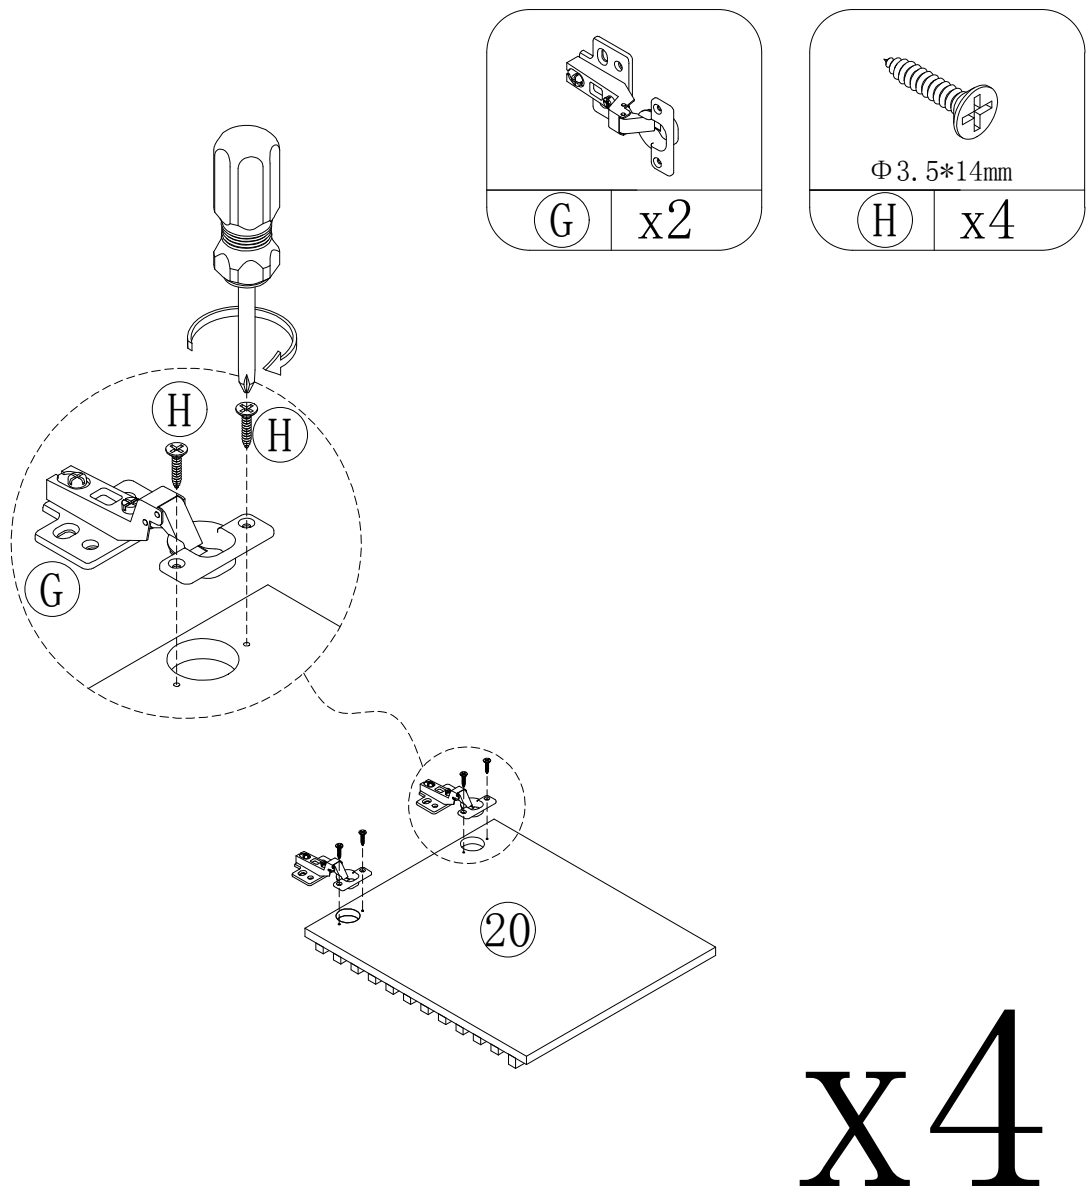




Note: Before installing the door hinges, please carefully read the installation precautions on P27 first, and then go on with the installation.

    Hinge Adjustment Diagram

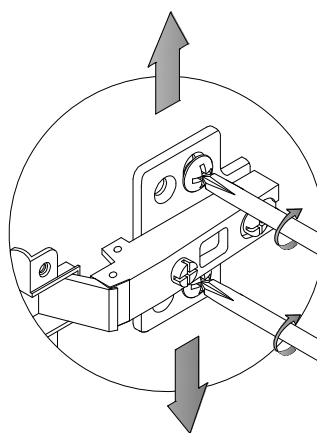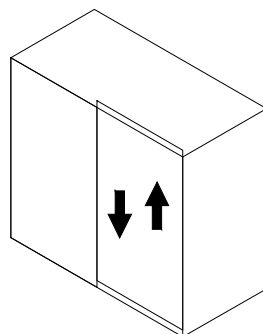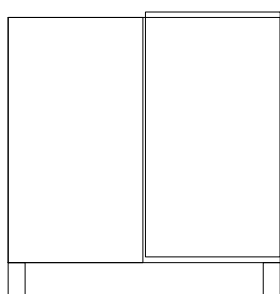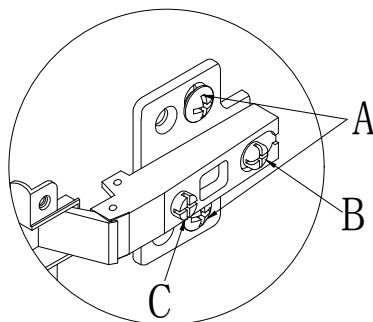




To adjust the vertical height.

   Loosen the four screws labeled 'A' on both hinges. Two of these screws are usually in slotted holes, allowing for adjustment up or down by a few mm. After making the adjustment, tighten the screws back into place.

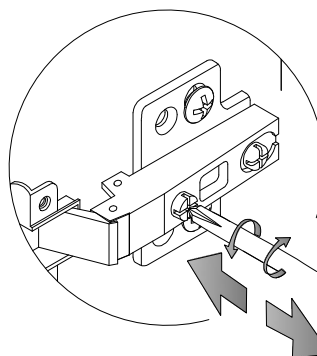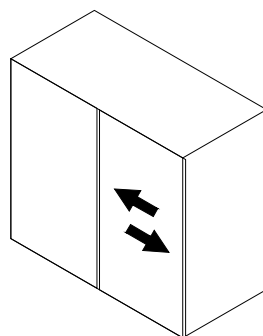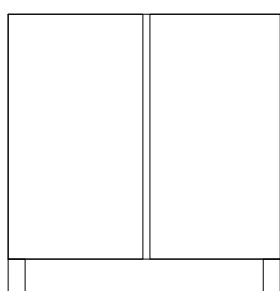

To adjust depth.

  
 
Loosen screw 'B' and adjust the door. If the door cannot be adjusted, loosen screw 'C' and try adjusting again. Once adjusted, tighten screws 'B' and 'C'.

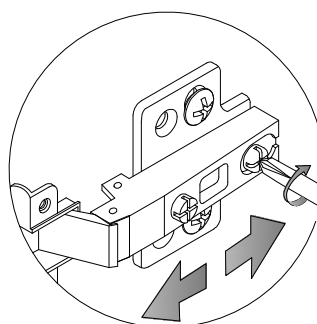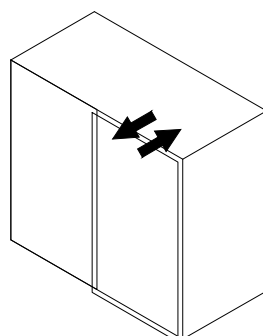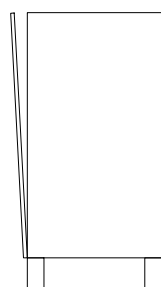

To adjust side ways.

Turn screw 'C' on both hinges of each door.

  Step 20

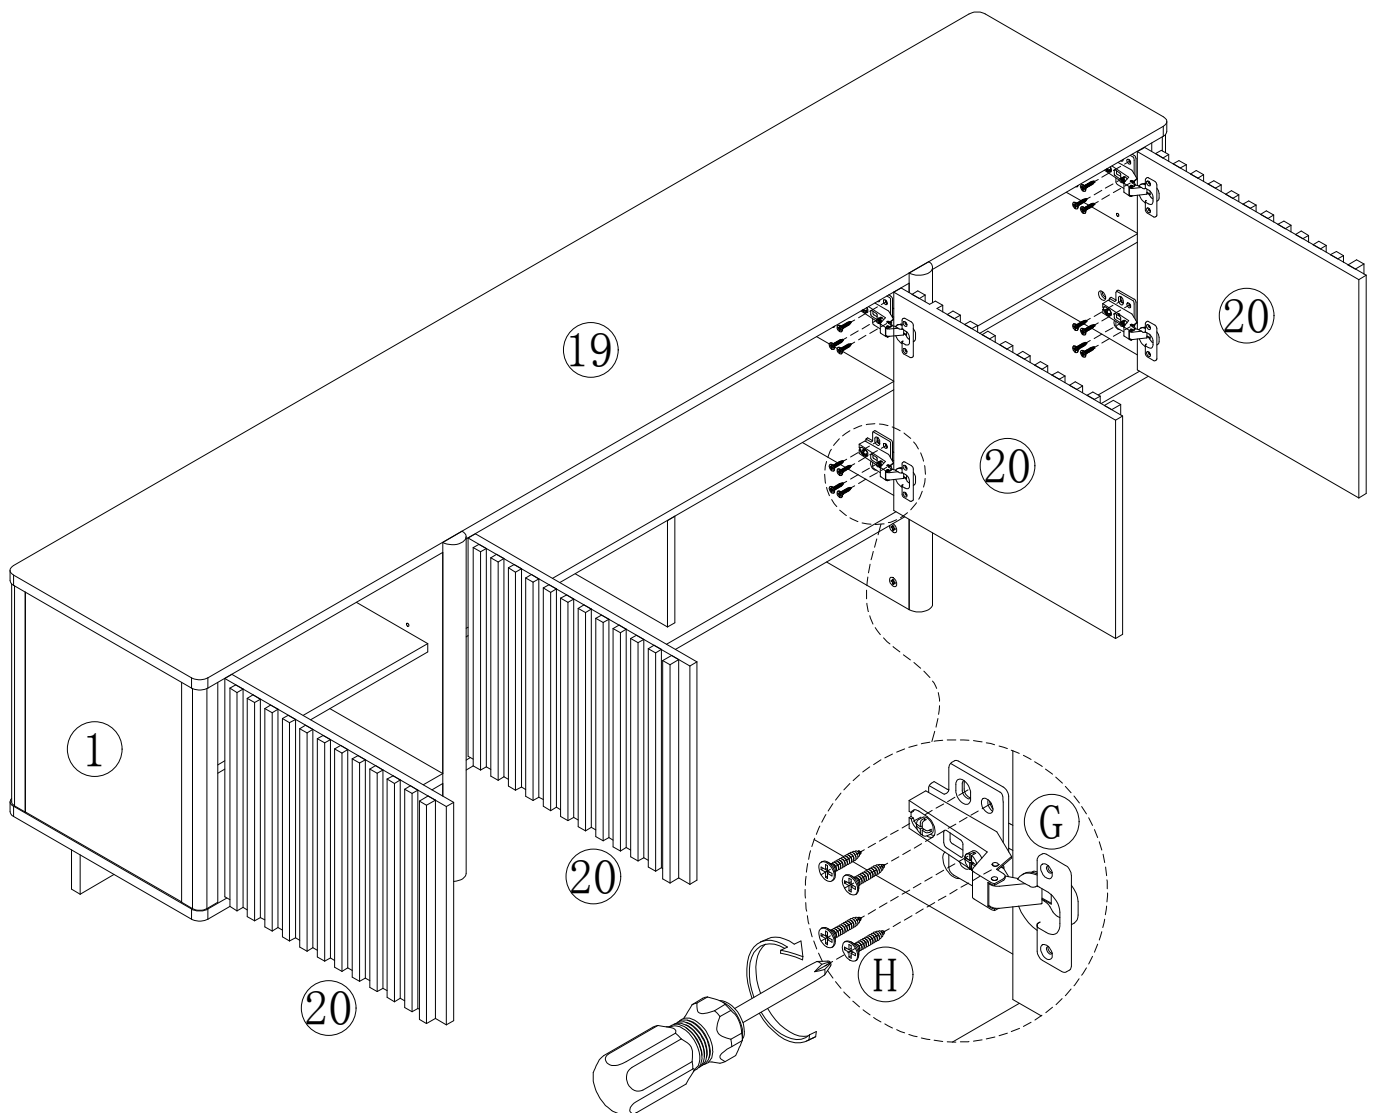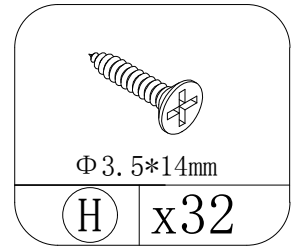

Step 21

