




Stacking Kit (CSKD 24)

for
Washer CW 2240
Dryer CD 4040

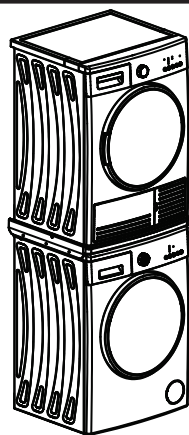

Dryer

Stacking Shelf

Washer

Stacking Kit – Installation Instructions


Use the Stacking Kit to correctly place the Dryer on top of the Washer.
The Stacking Kit includes the parts shown. Some of the parts are used for attaching the Washer Dryer to the wall, but only if it is a strong material such as brick.
If it is drywall (e.g. sheetrock, gypsum board) please DO NOT attach the appliances to the wall.

Note: DO NOT stack the Washer on top of the Dryer.


Instructions for Installing the Stacking Shelf

Parts

- S1** Stacking Shelf
- S2** Screws to attach Stacking Shelf (4x16) x 12 screws
- S3** Screws to attach Washer and Dryer (4x12) x 2

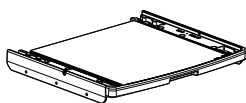


1

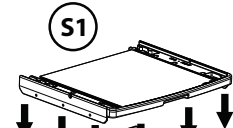

Place the Stacking Shelf on top of the Washer.

Ensure that it is firmly aligned and flush with the front of the Washer.


2

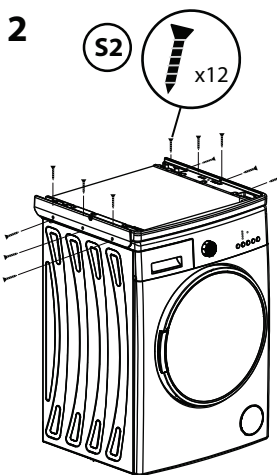

Use an electric Phillips screwdriver with a ph2 bit and the 12 screws that are provided to attach the Stacking Shelf to the top panel of the Washer.


The holes for the screws are on the top and sides of the Stacking Shelf.

3

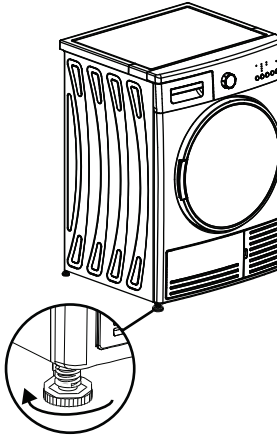

Adjust the feet of the Dryer to ensure that it is level.


4

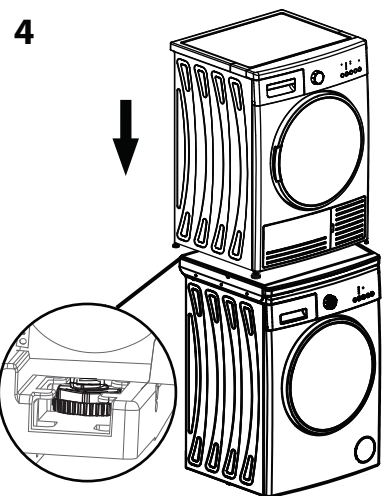

Gently place the Dryer on top of the Stacking Shelf.


Ensure the feet of the dryer are in the grooves in the four corners.

5

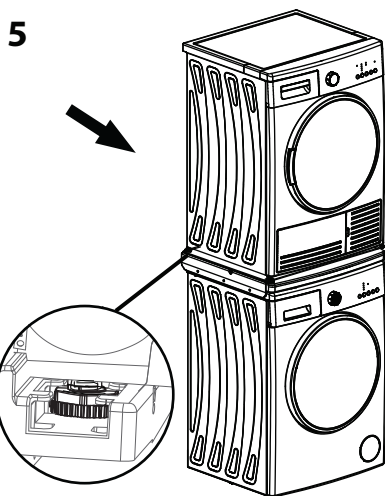


Slide the Dryer forward to lock it in place.

6

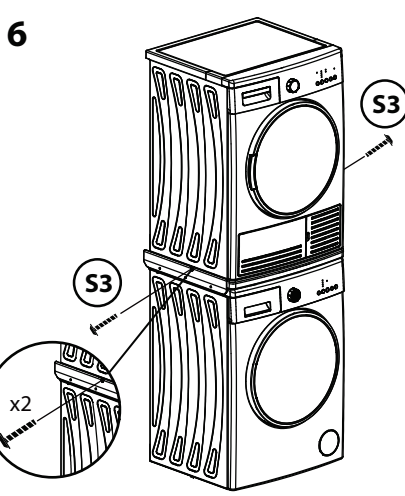


Using the 2 screws (S3) that are provided, attach the Dryer to the Washer.

7

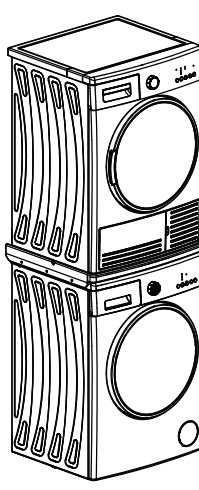


The Washer, Dryer and Stacking Shelf should all be aligned and flush in front.

Caution

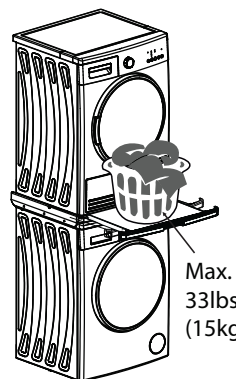

Do not place a laundry basket or any item that exceeds 33 pounds (15 kg) on top of the Stacking Shelf.




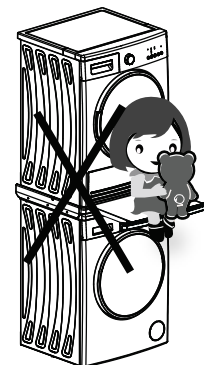


Ensure children do not sit on top of the Stacking Shelf.


Additional instructions to attach the Stacking Shelf to a brick wall - DO NOT attach to Drywall

Parts

 - W1** Wall Support
- W2** Plastic Dowel (8mm) x 3
- W3** Screws for Wall Support (4.8 x 38) x 3

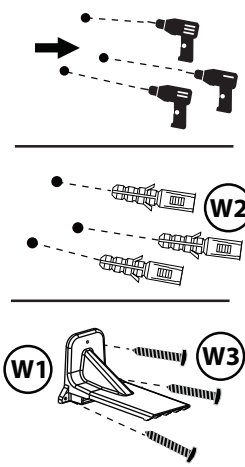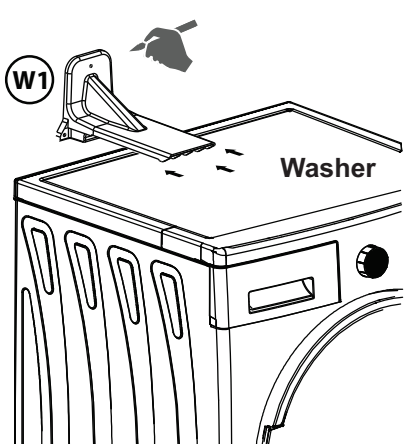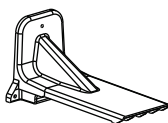

1. Place the Wall support (W1) on top of the Washer
2. Mark the three points on the wall where it will be attached
3. Using a drill, make holes in the wall
4. Insert the 3 Plastic Dowels (W2)
5. Insert and tighten the 3 Screws (W3)

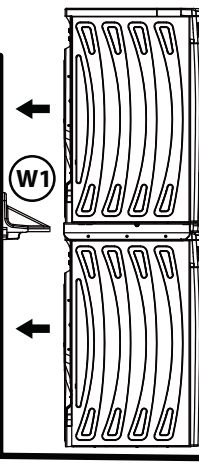

Follow steps 1-7 (see above).

Slide the stacked Washer Dryer back onto the Wall support.

Customer Service

1-800-776-3538
Service@ApplianceDesk.com