

Product Name: CLAY GLOBE



REQUIRE 3*AA BATTERIES, NOT INCLUDED

1



2




3



4

TIMER/OFF/ON
position

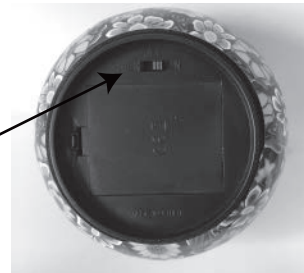

CAUTION:

- remove the rubber protective cover on the bottom of the piece and then open the exposed battery housing. Insert three (3) AA batteries (not included) following the polarity markings in the compartment.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries or standard with rechargeable batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Close the battery housing, turn it on to the desired setting, and replace the protective rubber cover.
- The LEDs run continuously when the switch is moved from OFF to ON until turned off or run on a six-hour timer. Slide the switch from OFF to TIMER and the LEDs will light for six (6) hours before turning off for 18 hours. Leave the switch in the TIMER position and the 6 hours on and 18 hours off will cycle until you switch the unit off.



Made in China