

INSTRUCTION MANUAL




Tipping Hazard

Children or adults may cause the safe to tip over, resulting in death or serious injury. If safety measures are not taken before installation, both children and adults may be seriously injured. Children should never be allowed to play near or fiddle with the safe at any time.

Do not keep the emergency key inside the safe!

The picture is for reference only. The actual product may vary!

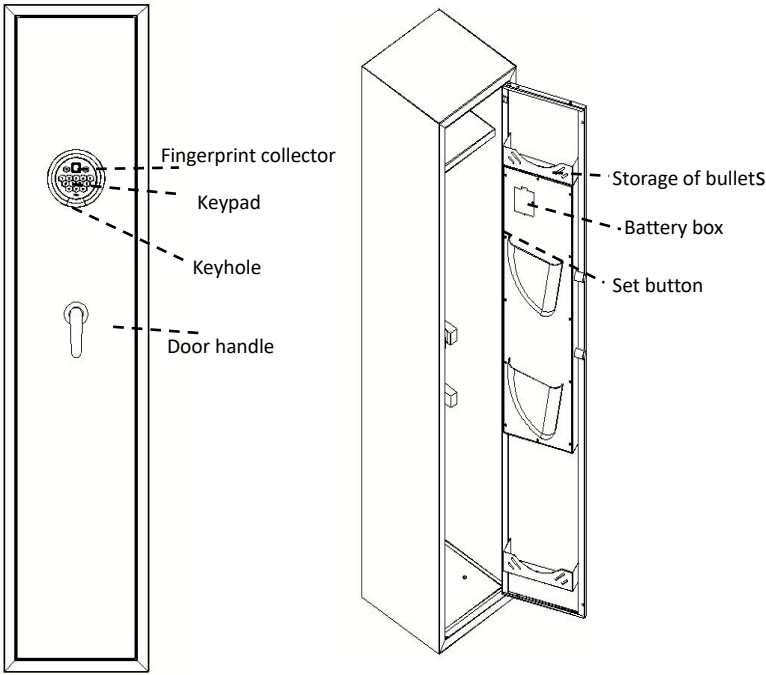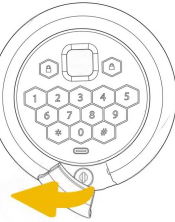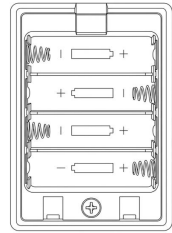

SCHEMATIC DIAGRAM		
		1. Slide the cover and insert the emergency key. Then rotate it counterclockwise by 45 degrees.
		2. Rotate the handle in the direction of the clock hands, and then the locker door will open.
		3. Prepare 4 AA alkaline batteries in advance. Install them properly and re-cover the battery protection cover. Then reset the protection cover.

⚠ WARNINGS :

1. Do not lock the emergency key into the cabinet.
2. The initial user code is "1234", which need to be modified.
3. If the cabinet is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
4. Purchase 4 AA batteries in advance, this cabinet does not contain batteries.

I.Set The User Code

- 1.Touch the keypad area to wake up the system,Enter the initial password 1234 and press the # key to confirm.
- 2.Then,hearing two beeps, indicating that the cabinet door is unlocked.
- 3.Keep the cabinet opened.
- 4.Press the SET button once. You will hear one beep, indicating the cabinet has entered setting mode.
- 5.Using the keypad, enter a 3 – 8 digit password, then press the # button to confir
- 6.If the setting is successful, you will hear two beeps, and the green LED will flash twice

NOTE:

1. The user can only set one code for the cabinet.
2. The initial user code is "1234", need to be modified. (After you set the new different user code successfully, the initial user code will be covered automatically.)

II.How to Set the Master Code

- 1.Touch the keypad area to wake up the system. Enter 00, then press the SET button once.You will hear one beep, indicating the system has entered master code setting mode.
- 2.Enter a new 3–8 digit master code using the keypad.Press the # button to confirm.
- 3.If the setting is successful, you will hear two beeps, and the green LED will flash twice.

III.Set the Fingerprint

- 1.Press the SET button once. You will hear one beep, and the fingerprint sensor will light up blue, indicating fingerprint registration mode.
- 2.Place the same finger on the fingerprint sensor five times consecutively. Make sure to lift and reposition your finger each time.
- 3.When you hear two short beeps and the green LED flashes twice, the fingerprint has been successfully registered.

NOTE:

- 1.Blank fingerprints cannot unlock the door.
- 2.Up to 99 fingerprints can be registered.

Error Indication

- ◆ If the operation is incorrect, the buzzer will sound three short beeps.
- ◆ At the same time, the red LED will flash three times.
- ◆ Please repeat the steps above to set the user code again

IV.Silent Mode On / Off

- 1.Turn ON Silent Mode:
 - 1)Wake up the system and enter 11#.
 - 2)The green LED flashes twice with no sound, indicating Silent Mode is enabled.
- 2.Turn OFF Silent Mode:
 - 1)Wake up the system and enter 11#.
 - 2)The green LED flashes twice with two beeps, indicating Silent Mode is disabled.

NOTE:

- 1.Silent Mode is canceled after power off/on.
- 2.Silent Mode is canceled after restoring factory settings (press and hold the reset button for 3 seconds).
- 3.Silent Mode is canceled when an external power supply is connected.

V.Dual Alarm System

If an incorrect password is entered three consecutive times, or if an incorrect fingerprint is scanned five consecutive times,
the system will be locked for 20 seconds, and the alarm will sound for 20 seconds.During the lockout period, no other operations are allowed.

VI.Vibration Alarm Function

1.Wake up the keypad.

2.Press the * button once.You will hear two beeps, and the green LED will flash twice, indicating that the vibration alarm is enabled.

If vibration is detected, the internal speaker will sound an alarm for 20 seconds.

During the alarm, you can enter the correct password or use a registered fingerprint to unlock the door and disarm the alarm.

VII.Interior Light Function

When the door is unlocked using a correct password or registered fingerprint,the interior light will turn on for 30 seconds automatically.

VIII.Restore Factory Settings

Press and hold the SET button for 3 seconds without releasing. When you hear two long beeps and the green LED flashes twice, the system has been successfully restored to factory settings.

IX.Low Battery Alert

After unlocking the safe using the electronic lock:

If the buzzer sounds five consecutive beeps, and the red LED flashes five times, this indicates low battery power.Please replace the batteries promptly.

Thank you for your purchase!

We hope you've enjoyed your shopping experience.

If you experience any issues with your order regarding:

Product compatibility

Damaged packaging

Installation issues

Other problems

Please Contact us using the below email

 shangya.service@outlook.com