


ASSEMBLY INSTRUCTIONS



SPARE PARTS



Ax1

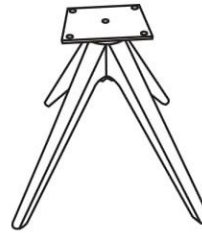

Bx1



Cx4+1

M8 X18 MM



Dx1

Be sure to keep spare parts.

If screws or nails of a product are damaged or lost, or screws or nails of a subsequent product are damaged or aged, spare parts can be used to replace them.

1



Ax1



Bx1



Cx4



Dx1

