

41 INCH CEILING FAN WITH LIGHT USER MANUAL

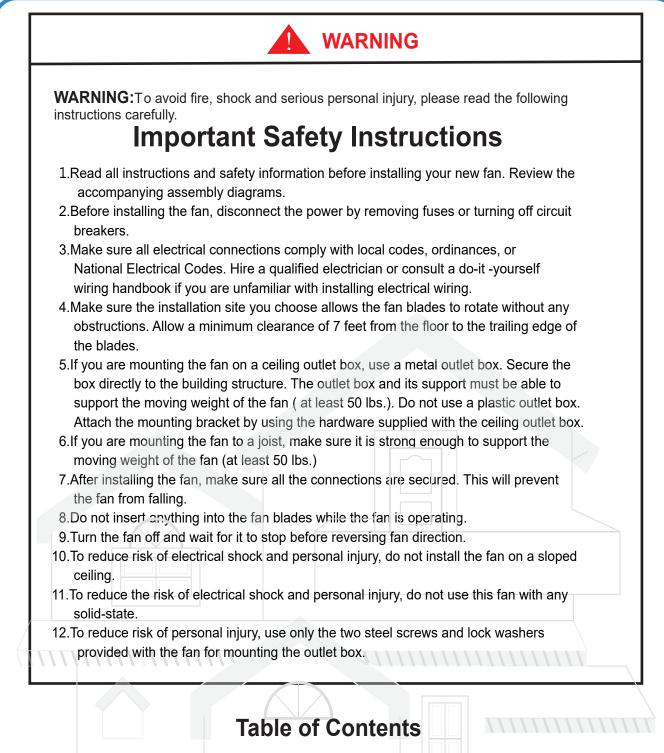

SAFETY PRECAUTIONS	
ASSEMBLY DRAWING & PARTS LIST-WITH LIGHT	
INSTALL THE CEILING BRACKET	4
HOW TO INSTALL THE FAN WITH LIGHT	 5-7
REMOTE CONTROL SETTING AND OPERATING	 8-9
APP INSTRUCTIONS	 9-10

ASSEMBLY DRAWING & PARTS LIST

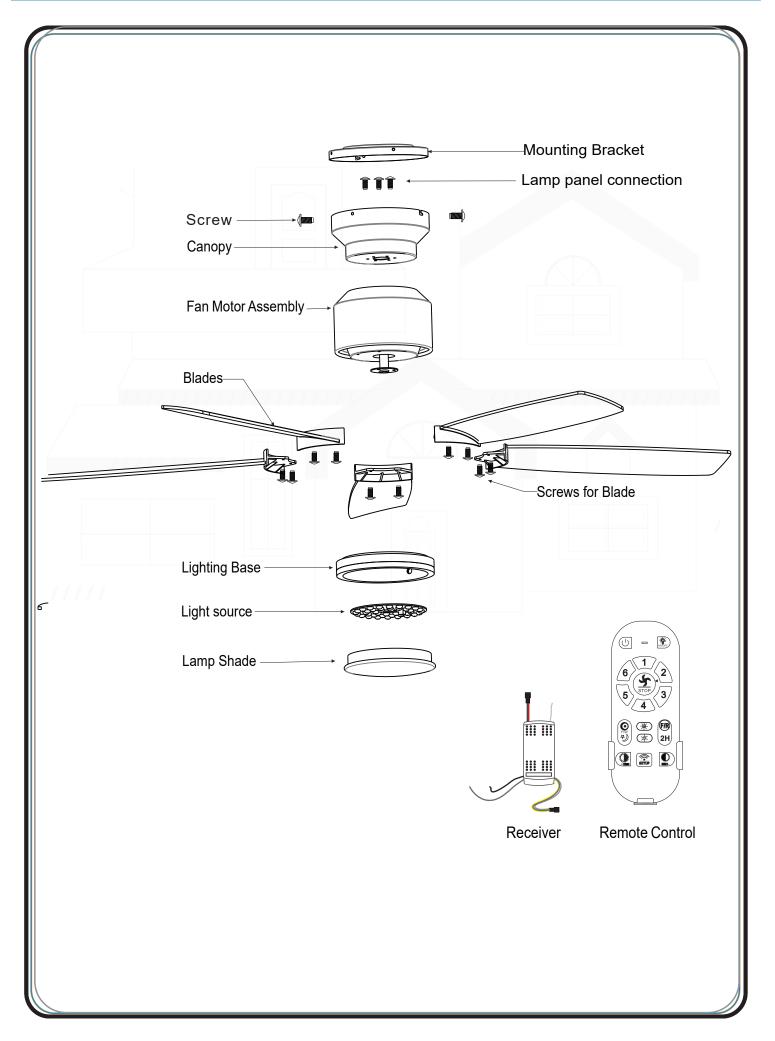


ASSEMBLY DRAWING & PARTS LIST

1 (mmm) ×4 3 ST5x35 Setscrew ×4 2 Image: Setscrew ×2 Expansion Screw ×2 1 Image: Setscrew		Deference Image	
1Annumber (minumber (minumber for state))×4ST5x35 Setscrew22Expansion Screw×233Screws×10	Item no.	Reference Image	Qty.
ST5x35 Setscrew ×2 2 Expansion Screw ×2 3 Image: Strews ×10		-	
2 ×2 Expansion Screw ×10			×4
Expansion Screw 3 ×10 Screws			
Expansion Screw 3 ×10 Screws			
Screw ×10	2		×2
3 T ×10		Expansion Screw	
Screws			
	3		×10
for Blades		Screws for Blades	

BEFORE YOU START

Contact a licensed electrician if you are not good at performing electrical work . It's the licensed electrician who installs the fan . if required by the local code. Do not use the fan with a dimmer switch Turn off power at breaker

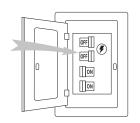

Tools and Materials Required




Wrench



Step Ladde


The ceiling fan must be installed in the location where there is 12"(300mm) spacing from the tips of all blades to the nearest objects or walls. REMEMBER to turn off the power before hanging the fan. Follow the instruction below to hang your fan properly:

1. For concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two Φ 0.32"(8mm) (distance between the two holes should be appropriate) expansion screws, flat washers nuts provided and tighten with a spanner.

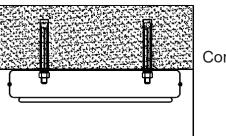

Concrete Ceiling

2. For wood ceiling, secure the mounting bracket to the ceiling that is capable of carrying a load of at least 100lbs (45kgs) with two long mounting screws and washers provided. Be sure at least 0.12"(30mm) of the screw is threaded into the support.

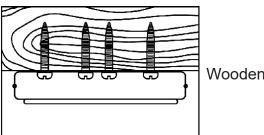


Wooden Ceiling


3. Refer to the Fig. on the right to mount when the ceiling is angled (Max. 15°).

NOTE: The hanger must be able to withstand 100lbs (45kg) or more after the installation.


HOW TO INSTALL THE FAN WITH LIGHT

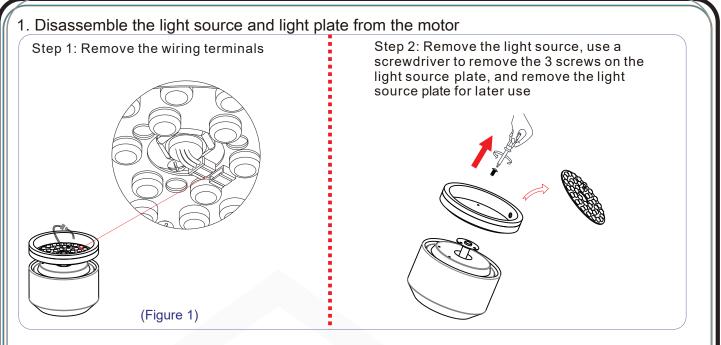


2. Assemble the blade assembly with the screws provided.

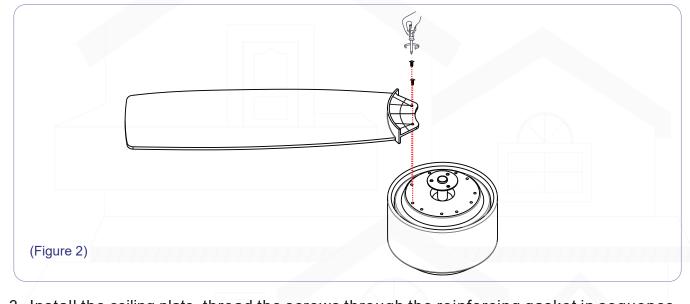


3. Install the ceiling plate, thread the screws through the reinforcing gasket in sequence, and firmly connect the ceiling plate to the four screw holes on the top of the motor

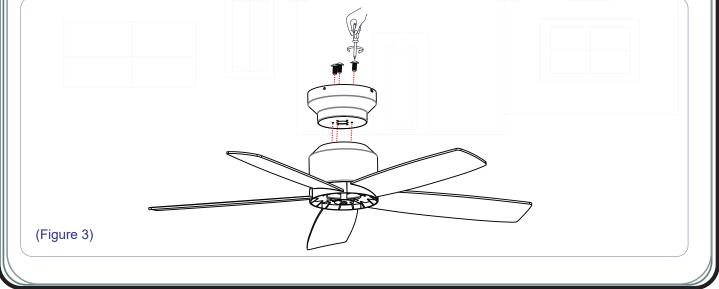


HOW TO INSTALL THE FAN WITH LIGHT

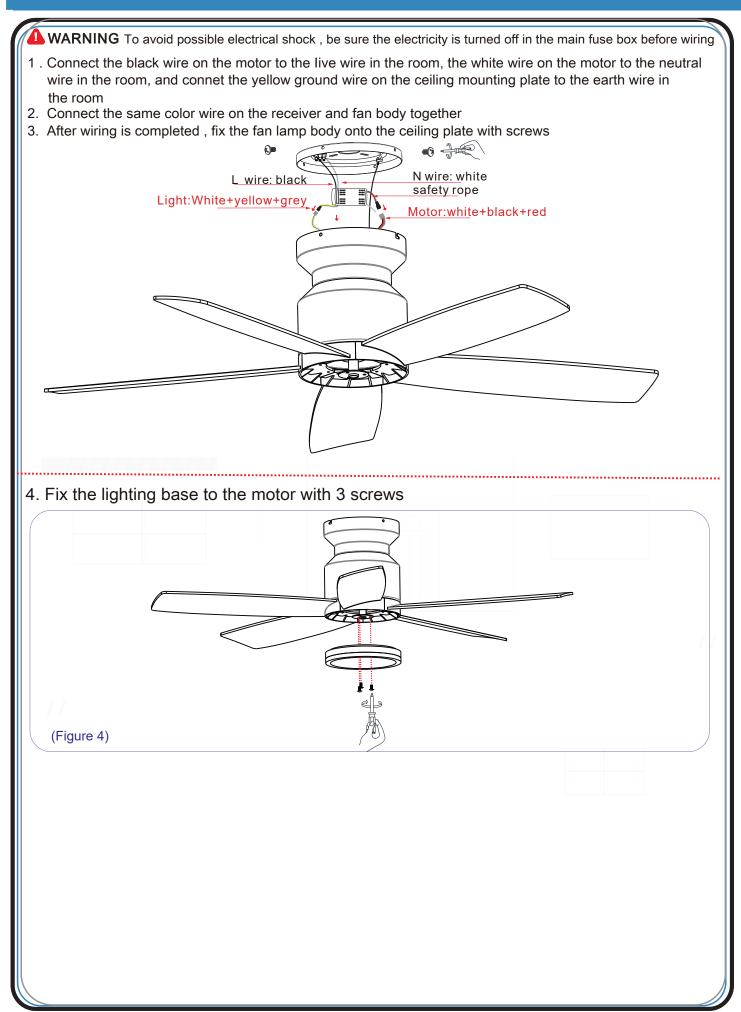

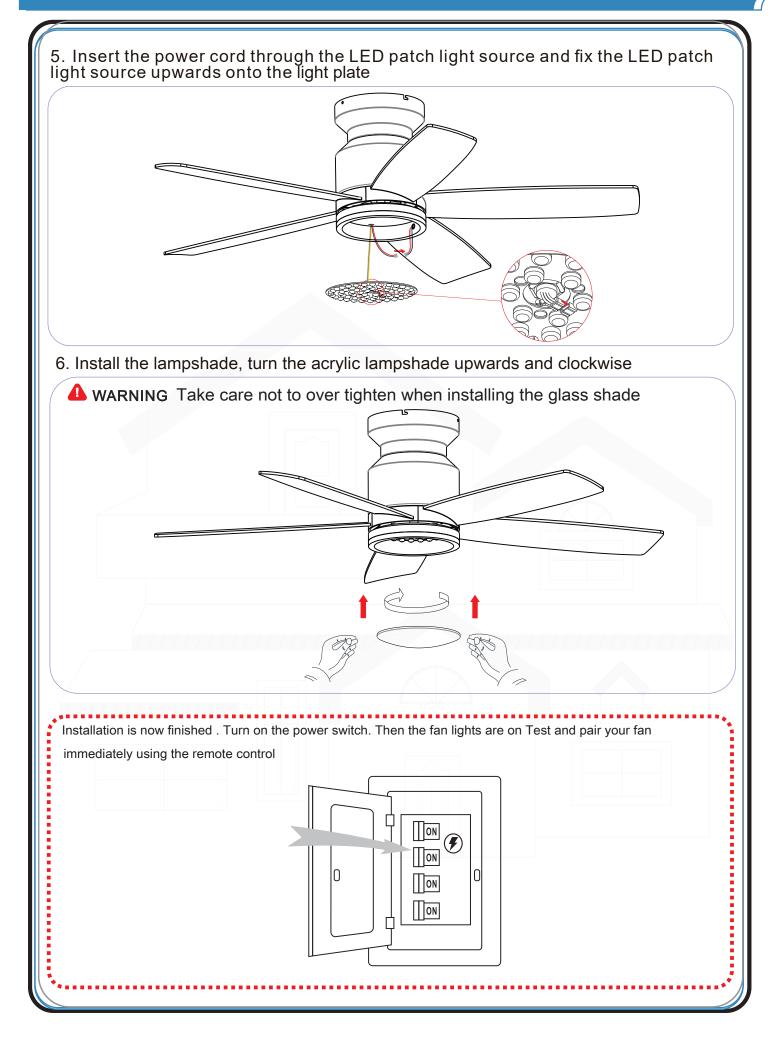

REMOTE CONTROL SETTING AND OPERATION

- 1. Restore electrical to the outlet box by turning the electricity on at the main fuse box.
- 2. Remove the battery cover from the remote control transmitter, install the battery, and replace the cover. Note:
 - 1). Use AAA 21.5V battery to replace battery.
 - 2). If not using for long periods of time, remove the battery to prevent damage to the remote transmitter, and store the remote transmitter away from excess heat or humidity.
- 3. The buttons on the remote control transmitter control the fan speed and light as follows.

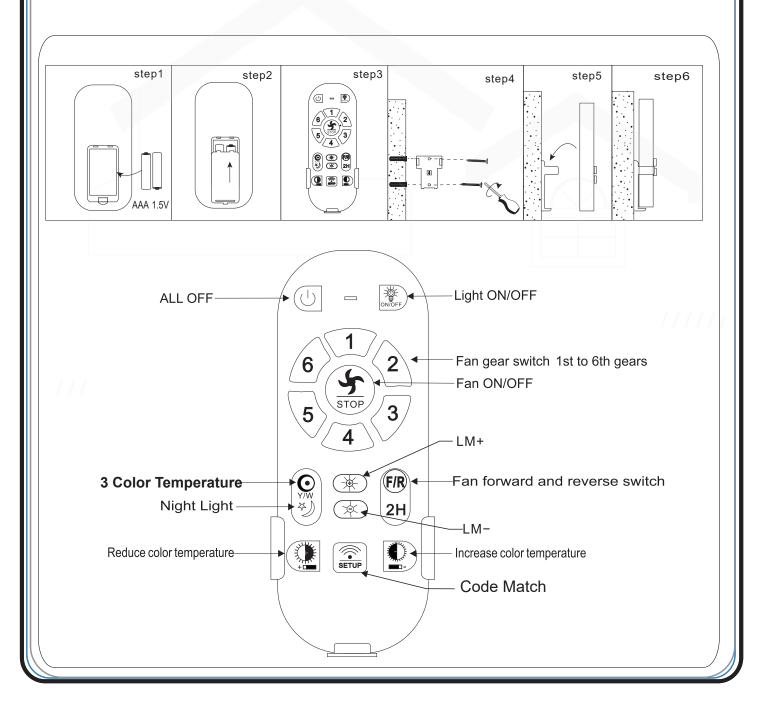

IMPORTANT REMINDERS

1. Please note: Receiver must be correctly installed in the mounting bracket on fan

2. When the transmitter cannot control the receiver, please check the battery has sufficient charge in the transmitter.

3. When the transmitter cannot control the receiver, please check if there is any existence of similar remote controlled products nearby, causing interference with each other.

4. Low power of battery will affect the sensitivity of the transmitter and the signal reception accordingly, must replace if the battery is getting low power.

5. Please take the battery out from the transmitter when leaving unused for a long time, to avoid battery leaks.

6. Isolation Switch "Must be connected in the line."

7. When power is cut to the unit (via a blackout or otherwise) when power is restored the light will come on.

ore carrying out any cleaning or maintenance work, always make sure that the appliance is disconnected. efLED lights are not removable. LED lights can only be used within the product delivery, they can not be replaced.

Wall Switch

In order to ensure the normal work of LED LIGHT.recommend to use ordinary wall switch.










NOTE: POWER OFF from wall switch Defaultmemory function cleared)

APP Instructions



Note

Note: If your APP interface is displayed in Chinese, click the menu in the upper left corner to switch languages.

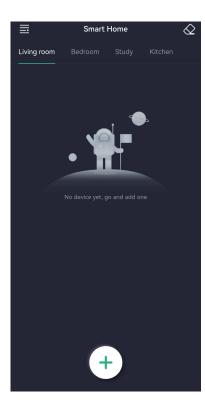


Step 01

Step 1: Click "+" button to set the name of your fan light.






Step 2: Click the pair button 1-2 times within 5 seconds after the fan is powered on. If the fan light flashes or beeps, it means the phone has been successfully paired.

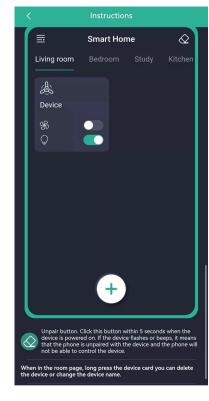



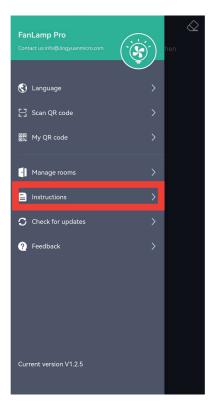



Click the "Instructions" you can see the introduction of all the buttons.

Instructions Image: Click to select a time to turn off the device. Image: Click to select a time to turn off the device. Image: The wind blown by the fan after clicking is like the wind in nature. Image: The wind blown by the fan after clicking is suitable for sleep. Image: The wind blown by the fan after clicking is suitable for sleep. Image: The wind blown by the fan after clicking. Image: The wind blown by the fan after clicking. Image: The wind blown by the fan after clicking. Image: The wind blown by the fan after clicking. Image: The fan will rotate reverse after clicking. Image: The fan will rotate forward after clicking. Image: The fan will rotate fo

Instruction **02**