


KIDS PLAY TENT

TINY LAND®

ASSEMBLY INSTRUCTIONS

3 YEARS+

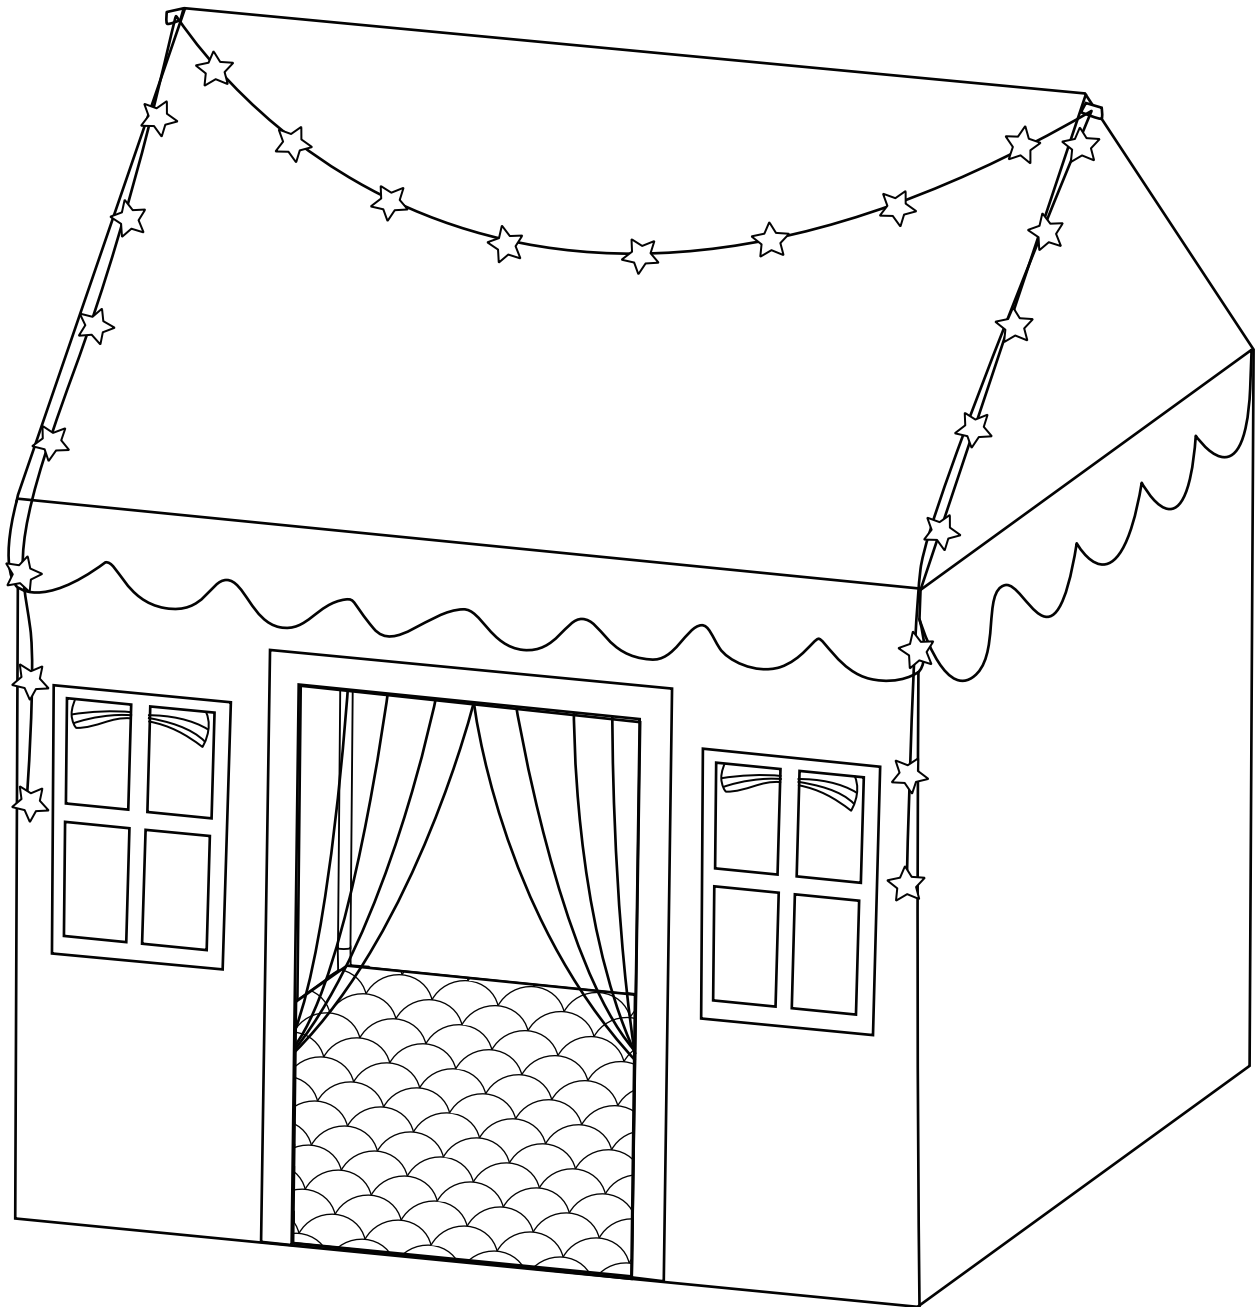

PLEASE READ FIRST

WARNING:


- Small parts can be swallowed and block the airway.
- Do not allow children under the age of 3 to use this product.
- Use under adult supervision at all times.

FIRE HAZARD

- Keep all flame and heat sources away from tent fabric.

ASSEMBLY AND USAGE GUIDELINES

- Adult assembly required.
- Adult supervision required at all times.
- Ages 3+

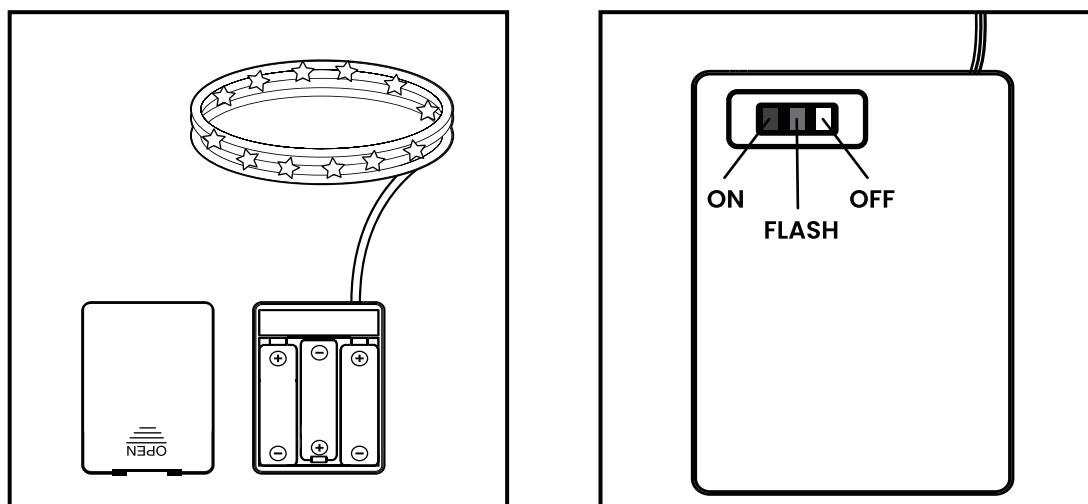

INSTALL BATTERIES

 
1. Remove the battery cover. Slide off in the direction indicated on the box.
2. Install 3 AA batteries in the order indicated by the imprints inside of the battery compartment.
3. Reinstall the battery cover.

BATTERIES


- Use AA batteries.
- Do not mix used and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Remove batteries during periods of non-use.
- The voltage of a single battery does not exceed 1.5V.

CONTENTS


1 x27




2 x8

 


3 x20

 


4 x4

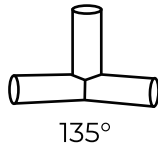

5 x6

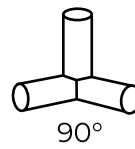


6

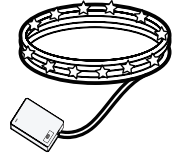

7




8

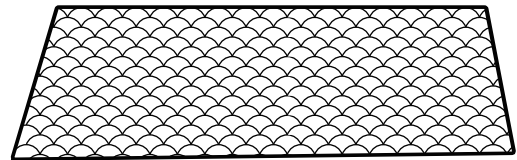


NOW IT'S TIME TO PUT IT TOGETHER!


1

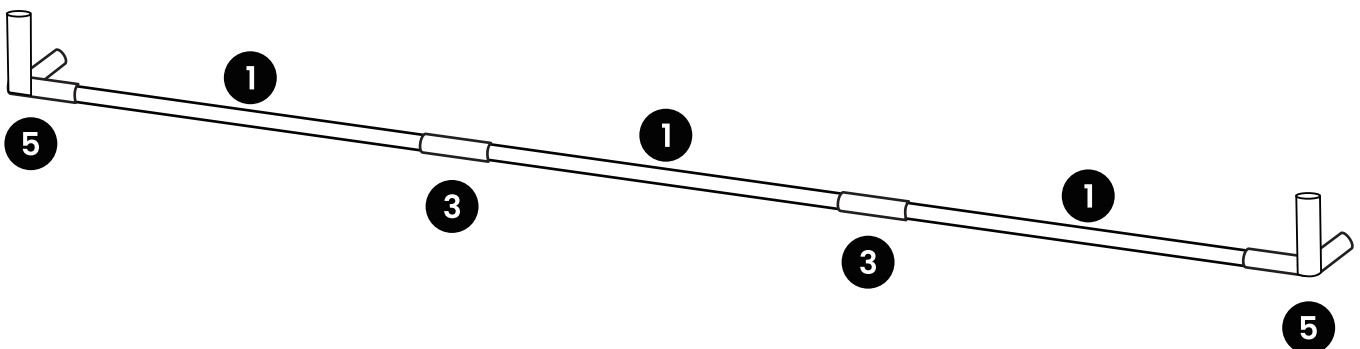


2

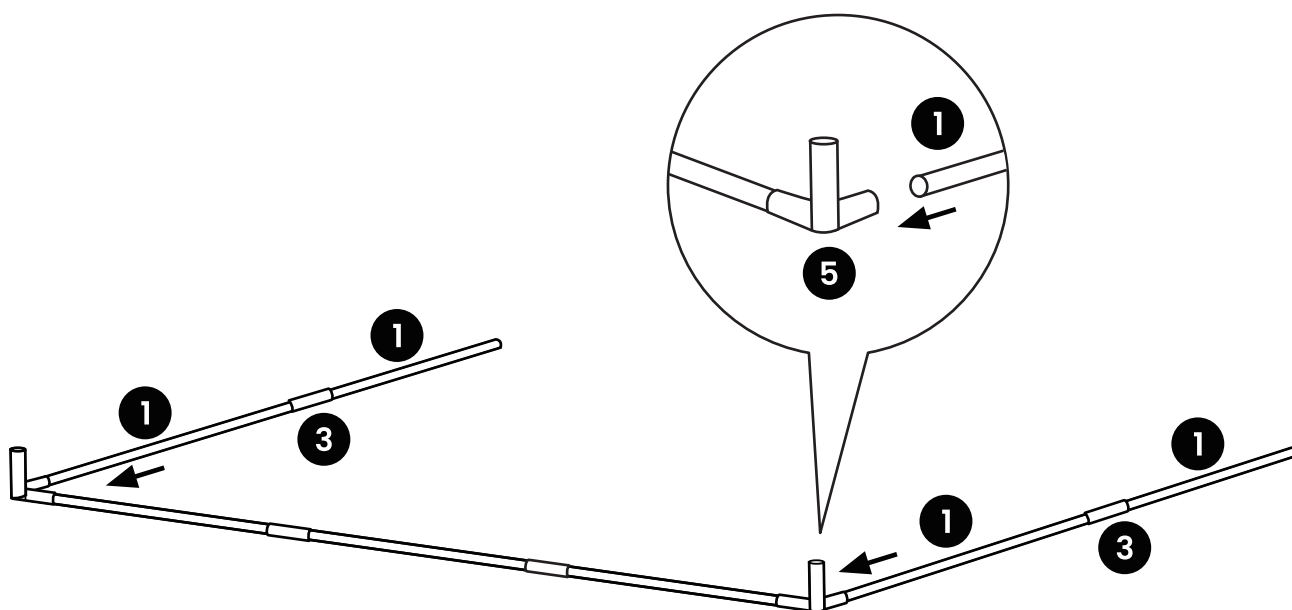


3

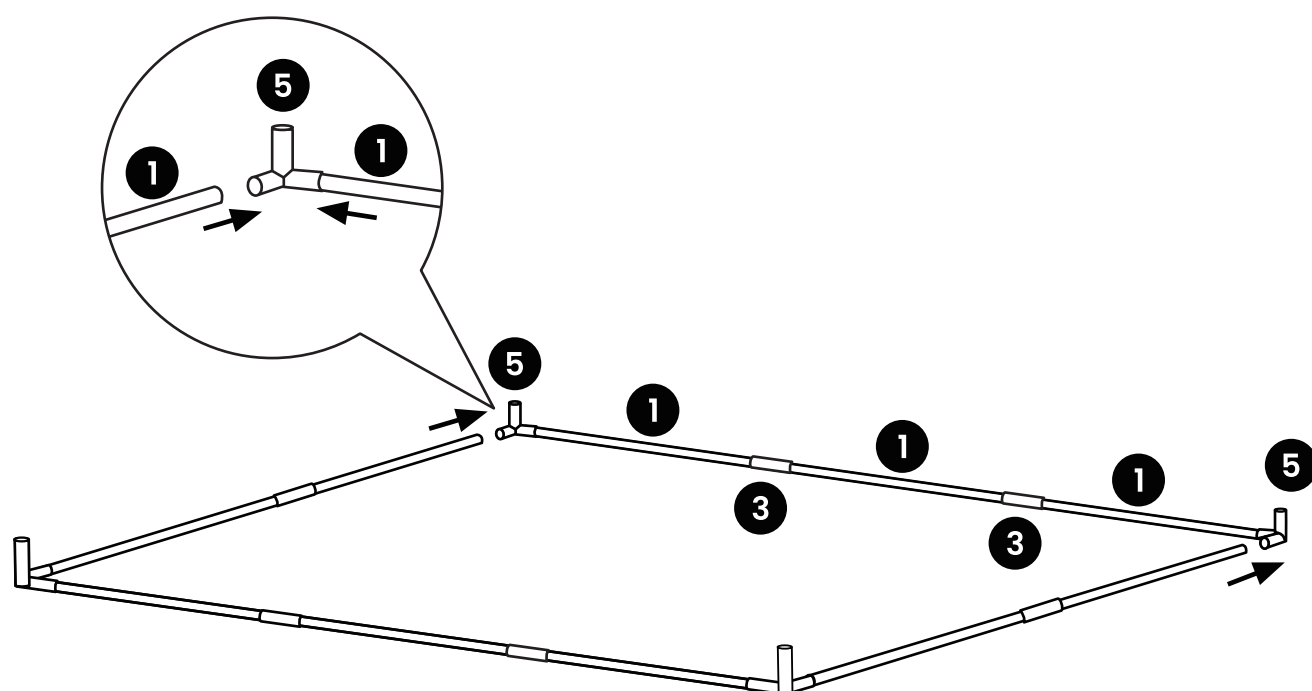


4

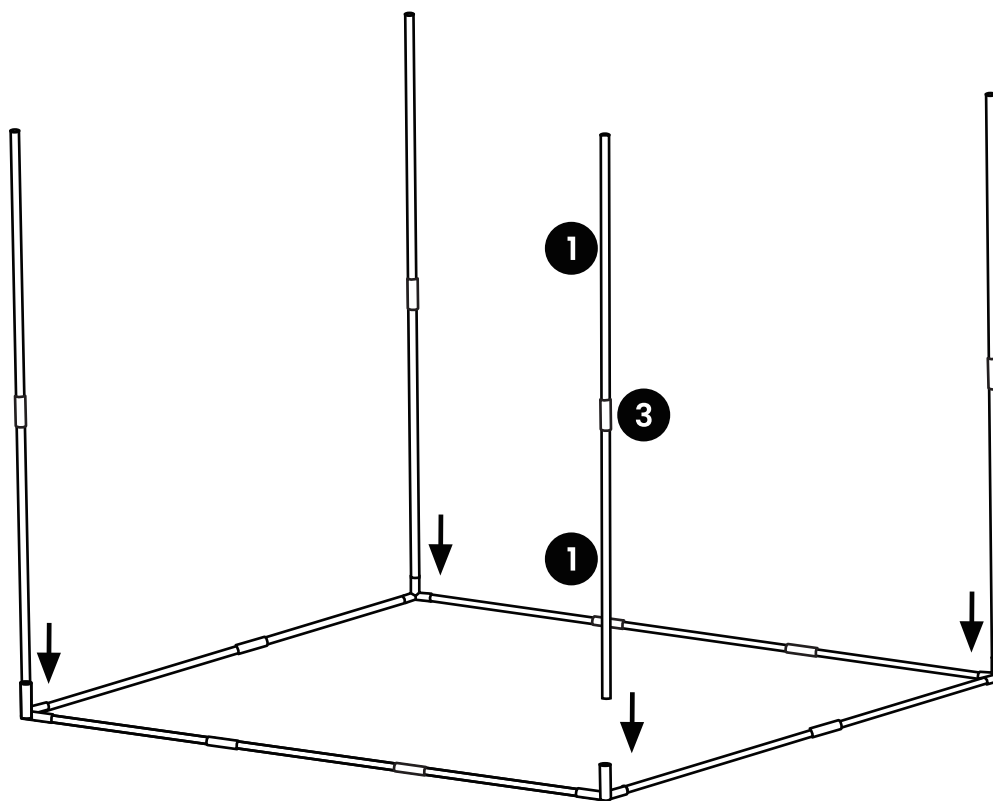


5

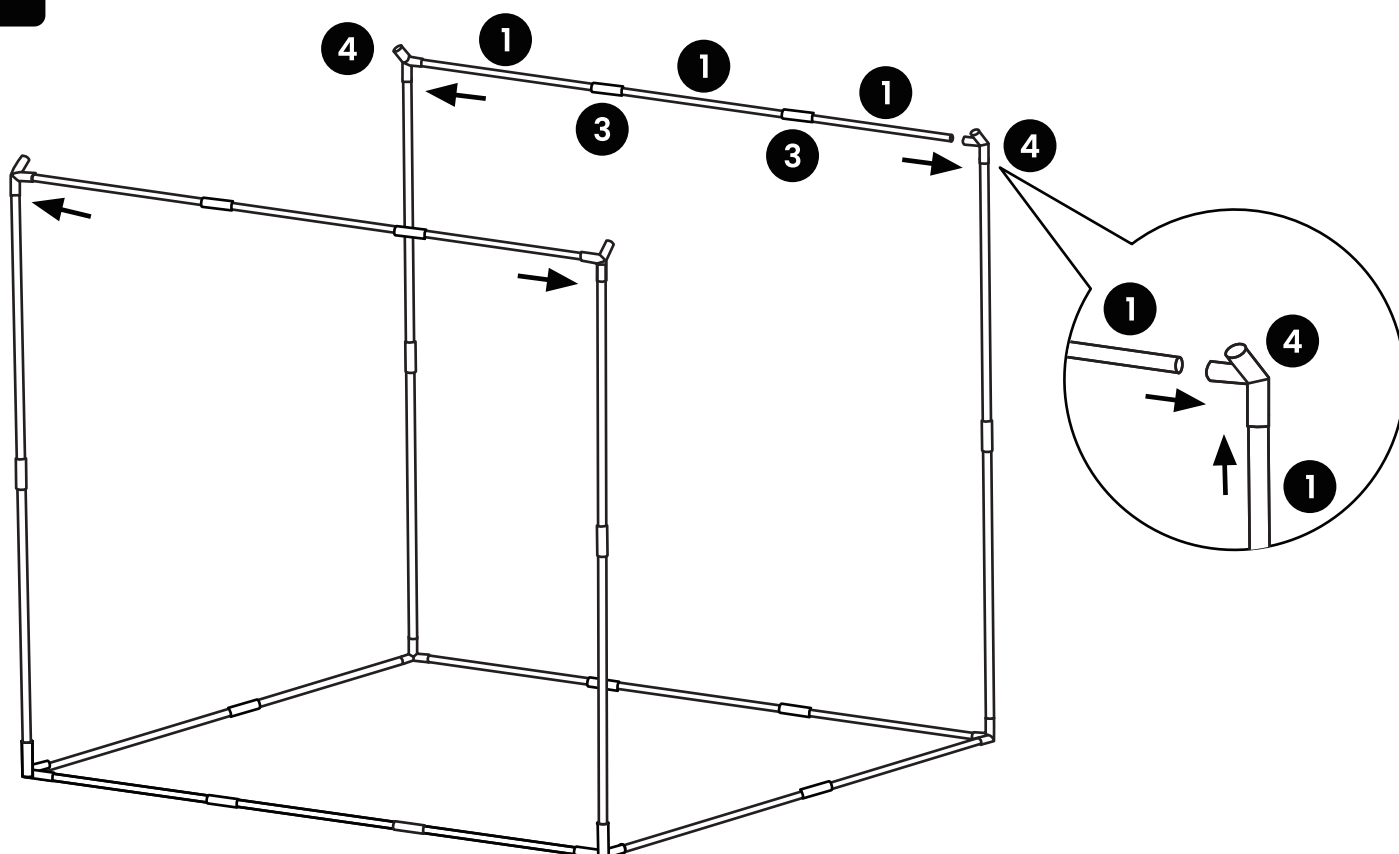

6

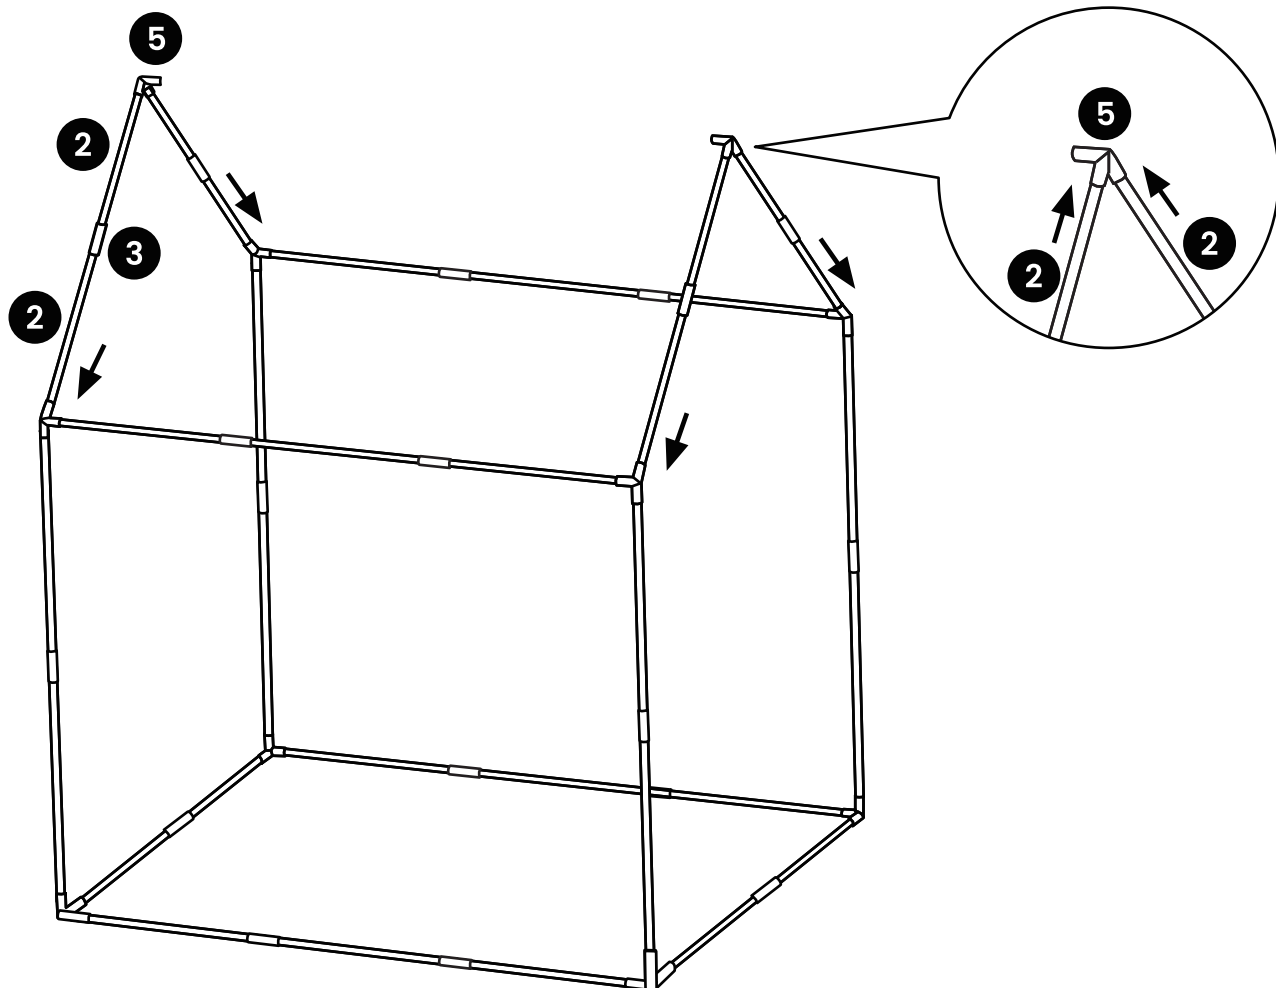


7


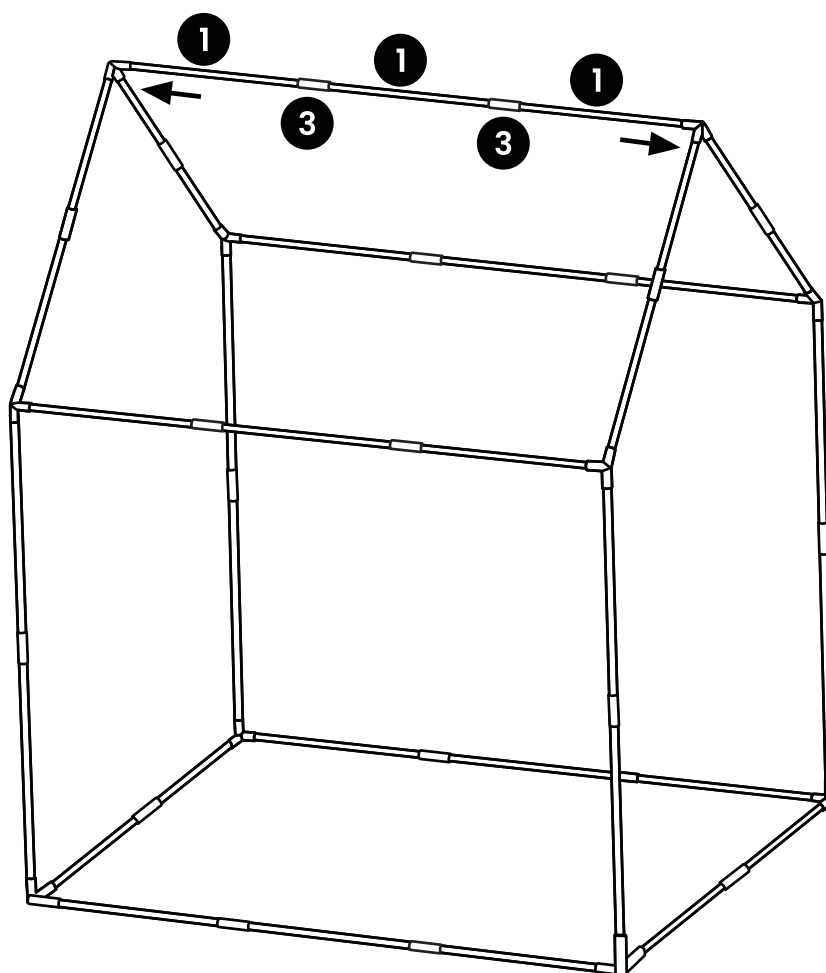


8


Follow the picture to fix the fabric cover **7** on the frame.

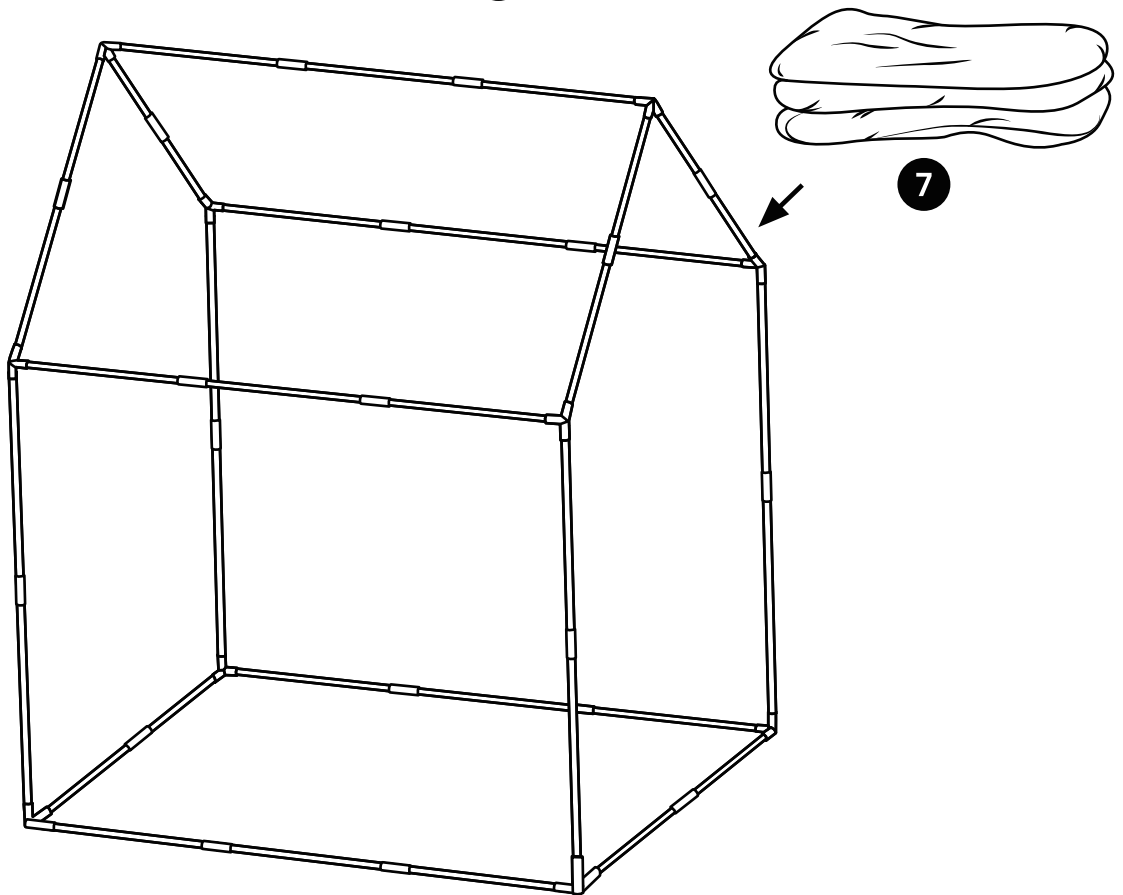

9

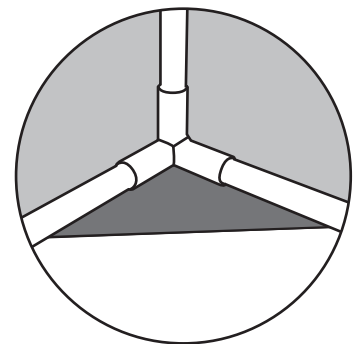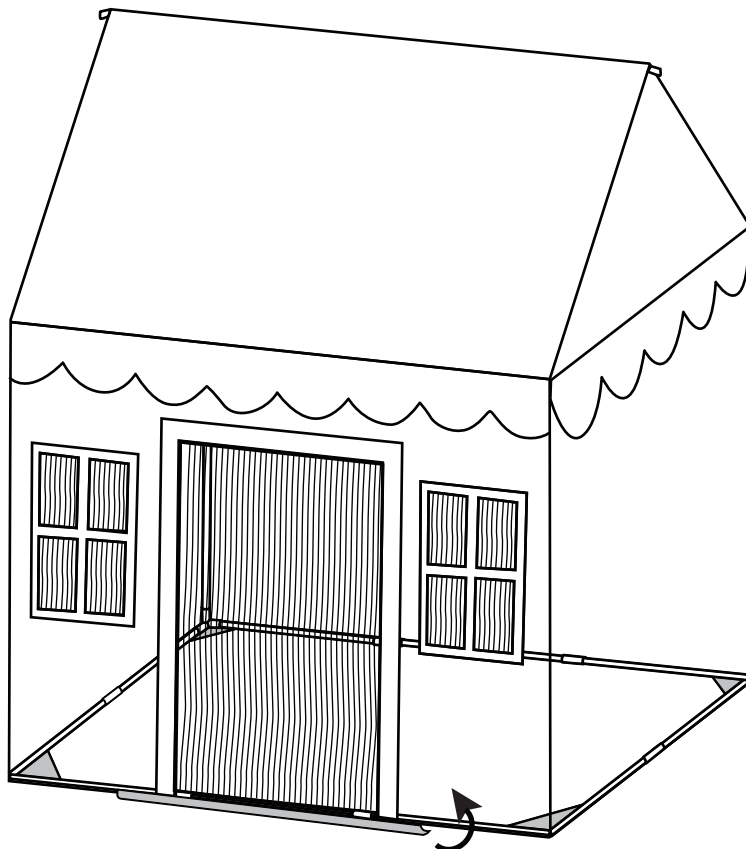


Put four corners of the frame into the bottom triangular area as shown in the picture, to make the canvas in the right place.

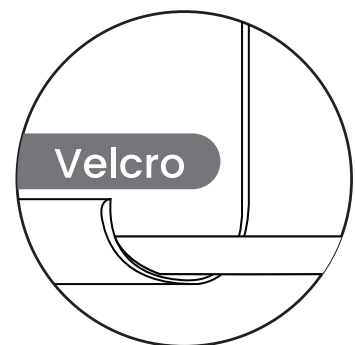

Wrap the bottom edge of the tent with Velcro as shown to secure the tent and frame.

10

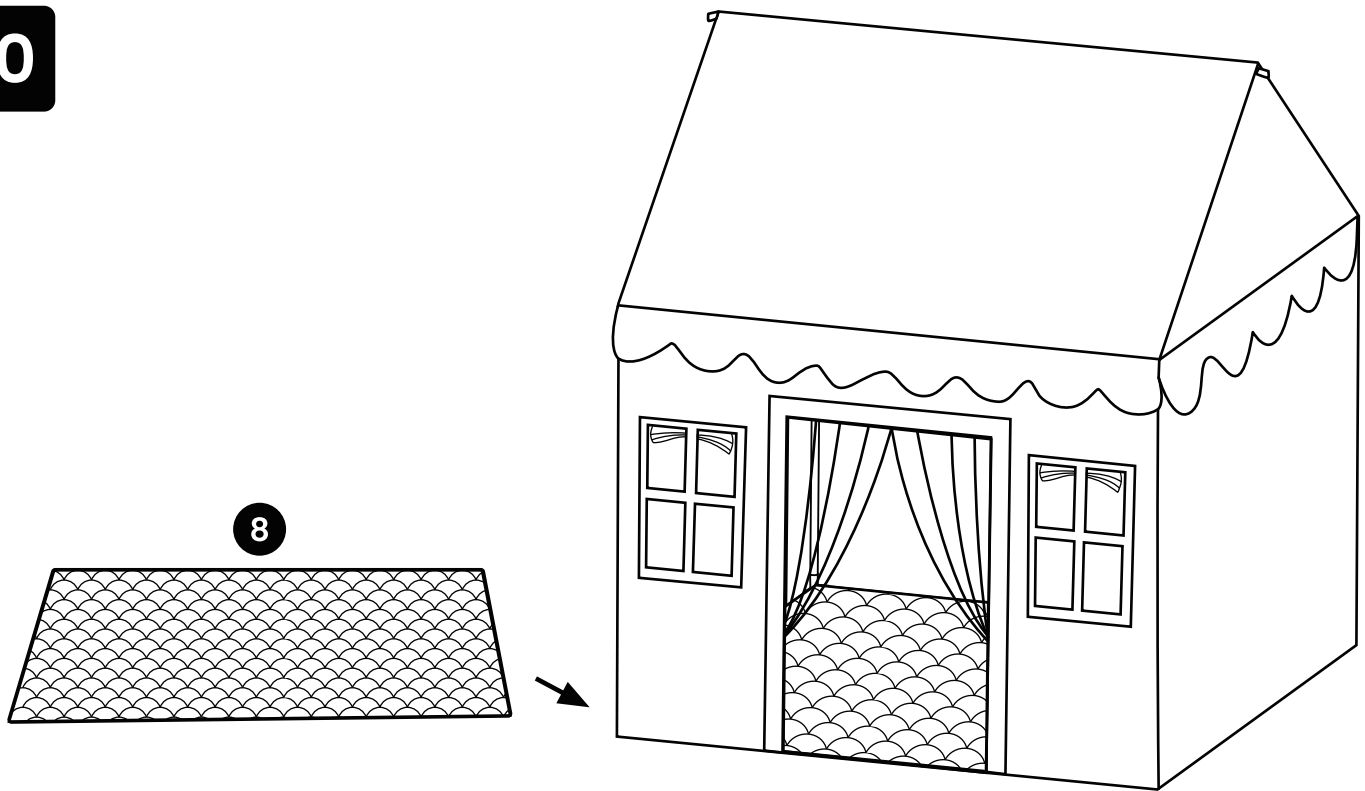

Put the cushion **8** inside the tent and tie the curtain. As shown in the picture, the assembly is now complete.

11

