



The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.





Components Name

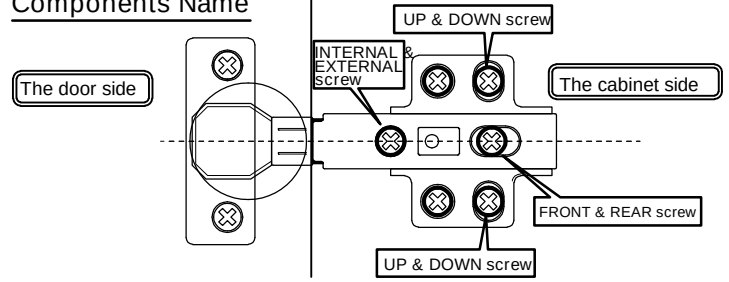

Obvious gaps between doors or Doors don't look closed

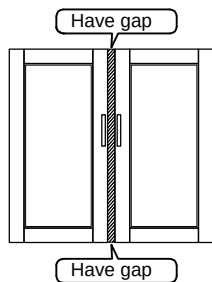


- ① Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

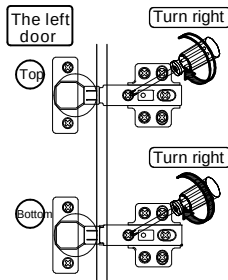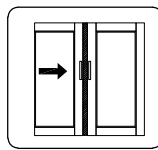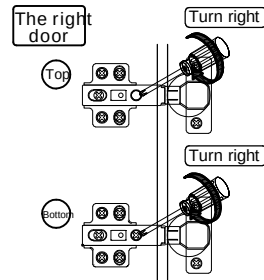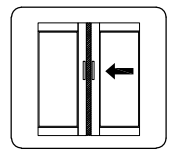


If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked

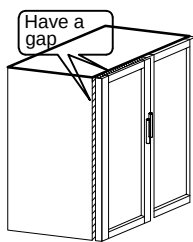


Please take the following steps to adjust first.

- ① Rotate the "front and rear screws" to the left

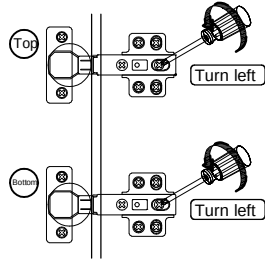


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.


- ② Push the door to the cabinet

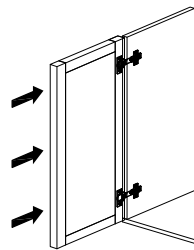



- ③ Rotate the "front and rear screws" to the right

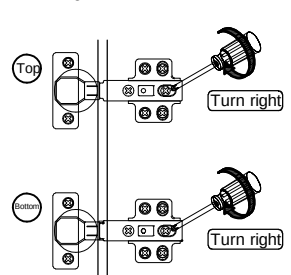


When door is leaning

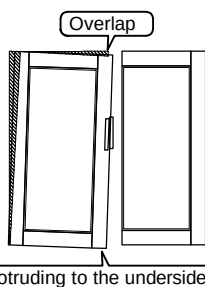

- ① Turn "internal & external screw" to the left can make the top of the door tilted outward.

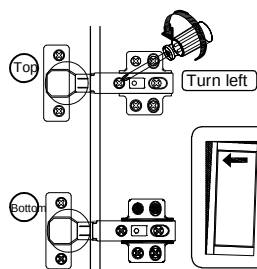
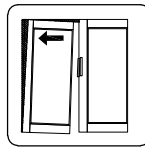


Protruding to the upside

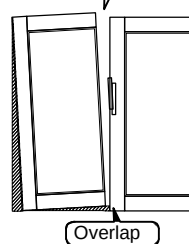


Overlap


- ① Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

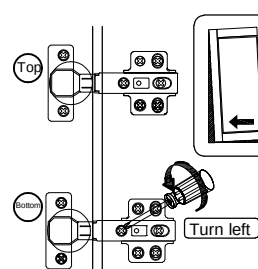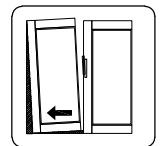


When the door is higher on top

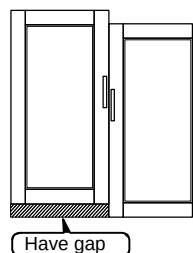


- ① Turn "up & down screw" to the left

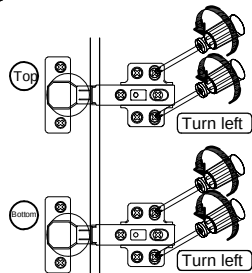

- ② Lower the door's height so that 2 doors are of the same height.

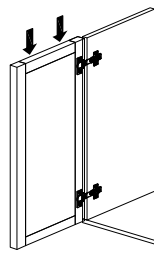

- ③ Turn "up & down screw" to the right

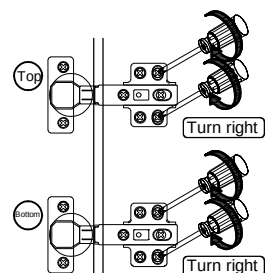

If the door is lower on bottom, please lift up the left door slightly on step 2