


INSTALLATION INSTRUCTIONS

17001-F3

3-Speed Fan and Full Range Dimmer

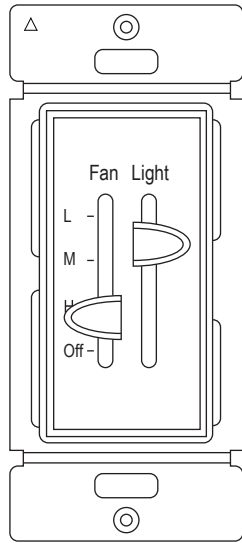

SPECIFICATIONS

Voltage.....	120VAC, 60Hz
Load rating -3 Speed Fan.....	2.5A
Incandescent/Halogen.....	360W Max
Dimmable LED/CFL.....	150W Max
Operating Temperature.....	32°F-104°F

DESCRIPTION

The 17001-F3 by Enerlites is a combination of a 3 speed fan control and a fully variable dimmer in one. The fan control will work with "pull-string" type fans, but is not compatible with fan types that use remotes or other digital controls. The dimmer is compatible with LED, CFL, incandescent, and halogen bulbs.

FEATURES

- Replace standard switches with 17001-F3 for easy light dimming control and fan speed without having to reach for the pull string.
- Provides 3 speed control for ceiling fan with slide control that stops at each speed.
- Simple slide control lever to fade lighting up and down smoothly.
- Single Pole only.
- Requires separate wires for fan and light.
- No neutral wire required.

WARNING

Turn the POWER OFF at the circuit breaker before installing

Read and understand these instructions before installing. This device is intended for installation in accordance with the National Electric Code and local regulations. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s).

- DO NOT CONNECT NEUTRAL WIRES TO THIS DEVICE.**
- DO NOT USE WITH LOW-VOLTAGE BALLASTS OR DRIVERS.**


Use this device with copper or copper clad wire only.

CAUTIONS:

- To Reduce The Risk of Overheating and Possible Damage to Other Equipment, Do Not Install to Control a Receptacle, a Motor-Operated Appliance a Fluorescent Light Fixture or a Transformer Supplied Appliance.
- When multiple bulbs are used with one dimmer DO NOT mix bulb types. All bulbs shall be either LED; CFL or incandescent. Using the same make/model of each bulb will enhance dimmer performance.

WIRING


1. Turn Off Circuit Breaker
2. Connect the HOT wire to the BLACK wire on the switch.
3. Connect the FAN wire to the BROWN wire on the switch.
4. Connect the LIGHT wire to the RED wire on the switch.
5. Connect GROUND wire to GREEN wire on the switch.
6. Mount the Fan Speed Control to the box with "UP" indicator pointing up.
7. Turn on Circuit Breaker.
8. Set the speed on the ceiling fan to high.

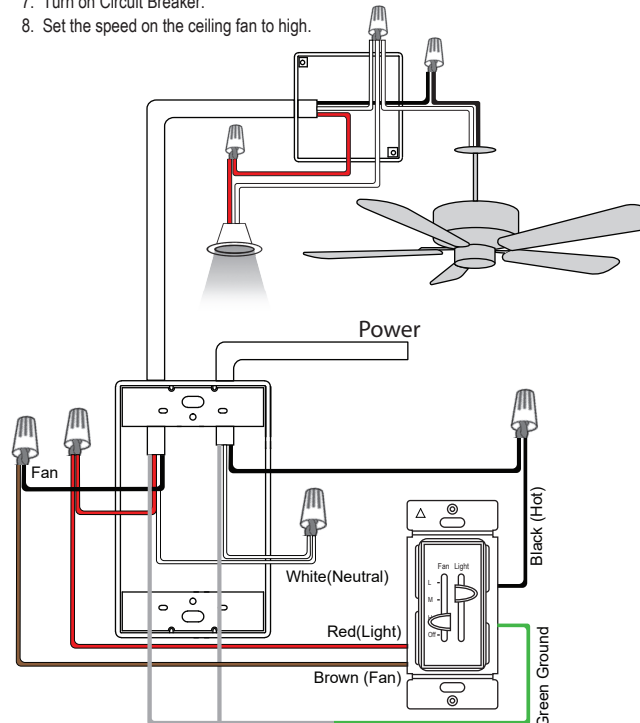

OPERATION

Light control lever

Smooth gliding lever will allow you to accurately select the level of light you desire. To turn off lights completely, slide the lever downwards until you feel the click.

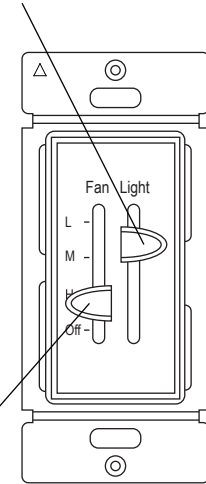

Fan control lever

Slide the lever to any of the 3 speed settings or "Off" for control of fan only. The lever will have a noticeable stop at each selection.

WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.

