


LED

Christmas Wreath

Instruction Manual

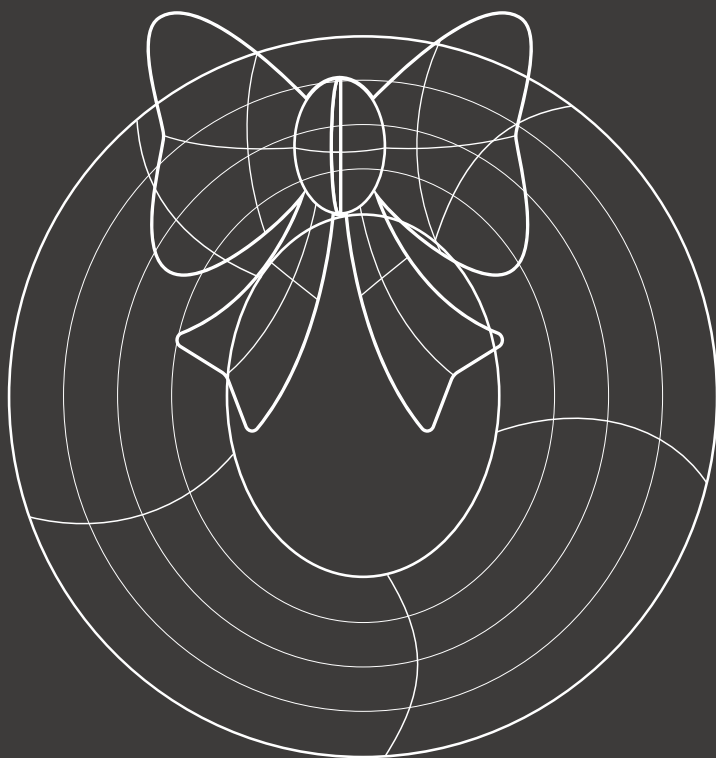



Begin assembly only after all packaging has been removed and the product has been checked for any damage.

⚠ NOTE:

- Please retain these instructions for future reference.
- This item is not intended for permanent installation or continuous use.
- Unplug the item when not in use or when left unattended.
- Ensure the power supply matches the rated voltage.
- If any parts are missing, broken, damaged, or worn, discontinue use of this product until repairs are made or replacement parts are installed.
- Do not use this item in any manner inconsistent with the manufacturer's instructions as doing so may void the product warranty.
- This product is intended for residential use only.

⚠ WARNING:

- Do not plug into a wall outlet until the item is fully assembled and all lights are properly connected.
- Do not use in extreme weather conditions.
- This product contains glitter, which may cause mess or damage. Use caution when assembling.
- Do not allow glitter to contact your eyes or face, as this may result in skin irritation or injury.
- Keep the item away from all heat sources (fireplace, stove, heater, etc.).
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.




PACKAGE CONTENTS

A




1 PC

B

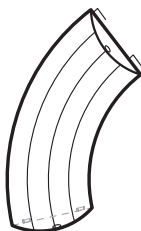

4 PCS

C

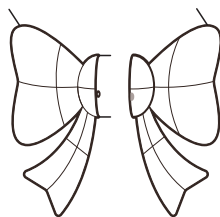


1 PC

PACKAGE CONTENTS

1

Zip Ties

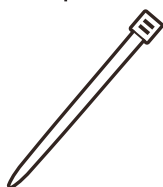

10 PCS

2

 
Cotter Pins



2 PCS

3

Butterfly Bolts



10 PCS




Parts are loosely connected by string lights. Handle with care, as the electrical wires link the sections together.

PRODUCT ASSEMBLY


1

Arrange parts (A) and (B) in the pattern shown below.

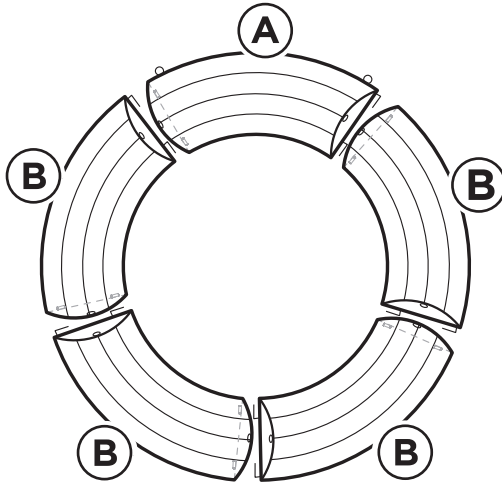

2


Interlock parts (A) and (B) by connecting the two connector ports. Secure them with two butterfly bolts (3) as indicated.

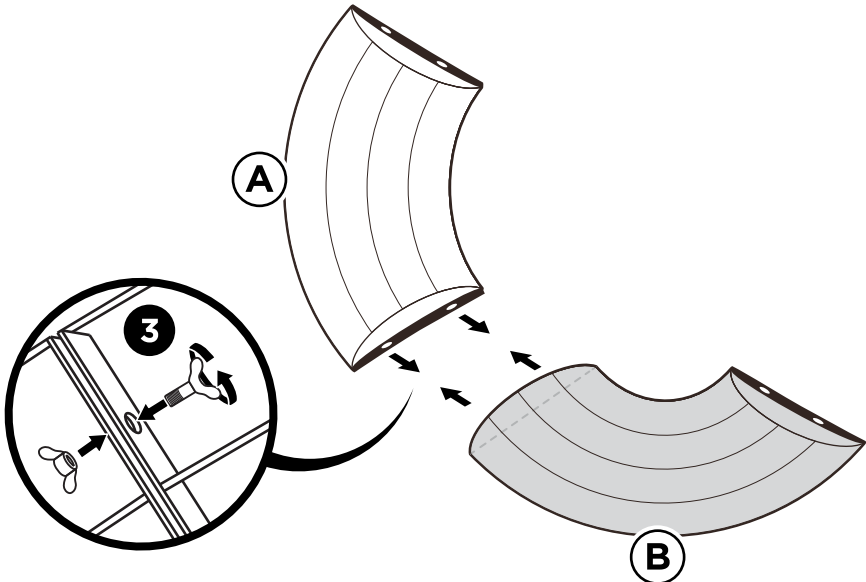

PRODUCT ASSEMBLY


3

Repeat Step 2 to assemble the remaining wreath sections.

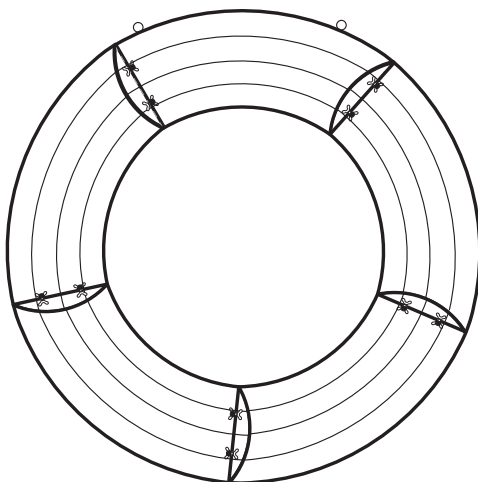

4


Interlock the two halves of part © (the bow) by connecting the vertical hook and connector port. Secure with a zip tie **1** as indicated.

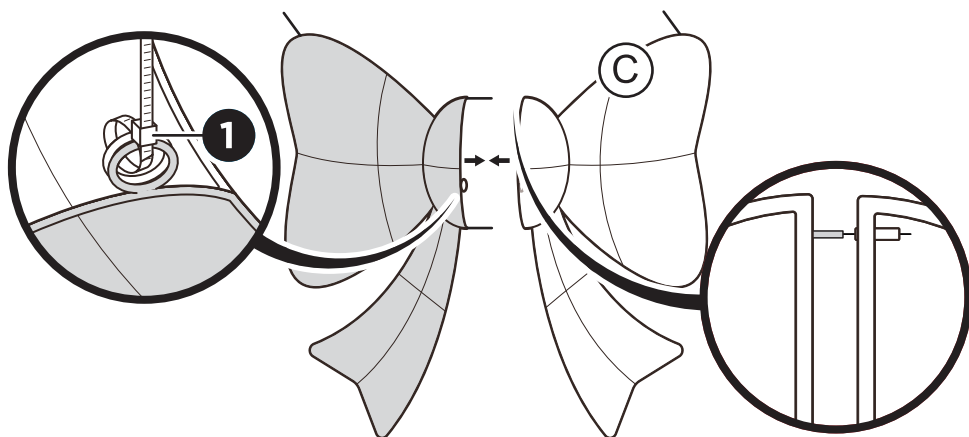

PRODUCT ASSEMBLY


5


Insert the assembled bow into the holes on the top of the wreath. Secure it with two cotter pins ②. The wreath is now fully assembled.

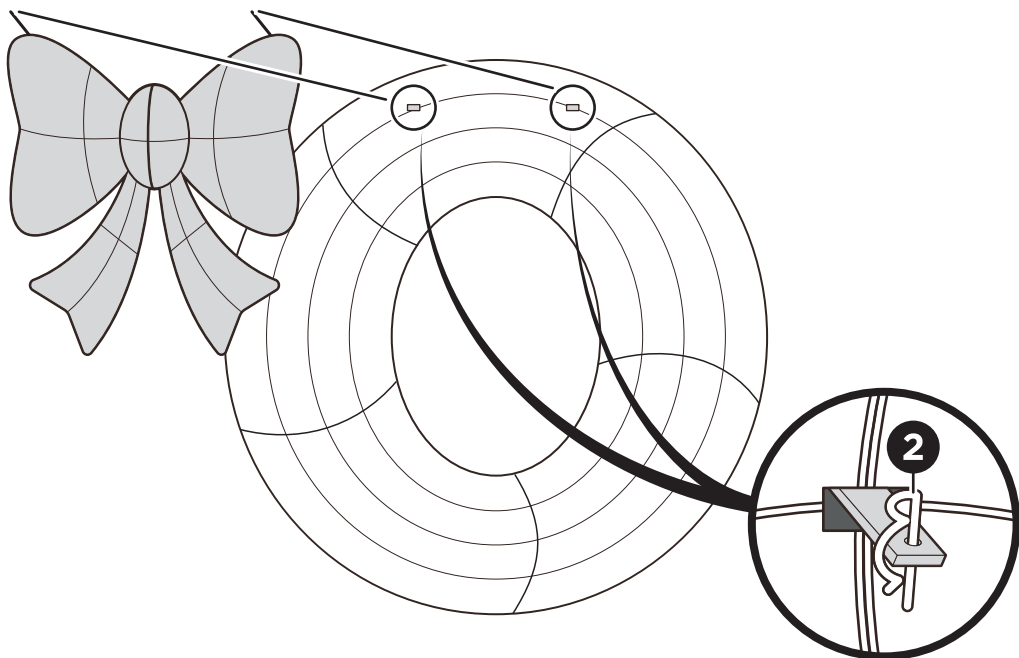

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Lights do not work	Not properly plugged in	Firmly insert the plug into a working wall outlet
	No power supply to the extension cord	Ensure the extension cord is properly plugged in and powered on
	The plug is not connected correctly	Ensure the positive and negative terminals of the plug are correctly connected

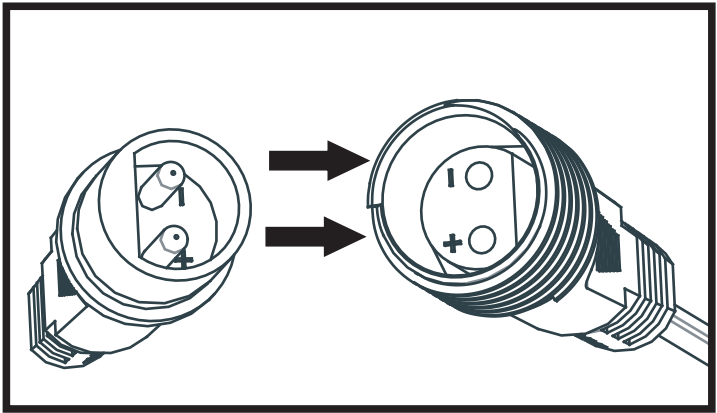

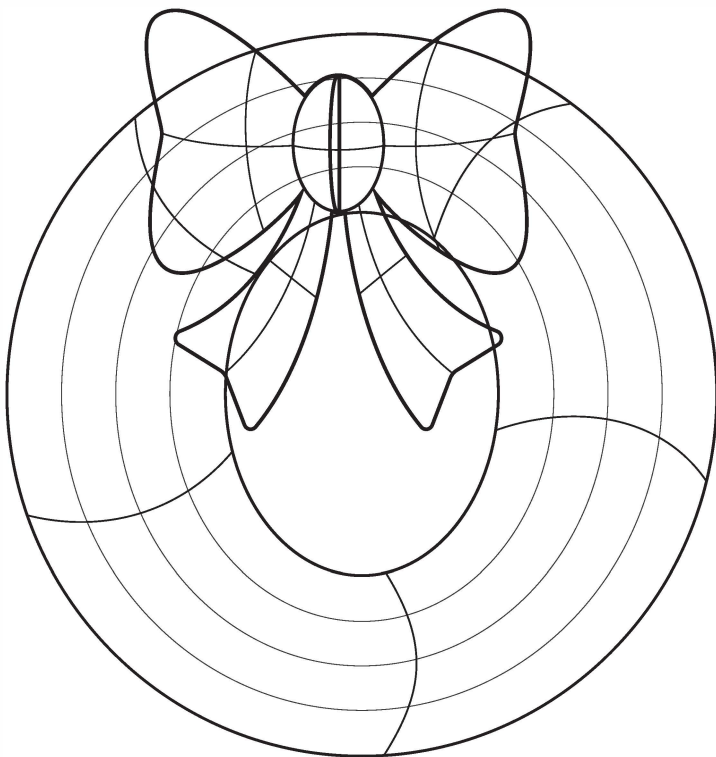

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.