










A  x1	B  x1	C  #60 mm x1	D  x1
E  x5	F  (19.8/20.2)*19.8 cm x1	G  M6*20 mm x8	H  M6 x1

💡 Assembly Tips:


- **STEP 2** - Ensure the **round hole** on the base plate (F) aligns with **4 screw holes** on the seat (B) before tightening the screws.
- **STEP 5** - Pull the right lever upward (seating position) to **adjust the seat height**. (Seat lightly: Raise / Lower: Seat Fully)
- **STEP 6** - Turn the **tilt function knob** to **adjust resistance**. (Clockwise: Tighten / Counterclockwise: Loosen)
- **STEP 6** - Use the **left lever (seating position)** to lock or unlock the tilt function.
- **IMPORTANT** - **DO NOT** fully tighten the screws until all screws are properly placed into their holes.

NEXT PAGE: ASSEMBLY PROCESS


①

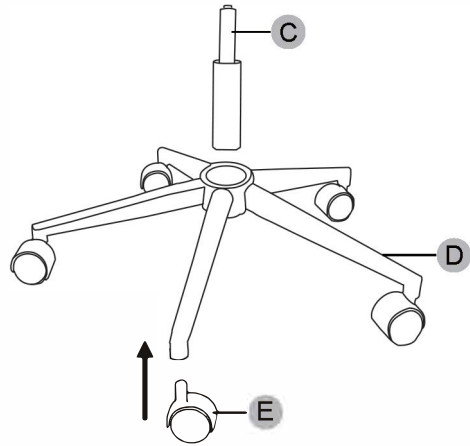


②

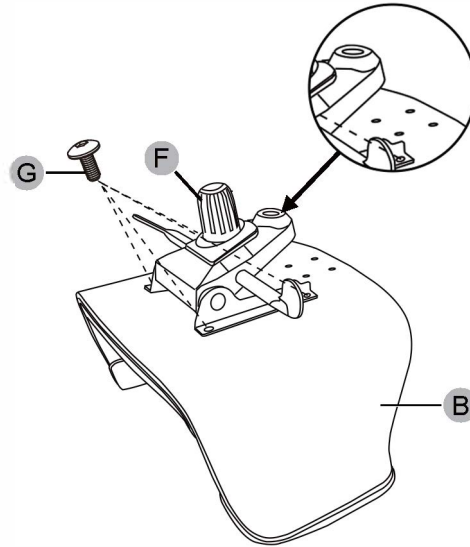


③

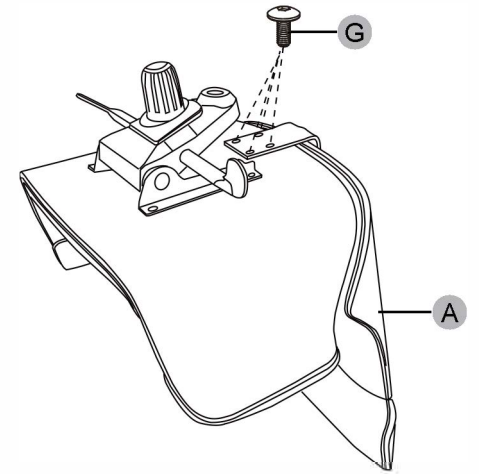

④

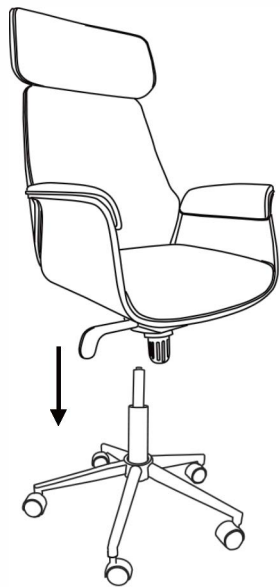

⑤

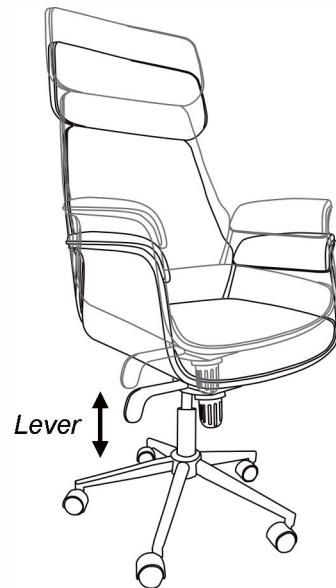

⑥

