


STEAM CLEANER USE MANUAL

匠心智慧 这里会有一款产品适合您

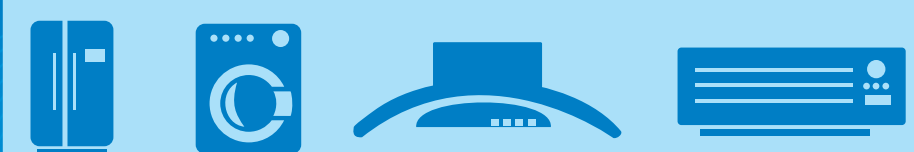

This machine can deeply clean refrigerator, wash machine, range hood, air conditioner etc. without disassembly them.

Catalogue

Catalog and Product introduction-----1
 Product introduction and parameter-----2-3
 Operation steps -----4
 Function mode choice-----4-5
 Matters need attention-----5
 Fault resolution-----6
 Warranty directions-----7

Product Introduction

This machine adopts instantaneous heating method, it absorbs water itself, and sprays steam in a few seconds. It can deeply clean air conditioner, range hood, refrigerator, washing machine, water dispenser and many other home appliances. This machine is easy to set up, simple in operation, and has multiple functions, such as steam, hot water, cold water.

Remark: Different machine model may differ in function

01

Failure solution

Fault phenomenon	Causes of the failure	Troubleshooting
The machine is overheated or smokes	Caused by the insulation cotton of the roasting equipment, the equipment is not absorbed by the water and the water is insufficient.	Stop for 20 minutes and wait for the machine to cool before using it to ensure that water is absorbed and the dry humidity is adjusted to the maximum.
The main unit switch light is off after plugging in	Loose or defective plug Machine switch problem	Check whether the power strip is energized and bear the voltage. "Need to be able to bear the power strip above 2500W" Need to replace the switch
The spray gun automatically shuts down or the steam output is small	Shutdown or small steam output due to clogged scale	Twist the steam outlet pipe to see if the main engine can emit steam and clean the inner wall of the main engine steam outlet.
Water leakage of the extended elbow	Damaged rubber ring	Put on more rubber ring or replace with new rubber ring and tighten

Machine maintenance

Clean the scale in every 10 hours use, let the machine suck in descaling agent solution for 10 min and then suck clean water for 2 min. If the water quality is poor, you should clean the scale frequently.

Do not add the cleaning agent to the sucking water; use clean water only for the equipment; please spray the clean agent to the cleaning item 10min in advance.

In freezing area, please place the machine in a warm place, in order to prevent the water remaining inside machine from freezing; it will cause blockage and cannot absorb water.

Contact customer service to get cleaning videos for washing air conditioners, range hoods.

06

Product introduction

CNT-A-3000W-G



Product parameter

Product name	steam clean machine	Mode no.	CNT-A-3000W-G
Power	1700W	Water consume	0.2-2.8L/Min
Rated voltage	110VAC	Outlet temperature	>100°C Max120°C
Steam pressure		Power cord length	1.8M
Inlet tube length	1.2M	Steam tube length	3.0M
Machine size	430*240*185MM	Net weight	5.2KG
Outcarton size	460*305*250MM	Gross weight	6.3KG
Accessory: 1cleaning agent, 2 mane brush, 2copper brush, 1big round brush, 1transfer connector, 1 stainless steel lengthen nozzle			

03

Product introduction

CNT-A-3000W-A



Product parameter

Product name	steam clean machine	Mode no.	CNT-A-3000W-A
Power	1700W	Outlet temperature	>100°C Max120°C
Rated voltage	110VAC	Power cord length	1.8M
Inlet tube length	1.2M	Steam tube length	3.0M
Machine size	400*230*170MM	Net weight	4.6KG
Outcarton size	470*280*250MM	Gross weight	5.3KG
Accessory: 1cleaning agent, 2 mane brush, 2copper brush, 1big round brush, 1transfer connector, 1 stainless steel lengthen nozzle			

02

Warranty directions

Product quality assurance and after-sales service

The warranty of the product is one year, and the warranty is calculated based on the date of Taobao order receipt. During the warranty period, if there is a quality problem caused by non-artificial damage, the manufacturer is responsible for free maintenance.

During the warranty period, there is a problem of artificial damage or product warranty expired. The repair parts and shipping costs are borne by the user.


After-sale warranty card			
Customer name	contact number	Purchase date	
Customer address			
Purchase area	Be shop's name	Failure date	
Product fault description			
After-sales service address			
After-sales contact	After-sales contact phone		
Remarks			

Note: Be sure to fill in the after-sales service card carefully. Incomplete filling may result in untimely after-sales service.

07

operation steps

- (1) check and confirm the machine if it is in good condition before use it.
- (2) drop the inlet water tube inside the water tanker, as following illustrate.

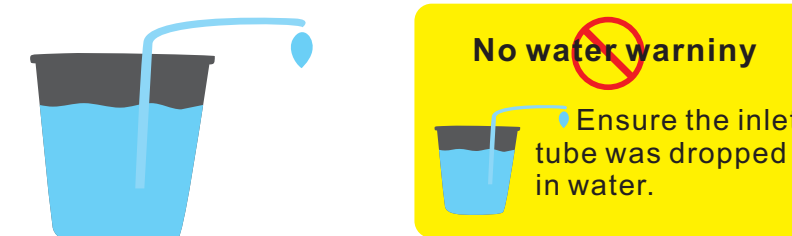

- (3) plug leakage protector in socket, press the test button to ensure the protector works properly.
- (4) Turn on POWER SWITCH (1), press the switch on the gun to active machine.
- (5) When you finish cleaning work, turn the machine to cold water and running for one minute to cold down the machine, and then turn off the power switch, take off the plug, wipe the machine panel, and close the cover.

Function Mode Choice

一. CNT-A-3000W-A

- (1) COLD WATER FUNCTION: Turn on the power switch, activate the spray gun trigger, adjust the gear to change the water volume.
- (2) STEAM FUNCTION: Turn on the power switch, turn on the steam switch, Adjust the gear to the dry position, activate the spray gun trigger. Steam will come out in 20 second; Press the gun trigger once again machine will stops working.
- (3) HOT WATER FUNCTION: At steam mode, adjust the gear to wet position, Hot water will come out.

二. CNT-A-3000W-G

- (1) COLD WATER FUNCTION: Turn on the power switch, active the spray gun trigger, cold water is output when the gear is set to 4-6 gears. And the volume of water is adjusted in 4-6 gears. Press the trigger once again, the machine stops working.

04

MATTERS NEED ATTENTION:

- (1) DON'T point the spray gun to human and animals, it may cause serious injure.
- (2) Before start the machine, ensure the inlet water tube was dropped inside the water tanker.
- (3) If you need adding the cleaning agent to the water, let it dissolve completely to avoid the particles clog the pump and damage the equipment.
- (4) Intake water temperature should less than 50C.
- (5) Machine should set up in the flat table avoid vibrate and slant.
- (6) When clean glass, please let the whole glass get the heat evenly to avoid crack.
- (7) At the end of the work, running cold water function for 1 minute to clean and cold down the machine. Then drain the remaining water in the water inlet pipe to prevent the water flowing into the equipment and effecting next use.
- (8) Still some excess hot water and steam emit out in few seconds after you press trigger to stop the machine. Beware of burns!
- (9) It is forbidden for minors to use and there is residual heat on the surface of the machine, so be careful no to burn your hands.
- (10) DON'T dis-assembly the machine without authority.

05