
Assembly Instructions


Caution : You must read this before you proceed

Loveseat

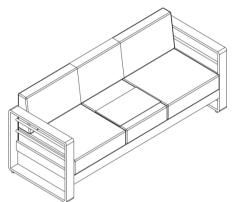



Parts List


Label	Picture	Description	QTY
А		Left Side Panel	1
В		Right Side Panel	1
С		Seat Panel (with plastic plugs protector in 4 ends)	1
D		Back Support Bar	1
E		U Shape Board	1
F		Middle Cushion	1
G		Seat Cushion	2
Н		Back Cushion	2
I		Middle Back Cushion	1

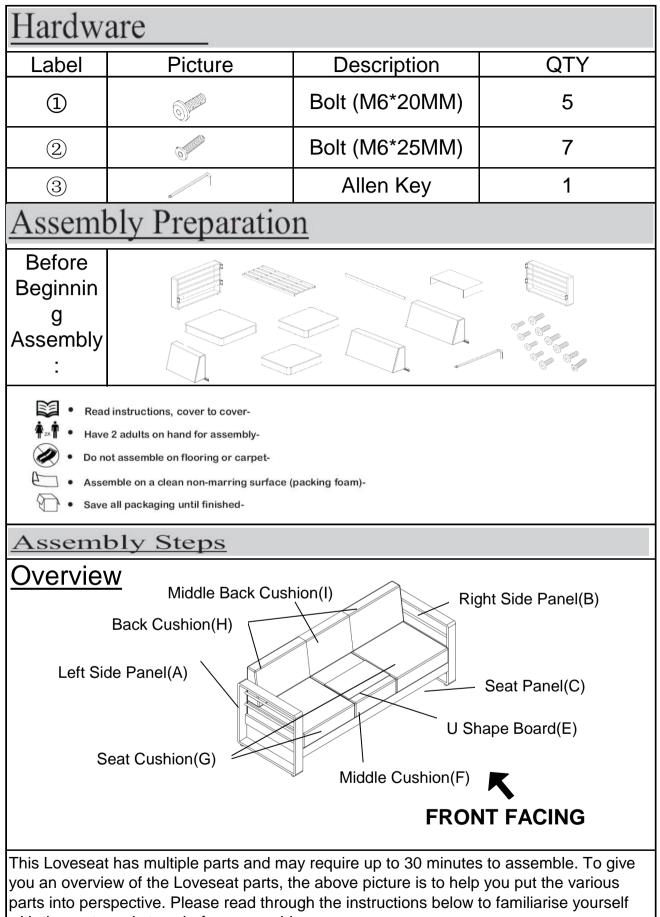

with the parts and steps before assembly.

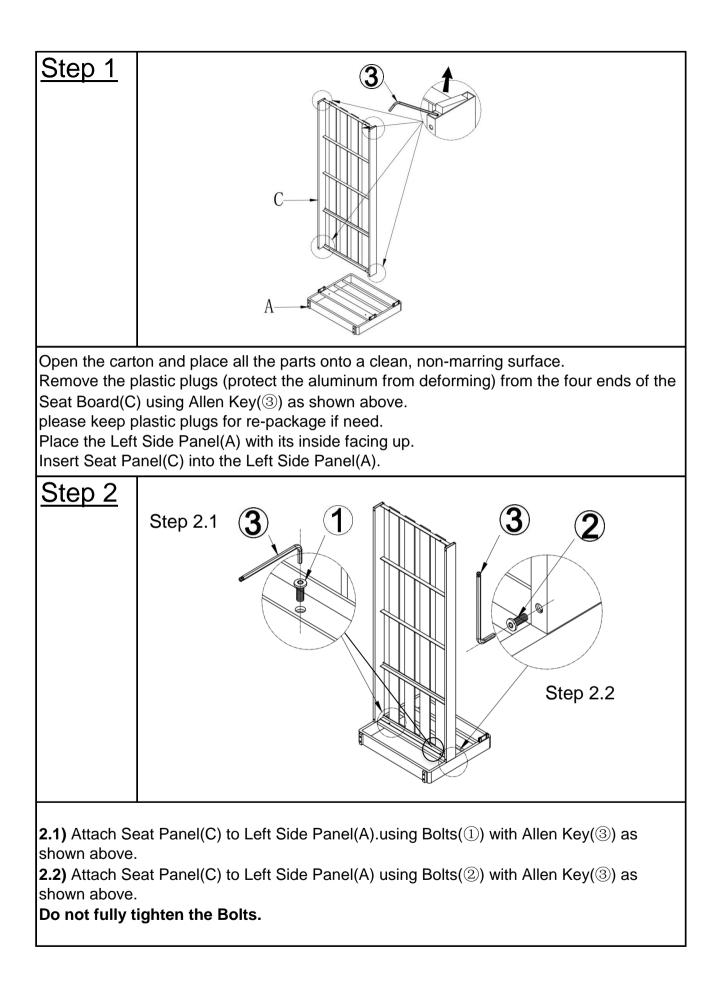

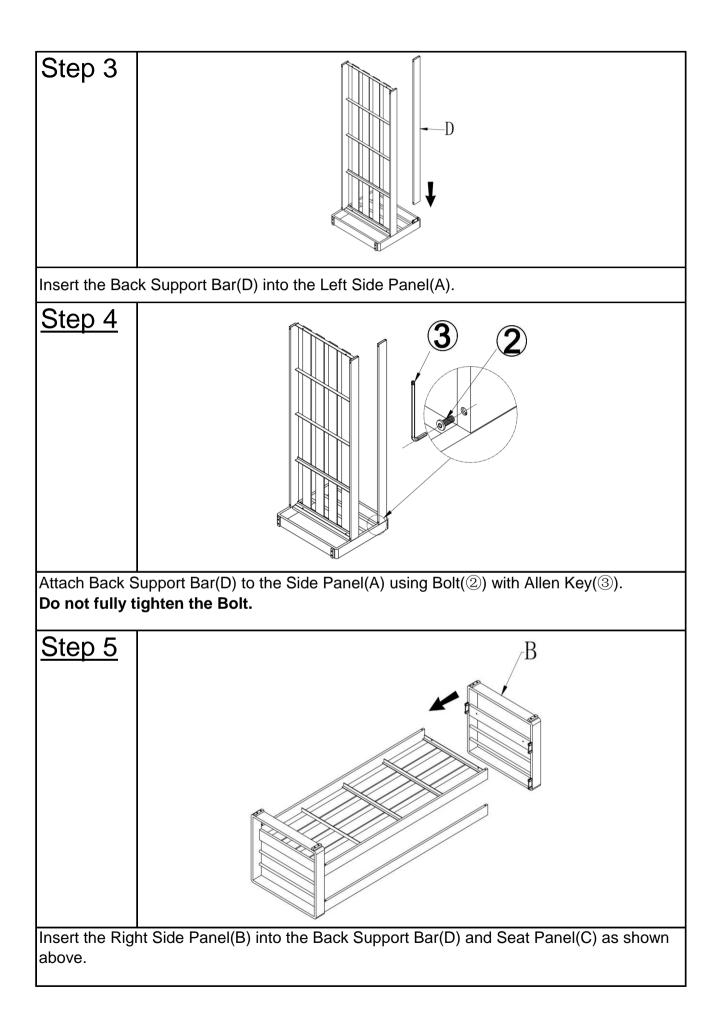

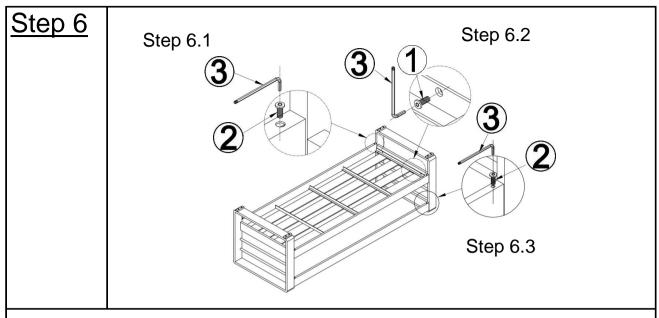

6.1) Attach Right Side Panel(B) to Seat Panel(C) using Bolts(2) with Allen Key(3) as shown above.

6.2) Attach Right Side Panel(B) to Seat Panel(C) using Bolts(1) with Allen Key(3) as shown above.

6.3) Attach Back Support Bar(D) to Right Side Panel(B) using Bolt(②) with Allen Key(③)as shown above.

Do not fully tighten the Bolts.

<u>Step 7</u>	

Stand the Loveseat up.

Place the Loveseat on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Gently and carefully, sit onto to the Loveseat.

This will help to align all parts at all joints.

Then carefully get off the Loveseat, and in a sequential manner, proceed to tighten all Bolts.


When tightening the Bolts, tighten sequentially. DO NOT tighten any Bolt fully and then move on to the next one.

This may cause the frame to warp.

If there are still wobbles, loosen the Bolts and execute the same process.

If the Loveseat is not stable it could lead to damage to the product.

Note: This step is done best with the assistance of a second adult.

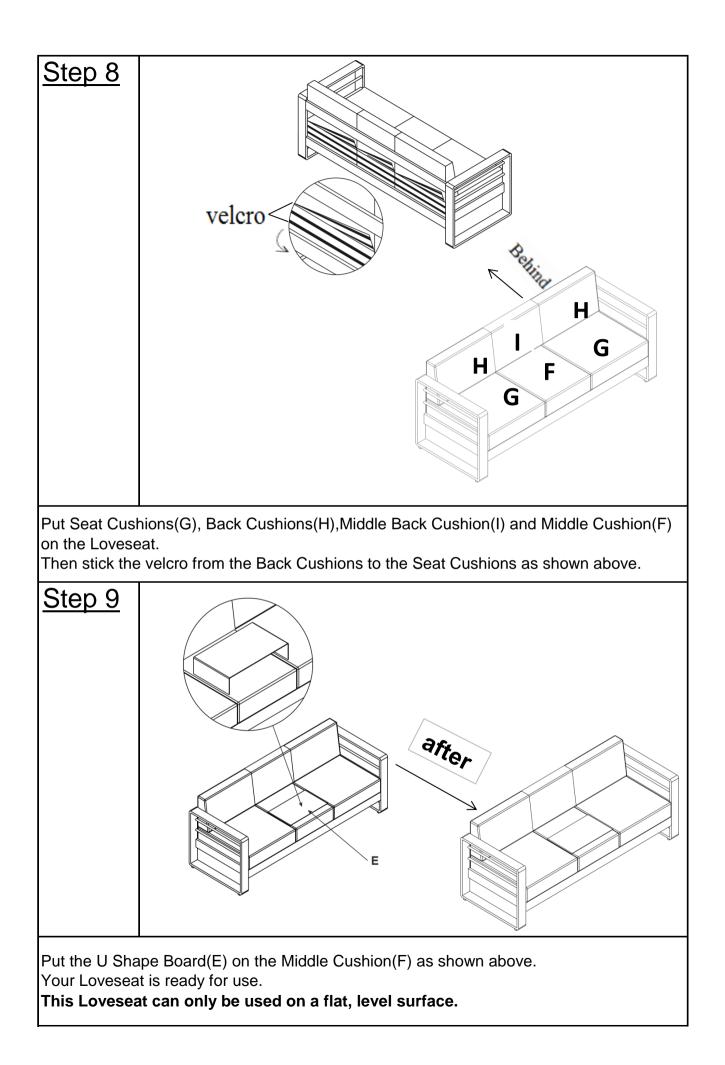

Care & Maintenance			
Do not put hot items directly on furniture surface			
Do not clean furniture with harsh cleansers or polish.			
To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.			
Children should not climb or jump on the furniture.			
Do not write on furniture without a padded barrier to protect the surface.			
To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.			
Not for commercial use. For residential use only .			
Stains may be removed with mild soap solution and damp cloth.			
Dust and pick-up spills using a clean, non-colored, lint-free cloth.			
What is Proposition 65?			
Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list			
include wood dust, brass, and other everyday substances, which can be found in very common household			
items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and			
furniture.			
Why Did I Find a Proposition 65 Warning on My Home Goods Product?			
We include Proposition 65 warnings on all of our products because there is always a chance that one of the			
800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.			
Should I worry?			

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

