


Fireplace Heater

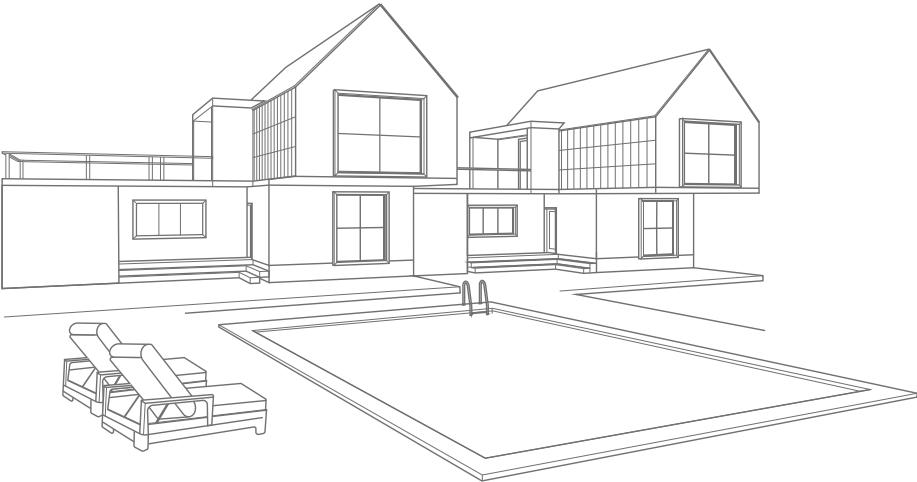

CONTENTS

- 01** SAFETY WARNING
- 02** PRODUCTION INTRODUCTION
- 03** INSTALLATION
- 04** OPERATION
- 05** CLEANING
- 06** MAINTENANCE
- 07** SCHEMATIC DIAGRAM

FIREPLACE HEATER

OWNER'S MANUAL



Warning-To reduce the risk of injury, user must read instructions manual carefully.




Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.

SAFETY WARNING

1. Read all of the instructions before using this appliance.
2. This heater is hot when in use. TO avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtain s at least 3 feet (0.9m) from the front of the heater, and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalid s and whenever the heat er is left operating and unattended.
4. **DO NOT** operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped ordamaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
5. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause electric shock or fire, or damage the heater.
6. **INDOOR** use only! **NEVER** use this heater outdoors! Doing so may result in electric shock!
7. To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel (or operate internal disconnect switch if provided).
8. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. Doing so could cause a fire. **DO NOT** Use on soft surfaces, like a bed, where openings may become blocked.
9. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
10. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
11. Connect to properly grounded outlets **ONLY**.
12. Place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater ·
13. **NEVER** Use this heat er in bathrooms, laundry rooms, or any other location where the heater could fall into a bathtub or pool, become damp, or come in contact with water.
14. **AVOID FIRE!** Regularly inspect all air vents to make sure they are free from dust, lint, or other blockage. unplug the unit and clean with a vacuum **ONLY**. **DO NOT** rinse or get wet.
15. **WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK---DO NOT USE THIS HEATER WITH ANY SOLID STATE SPEED CONTROL DEVICES.**

16. For residential use only! **NOT** for commercial use! Any commercial or public use of this heater voids all warranties, and could cause injury.
17. This product is not intended to be a primary heat source. It is for supplemental heat only.
18. **NEVER** modify this heater. Doing so could result in personal injury or property damage. Modification of this fireplace completely voids all warranties.
19. **ALWAYS** disconnect this unit from the power supply before performing any assembly or cleaning, or before relocating the electric fireplace.
20. **NEVER** leave this heater unattended. **ALWAYS** unplug this heater when not in use.
21. **ALWAYS** Store this heater in a dry location. **NEVER** Use the fireplace if it has become wet.
22. **ONLY** Use this heater on a 120V AC 15 Amp circuit. **NEVER** overload the circuit. If this heater trips the circuit breaker, unplug all other appliances on the same circuit before the next use. Avoid plugging other appliances into the same circuit as this heater.
23. **NEVER** plug this heater into an outlet that is old, cracked, or has any loose wires or connections. Plugging this heater into a faulty outlet could result in electric arcing within the outlet that could cause the outlet to overheat or catch fire.
24. **ALWAYS** check your heater cord and plug connections with each use!
25. **MAKE SURE** the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
26. Heaters draw more current than small appliances. overheating may occur even if it has not occurred with the use of other appliances.
27. During use check frequently to see if the plug outlet or face plate is **HOT!**
28. If the outlet or face plate is **HOT**, discontinue use immediately and have a qualified electrician inspect and/or replace the faulty outlets.

This heater is for use on 120 volts. The cord has a plug as shown at A in figure below. An adapter as shown at C is available for connecting three-blade grounding –type plugs to two –slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three –slot grounded receptacle is available.

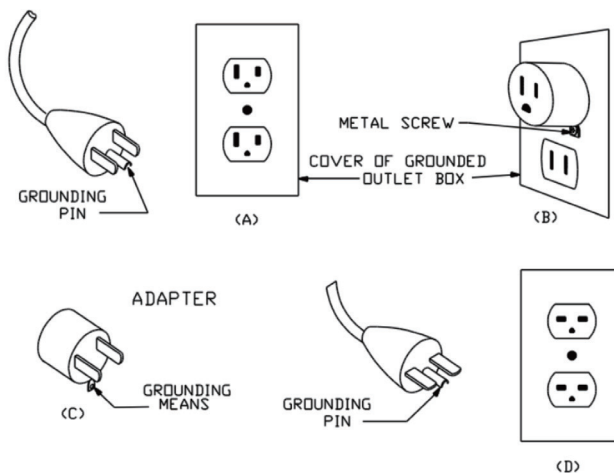

NOTE: Adaptors are NOT for use in Canada.


SAVE THESE INSTRUCTIONS!

PRODUCT INTRODUCTION

Specification

Product Name	36 Inch Electric Fireplace
Model No.:	E
A/C Voltage	AC 120V 60Hz
Maximum Power Consumption	1.5KW
Power For Flame And Fuel Bed Effect	4.5W
Weight	32.9 lbs. (14.93 kg)


Appliance Dimensions

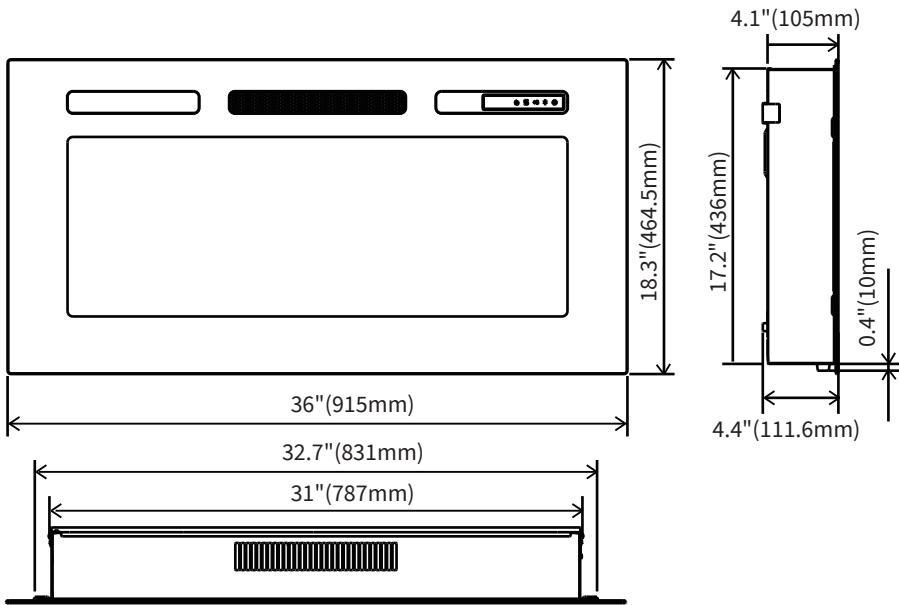


INSTALLATION

Check Spare Parts


- Unpack the fire carefully, make sure that the appliance is intact with no signs of damage caused by transport and no part has been exposed to water. If in doubt, do not use the appliance and contact an authorized service center.
- Keep plastic wrapping away from children.
- Save the original packaging as this may be required in the event of service complaint with product.
- Check that all parts are removed from the packaging.

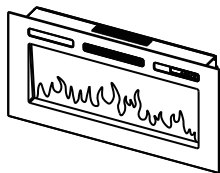

A: Firebox*1

 

B: Remote*1

 


C: Battery*2




D: Crystal*1



 
E: Screw ST4*12*4



F: Screw ST4*30*6

 


G: Wall Plug*6

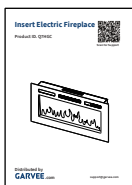

H: Manual*1

Tools Required

A screw driver will be needed.

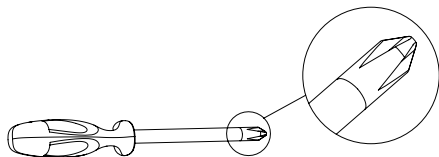

Locating the Appliance

Your new electric fireplace may be installed virtually anywhere in your home. However, when choosing a location ensure that the general instructions are followed.

- For best results, install out of direct sunlight.
- The appliance should be connected to an earthed electrical outlet and it must be easily accessible to allow disconnection.


Prepare the electrical supply

- Plan the location of the appliance so that it will have adequate electric power. A 15 AMP, 60Hz circuit is required for 120V installation. The appliance should ideally be located close to a suitable main socket to enable power connection.
- The power cord is 6ft long and locates on the right side of the unit. If the cord is found not long enough to reach the outlet, a grounded extension could be run from an existing socket outlet but a minimum size 14 AWG with a minimum rating 1875W would be recommended, and it should not be longer than 7ft and 10 31/64".
- Always make sure the outlet is in good condition and the plug is not loose. **NEVER** exceed the maximum amperage of the circuit.


Installation Instructions

Wall mounted installation


1. Remove the four screws pointed by arrows as shown in the below pictures.

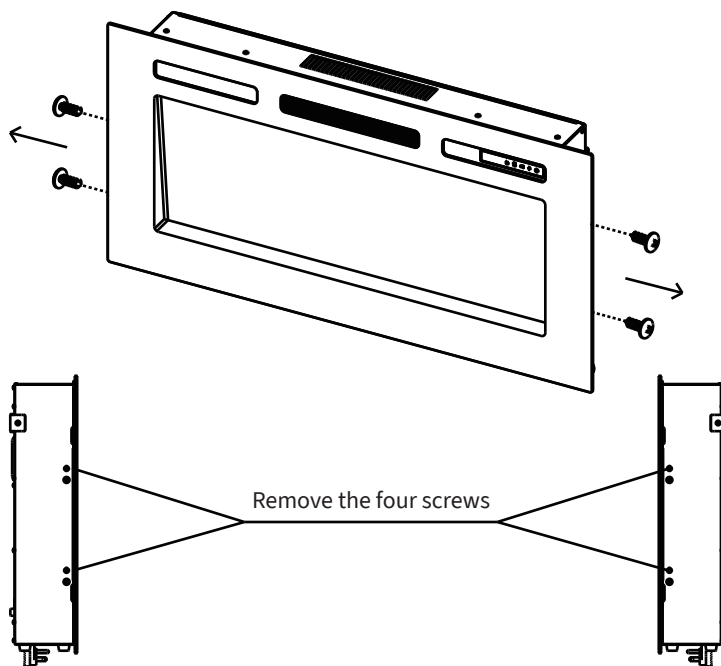


2. Remove the glass panel carefully.

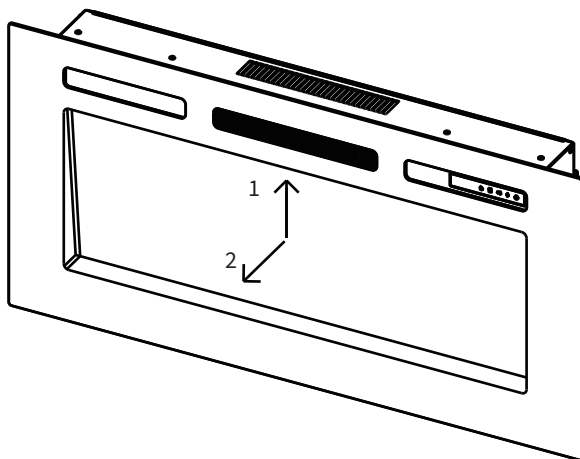


3. Remove the screws which secure the wall mounted bracket from the appliance and keep them for future use.

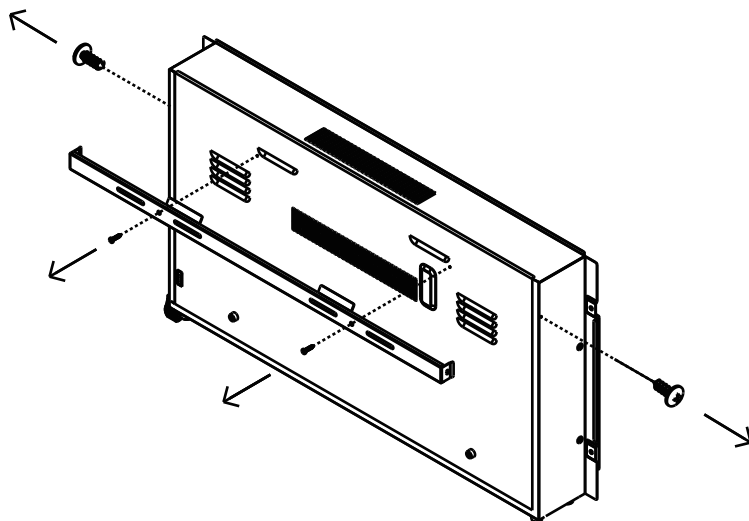


4. Install the wall plugs and fix the wall mounted bracket with ST4*30 screws (wall plugs and ST4*30 screws are included with the package).

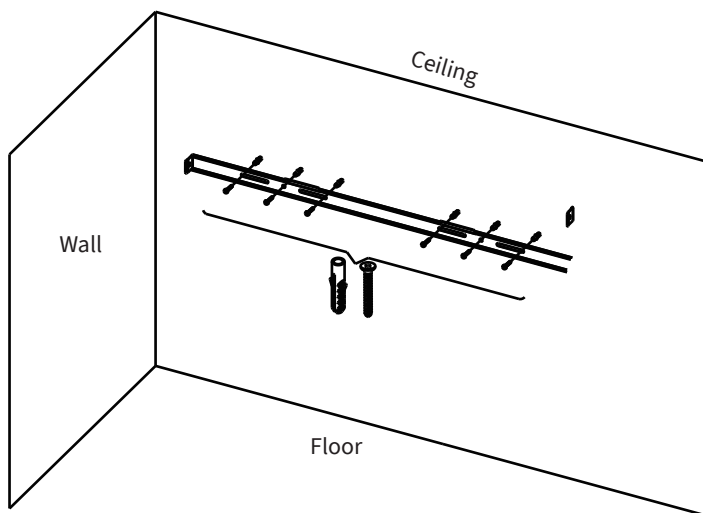


5. Mount the machine on the wall bracket.

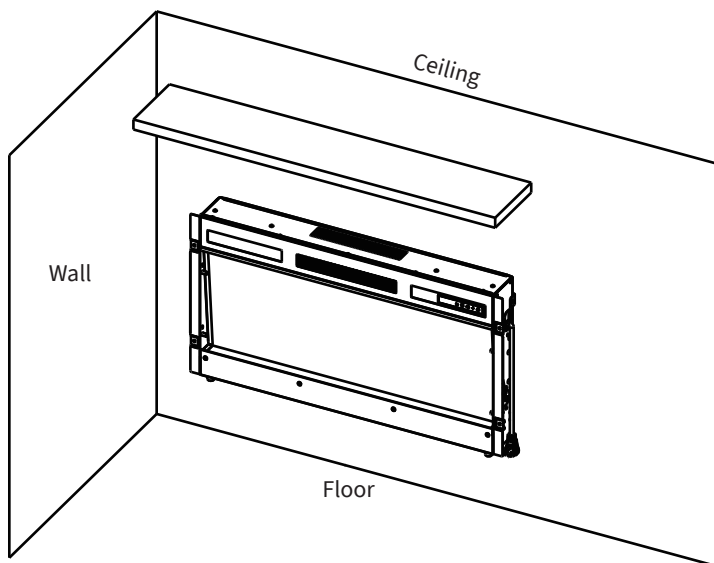

6. Decorate the fireplace with crystals.

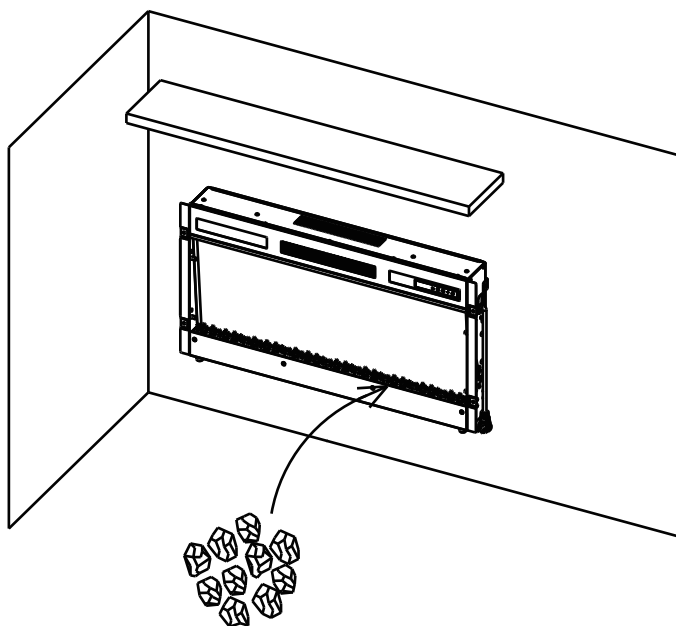


7. Install the appliance on the wall mounted bracket, and make sure to leave minimum clearance around the appliance as shown in the below picture.

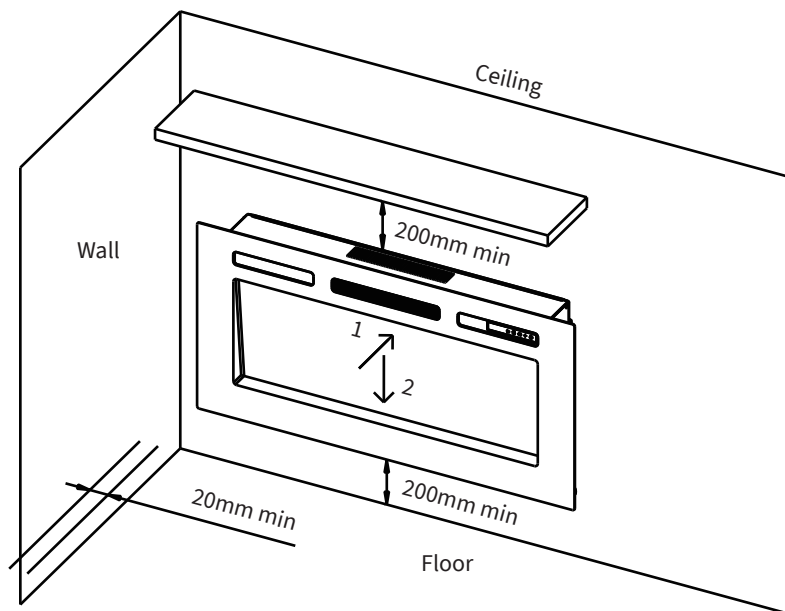


Inserted Installation


1. Remove the four screws pointed by arrows as shown in the below pictures.

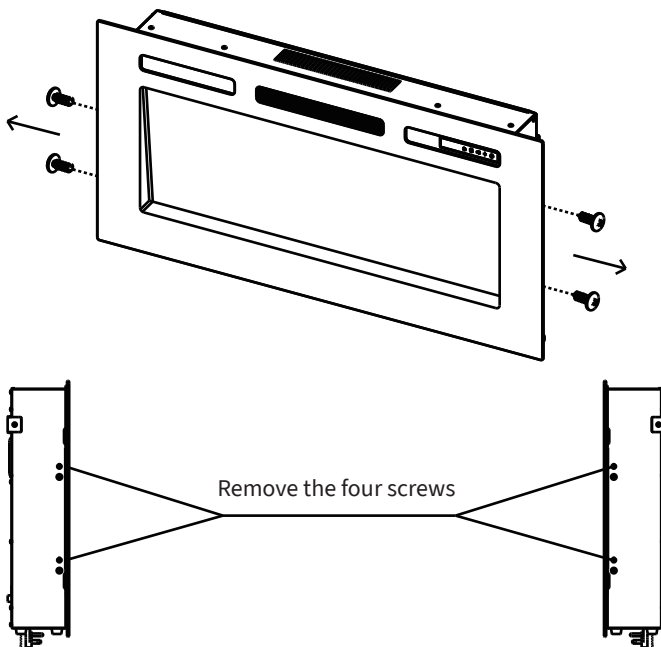


2. Remove the glass panel carefully.

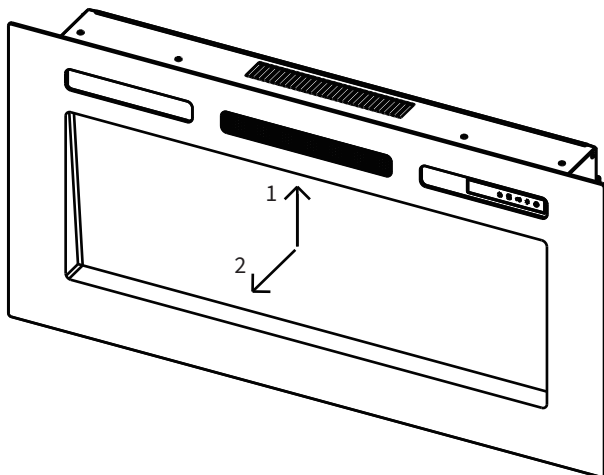


3. Push the fireplace into the frame.

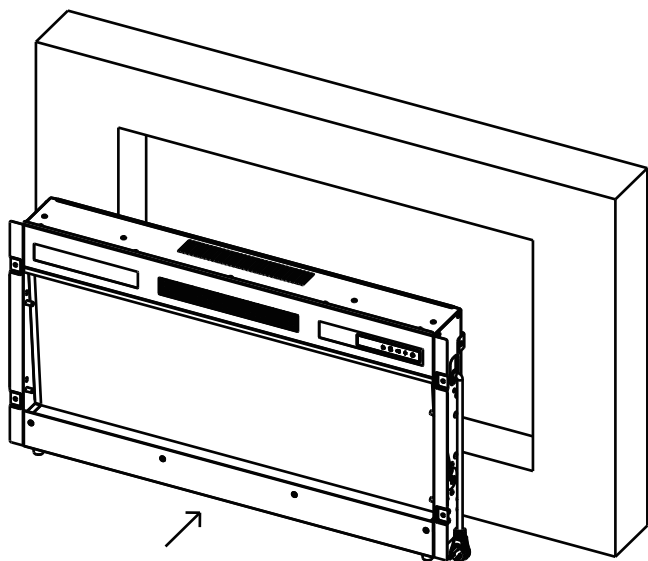


4. Secure the fireplace with four ST4*12 screws.

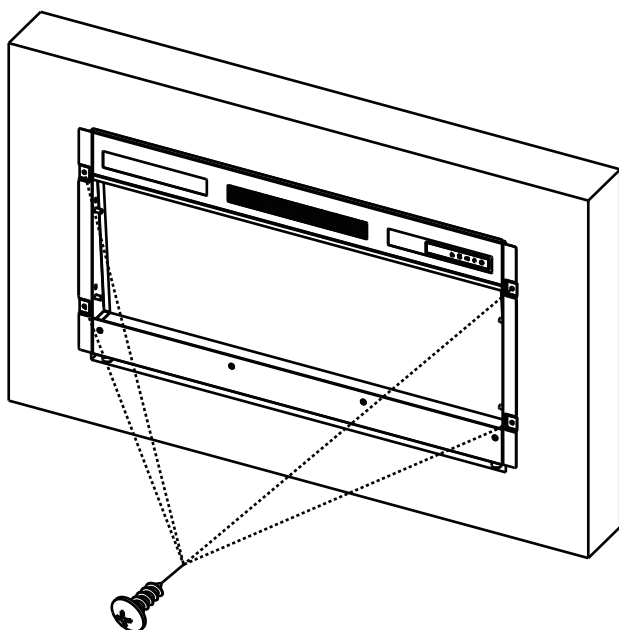

5. Decorate the fireplace with crystals.

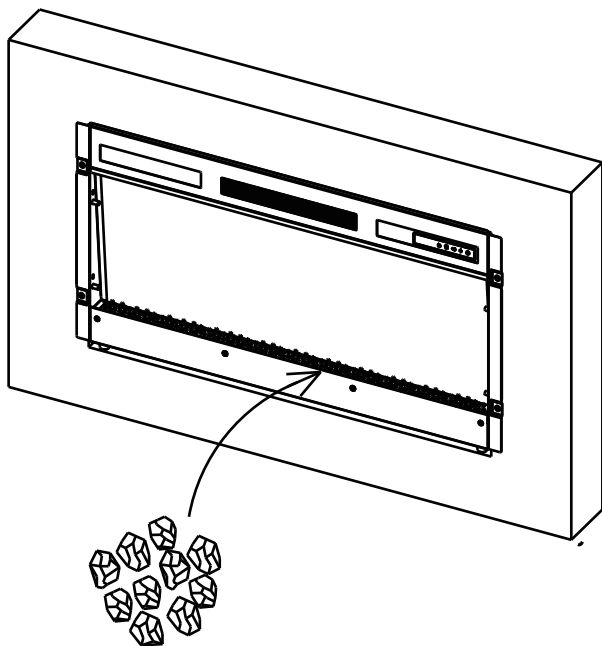

6. Install the glass panel.

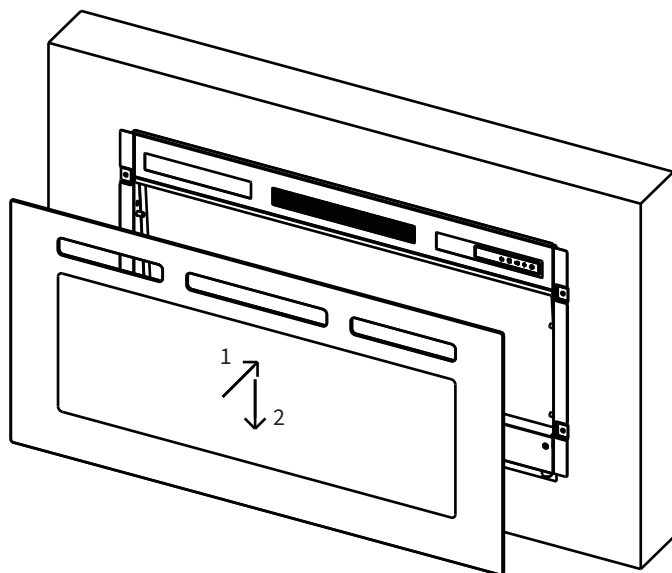

OPERATION



WARNING

Do not operate the appliance if it is damaged or has mal-functioned. If you suspect the appliance is damaged or has malfunctioned, call a qualified service engineer to inspect the appliance, and replace any part of the electrical system if necessary, before re-use.




WARNING

To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 meter from the air outlet.

- **MAKE SURE** the plug fits tight in the outlet. Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
- **DO NOT** disconnect the power at the mains supply whilst the appliance is running. Use the functions on the remote to turn the fire off and ensure the mains switch has been moved to the off position before disconnecting.
- The appliance can be operated conveniently manually or via the remote control handset.

Manual Control Panel

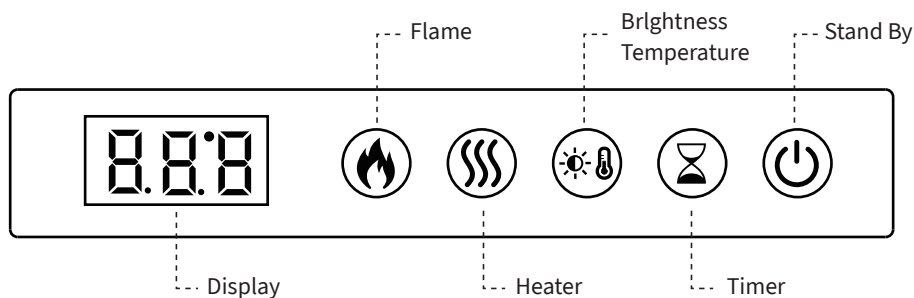

Stand By: Press to turn on or turn off the flame effects and heater.

Flame: Press to cycle through 13 flame effects.

Heater: Press once enters the heater setting query state press in 10seconds, cycles through Heat Low/High/OFF. Heater can be turned on without flame.

Brlghtness / Temperature: Press Flame button, then press this button in 10 seconds cycles through 5 brightness settings press Heater button. Then press this button in 10 seconds cycles through 16-28°C, 58°C, and total 14 settings. (62-82°F, 99°F total 14 settings.)

Press Heater button. Then long press this button in 10 seconds, change between °C and °F. Press backlight button on remote, and then press this button in 10seconds cycles through 5 brightness settings.

Timer: Press once enters the timer setting query state. Press in 10seconds, cycles through OH.0.5H, 1H...9H,total 11 settings when the timing ends the product will enter the standby state.

NOTE:

The manual button controls basic functions, not a full range of controls. Use the remote handset to carry out all functions.


In order to prevent the product becoming too hot, there is a 10s delay when turning on the heater and a 10s delay when turning off the heater fan.

Remote Control

NOTE:

Ensure that the handset batteries are new and inserted correctly.

Aim the remote control at the remote receiver which is behind the right side of the flame screen.

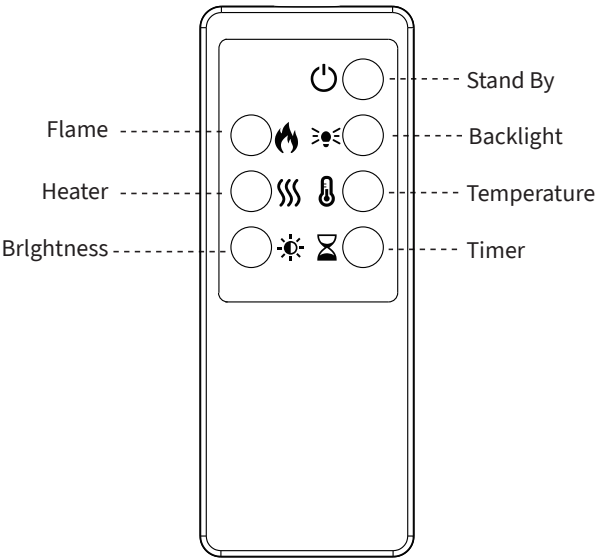

NOTE:

The **BACKLIGHT** button is only applicable to fireplaces with backlight strip, otherwise, this button is ineffective but will not affect other functions.

Button	Function	Product Display
 Stand By	Press to turn on or turn off the flame effects and heater.	The flame runs. The current flame setting F1;F2...F12, F0 shows on the display.
 Flame	Repeatedly press to cycle through 13 flame effects.	The flame runs. The current flame setting F1; F2...F12, F0 shows on the display.
 Backlight	Cycles through 13 colors and flame lighting off.	Digital tube display F.01, F.02, ... F12, F.00.
 Heater	Heat Low/High/OFF Heater can be turned or without flame.	Digital tube display H.LO, H.HI and H.oF.
 Temperature	Press to select the temperature you want the room to reach from the range of 16-28°C(60-84°F)and then 58°C (99°F), which will keep the heater on. Hold the button to switch the unit between °C /°F.	The display of the appliance shows the temperature. 16-28 in Celsius degree corresponds to 60-83 in Fahrenheit degree. There will be changes in number while switching between °C/°F.
 Timer	Repeatedly press to cycle through timer options. Select an amount of time for the appliance to operate, and then automatically turn off. Choose between 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 9 hours.	Choose between 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 9 hours.

 Brlghtness	Press flame button, then press this button in 10 seconds cycles through 5 brightness settings. Press Backlight button, then press this button in seconds. Cycles through 5 brightness settings.	Digital tube display Fb.5, Fb.4...Fb.1. Digital tube display bb.5,...bb.4...bb.1.
---	---	---

Important Safety Information for Remote Control

1. TWO AAA alkaline batteries are required for the remote control;
2. Use the thumb press and push the bar figure on the back cover down simultaneously, then takeout the cover and remove the battery or insert the battery, after this put the cover back to its body back;
3. This AAA alkaline battery (non-recharged) is not to be recharged.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the appliance and safely disposed of.
7. If the remote control is to be stored unused for a long period, the batteries should be removed.
8. The supply terminals are not to be short-circuited.

Resetting the Thermal Cut Out

The appliance is fitted with an Electronic safety control (E.S.). This is a safety device which switches off the fire if, for any reason, the appliance overheats, e.g. when covered. If the heater stops operating while the flame effect continues working normally, this indicates that the E.S. control is in operation. The E.S. control can only be re-set after the appliance has cooled down, and the appliance has been reset. Resetting of the E.S. control procedures are as follows:

1. Press button **STAND BY** On fire to turn off the appliance and leave it off for approximately 10-15 minutes.
2. Remove any obstruction to the fan heater outlet or fan blades etc. Make sure that the power supply is disconnected with the plug socket outlet while doing this.
3. Turn on the appliance and the E.s. control will be reset.
4. Ensure that the appliance is functioning correctly. If the E.S. control operates again. The appliance should be checked by a competent electrician.

CLEANING



WARNING

ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Fail to do so could result in electric shock, fire, or personal injury.



WARNING

NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- Clean the exterior of the fireplace with a slightly damp cloth or duster.

MAINTENANCE



Risk of electric shock! DO NOT OPEN! NO user serviceable parts inside!

Electrical and Moving Parts

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Replacement Parts

- Use only replacement parts supplied by the manufacturer. Use of any other parts, or modifying the fireplace in any way, will void all warranties.

Limited Warranty

This warrants to the original purchaser that this product is free from defects in material and workmanship as of the date of purchase and that it will, under normal use and proper care, remain so for one year from the date of purchase. Missing or initially defective parts will be replaced free of charge during the period of this limited warranty. If parts are unavailable, comparable replacement or refund will be given. **The original dated sales receipt is required for all warranty claims.** This warranty does not cover damage which has occurred during transport from the point of purchase to the consumer's home. This warranty does not cover glass, light bulbs, batteries, transportation, labor, or other issues not associated with the manufacture of the product.

This product is for residential use only. Any and all commercial use of this product voids all warranties, and frees the manufacturer from all liability.

Read and understand all assembly and operating instructions, and all safety information and warnings, before use. The following will void this warranty: Damage caused from tampering with, modifying, or altering the fireplace insert in any manner; Damage due to incorrect assembly, improper care, misuse, or abuse; Damage from being used with the wrong power source; water damage; Damage caused from this insert being used outdoors; Damage caused from this insert being used for excessive periods of time; Damage caused by the insert being used in a commercial application; Damage from use as a primary heat source; other misuse or abuse not specifically listed herein.

This product is not intended to be used as a primary heat source. It is for supplemental heating purposes only

SCHEMATIC DIAGRAM

