


Ceiling

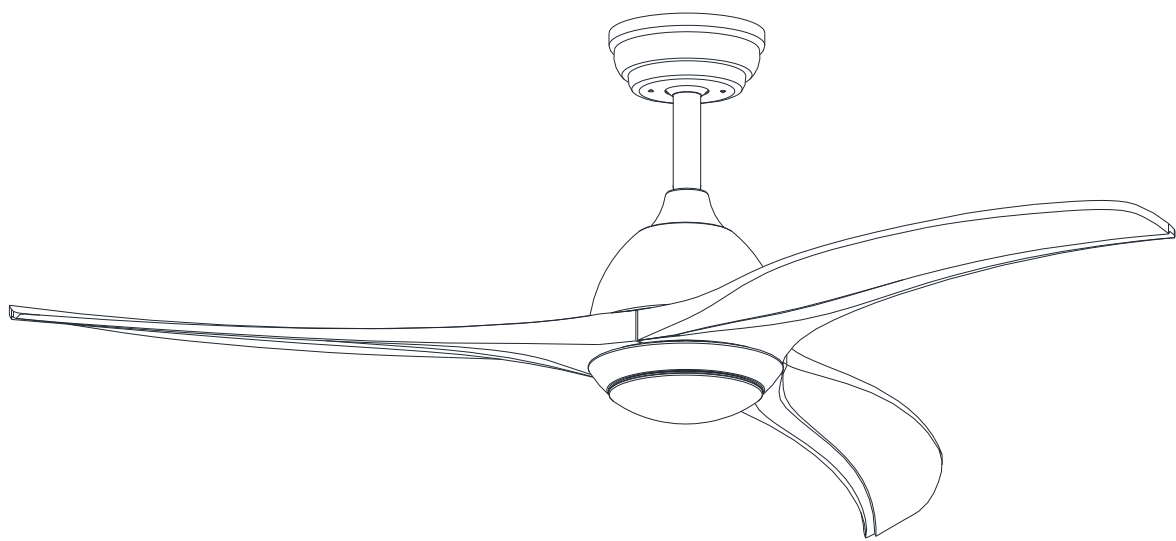

DEROCATE CEILING FAN
User Manual

Pre-Installation

Fan-Motor assembly × 1PCS

Light kit fitter assembly × 1PCS

LED × 1PCS

Blade X 3PCS

lamp shade × 1PCS

Slide - on mounting bracket (inside canopy) X 1PCS

4.92 inch Ball/downrod assembly X 1PCS

Canopy X 1PCS

Coupling cover X 1PCS

9.84 inch Ball/downrod assembly X 1PCS

Parts Kit

AA

Mounting screws × 4

BB

Expansion bolts × 2

CC

Plastic wire nut (not to scale) × 3

DD

Blade attachment screw × 7


EE

iron Washers × 7

NOTE	Hardware not shown to actual size.
------	------------------------------------

Installation of the hanging bracket

CONCRETE CEILING

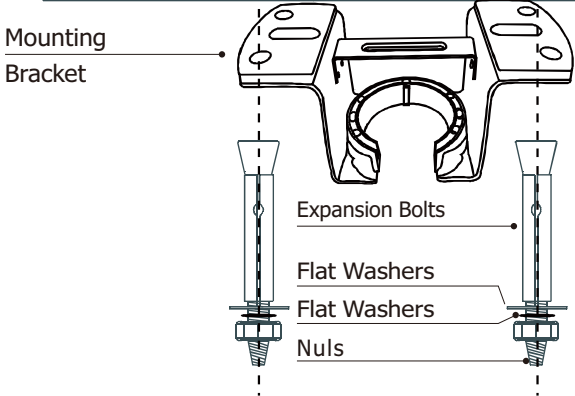


For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.
1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers , Spring Washers and Nuts .

IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

WOODEN CEILING

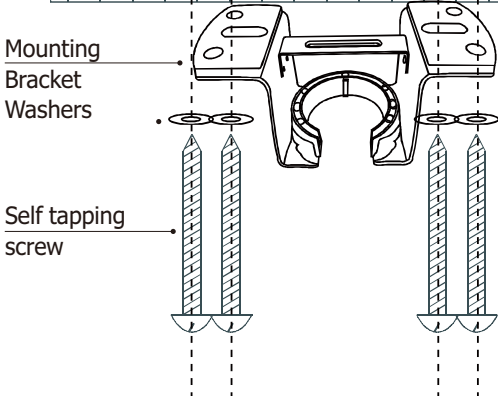


For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING


SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.
1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
2) Remove the Mounting Bracket , drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4Self Tapping Screws &Washers

Install downrod assembly

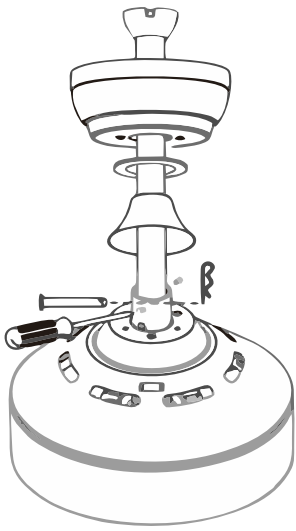


- ☐ Carefully feed the motor wires up though the downrod
- ☐ Align the holes and replace hanger pin and locking pin.
- ☐ Tighten the two color setscrews.
- ☐ Slip coupling cover,canopy coverand canopy onto the downrod.

Hang the fan

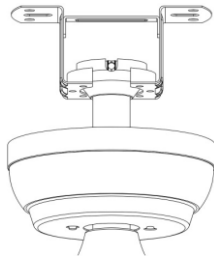


- ☐ Lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket.Rotate the fan motor assembly until the check groove drops into the registration slot and seats firmly.The downrod should not rotate if the is done correctly

Install canopy

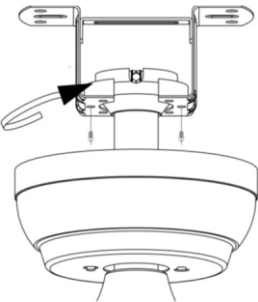


- ☐ Ensure the loosened screws is inserted into the key holes on the mounting bracket.
- ☐ Carefully raise the canopy up to the mounting bracket.Rotate the canopy clockwise.
- ☐ Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened
- ☐ Place the canopy cover (if applicable)and rotate the canopy cover clockwise until it locks into position.


Install downrod assembly

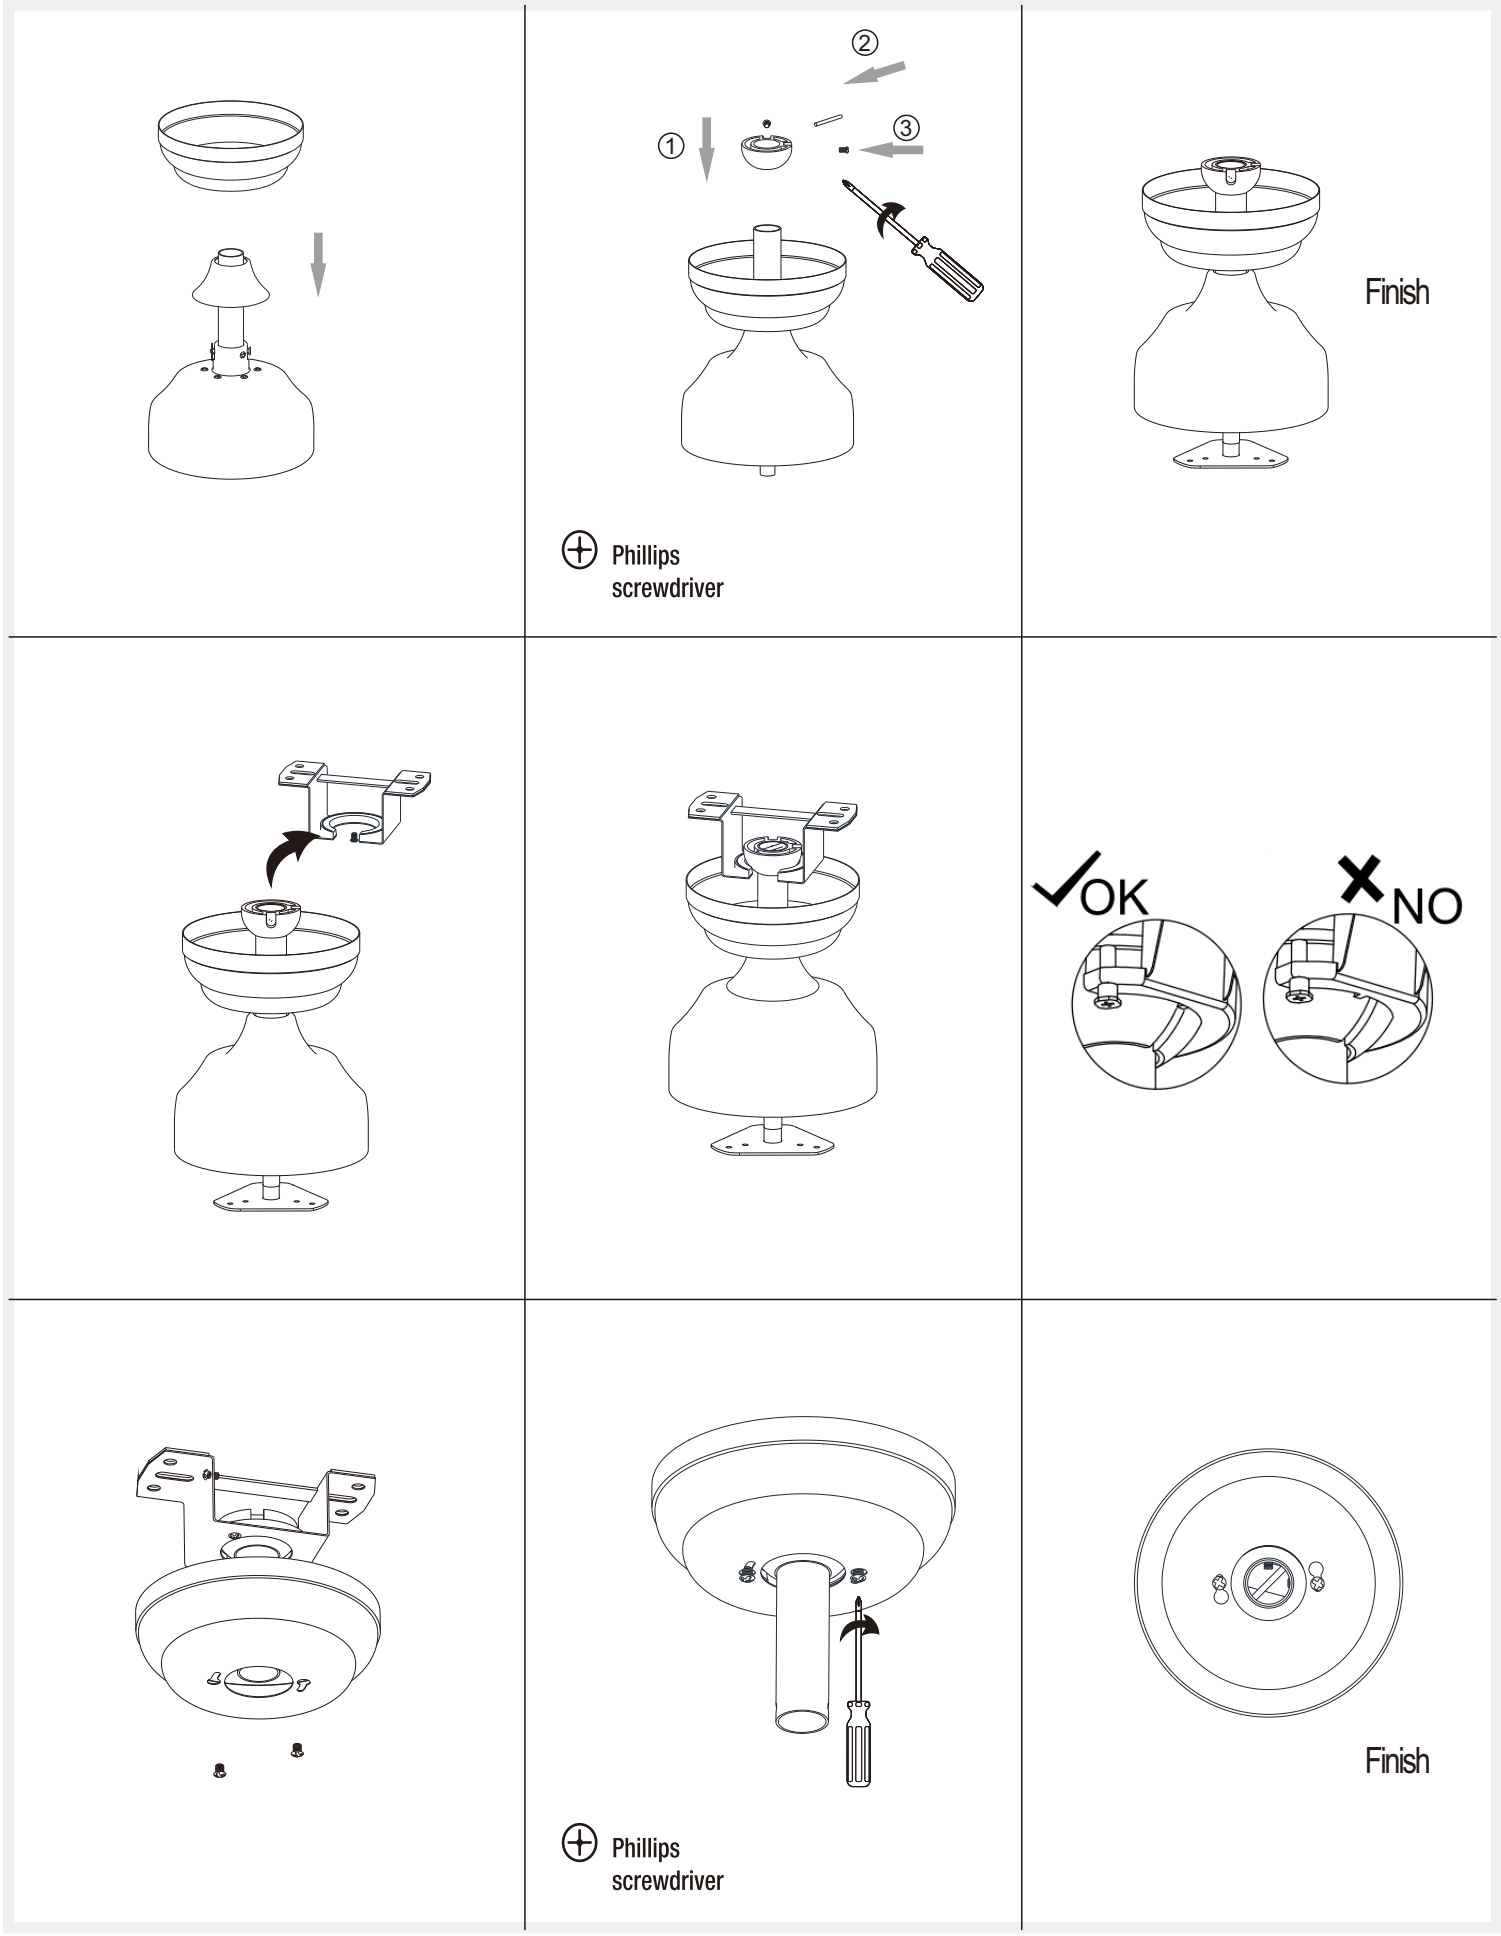

Fastening the blade arms to the motor

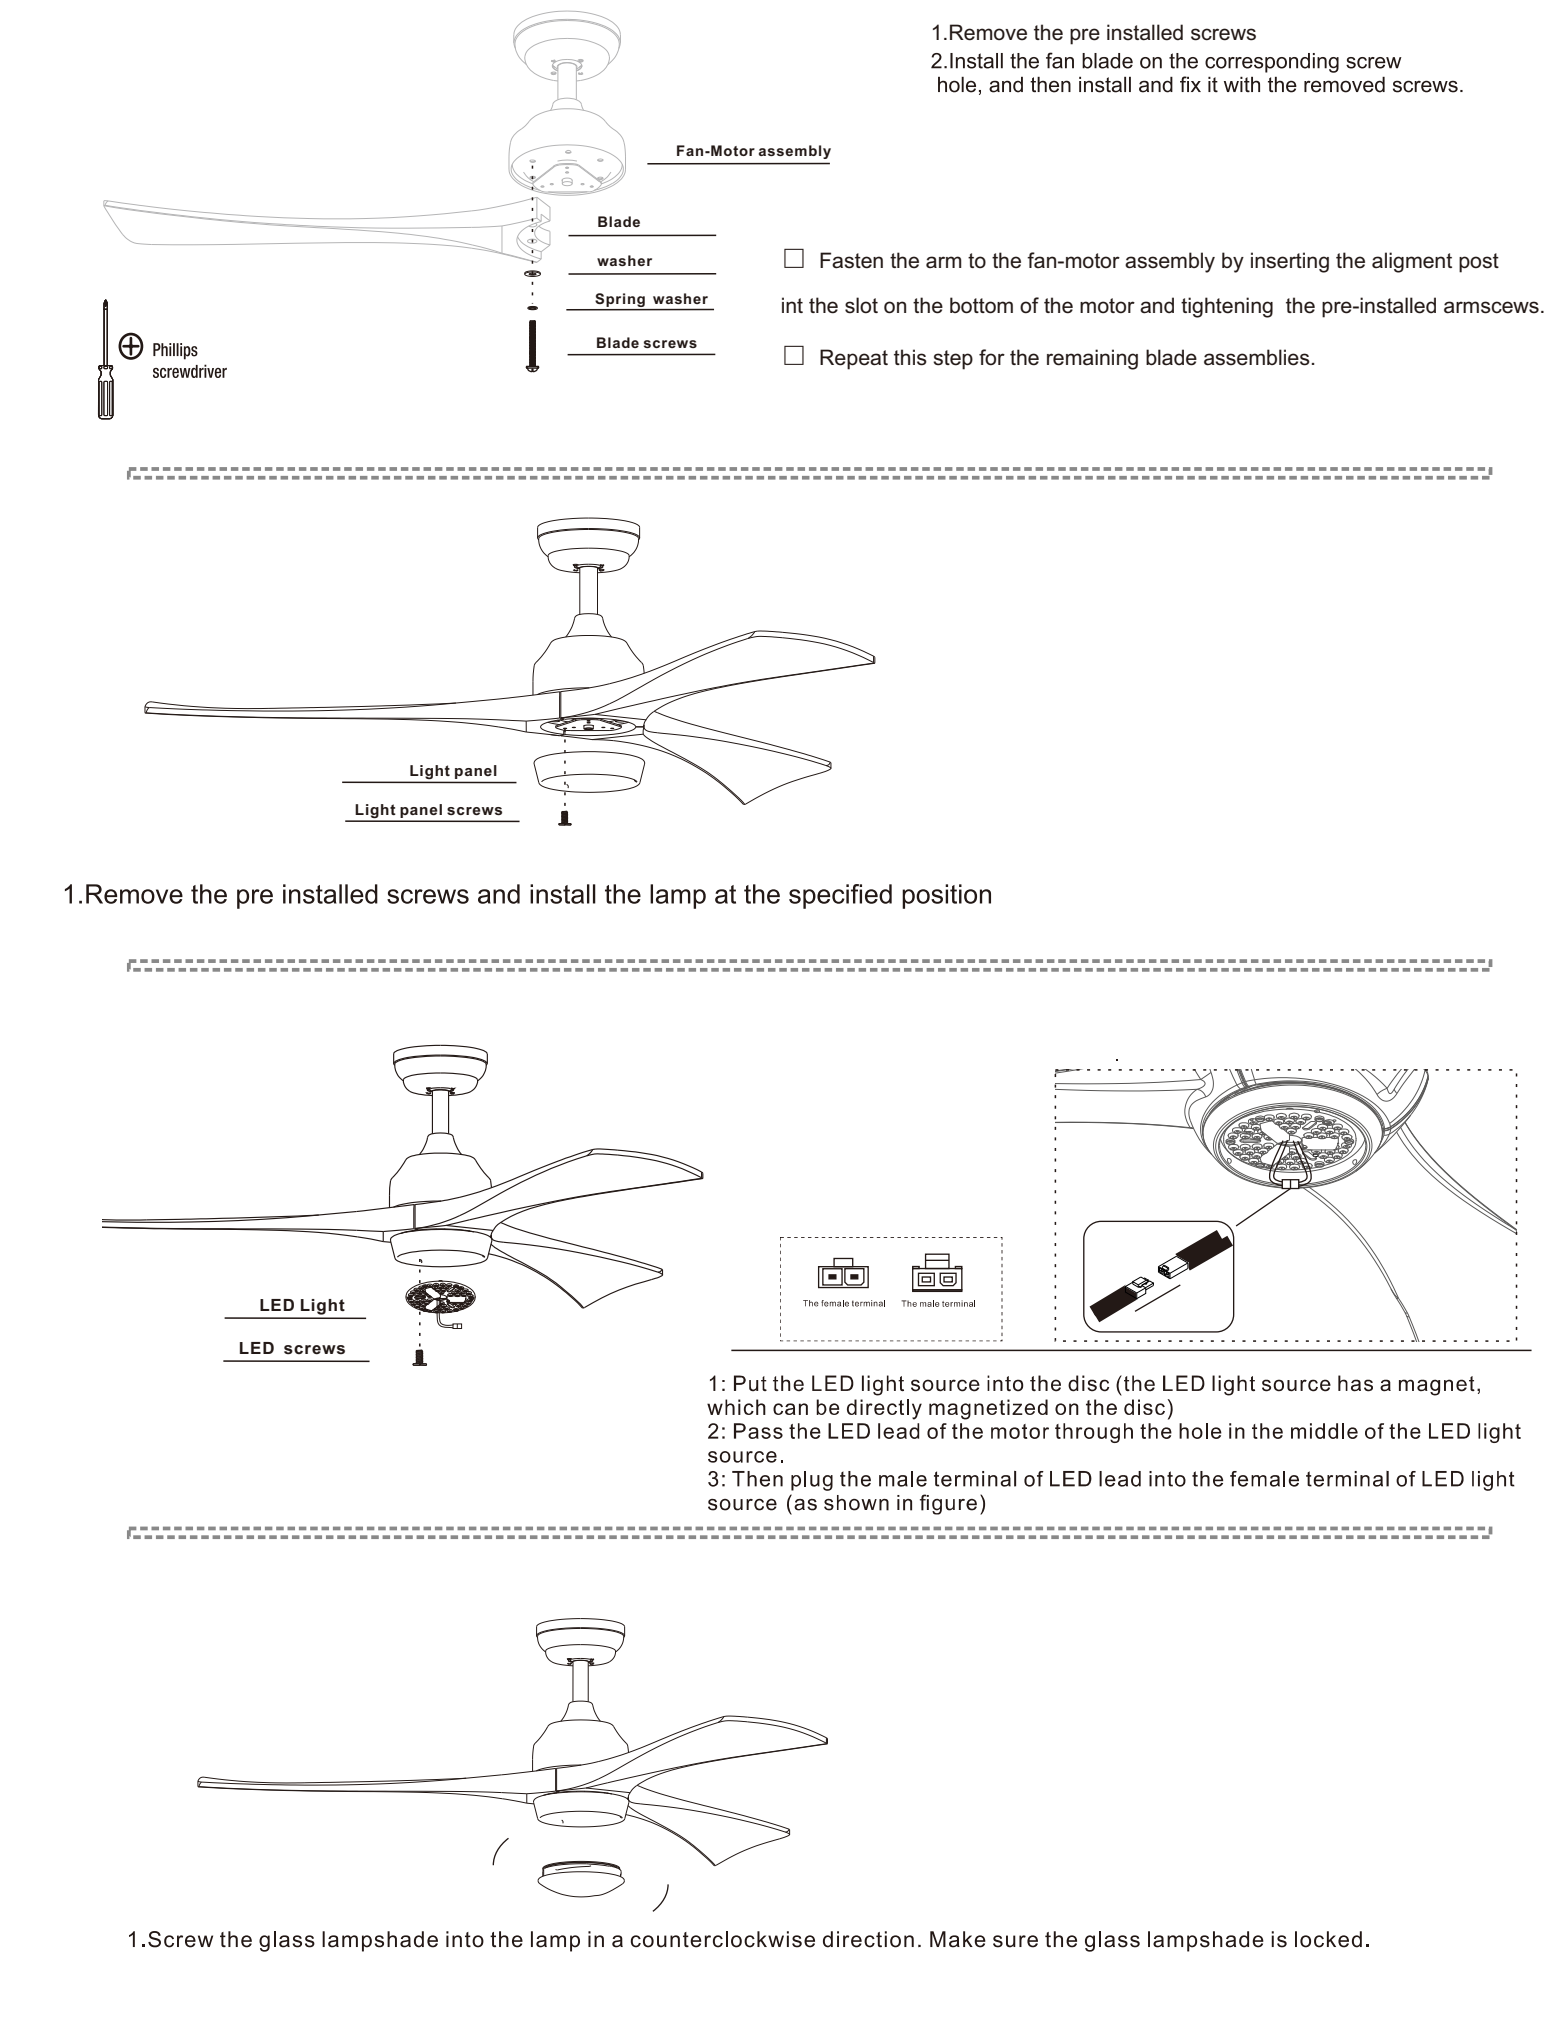

Making the electrical connections

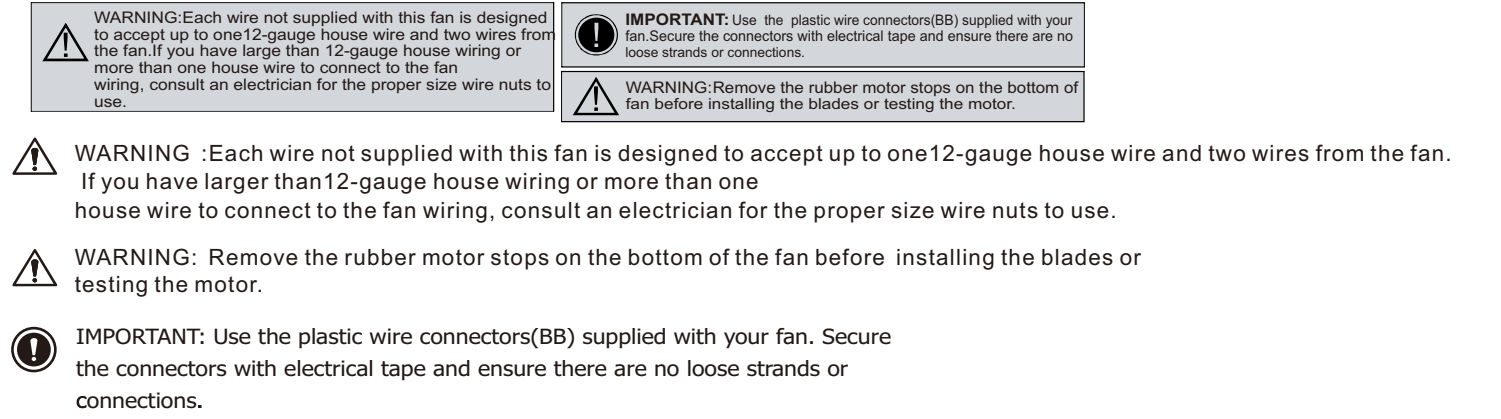


Use of remote control



DC inverter fan light instruction manual

DC frequency conversion receiver wiring diagram

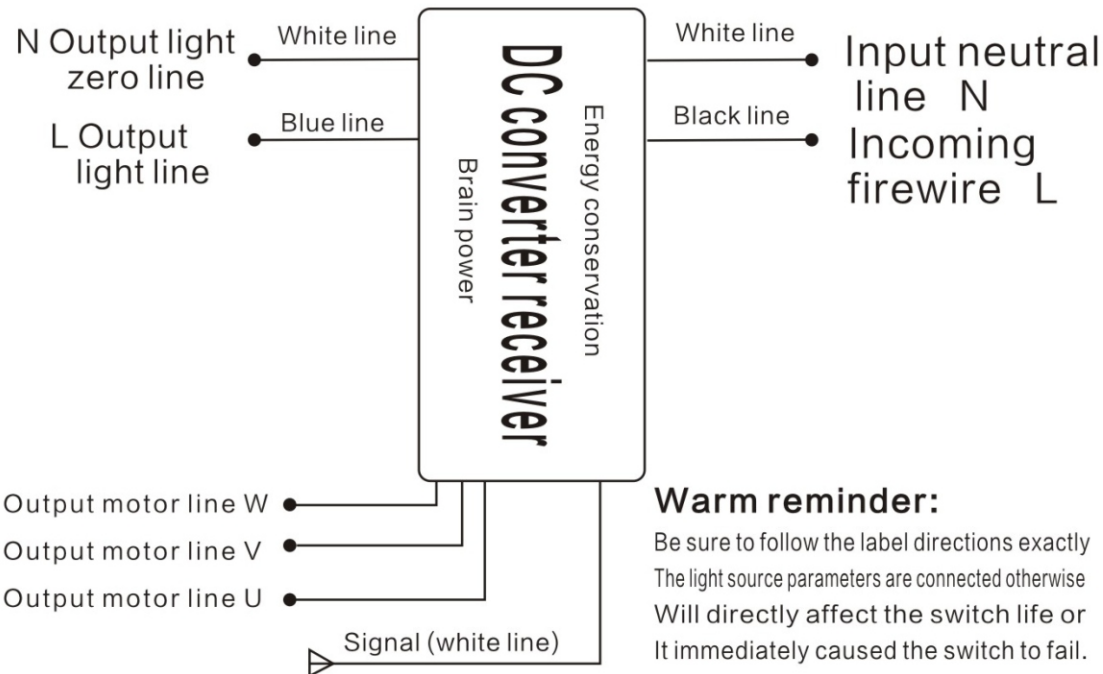

Warm reminder:
Be sure to follow the label directions exactly
The light source parameters are connected otherwise
Will directly affect the switch life or
It immediately caused the switch to fail.

Fan receiver parameter		Operating temperature	40° C(indoor)
Apparent dimension	115x50x25mm	Operating temperature	≥90%
Input voltage	85-265V	Output voltage	DC24 V
Input frequency	50/60Hz	Output power	Max. 200W light source

Attention!! No live operation during installation, wiring should be installed in accordance with national electrical standards