 


ASSEMBLY INSTRUCTIONS:

TV CONSOLE

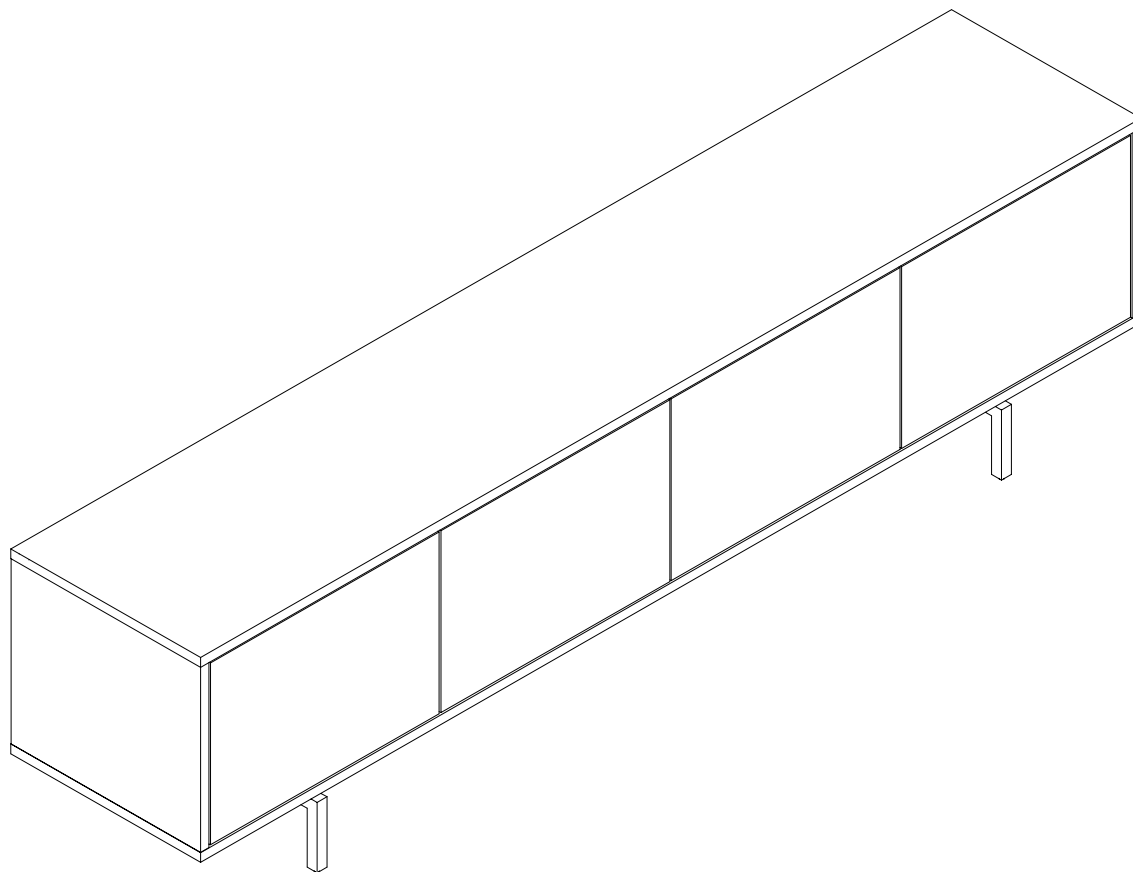

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

 
When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.



TIME

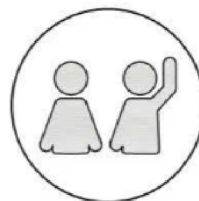

OF PEOPLE

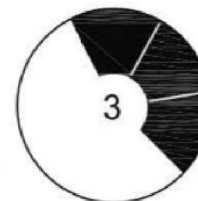 


DIFFICULTY

Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.

ASSEMBLY INSTRUCTIONS:

TV CONSOLE

 
Page 3 of 25

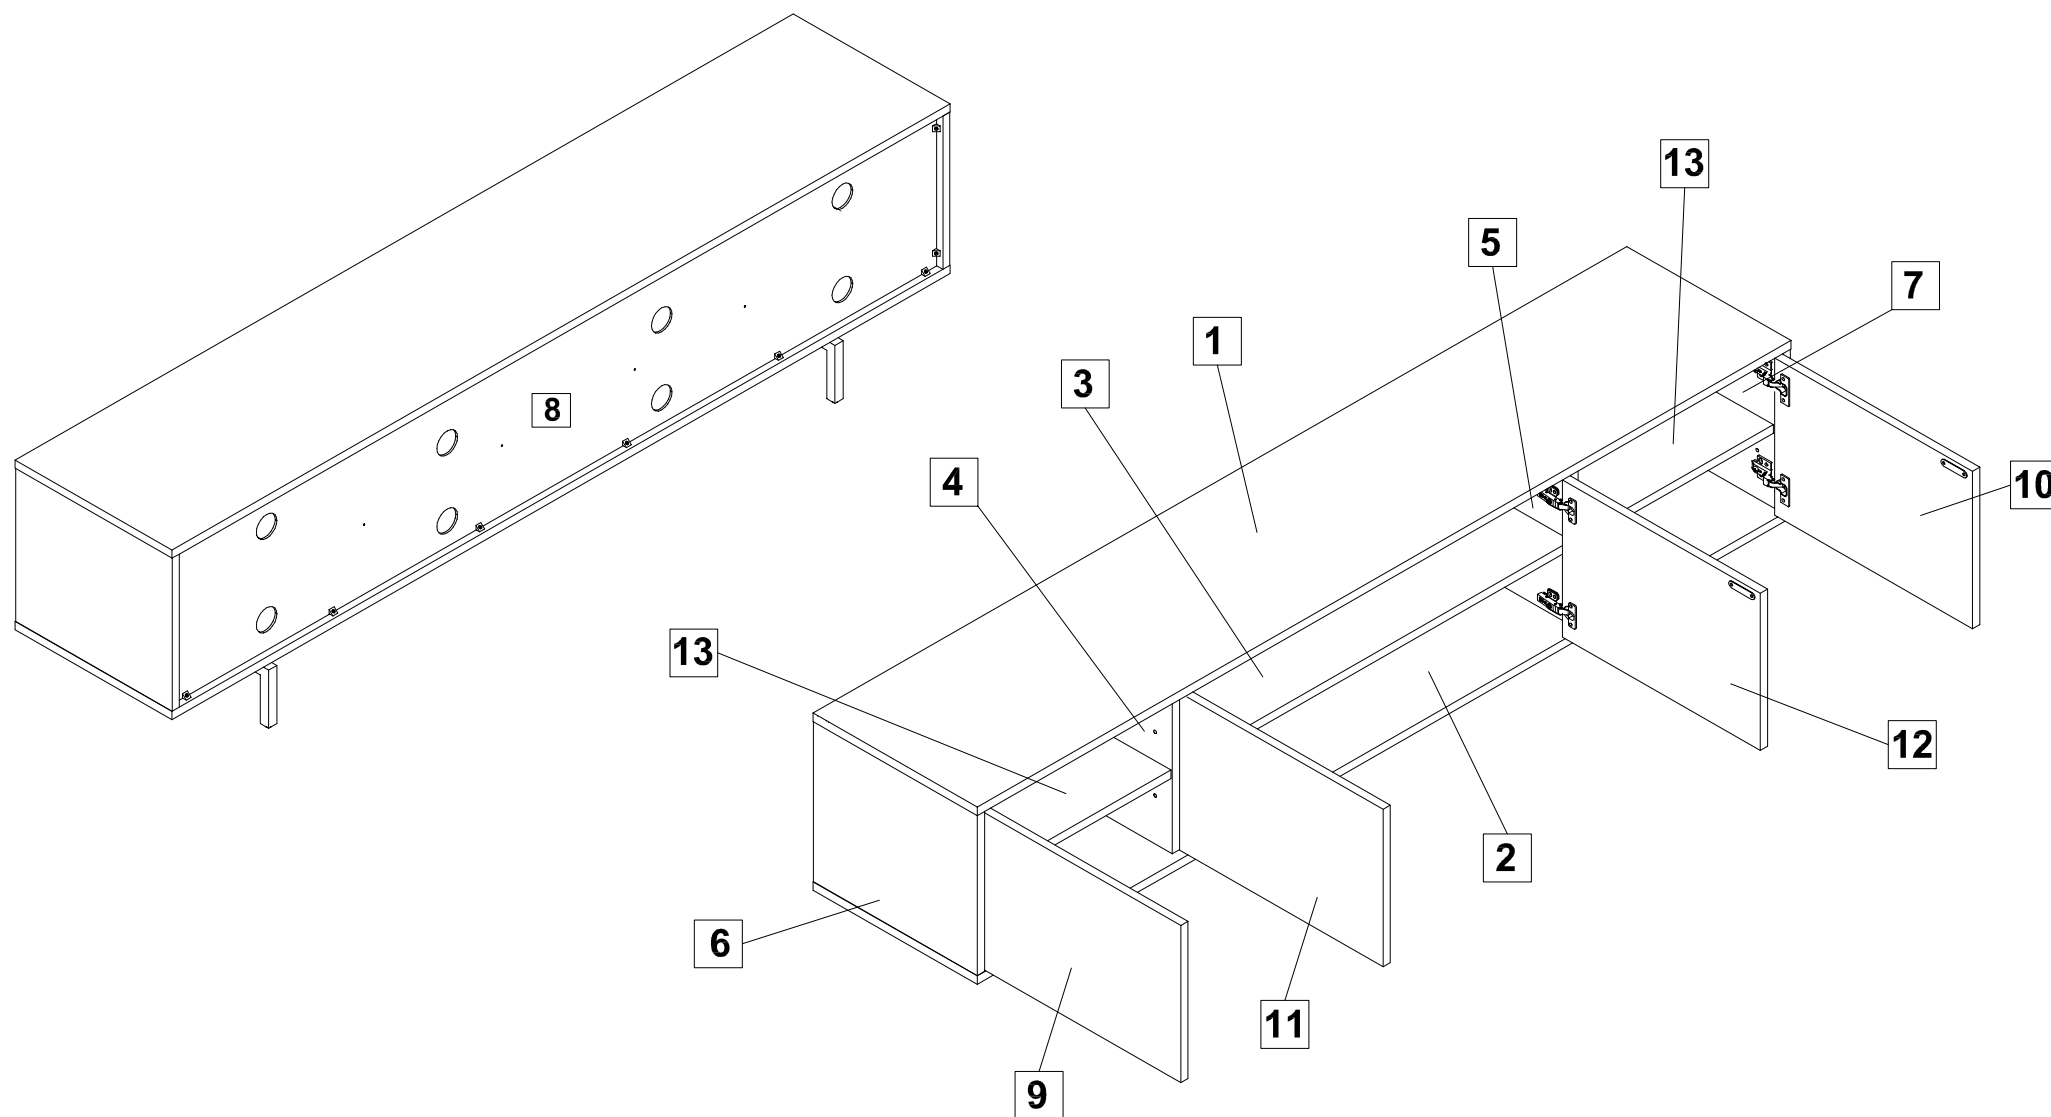


TV CONSOLE

Page 4 of 25

 Parts List

CODE	DESCRIPTION	QTY
1	Top Panel 	1 pc
2	Bottom Panel 	1 pc
3	Fixed Shelf 	1 pc
4	Left Inside Panel 	1 pc
5	Right Inside Panel 	1 pc
6	Left Panel 	1 pc
7	Right Panel 	1 pc
8	Back Panel 	1 pc
9	Left Side Door 	1 pc
10	Right Side Door 	1 pc
11	Left Door 	1 pc
12	Right Door 	1 pc
13	Adjustable Shelf 	2 pcs



 
Hardware List

CODE	DESCRIPTION	QTY
A	Metal Frame 	1 pc
B	Metal Legs 	2 pcs
C	Hex-Head bolts 1/4"x35mm 	10 pcs
D	Allen Wrench 	1 pc
E	Hex-Head bolts 1/4"x60mm 	6 pcs
F	Magnetic catcher 	4 pcs
G	Wood Screws M4x15mm 	64 pcs
H	Wood Screws M3.5x20mm 	16 pcs
I	Plastic Wedges 	12 pcs
J	Shelf Pin 9mm 	8 pcs
K	Middle Door Hinge 	4 pcs
L	Side Door Hinge 	4 pcs
M	Anti-Tipping Kit 	2 pcs


TV CONSOLE

Page 5 of 25

   1

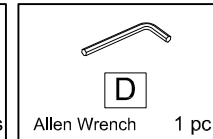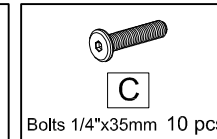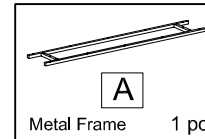




 
**Please do not tighten the bolts until
all the bolts are lined with holes**

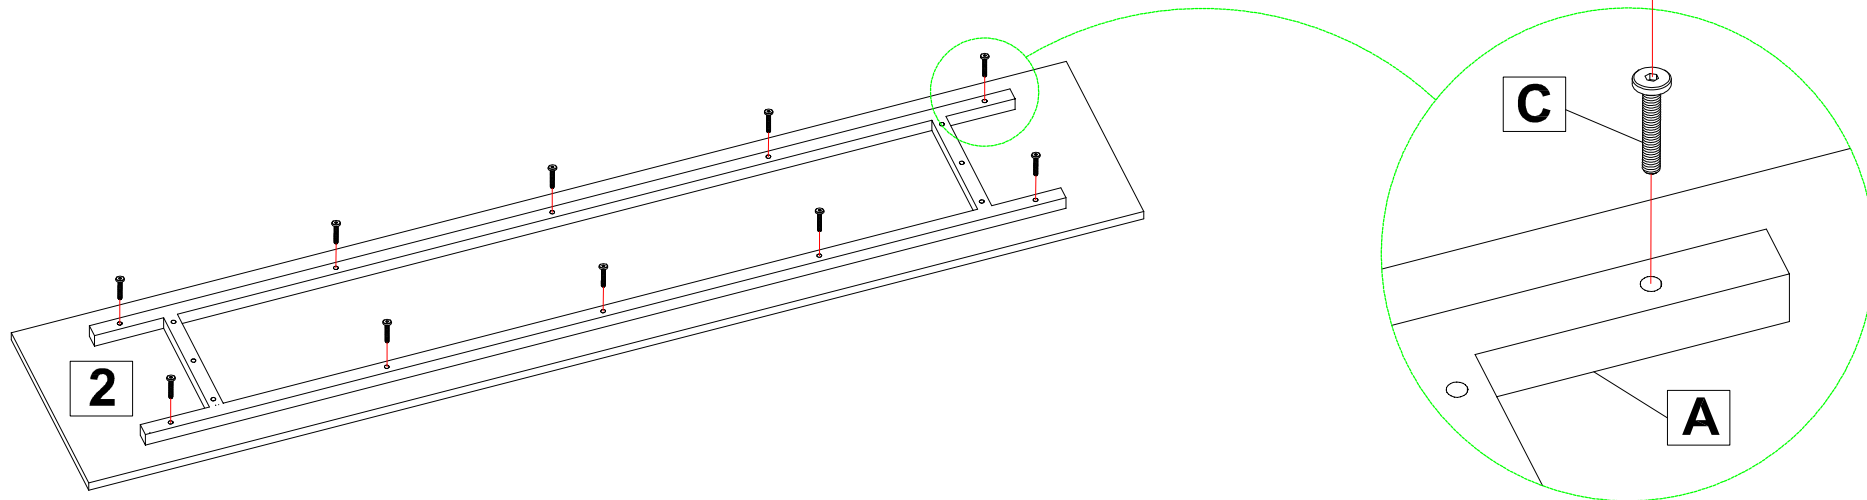

TV CONSOLE

Page 6 of 25

  
 
 
2

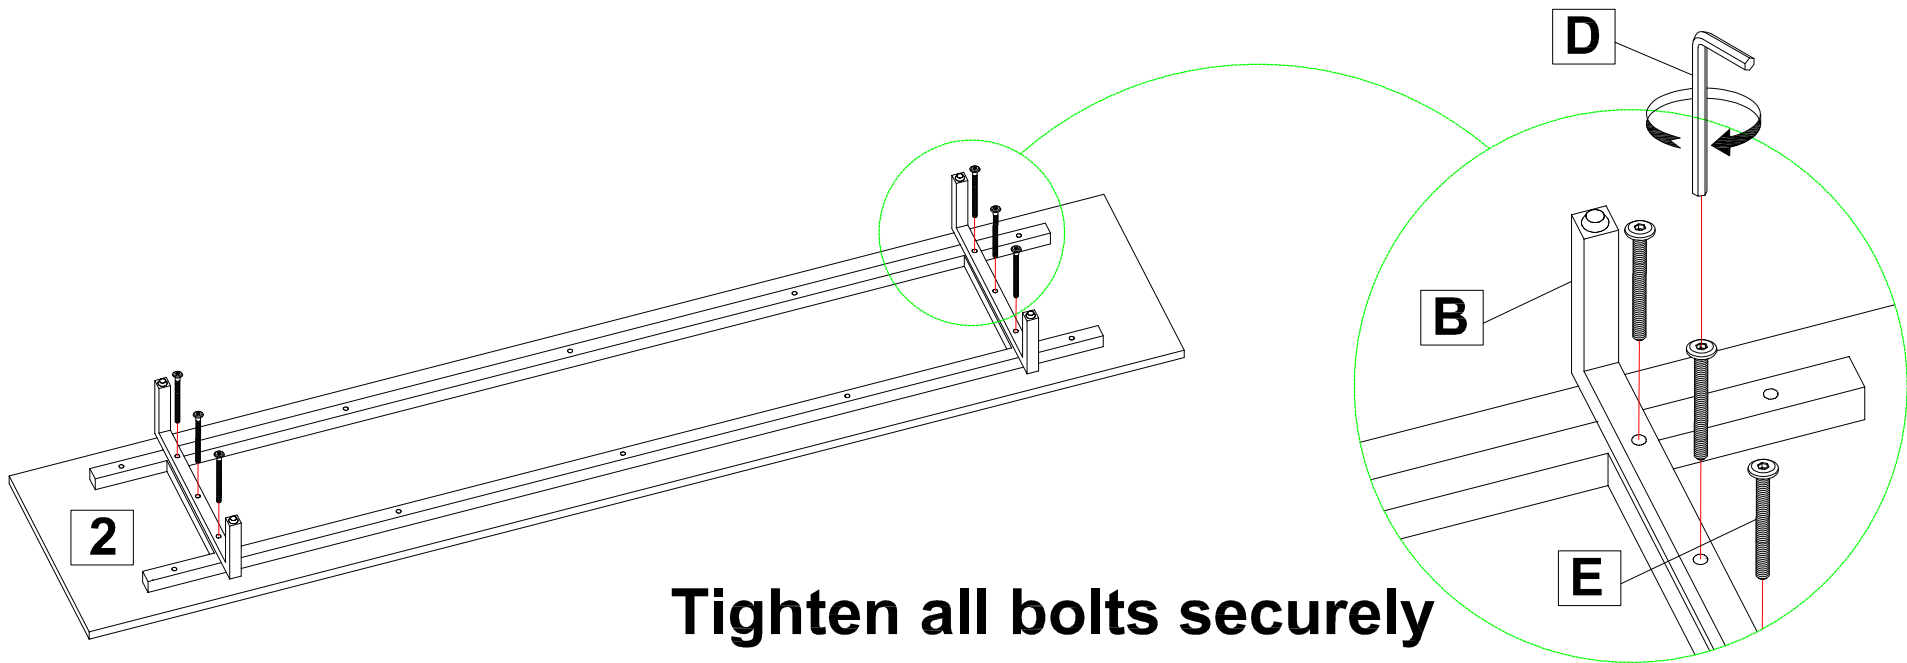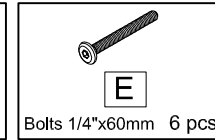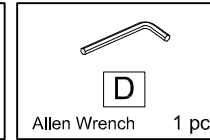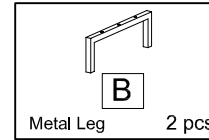

TV CONSOLE


Page 7 of 25

   3

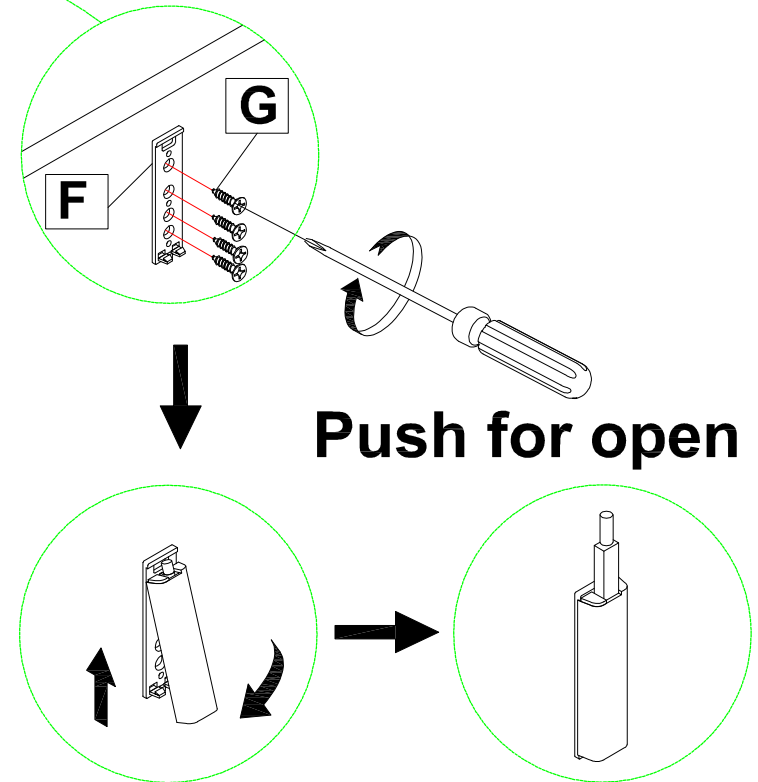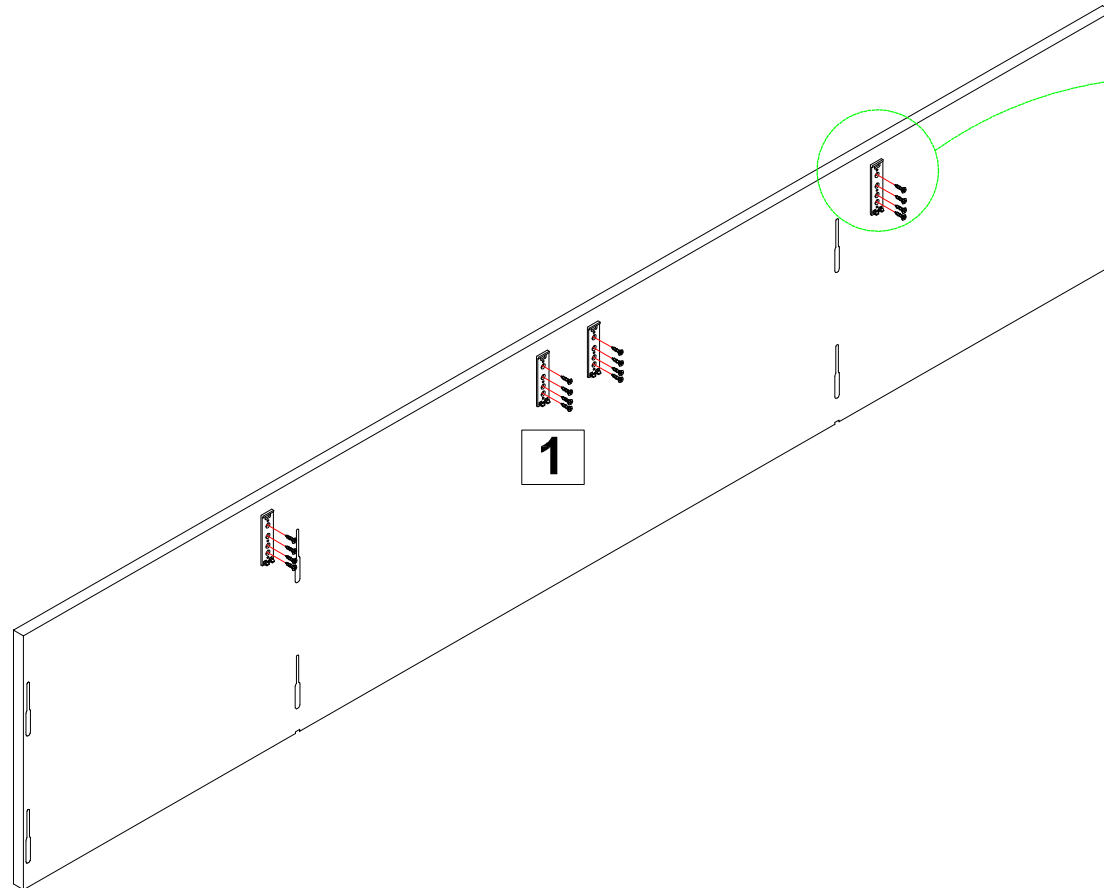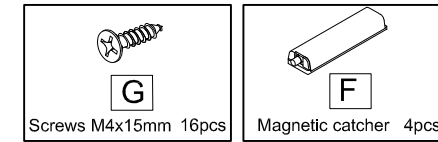


TV CONSOLE

 4

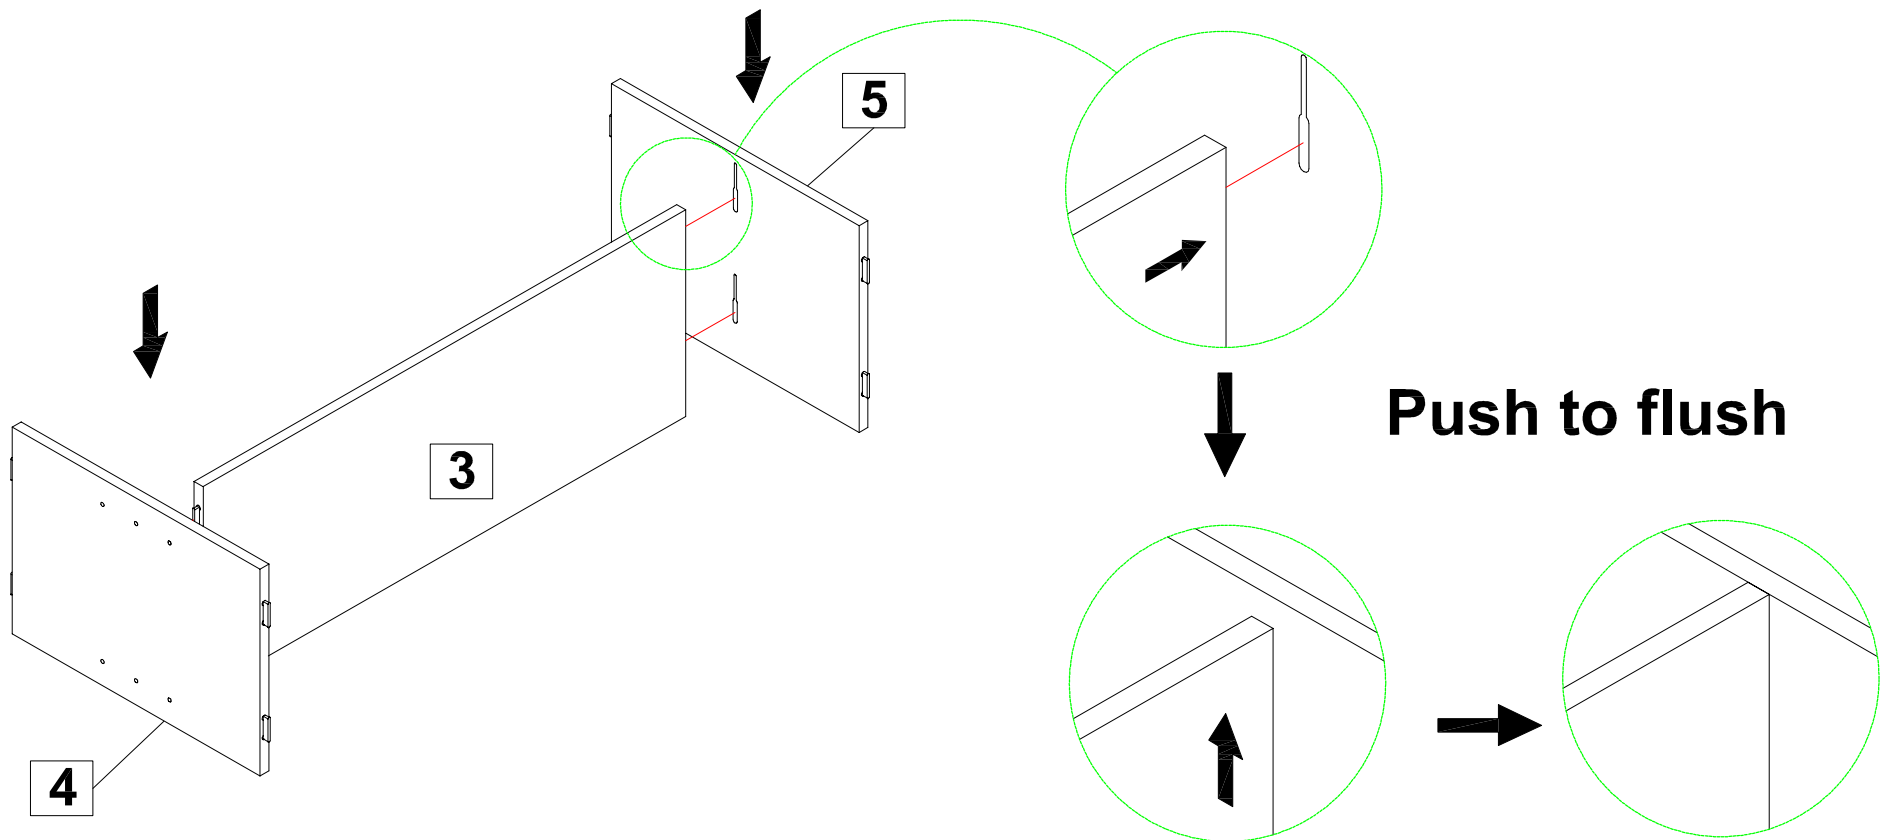


5

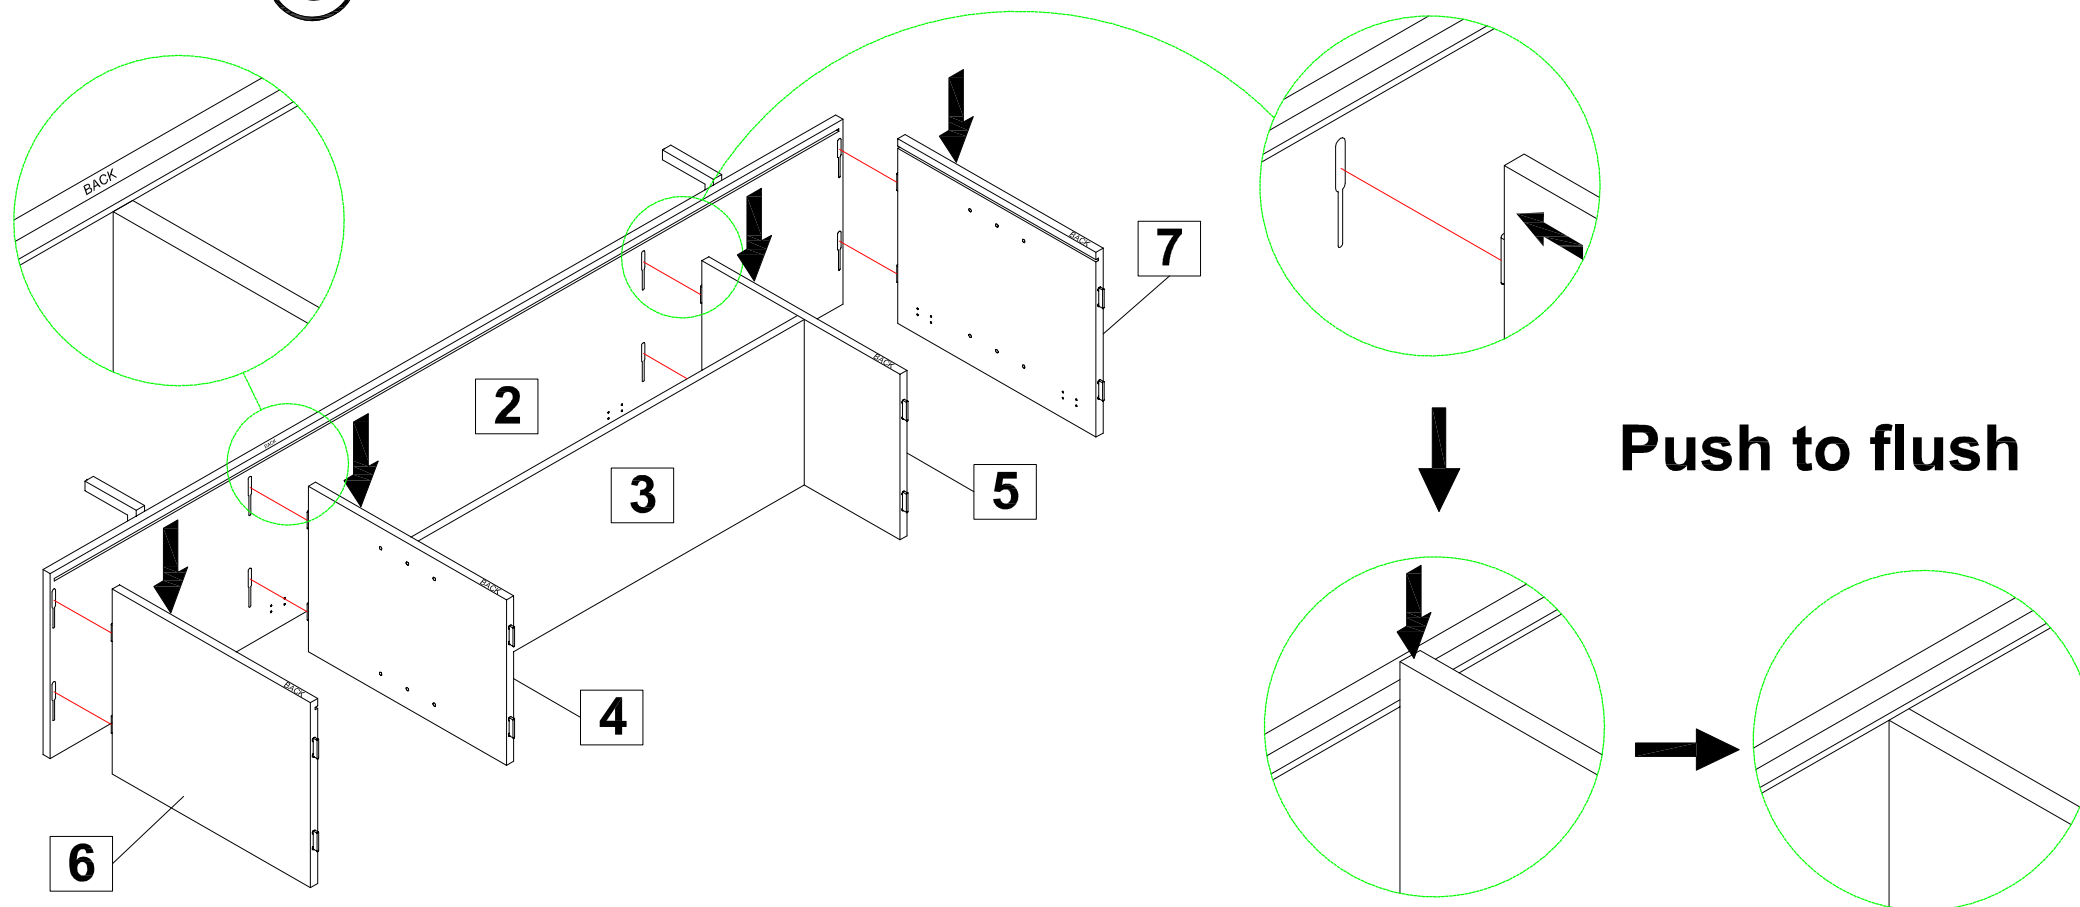 

TV CONSOLE

Page 10 of 25

 
6

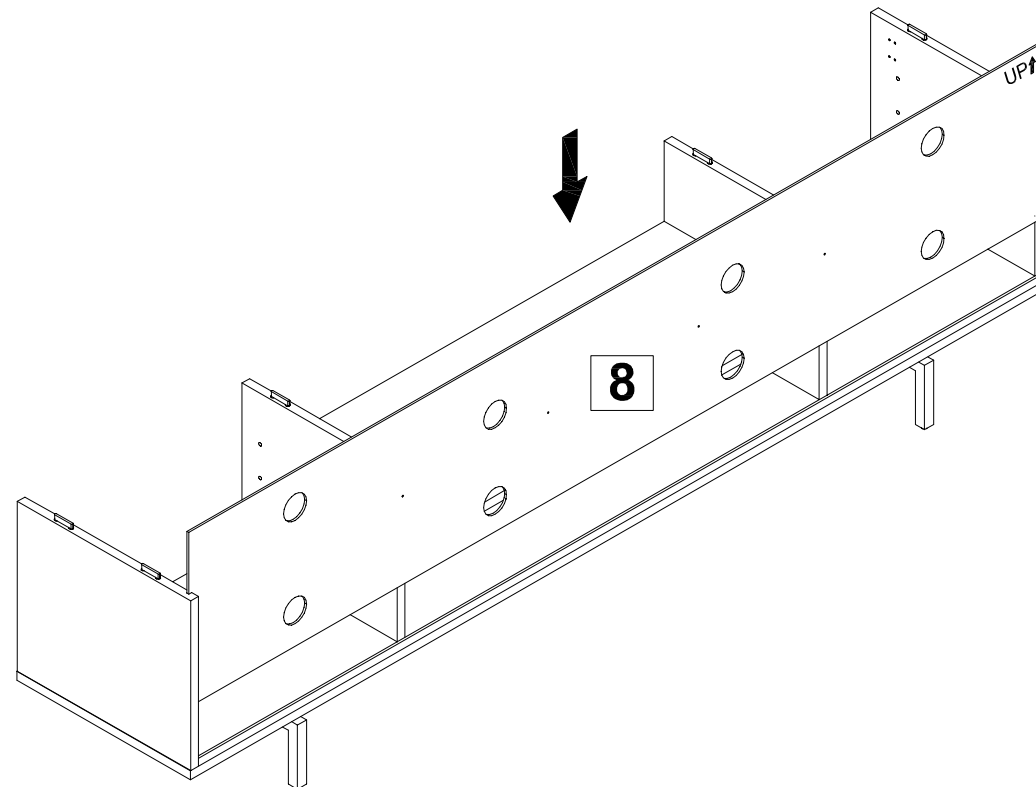

TV CONSOLE

Page 11 of 25



 
7

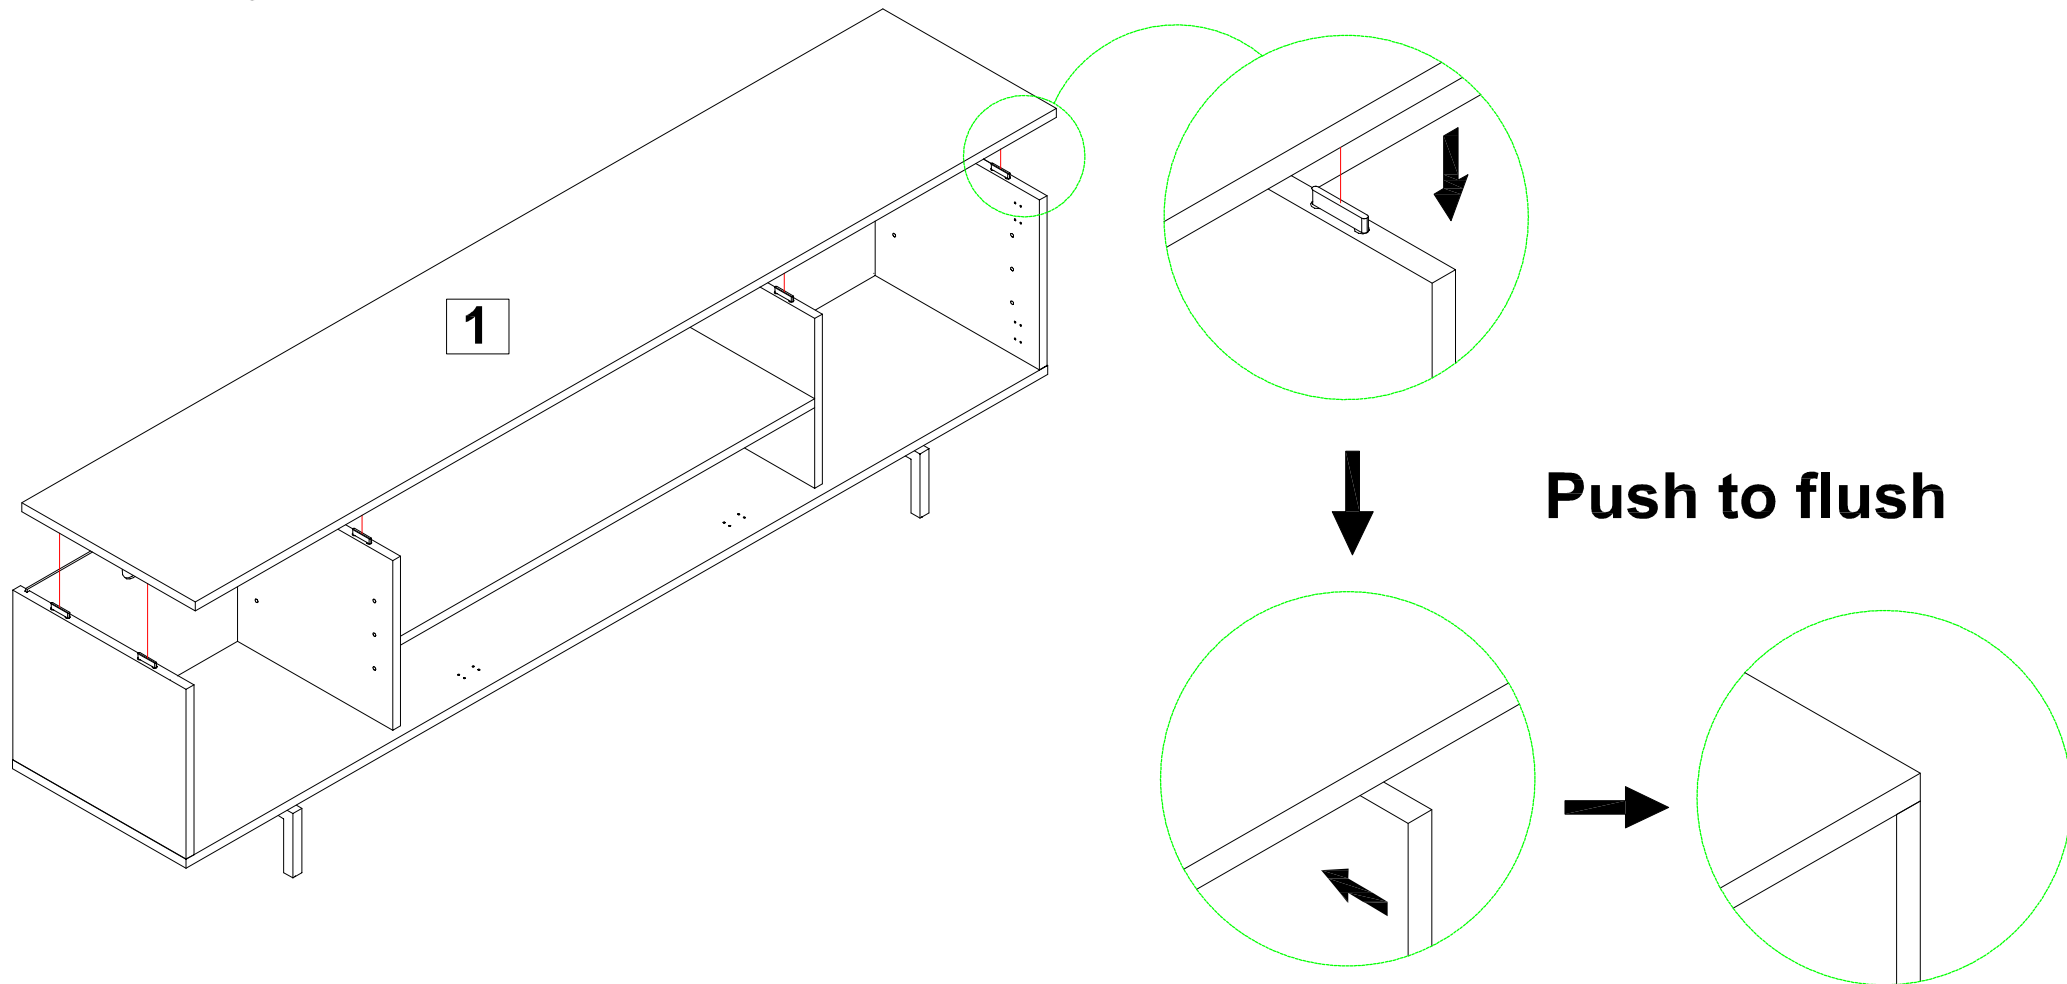

TV CONSOLE

Page 12 of 25

 
 
 
8

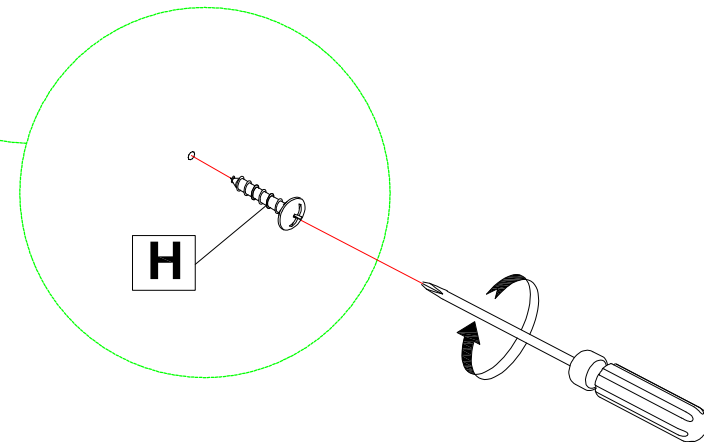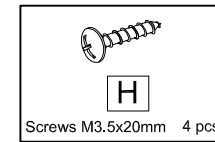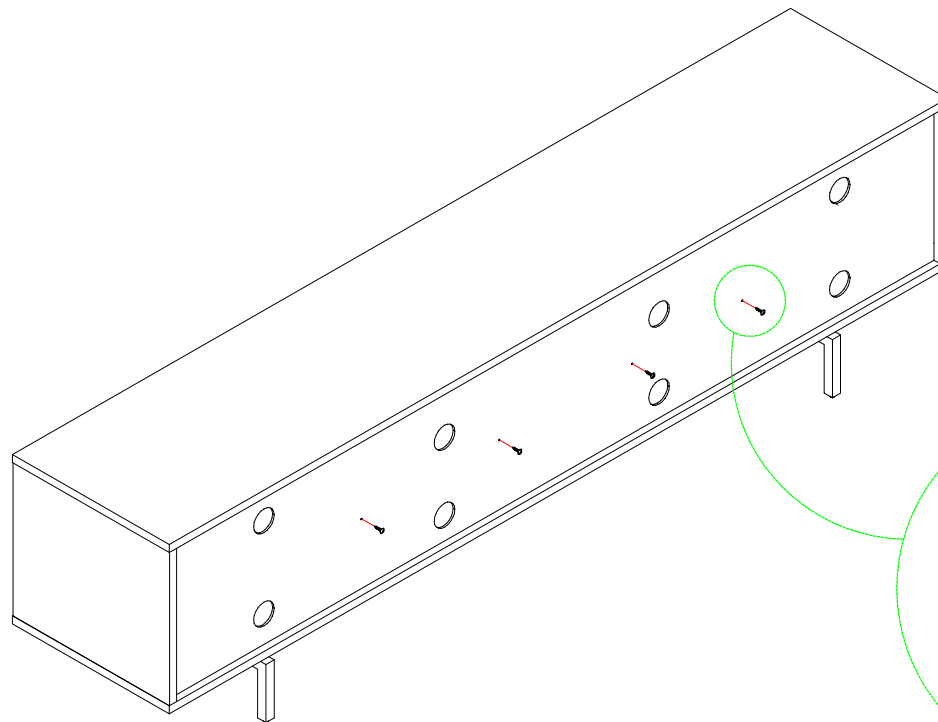





TV CONSOLE

Page 13 of 25

   9

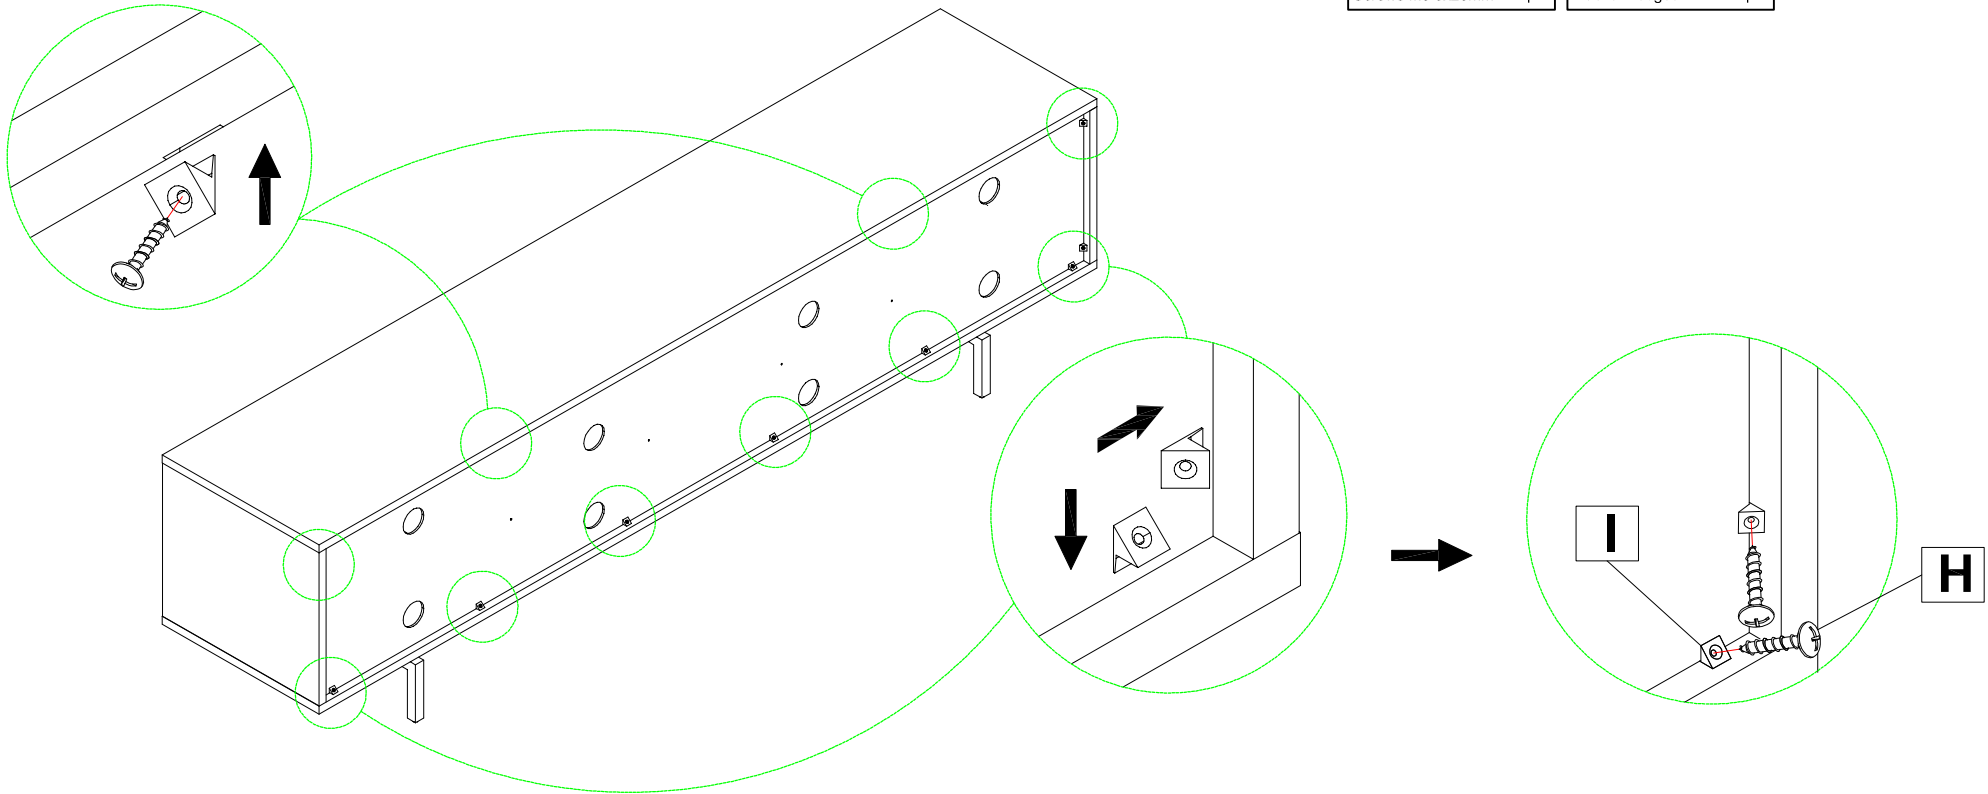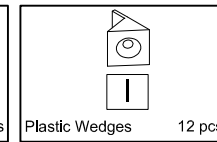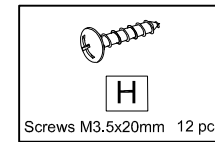





10

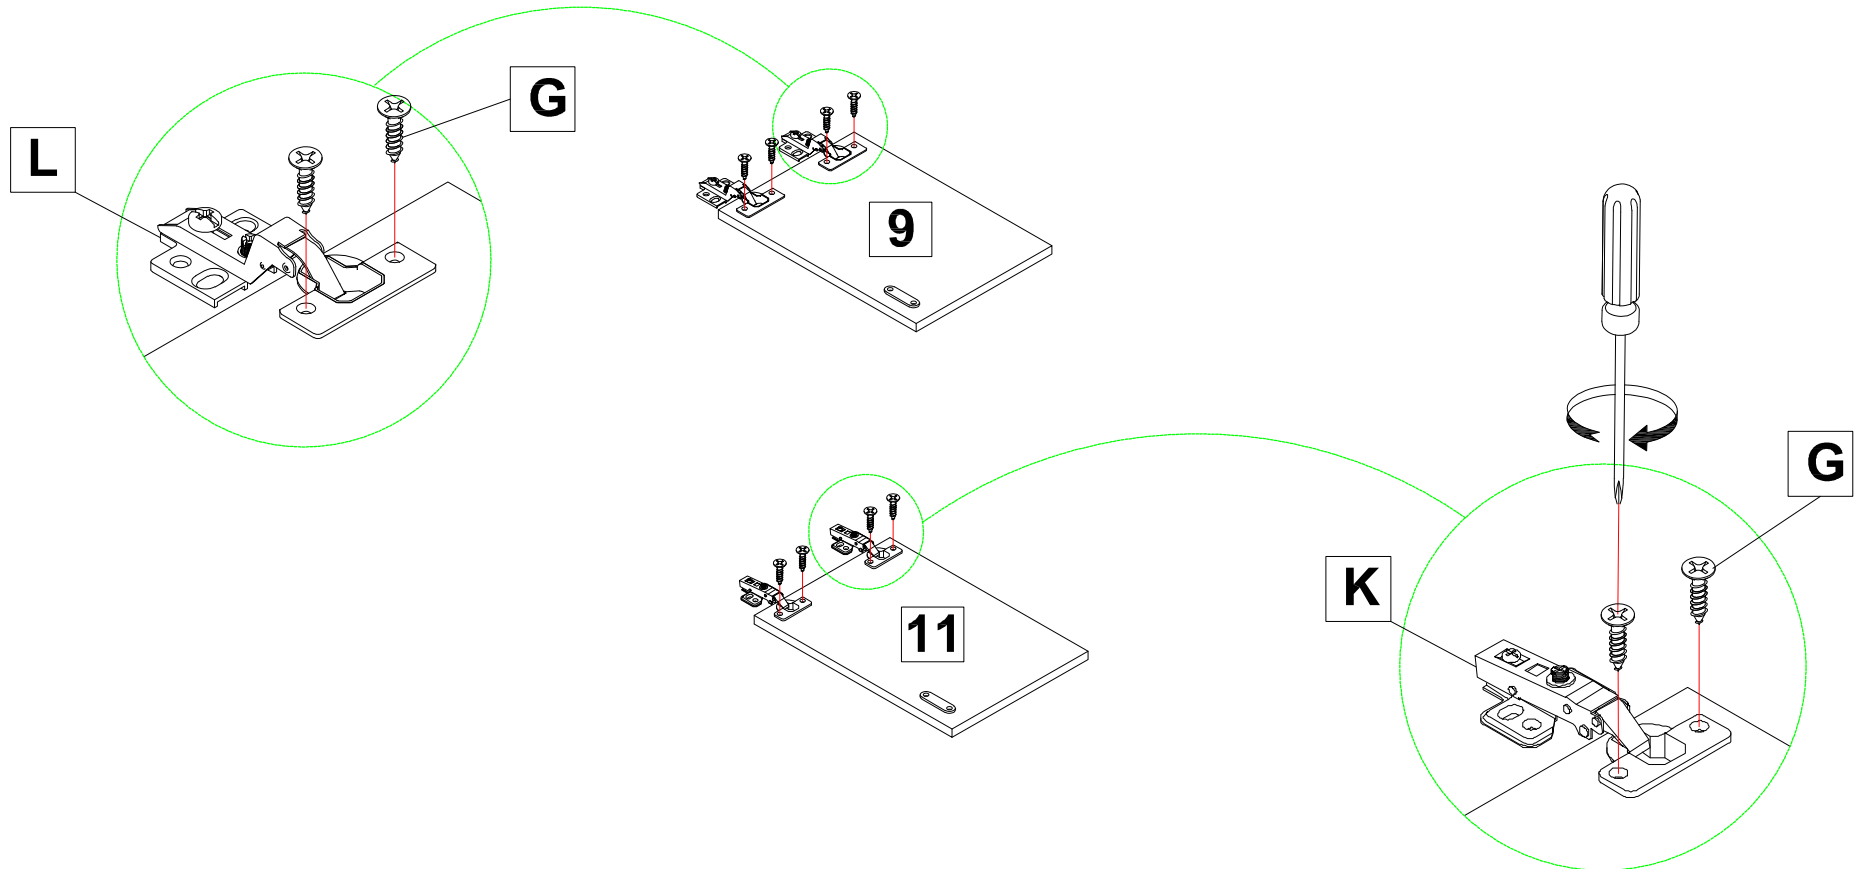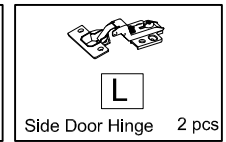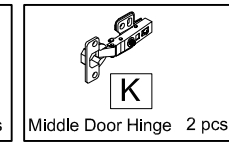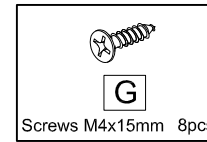    

TV CONSOLE

Page 15 of 25

   
 
11

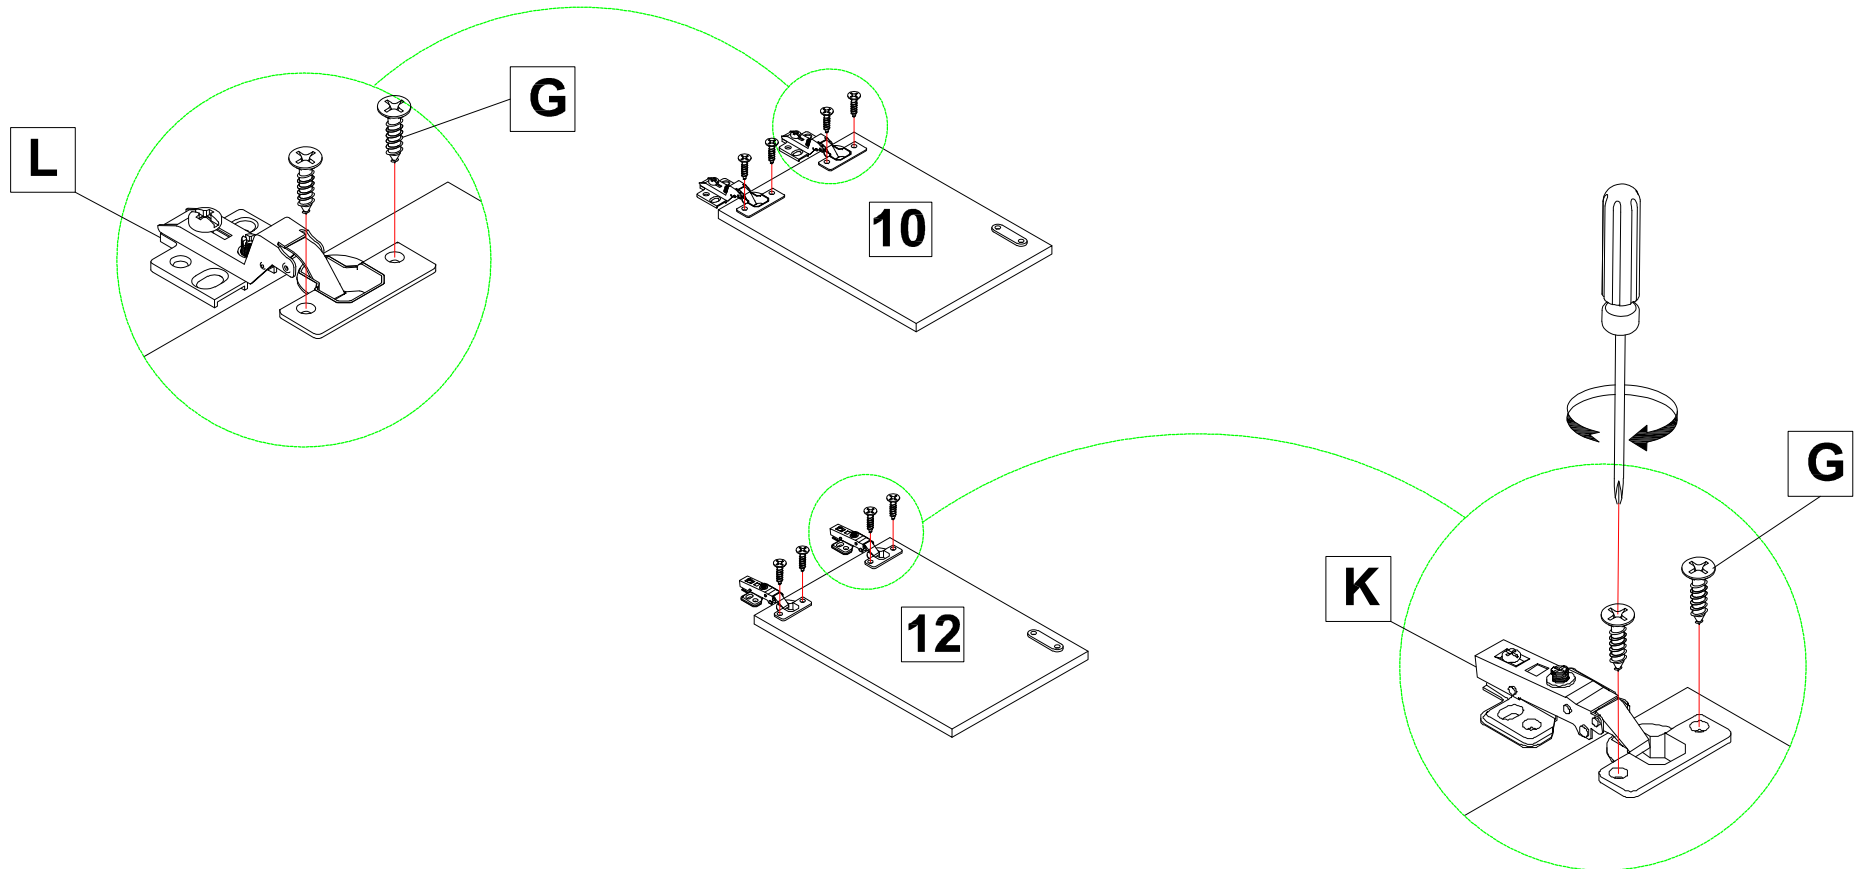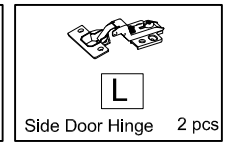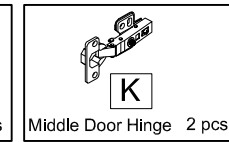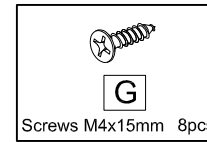

TV CONSOLE

12

 
 
First install hinges with 2 screws in oval holes for door adjustment

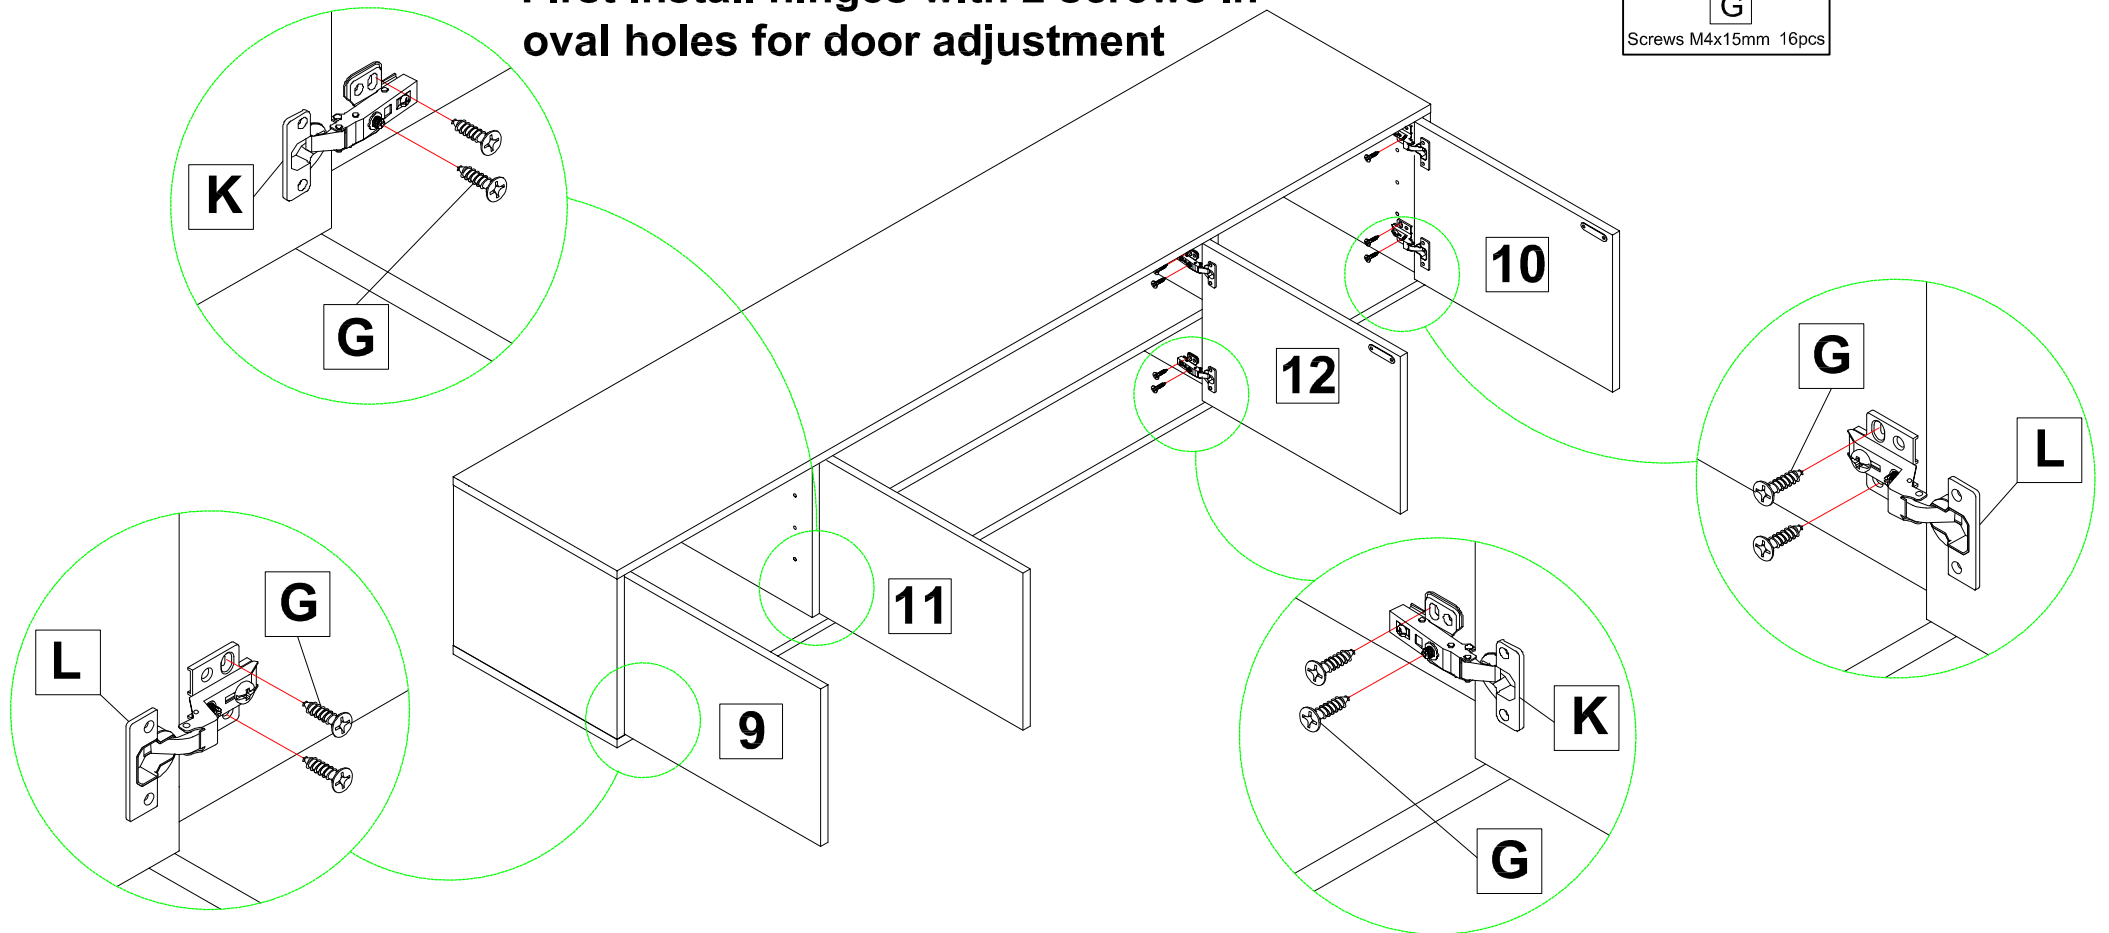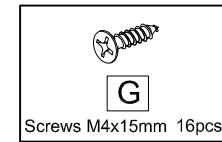

TV CONSOLE







13

  Install other 2 screws
after doors are adjusted

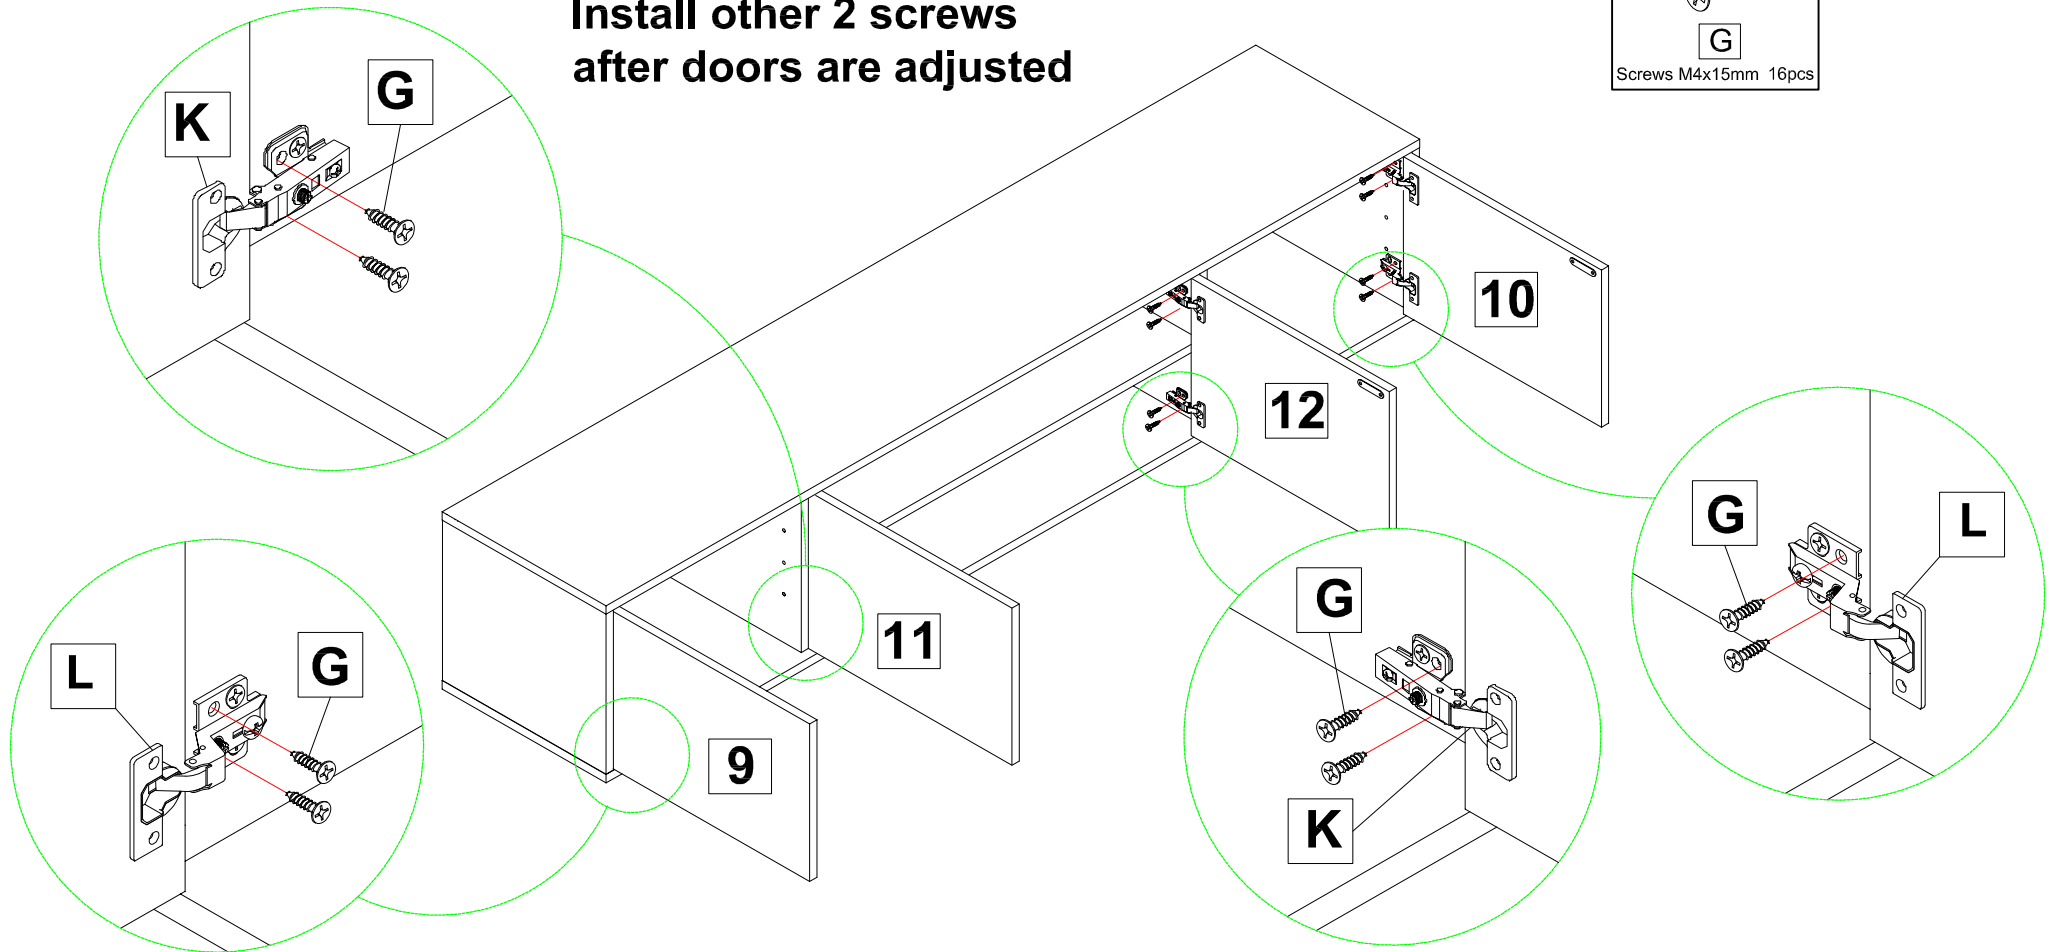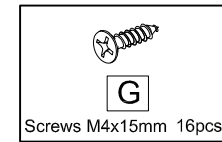


14

      Our high Quality Euro hinges are 3-way adjustable:

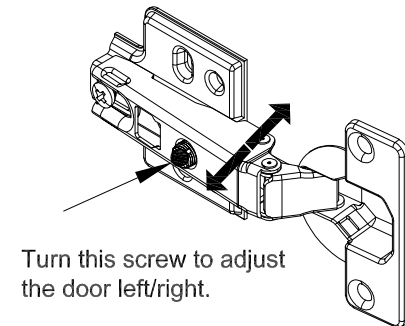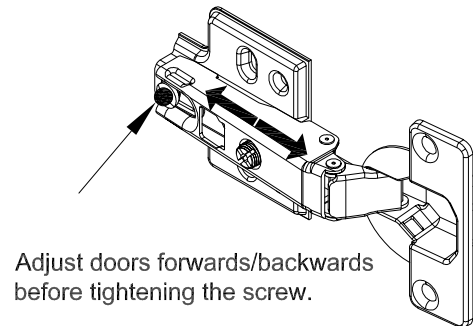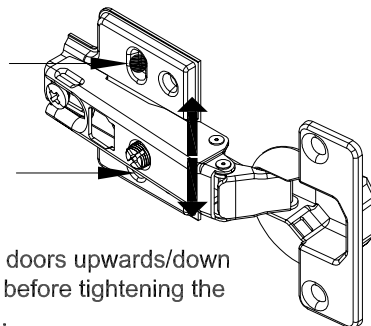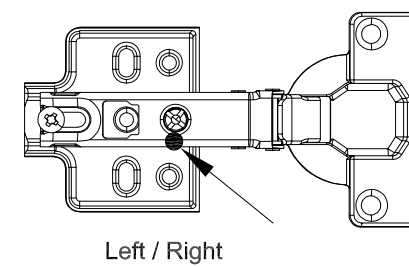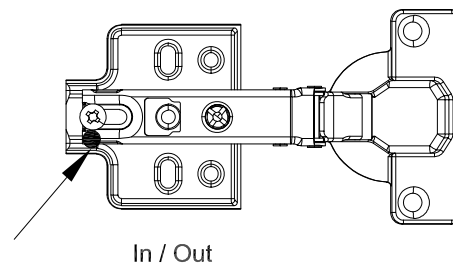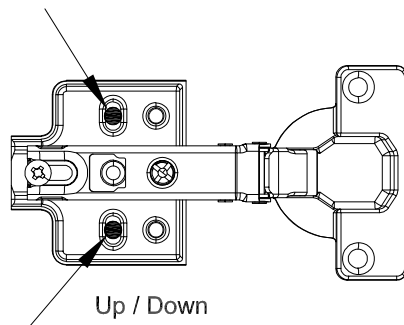


15

 
Our high Quality Euro hinges are 3-way adjustable:

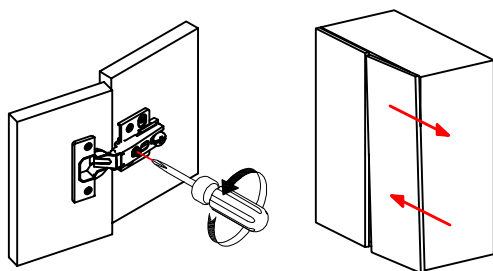

Lateral Adjustment

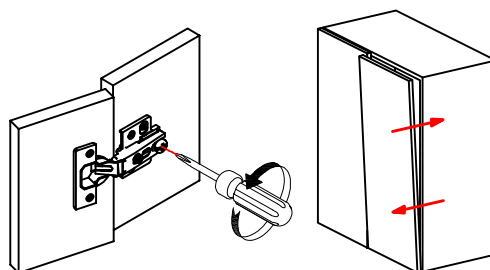 

Horizontal Adjustment


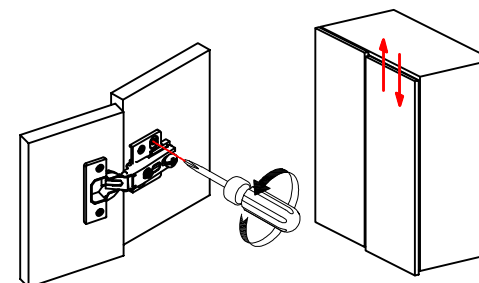 


Vertical Adjustment

TV CONSOLE

Page 20 of 25

  
16

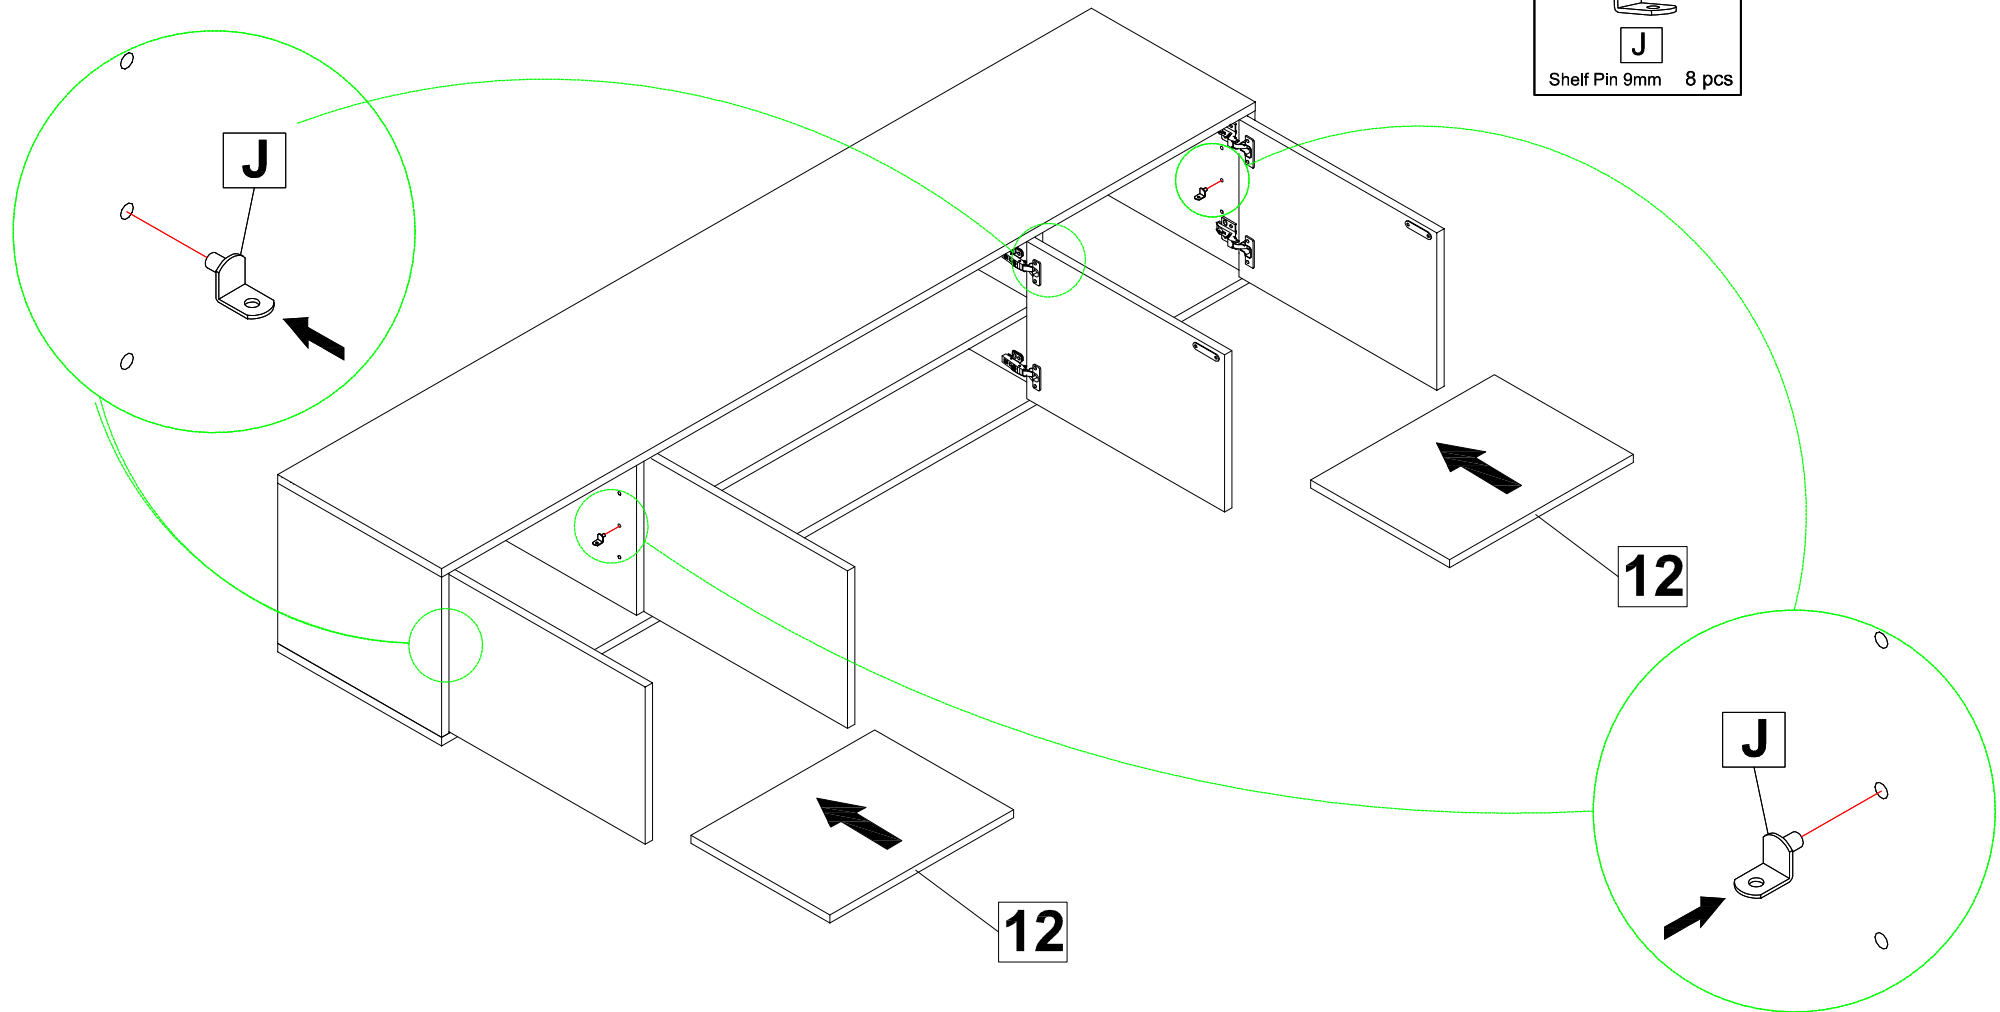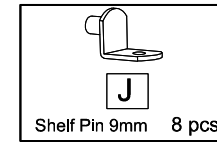

TV CONSOLE


Page 21 of 25

 17

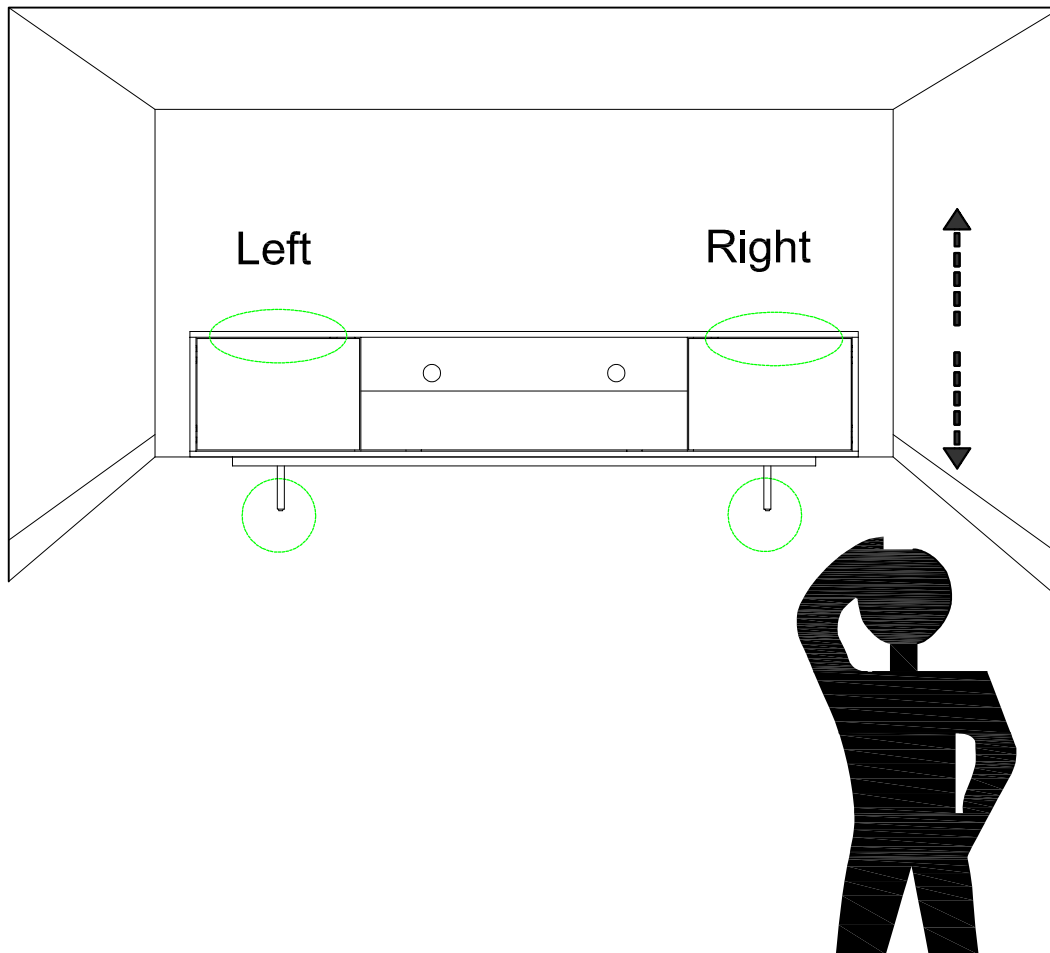

Adjustable Floor Leveler

 
Compare the gap between the Side Door and the Top Panel , if the gap on one side is larger, it means that side is lower than the other side

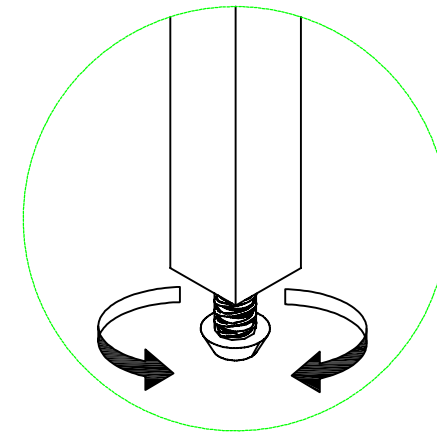

Rotate counterclockwise to increase the length of Floor Leveler, and raise that corner. Rotate clockwise to lower that corner

18

 Adjustable Magnetic catcher


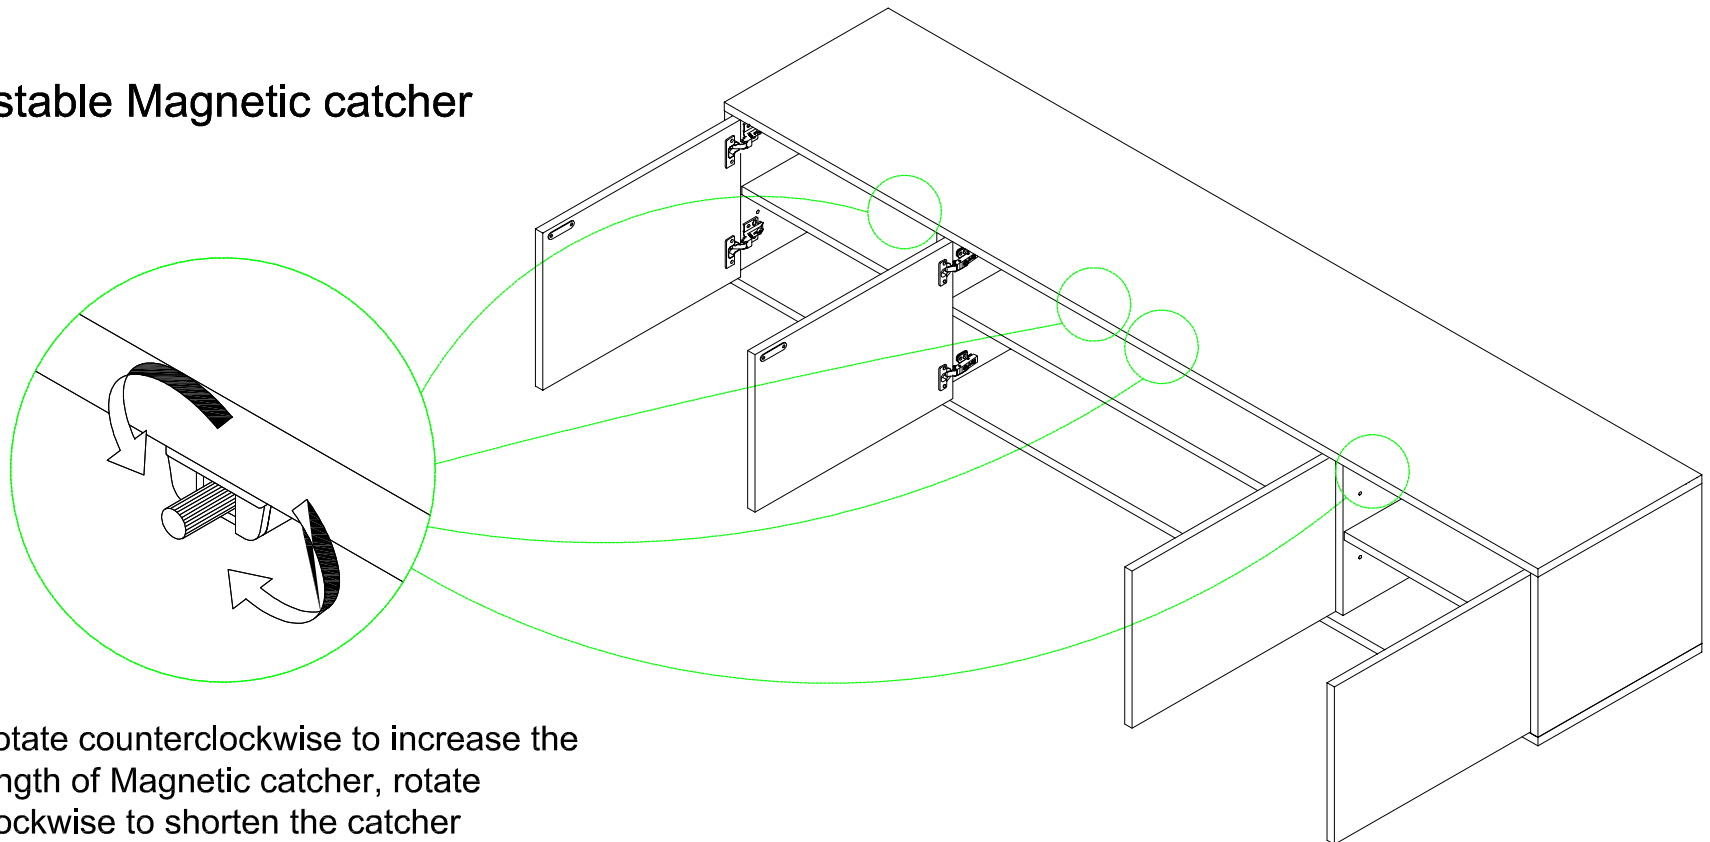


Rotate counterclockwise to increase the length of Magnetic catcher, rotate clockwise to shorten the catcher

TV CONSOLE

19

 
 
Anti-Tip Measures

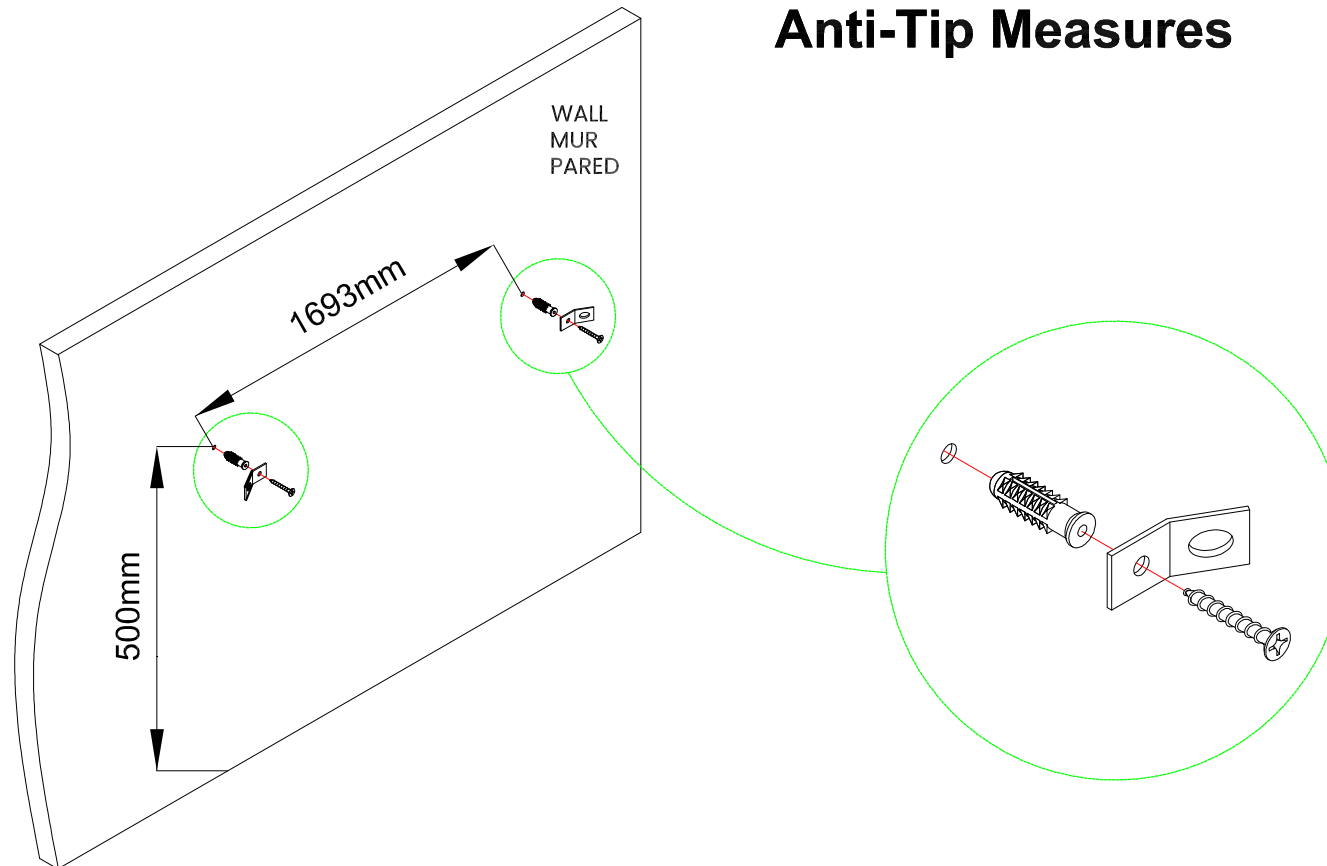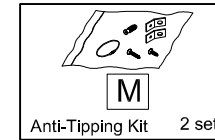

TV CONSOLE

Page 24 of 25

  20

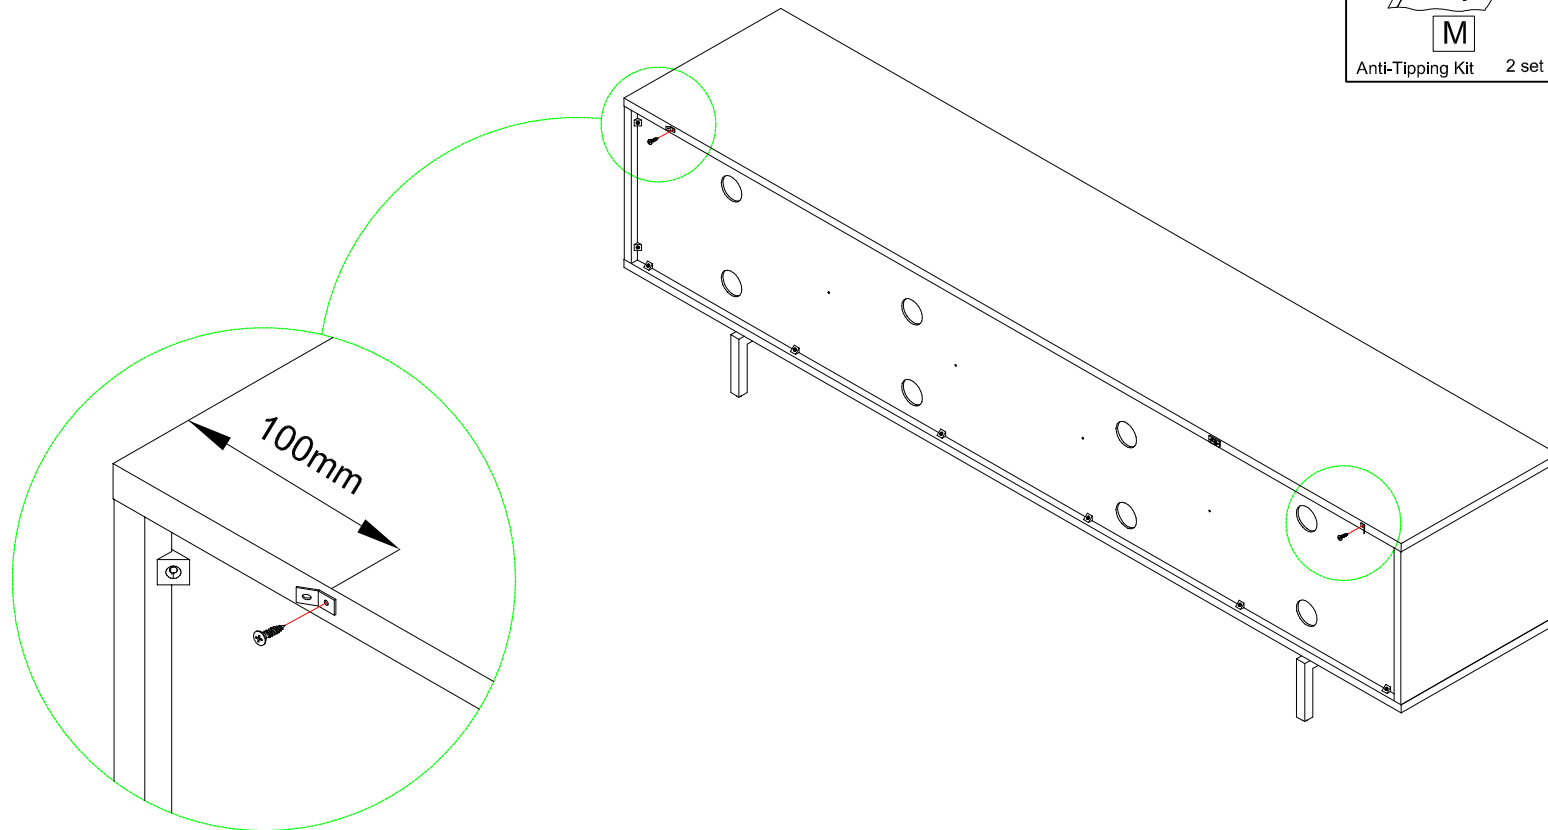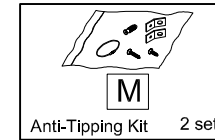

TV CONSOLE

Page 25 of 25

21

