
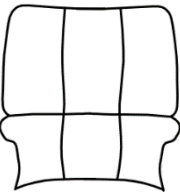


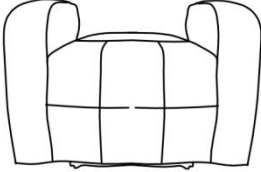

# Assembly Instructions


Your recliner comes packaged in one box. Carefully remove all of The components from the packaging and set aside for assembly.

**CAUTION:**  
**DO NOT** use any sharp objects to open plastic wrapped components as damage to product or components may result.


## Package Contents

			
A 1*Seat Back	B 1*Seat	C 1xEars	D 1xEars


### Step 1

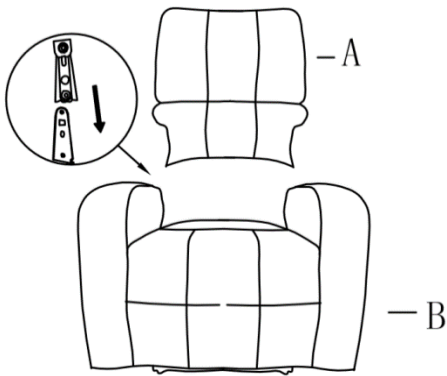

### Step 2

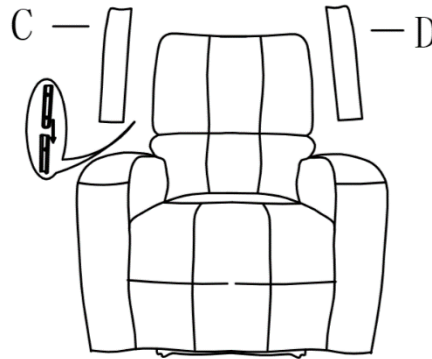

### Step 3

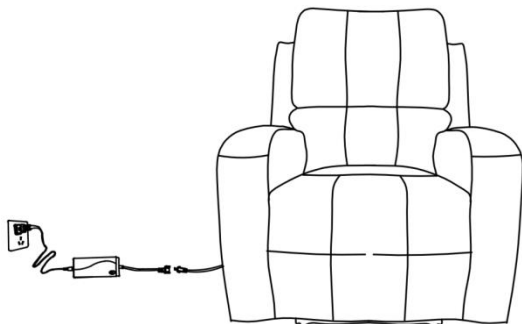

---

## NOTE

- Please check you have all components before assembling.
- If you are missing any component, or any part of the product damaged or does not match the product on website, please contact our service team with clear pictures of the product and carton label. We will help you to solve the problem.

## WARNING

- Please DO NOT sit on the armrests and footrest to eliminate the risk of tipping over. Failure to follow this warning will result in instability and may cause injury.
- Please DO NOT sit on the footrest when it is open, even a child. Failure to follow this warning will result in instability and may cause injury.
- When you push the button switch and the foot plate does not open, please check if the buckle line at the bottom of the sofa is loose.
  - ①. Lay down the recliner chair, pull the hand iron out to find the string which connects to switch.
  - ②. Put the buckle cable into the inner hole.
  - ③. Return the iron piece.
- If the chair still doesn't work, please feedback the information to our customer service in time. We will solve the problem for you as soon as we can.