

## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.







 






## NOTICE

\* Please make sure that you have all parts indicated before you begin assembly of this item

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly

 \* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	Sofa Back		1X
2	Sofa Bottom		1X
3	Sofa&Chair Foot 1		3X
4	Sofa&Chair Foot 2		3X
5	Chair Back		2X
6	Chair Bottom		2X
7	Table Top		1X
8	Table Foot		4X
9	Table Top Glass		1X
A	Allen bolt(M6x28 mm)		32X
B	Flat washer		40X
C	Allen bolt(M6x35 mm)		8X
D	Allen key		1X


## OUTDOOR LIVING SET

Product Dimensions:

25.6"x25.6"x27.6" H (Chair)

48" x 25.6"x27.6" H (Sofa)

35.4"x21.7"x13.8" H (Table)

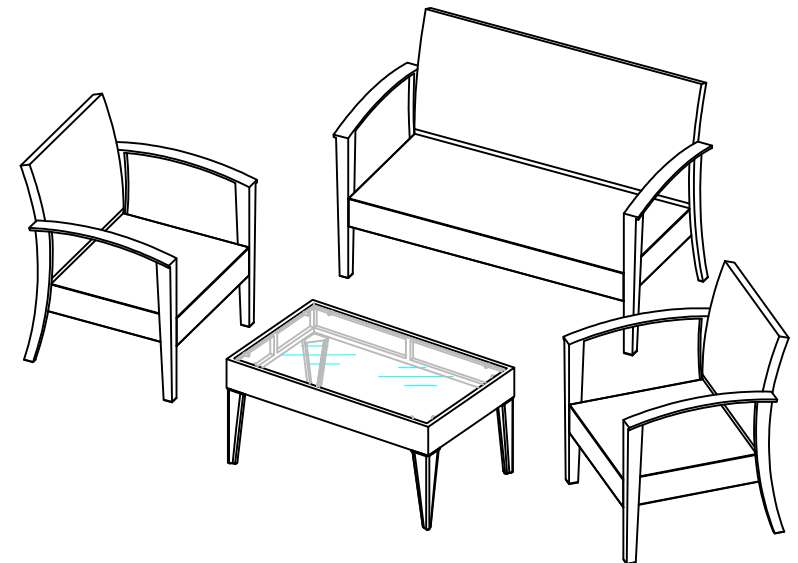

ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_

Purchase Date \_\_\_\_\_

# PREPARATION




Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.




Estimated Assembly Time: 45 minutes.

Tools Required for Assembly (included): Allen Key




1

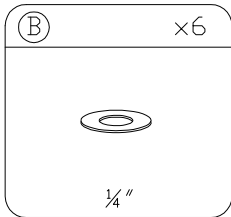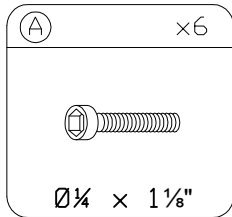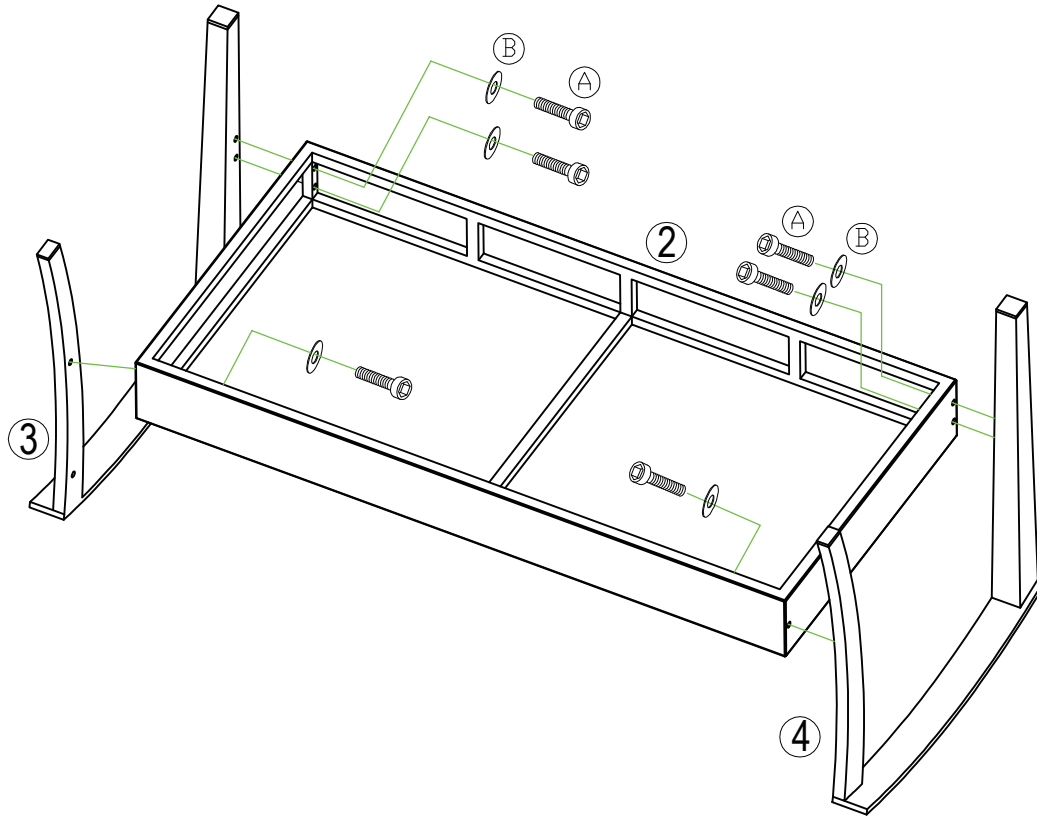




2

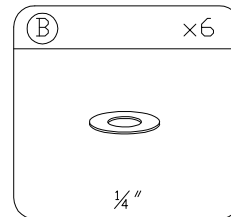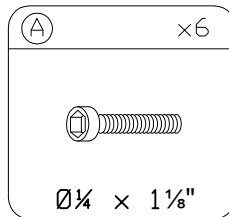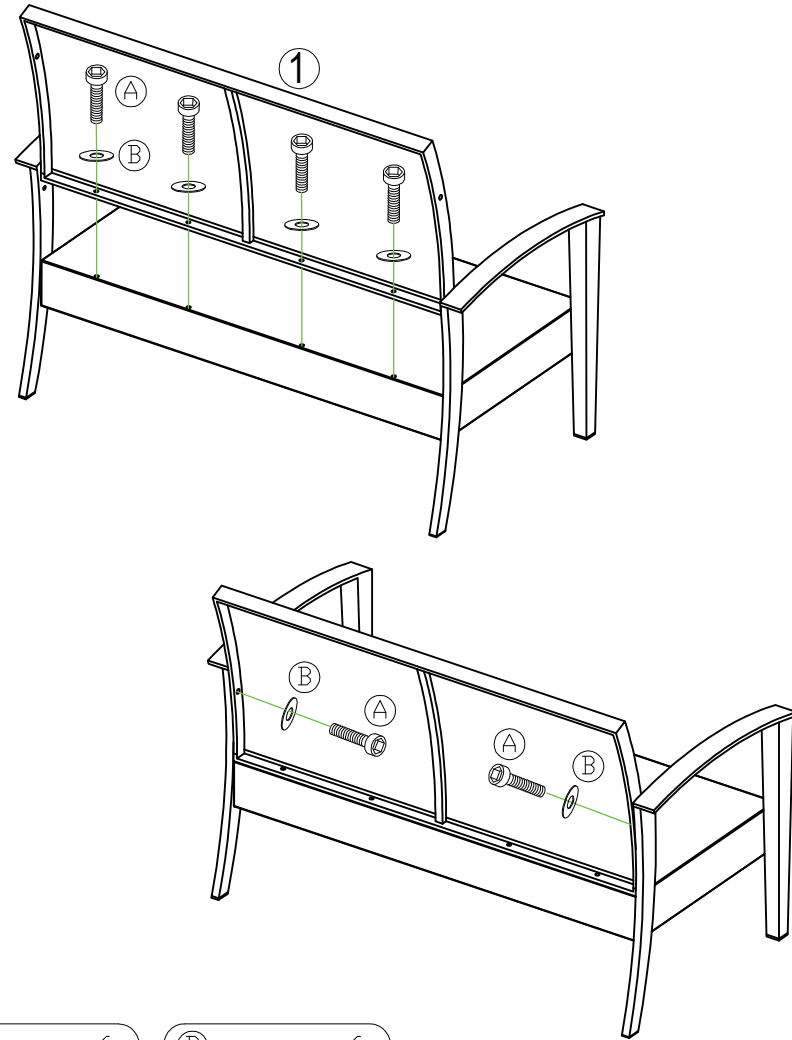




3 x2

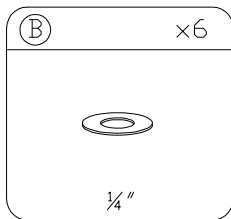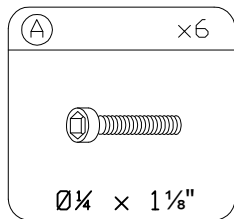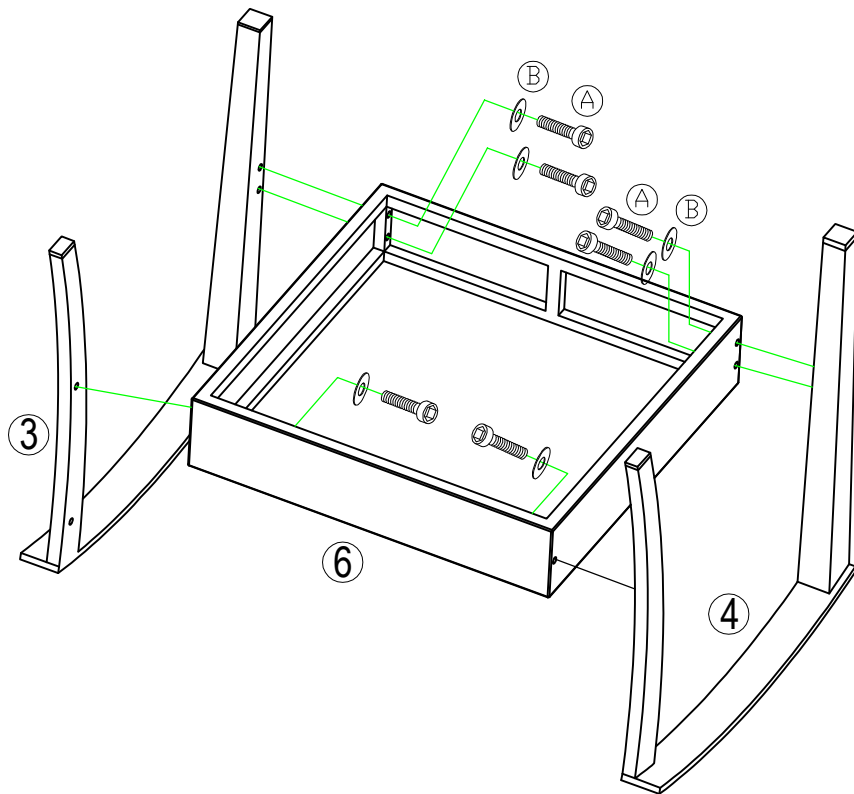

4 x2

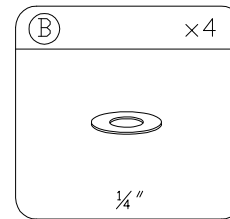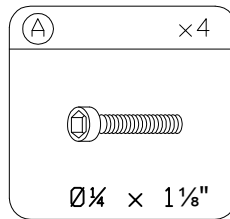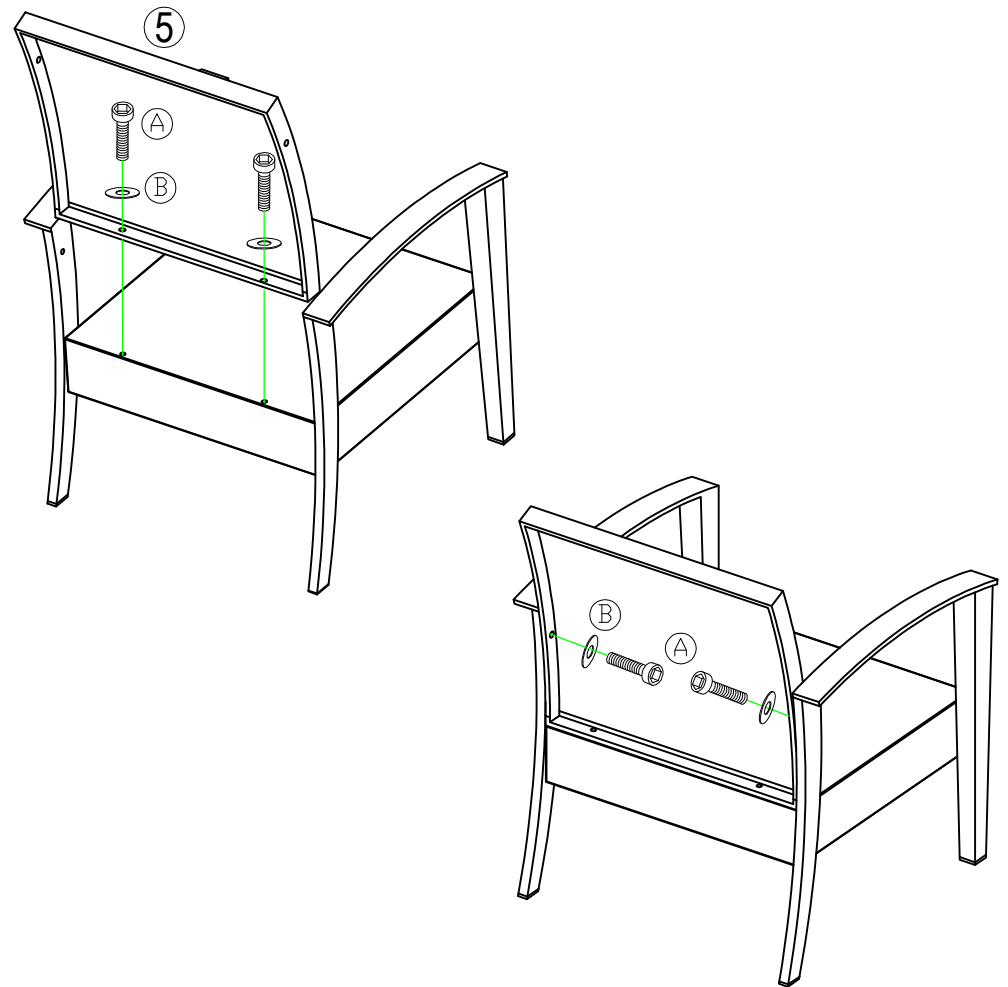

5

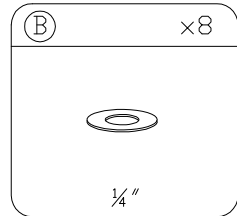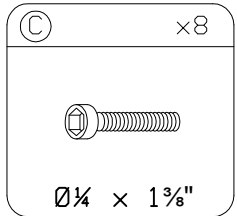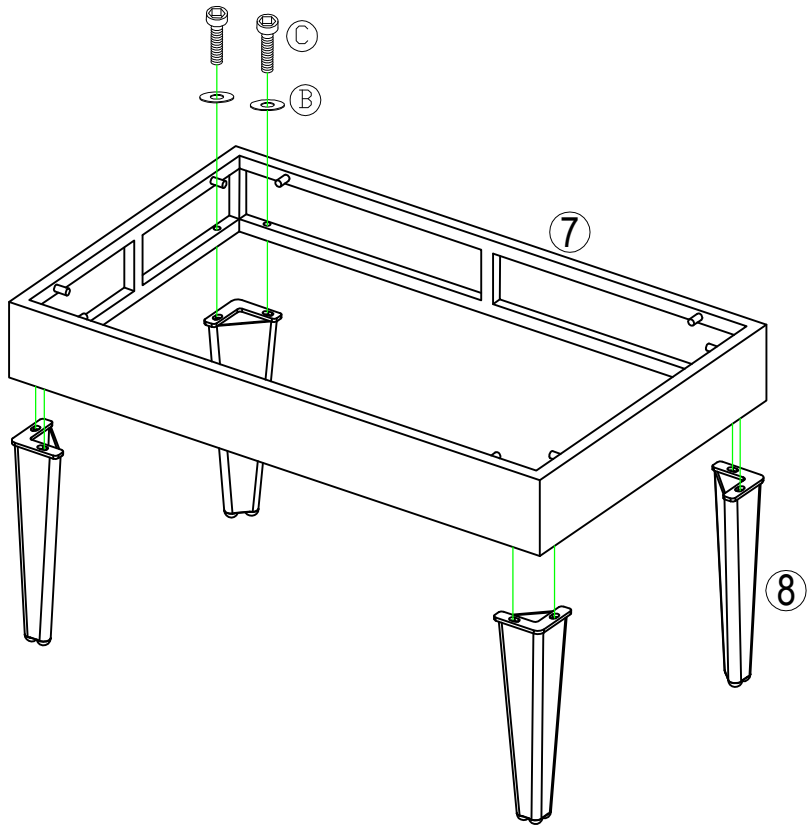

6

