


Model: _____

Lot No: _____

Date of Purchased: _____

DINING CHAIR

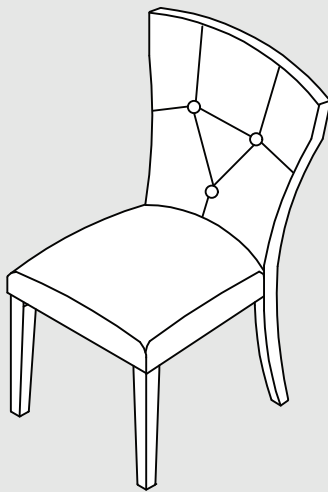

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.

 


Warranty Information:


WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.



 
1. Back Chair
1x



2. Seat Frame
1x



 3. Feet
2x



A. Bolt 5/16 x 3-1/4
4x



B. Bolt 5/16 X 2
4x



C. Bolt 5/16 x 1-3/4
3x



C. Lock Washer
11x




D. Washer
11x



E. Allen Key
1x

ASSEMBLY INSTRUCTIONS

1

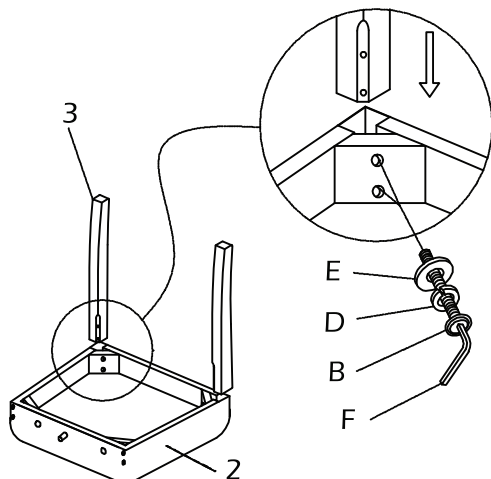

2

