




ASSEMBLY INSTRUCTIONS

MODEL : DINING CHAIR

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * PLEASE FOLLOW ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT FULLY TIGHTEN ALL SCREWS UNTIL THE CHAIR PARTS HAVE BEEN ASSEMBLED.

HARDWARE LIST			PART LIST		
A	JCBC M6 x 70mm + S/W M6 + F/W M6 x 13mm 	4PCS	1	BACK LEG	2PCS
			2	FRONT LEG	2PCS
B	JCBC M6 x 35mm + S/W M6 + F/W M6 x 19mm 	4PCS	3	CUSHION SEAT	1PC
C	ALLEN KEY M4 	1PC			


PLEASE NOTE :

(1) DO NOT FULLY-TIGHTEN THE NUTS AND BOLTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


(TO AVOID CAUSING DAMAGE TO THE THREADS, DO NOT OVER-TIGHTEN THE NUTS AND BOLTS.)

(2) KEEP ALL PARTS OUT OF THE REACH OF CHILDREN.


STEP 1

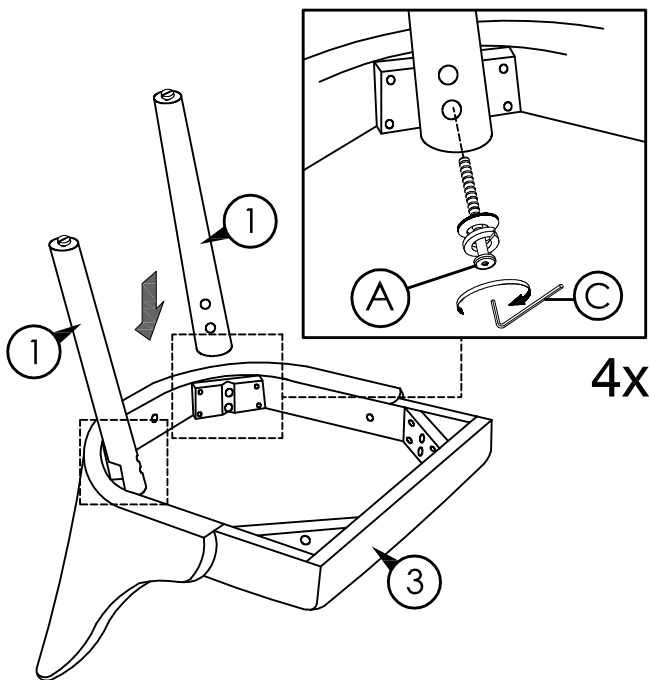


STEP 2

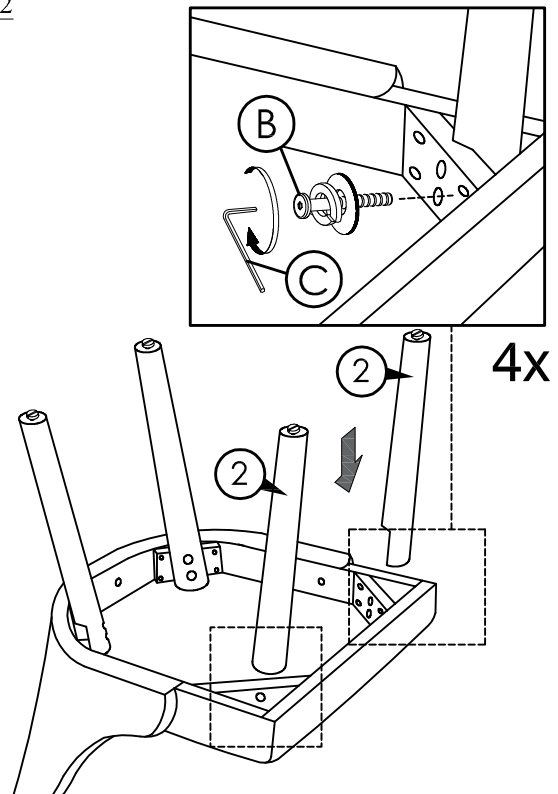

STEP 3

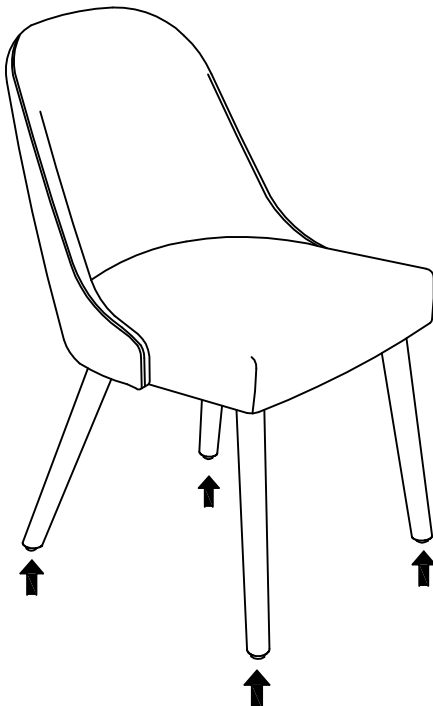

Turn clockwise or anti-clockwise to adjust leg leveller.

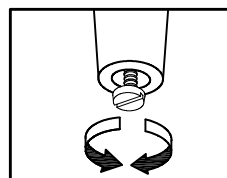

COMPLETED CHAIR ASSEMBLY.