

# ASSEMBLY INSTRUCTIONS

## DINING CHAIR

 
ASSEMBLY  
REQUIREMENTS



2-Person  
Assembly

45 Minutes Per Chair  
Assembly Time  
(Approximate)


**DO NOT USE  
POWER TOOL**

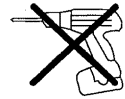

### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

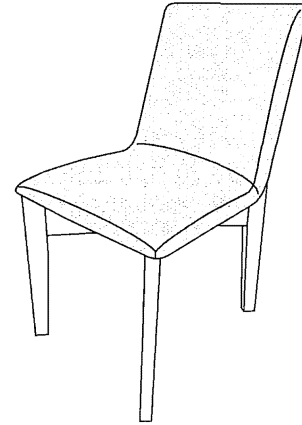

### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

### SAFETY PRECAUTION :

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY :

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.


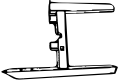 
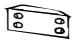 

### CARE AND MAINTENANCE

Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material. Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken. Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate. Do not place hot items (e.g. hot drinks) directly onto the wood surface. Do not drag and/or pull the furniture.








This product is for indoor and household use only - not for commercial use.

## ASSEMBLY INSTRUCTIONS DINING CHAIR

### PARTS LIST(FOR TWO CHAIRS)

NO	DESCRIPTION	QTY
1	RIGHT FRAME 	2PCS
2	LEFT FRAME 	2PCS
3	CORNER BLOCK 	4PCS
4	CHAIR SEAT 	2PCS

### HARDWARE LIST(FOR TWO CHAIRS)

NO	DESCRIPTION	QTY	EXTRA
A	M7 X 32MM JCBC WOOD 	16PCS	1PC
B	M6 X 80MM JCBC 	8PCS	1PC
C	M6 X 40MM JCBC 	8PCS	1PC
D	SPRING WASHER 	32PCS	1PC
E	FLAT WASHER 	32PCS	1PC
F	M4 X 110MM ALLEN KEY 	1PC	-
G	14MM WOOD BUTTON 	24PCS	1PC


\* Extra Hardware For Spare Use

**IMPORTANT NOTE :** 1. DO NOT TIGHTEN SCREWS COMPLETELY UNTIL STEP 4.  
2. DO NOT USE POWER TOOL TO ASSEMBLE CHAIR.

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL DAMAGE THE CHAIR


### STEP 1

Attach the Right Frame (1) to the Left Frame (2) by mating the cross edge half lap joint on each center rail of (1) & (2).

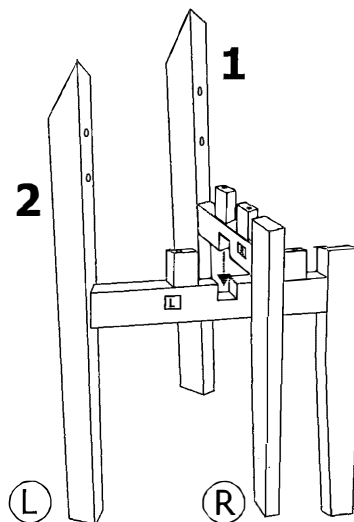


### STEP 2

- Place Chair Seat (4) bottom-side up as shown on an elevated surface (e.g. Table top)
- Position the leg assembly from STEP 1, to align the screw holes on the cross rail of Left and Right Frame to the screw holes on the bottom side of Chair Seat (4).
- Use JCBC Screw (B) fitted with Spring Washer (D) and Flat Washer (E) to loosely fasten the leg assembly to (4). Use Allen Key (F) to drive (B). Do not tighten (B) completely at this time.

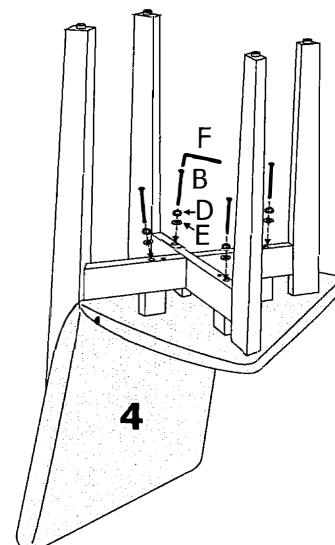


## ASSEMBLY INSTRUCTIONS DINING CHAIR

### STEP 3

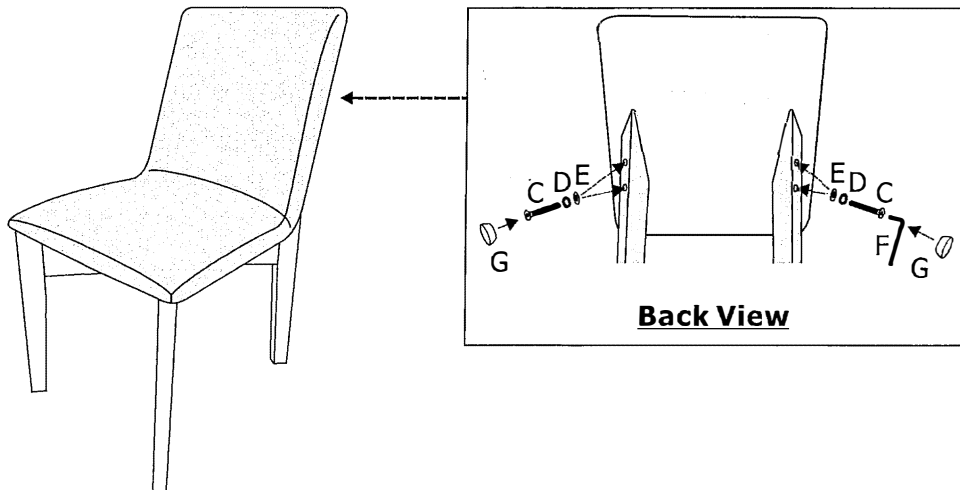

- a) Fasten the back rest of the seat to the back post of Left and Right Frame using JCBC Screw (C) fitted with Spring Washer (D) and Flat Washer (E). Use Allen Key (F) to drive (C). Do not tighten (C) completely until all 4 screws are in place.
- b) Insert Wood Button (G) into the screws hole on the Back Rest to conceal the screw holes.

### STEP 4

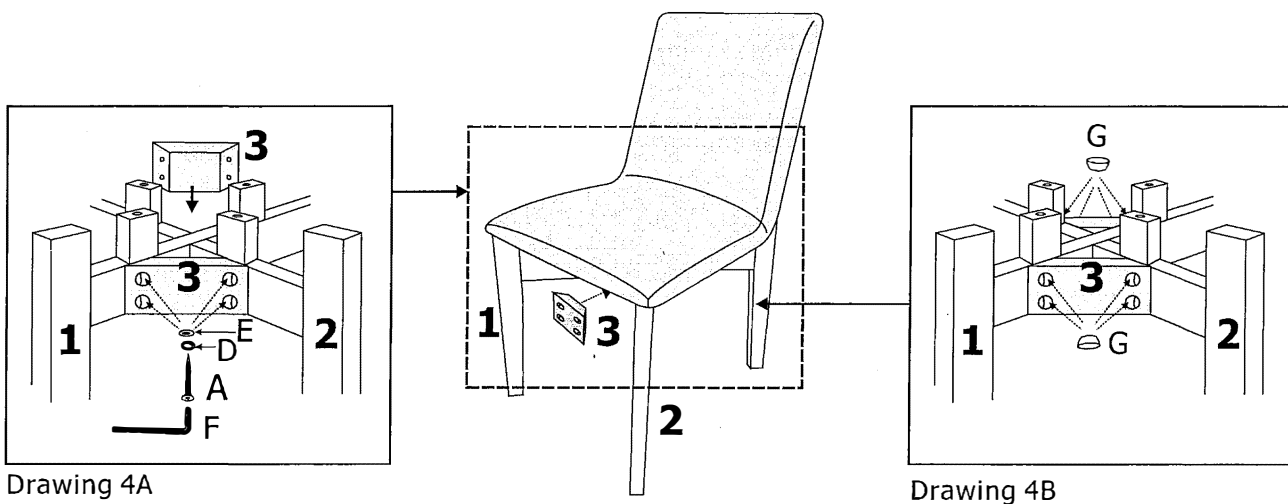

Drawing 4A

Drawing 4B

- a) Refer to Drawing 4A - Fasten Corner Block (3) to the Right (1) & Left Frame (2) using JCBC Screw (A) fitted with, Spring Washer (D) and Flat Washer (E). Use Allen Key (F) to drive (A). Tighten all the screws completely at this time. Do not over-tighten.
- b) Refer to Drawing 4B -Finally. Insert Wood Button (G) into the screws hole on the Corner Block (3) to conceal the screw holes.

The assembly of the chair is completely.