


Entertainment Cabinet

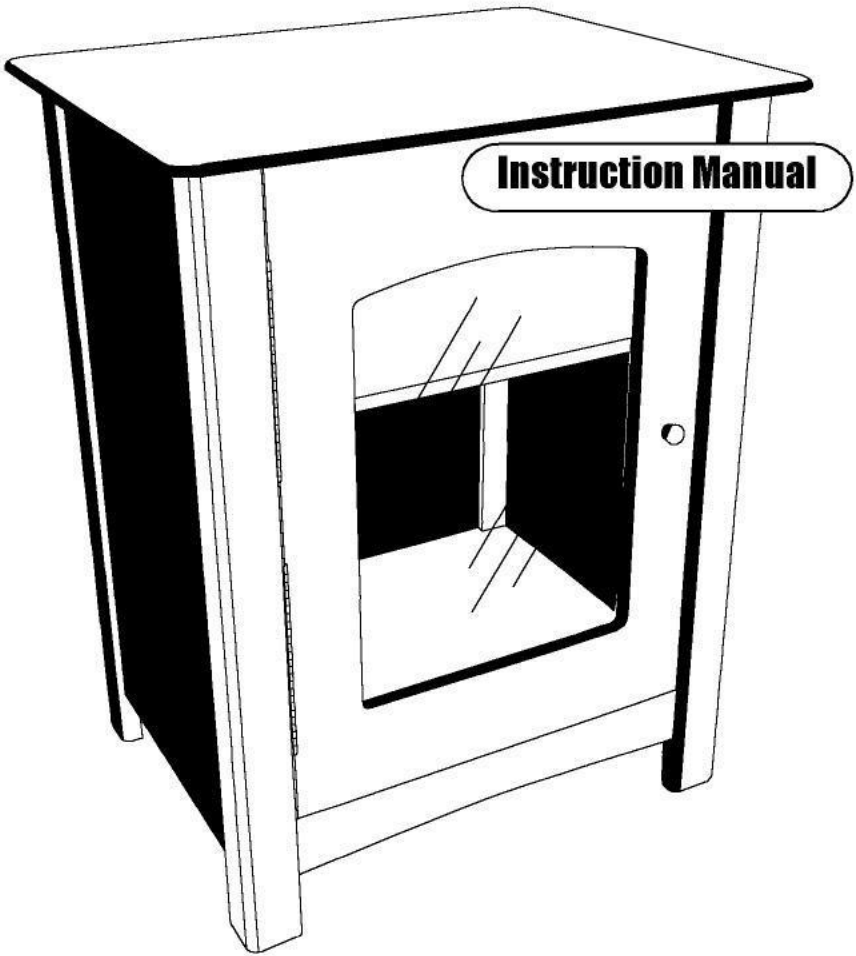

TOOLS REQUIRED

- #1 Phillips head screwdriver
- #2 Phillips head screwdriver

STEP 1

- 1. Screw 4 CAM BOLTS (02) into the bolts holes of PEDESTAL TOP (A). See Diagram B.

STEP 2

- 1. Screw 4 CAM BOLTS into the bolt holes on the LEFT SIDE BOARD (C). See Diagram A.
- 2. Insert 2 CAM LOCKS (03) with the arrows facing towards the top hole on LEFT SIDE BOARD (C). See Diagram A.
- 3. Insert 4 WOODEN DOWELS into the holes on the LEFT SIDE BOARD (C). See Diagram A.
- 4. Repeat Steps 1-3 for RIGHT SIDE BOARD (B). See Diagram C.

STEP 3

- 1. Insert 4 CAM LOCKS into TIER BOARD (F). See Diagram D.


STEP 4

- 1. Insert 4 CAM LOCKS into the PEDESTAL BOTTOM (G). See Diagram E.

Assembly Instructions.

- 1. Attach the Tier Board (F) and the Pedestal Bottom (G) to the Left Side Board (C). The Cam Locks should be facing towards the bottom of the stand. Make sure all pieces have the front facing the same way. Using a #2 Phillips head screwdriver, turn the Cam Locks clockwise until they are tight. See Diagram F.
- 2. Attach the Right Side Board (B). Turn the Cam Locks clockwise until they are tight. See Diagram F.
- 3. Slide the Back Board (E) into the slots between the Left Side Board (C) and the Right Side Board (B) from the top of the stand. Make sure the two predrilled holes in the Back Board are at the bottom of the stand. Screw the Back Board in place using two supplied screws (07) and the predrilled holes in the Back Board. See Diagram G.
- 4. Attach the Pedestal Top (A) to the top of Left Side Board (C) and Right Side Board (B). Turn the Cam Locks clockwise until tight. See Diagram H.
- 5. Attach the Door (D) to the Left Wood Side (C). Make sure the hinges are opened up. Line up the holes in the hinges with the predrilled holes in the Left Side Board (C). Using eight supplied screws (06) and a #1 Phillips screwdriver, fasten the door. See Diagram I.
- 6. Install the Brass Knob (04) onto the Door using the supplied Machine Screw (05). See Diagram I.

FULL ASSEMBLY DIAGRAM

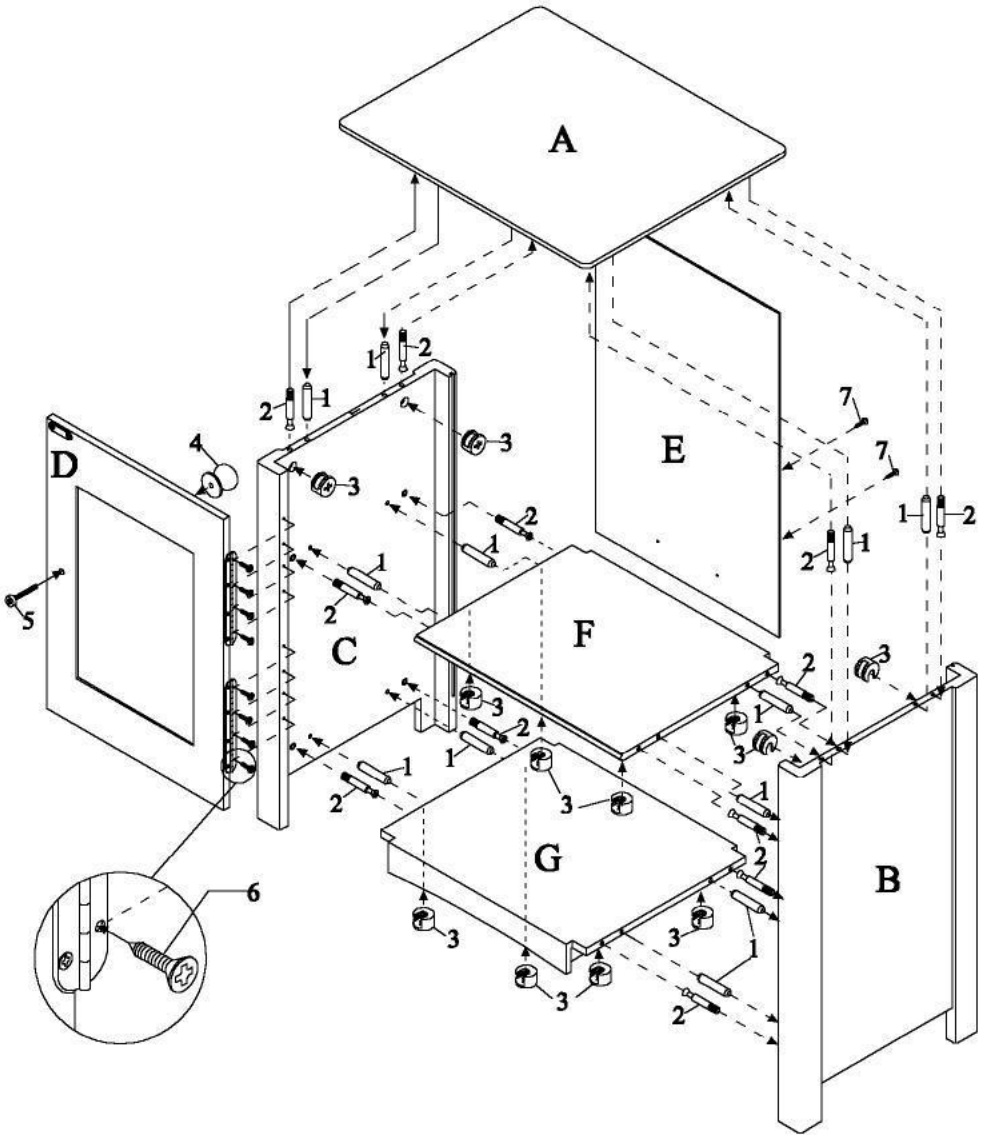

PARTS LIST		
NO	DESCRIPTION	QTY
A	PEDESTAL TOP	1PCS
B	RIGHT SIDE BOARD	1PCS
C	LEFT SIDE BOARD	1PCS
D	DOOR	1PCS
E	BACK BOARD	1PCS
F	TIER BOARD	1PCS
G	PEDESTAL BOTTOM	1PCS
01	WOOD DOWELS	12CS
02	CAM BOLTS	12CS
03	CAM LOCKS	12CS
04	BRASS KNOB	1PCS
05	MACHINE SCREW 4x18BM<GOLD>	1PCS
06	TAPPING SCREW 2.6x12KA<GOLD>	8PCS
07	TAPPING SCREW3.0x10PWA<BLACK>	2PCS

ASSEMBLY INSTRUCTION

