

Coat Rack

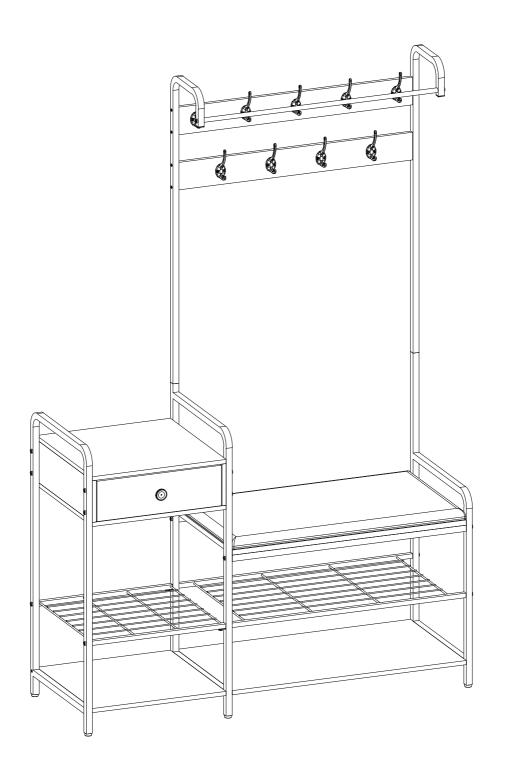


ASSEMBLY INSTRUCTION

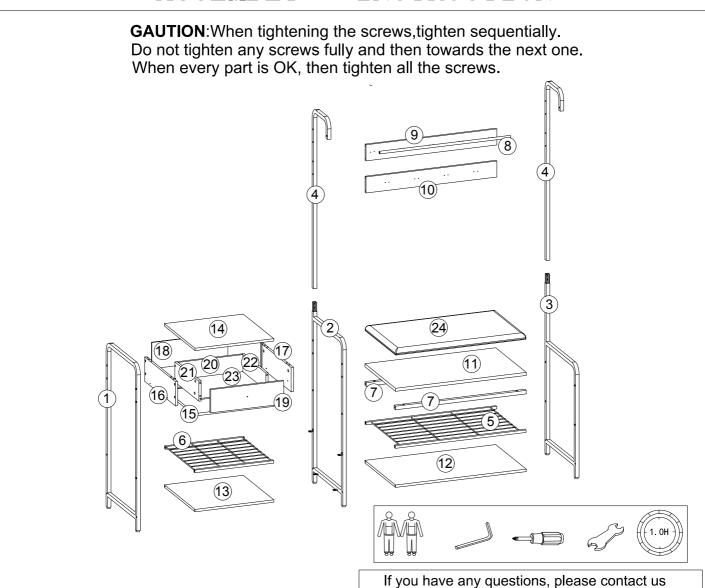


C x8+1 A x10+1 B x14+2 Е D | x8+1 x14+1 M6x10 Ø5x50 M6x35 M6x25 Ø5x40 x8+1 G x8+1 H x8+1 x8+1 **x**1 3x12 Ø6x35 Ø15x10 Ø6x30 L x9 M2 N 0 $M1 \times 1$ **x**1 х1 **x**1 M4x57 M3x57 Q x18+2 P R **x1 x**1 4 mmm 3x14 4x16


Service Email:sedetahelp@gmail.com

2

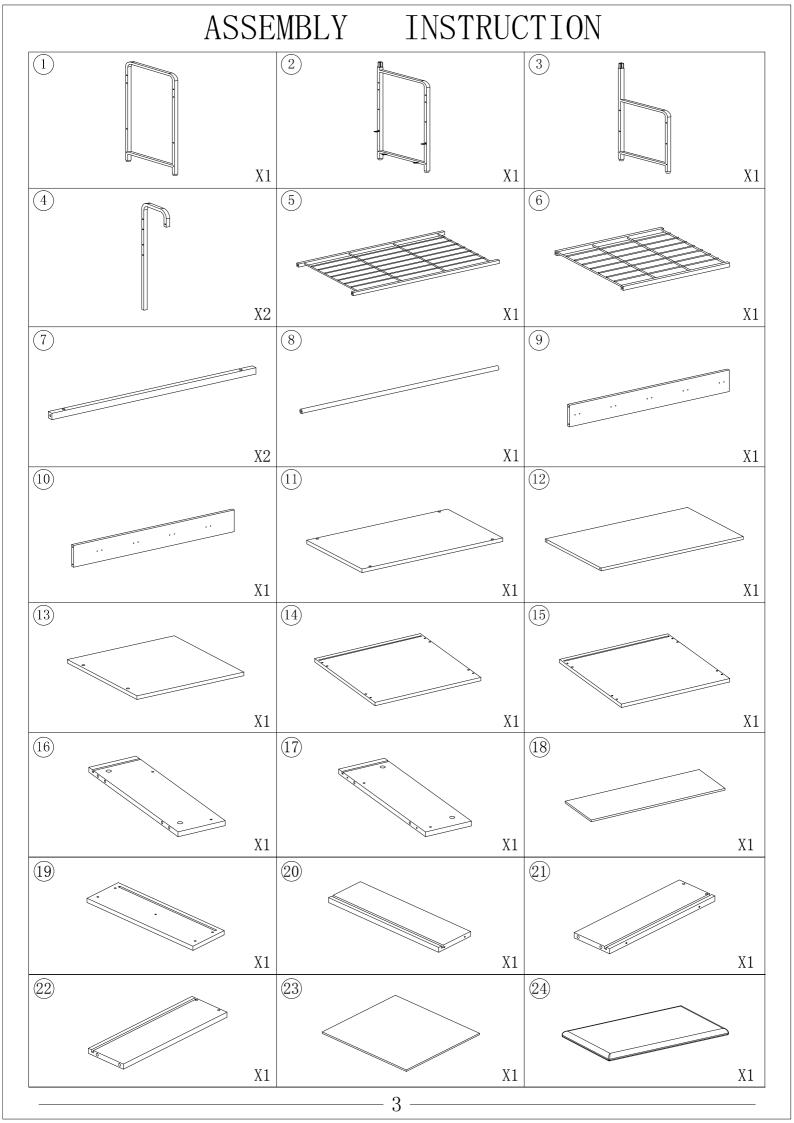

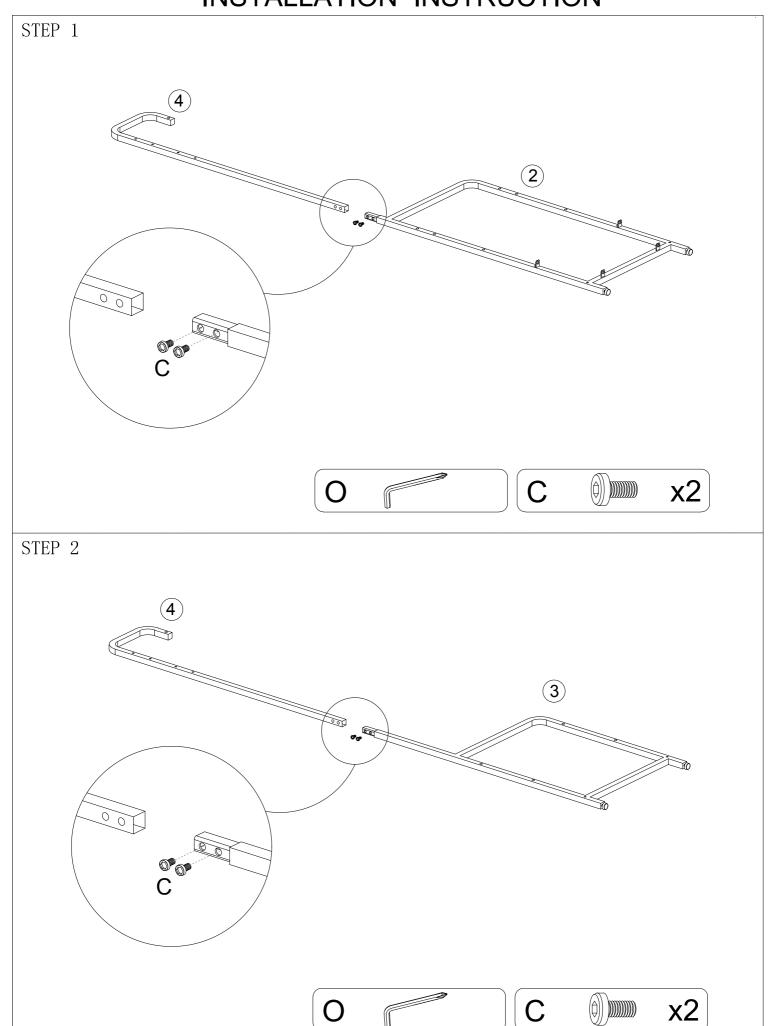

INSTALLATION INSTRUCTION STEP 3 9 K **x**5 x10 Q STEP 4 10 O **x**4 8x 5

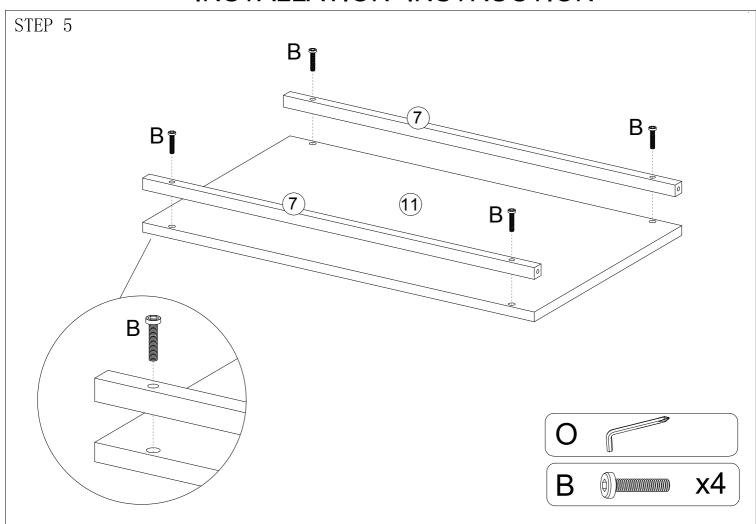


STEP 6

GAUTION: When tightening the screws, tighten sequentially.

Do not tighten any screws fully and then towards the next one.


When every part is OK, then tighten all the screws.

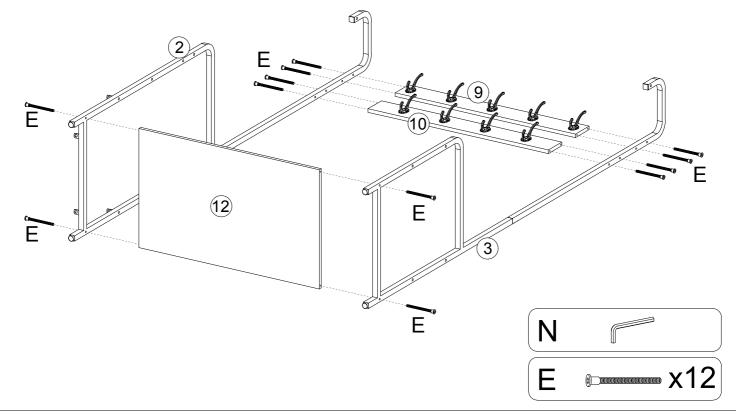

STEP 7 **GAUTION**:When tightening the screws,tighten sequentially.

Do not tighten any screws fully and then towards the next one.


When every part is OK,then tighten all the screws.

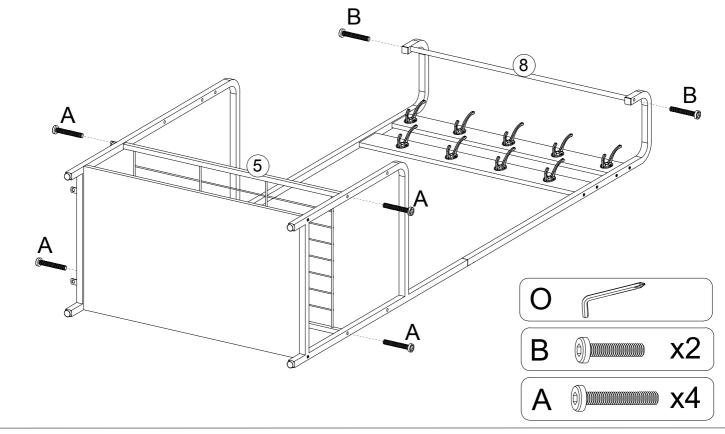



GAUTION: When tightening the screws, tighten sequentially.


Do not tighten any screws fully and then towards the next one.

When every part is OK, then tighten all the screws.

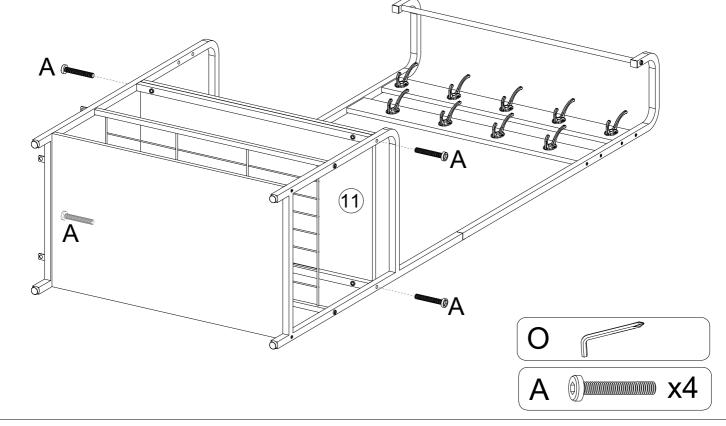


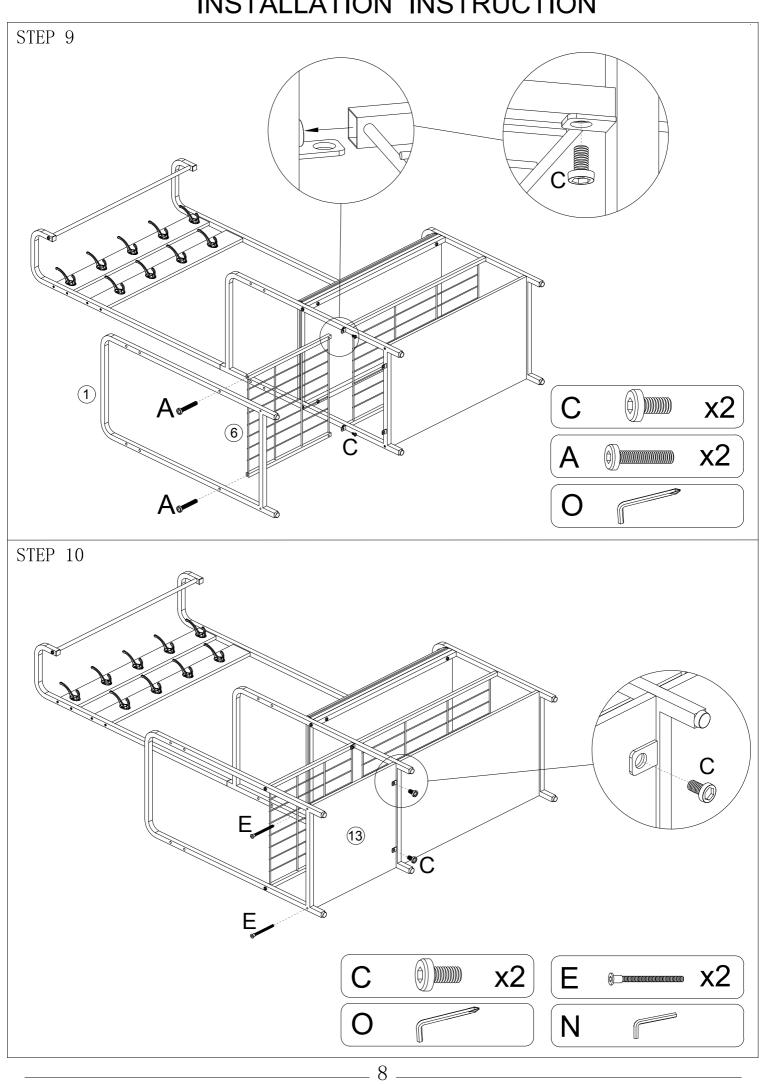

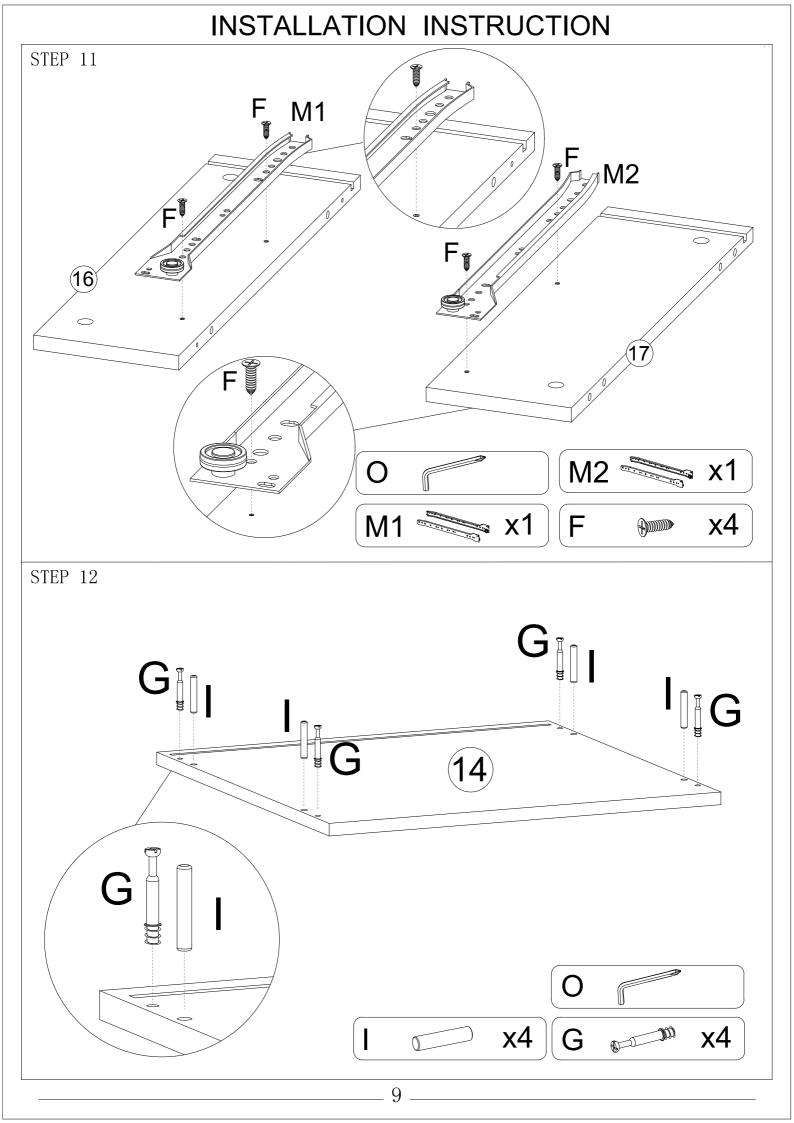


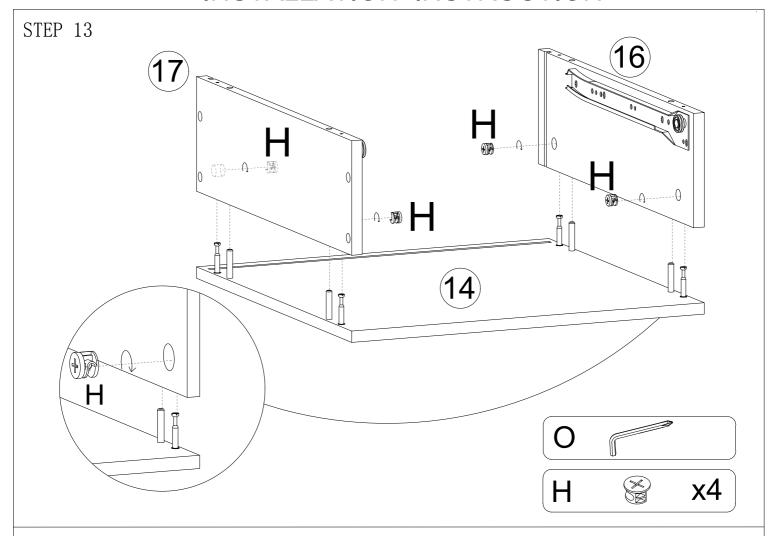




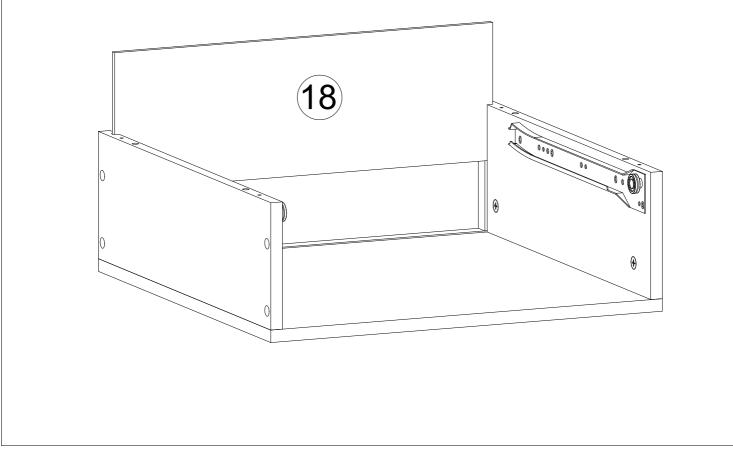

INSTALLATION INSTRUCTION STEP 15 **15**) Ν **x**4 **x**4 STEP 16 20 21 Ν **x**4 -11

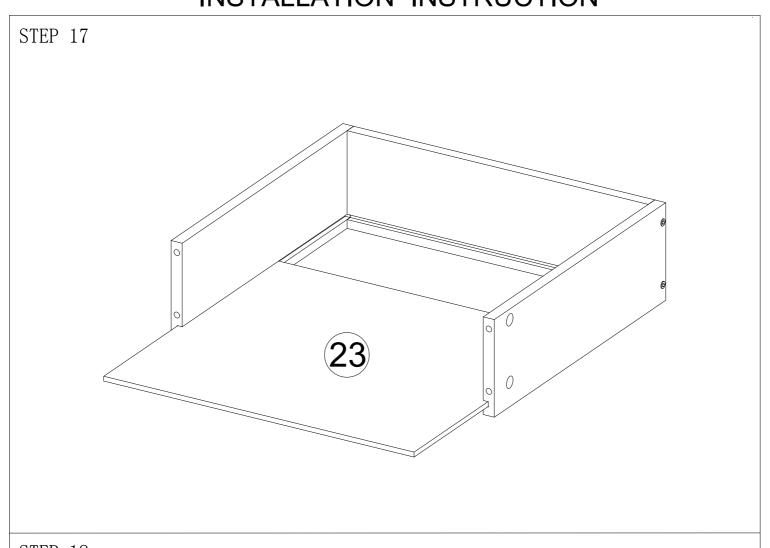

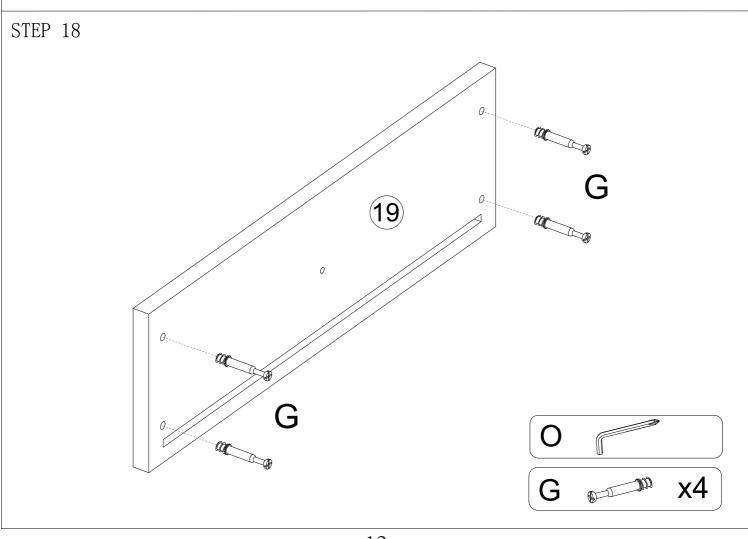

INSTALLATION INSTRUCTION STEP 19 19 O **x**1 J R **x**1 STEP 20 H 🙈 **21** 19 22 H H THE SECOND SECON **x**4

Н

INSTALLATION INSTRUCTION STEP 21 F M1 F **M2** 19 M1 **x**1 O M2 ** **x**1 F **x**4 STEP 22 B 🚉 - B

8x

В

