

## OUTSIDE PANEL

Thank you for purchasing this Primula® Classic Coffee Press. We hope you enjoy the quality craftsmanship of this splendid product.

USE EXTREME  
CAUTION  
HOT WATER  
POINT SPOUT  
AWAY FROM YOU  
PRESS PLUNGER  
SLOWLY

**Epoca®**  
INTERNATIONAL, INC.

Boca Raton, FL 33487  
Made in China

PCP-6408-T

Like us on facebook  
and post your  
extraordinary moments.



Visit us:  
primulaproducts.com



**primula®**

**Classic  
COFFEE  
PRESS**

For French  
and American  
style coffee



**8 Cup**

## INSIDE PANEL

### CLEANING INSTRUCTIONS

- To clean the coffee press, remove the plunger.
- Rinse out the remaining coffee and hand wash with warm, soapy water.
- Rinse with clean water.
- Allow it to dry.

DISHWASHER SAFE

### SAFETY INSTRUCTIONS

- Do not use fine ground coffee; it clogs the filter.
- Use only plastic spoon for stirring; using metal spoon will cause damage to glass beaker.
- Do not press plunger hard or fast; it will cause spillage.
- Always look for chips and cracks in glass beaker. Do not use if any are found.
- Never use on stovetop or in microwave.
- Keep out of reach of children.

THIS DEVICE USES VERY HOT WATER. USE CAUTION.

### USE INSTRUCTIONS

- 1 Remove plunger; add 1 Tbsp. of coarse ground coffee for every 4 oz. cup. Do not use fine ground coffee, it clogs the filter.
- 2 Add hot water. The maximum fill is 1 inch away from the top. Stir gently with a plastic spoon. Use only plastic spoon for stirring; using metal spoon will cause damage to glass beaker.
- 3 Replace plunger back to the beaker with plunger in up position.
- 4 Allow coffee to brew for at least 4 minutes or to desired taste. Grip the handle, turn the spout away from you and press the plunger down slowly. CAUTION: Pressing too fast on plunger can cause hot coffee to splash out of spout. Serve and enjoy.

