
## ASSEMBLY INSTRUCTIONS

## ITEM NO:

## **BOX OF TV STAND**

| ITEM | DRAWING | DESCRIPTION | QTY |
|------|---------|-------------|-----|
| A    |         | TV STAND    | 1   |



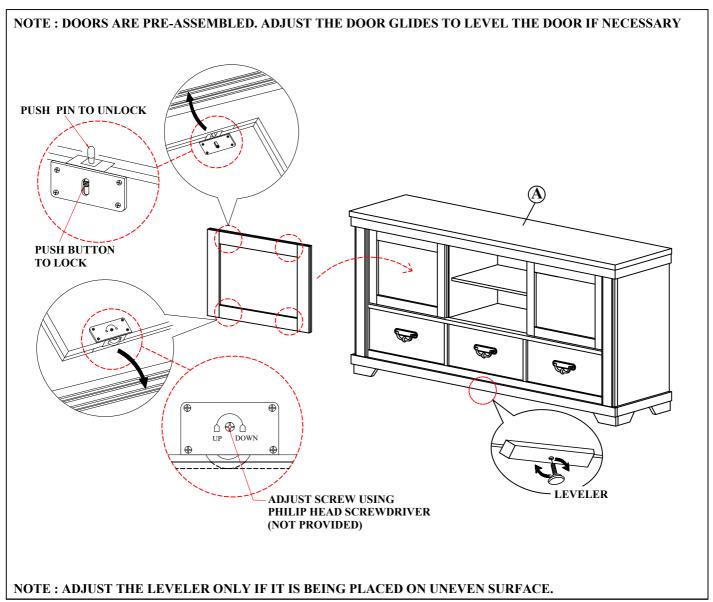

THE ANTI TIPPING HARDWARE IS LOCATED IN THE RIGHT SIDE BOTTOM DRAWER OF THE TV STAND.

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHNESS OF ALL SCREW EVERY 6-8 WEEKS.

## **CLEANING INSTRUCTION**