
 
#### Cabinet WF531476AAK/WF531476AAD

#### Assembly Instructions - Please keep for future reference

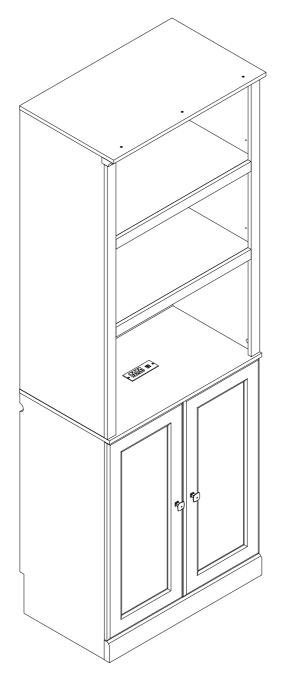



#### Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them
- Keep children and pets away from the installation area, which may cause choking if small parts are swallowed.
- Make sure you have enough space to layout the parts before

- Do not stand or apply weight to the product during assembly.
   This may cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damage to the unit or floor.
- It's easier for two people to assemble the parts together.



 To reduce the likelihood of damage to your product, make sure your power drill is set to a low torque setting

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- Check for loose screws on this unit from time to time.
- This product should not be discarded with household waste.
   Take to your local authority waste disposal centre.

#### **Handy Hints**

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are correctly tightened.

# WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

### **Using Camlocks**


#### Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

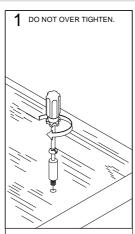

#### Step 2


Push the male camlock into the entry hole.

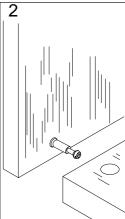

#### Step 3

Insert the femle camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

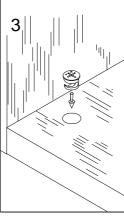


#### Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.



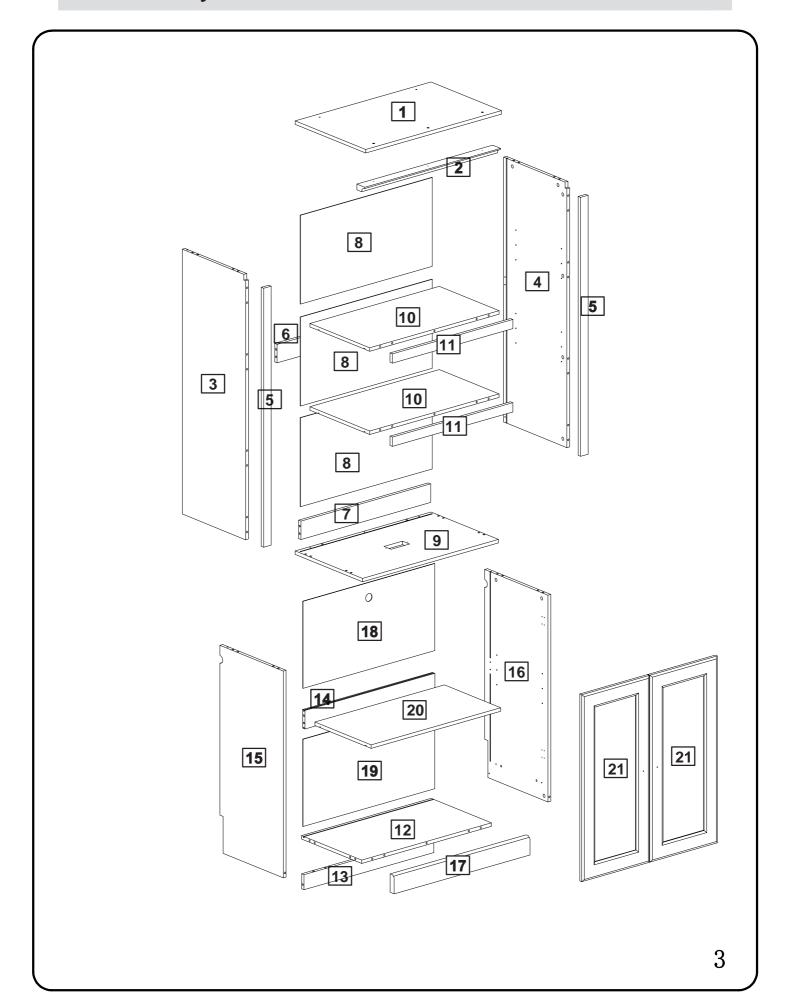

#### Part List: WF531476AAK/WF531476AAD

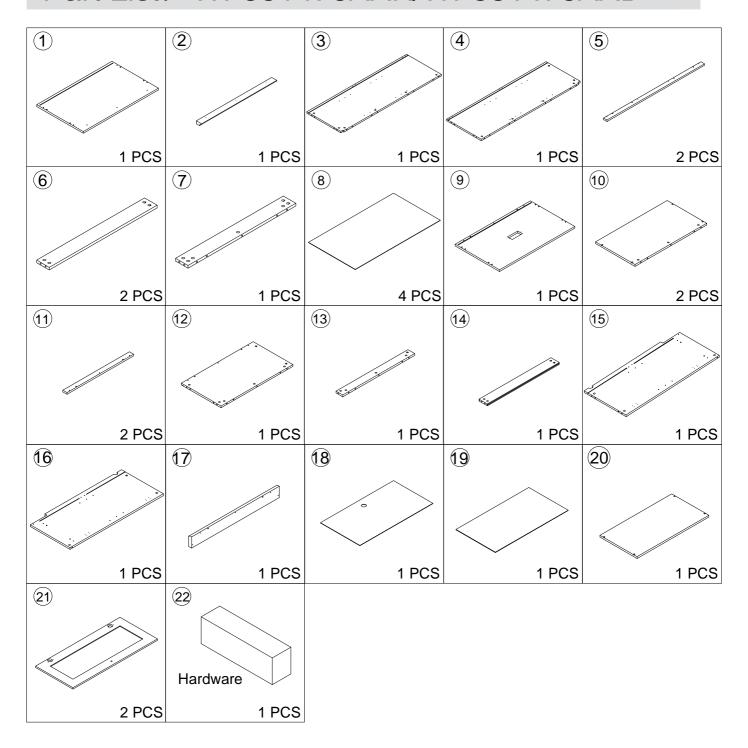



### Hardware list: WF531476AAK/WF531476AAD


#### Please check you have all the panels listed below


**Note:** The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.


A STATE	<b>B</b>	G S
Male Camlock x 51	Female Camlock x 51	Dowel (8x30) x 34
O Socket v4	6*48mm Screw x 4	Door Hinge X 4
Socket x1		_ ^
<b>G</b>		
3.5*14mm Screw x 26	4*30mm Screw x 3	Plasticwedge x20
	<b>6</b>	0
3*16mm Screw x 20	Handle & Fixings x 2	Wall Fixing Pack x 2
		0
Shelf Support Pin x12	Ø20 Sticker x 20	Hex Key M4 x 1
687mm x 2		
Phillips screwdriver (medium & large)		
Ruler - Use this ruler to help correctly identify the screws		
0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170		
The screws length is measured from the head to the point (30mm screw shown).		

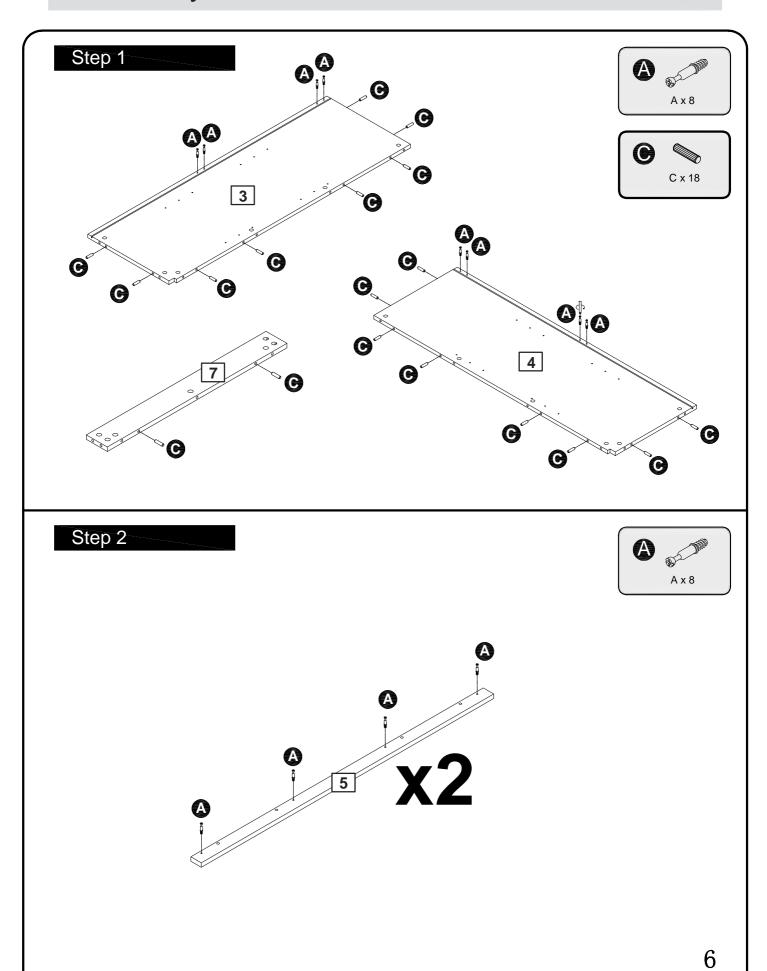


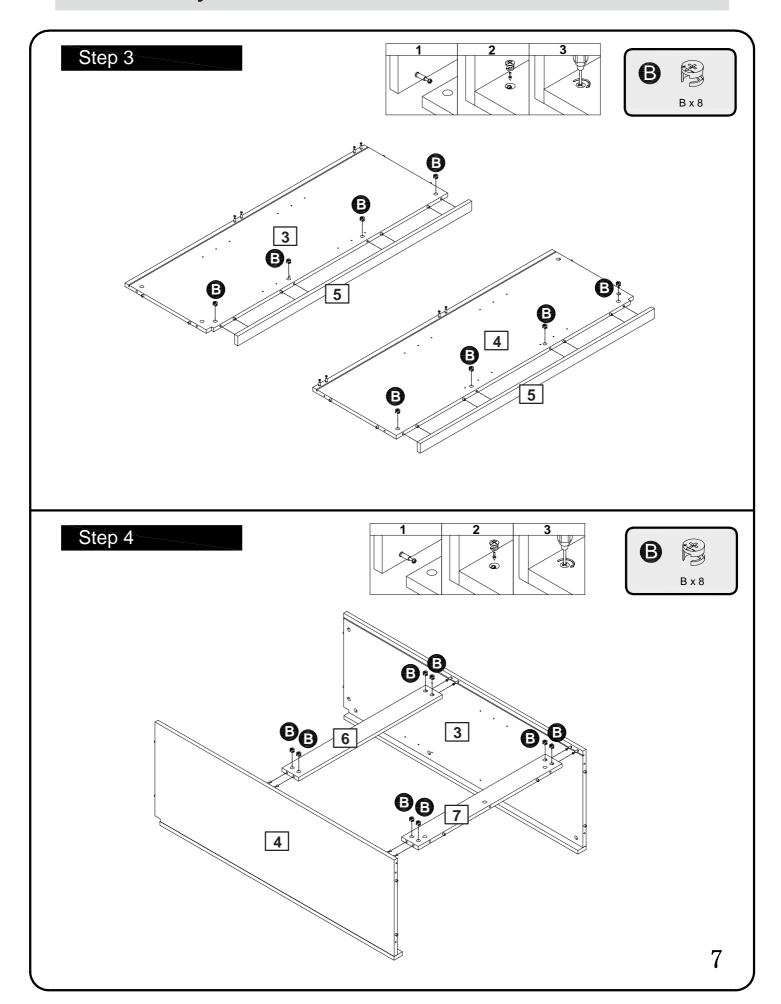


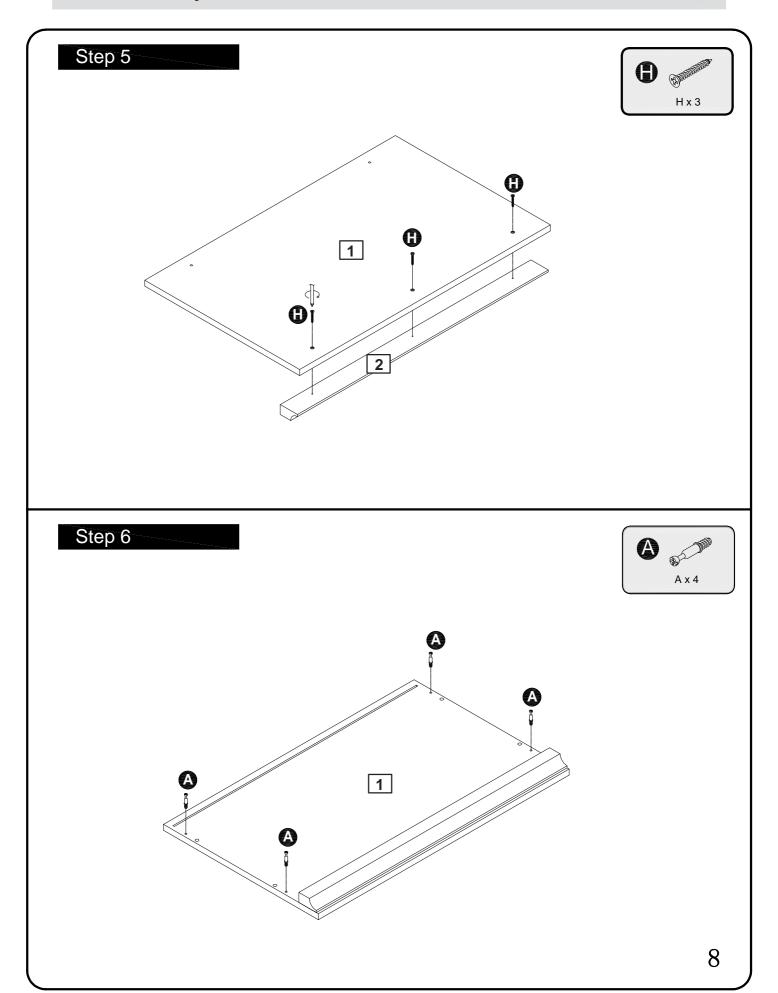


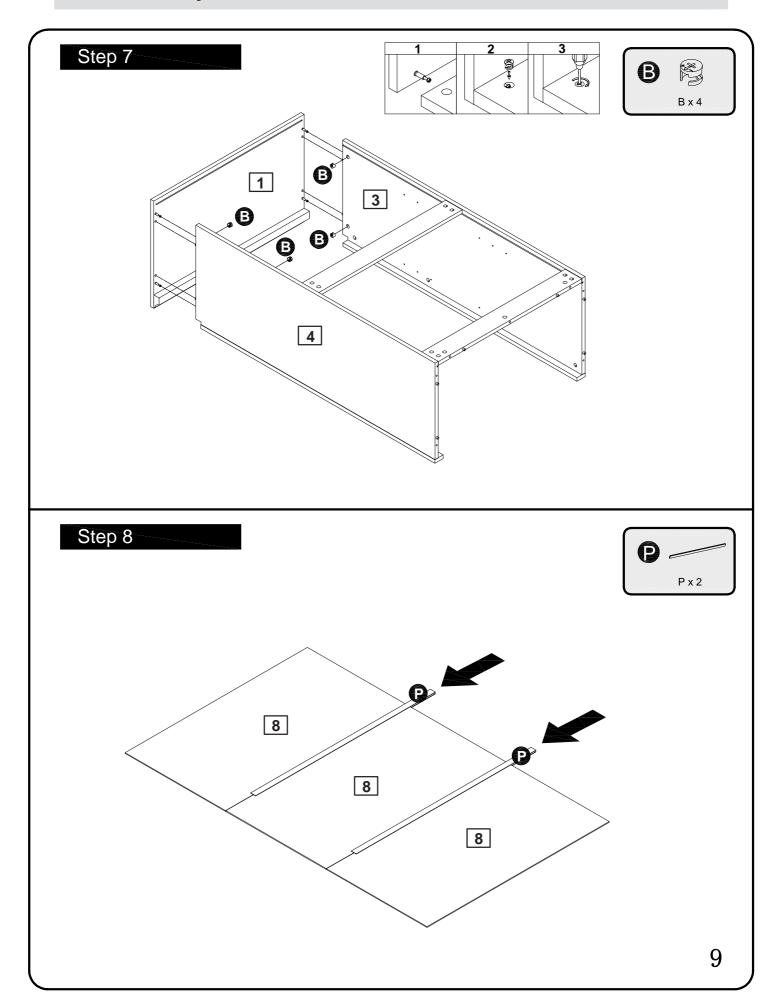


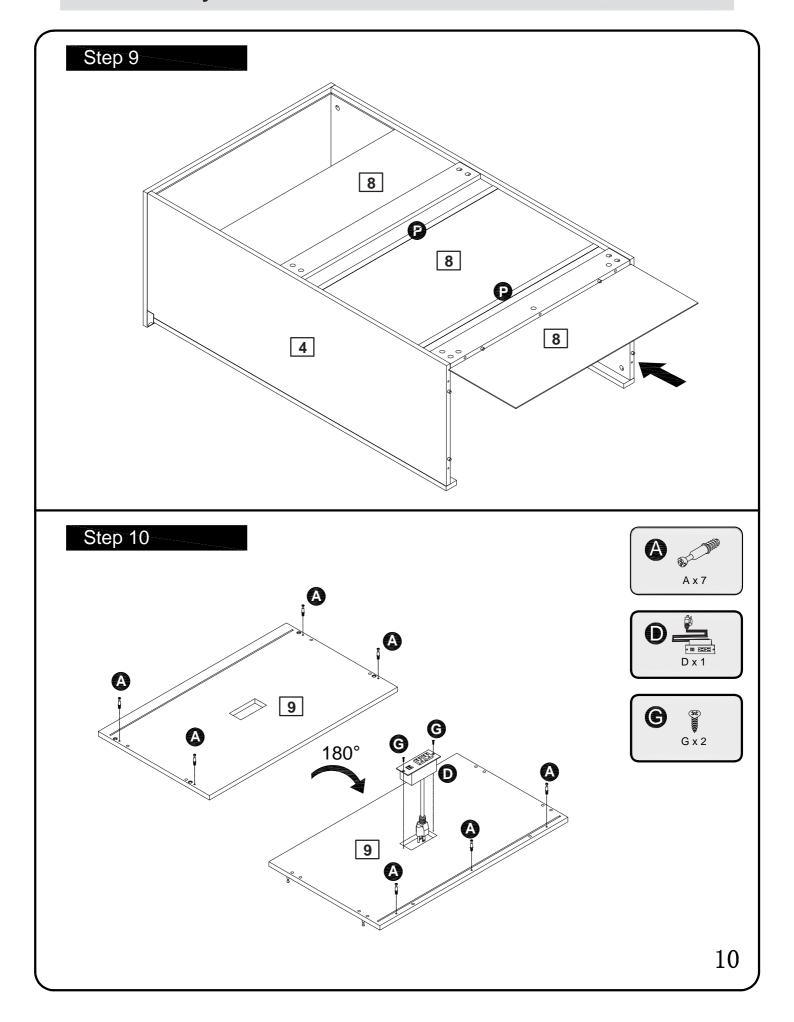


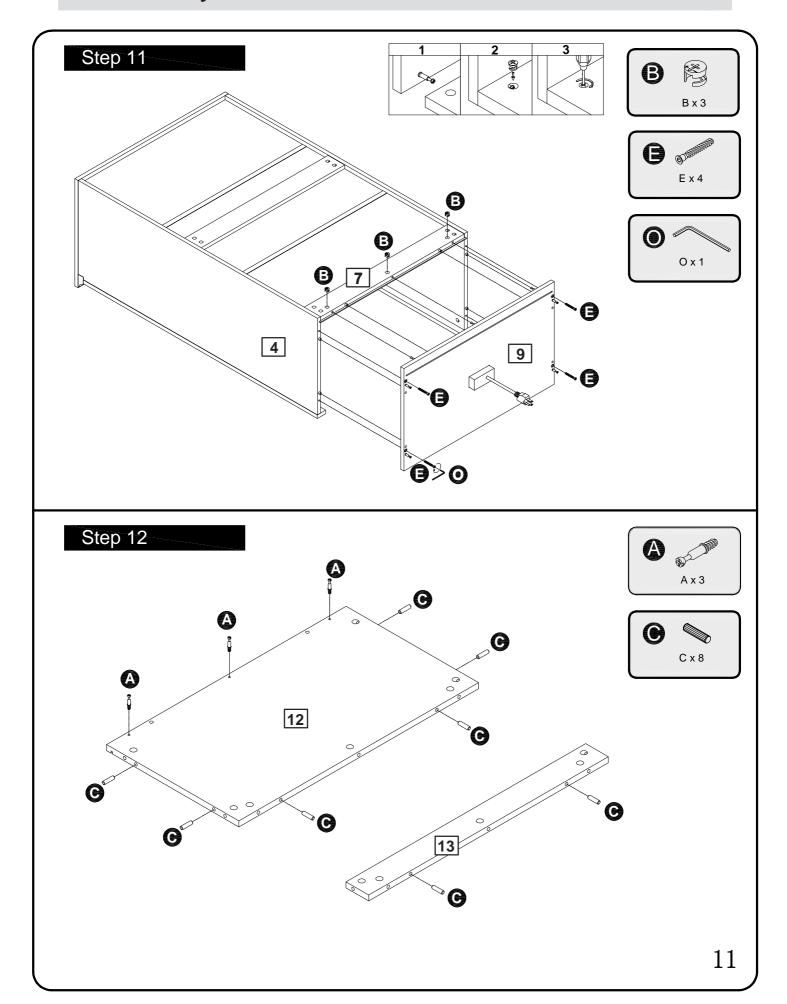


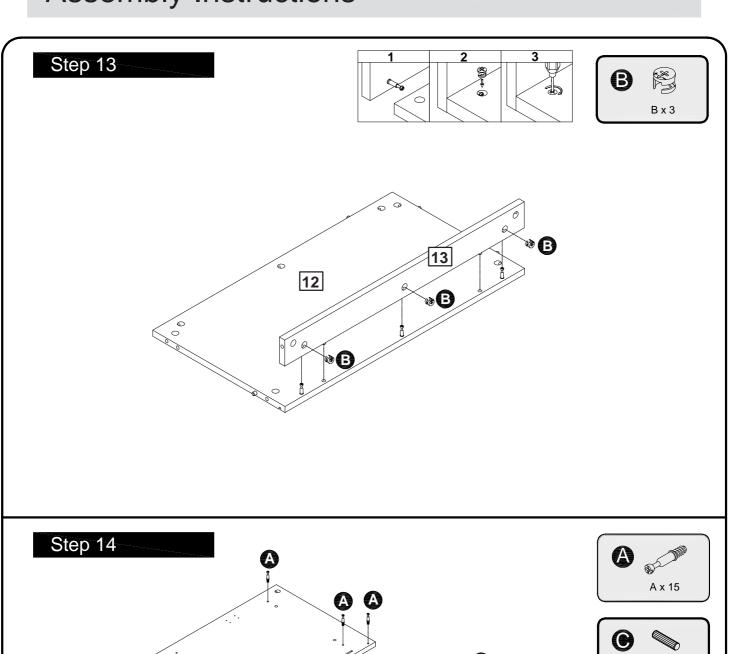


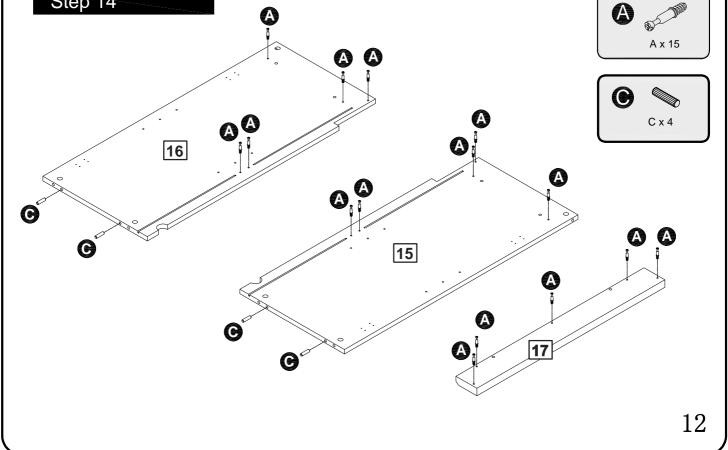


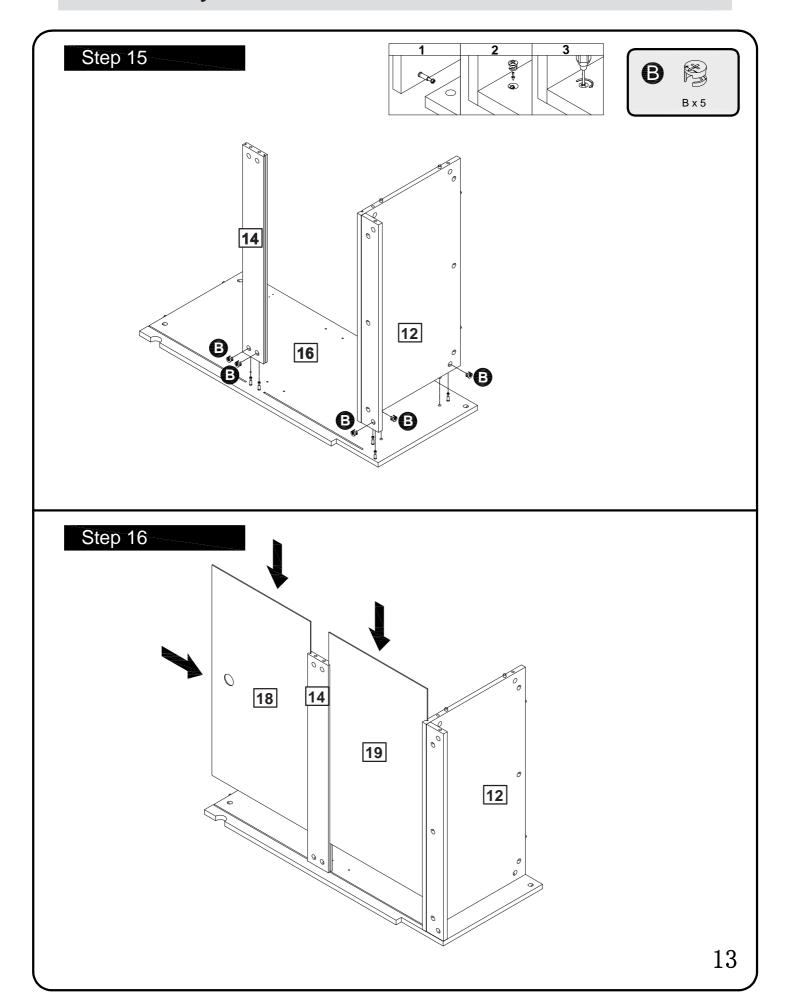


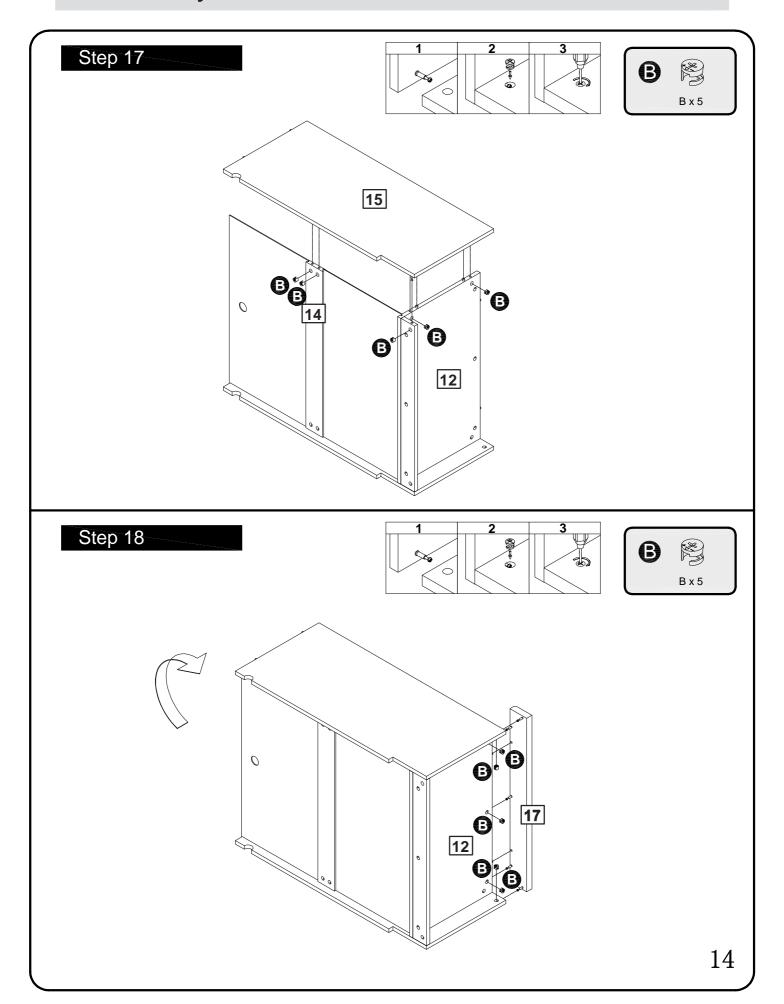


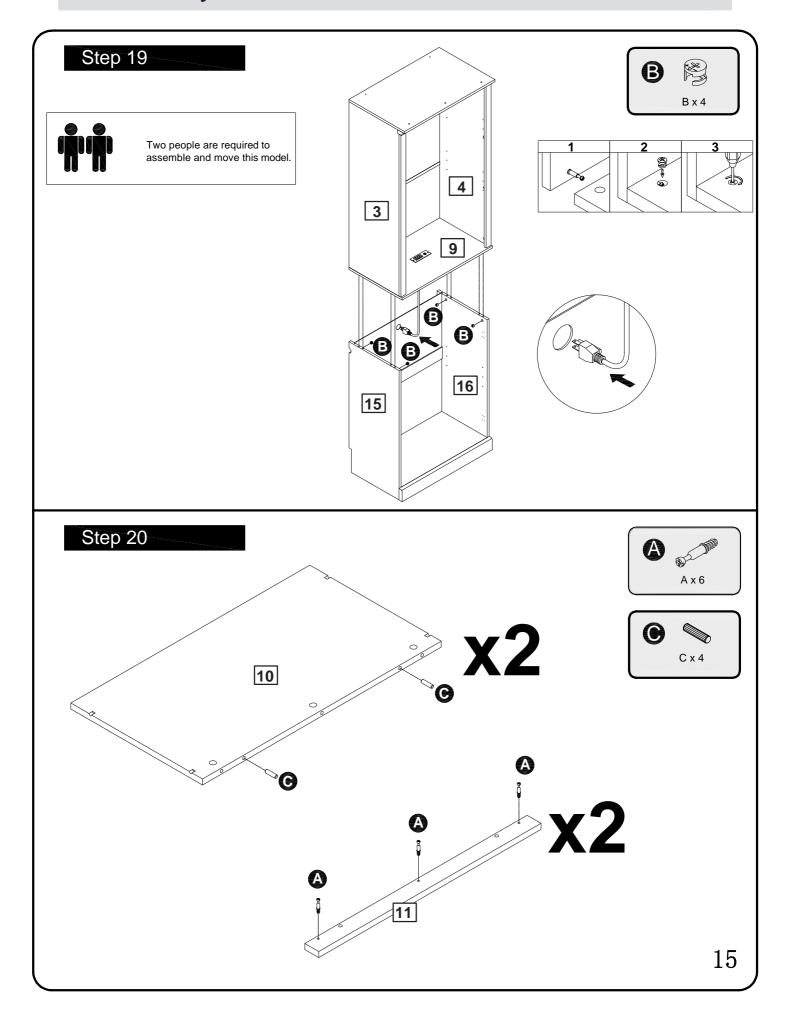

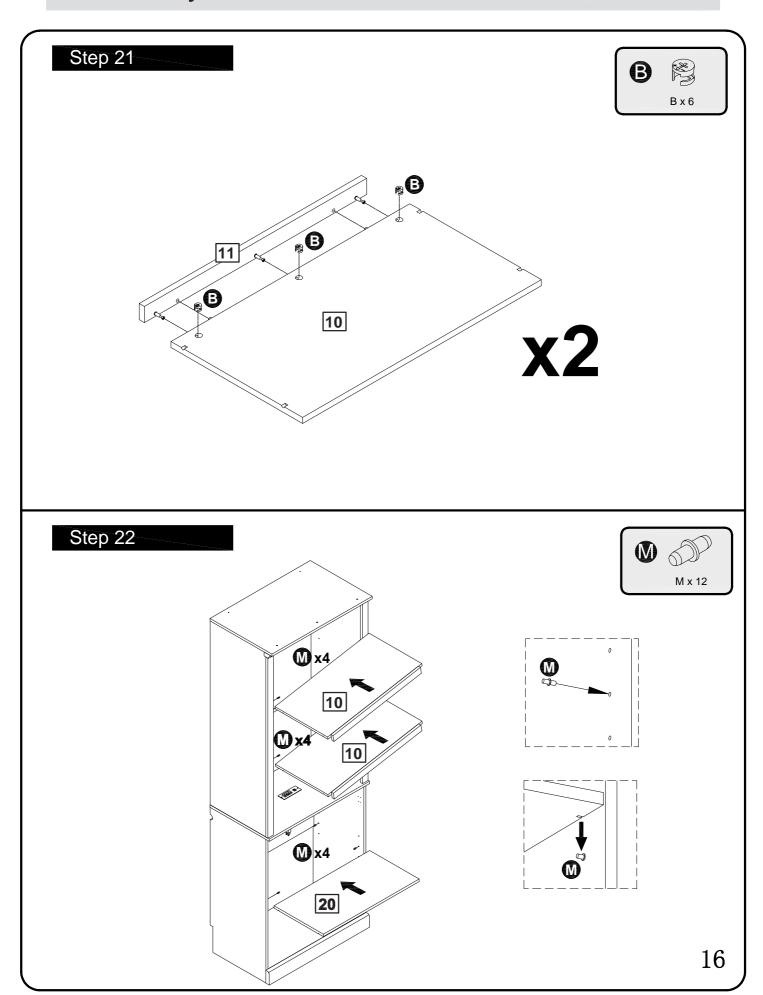

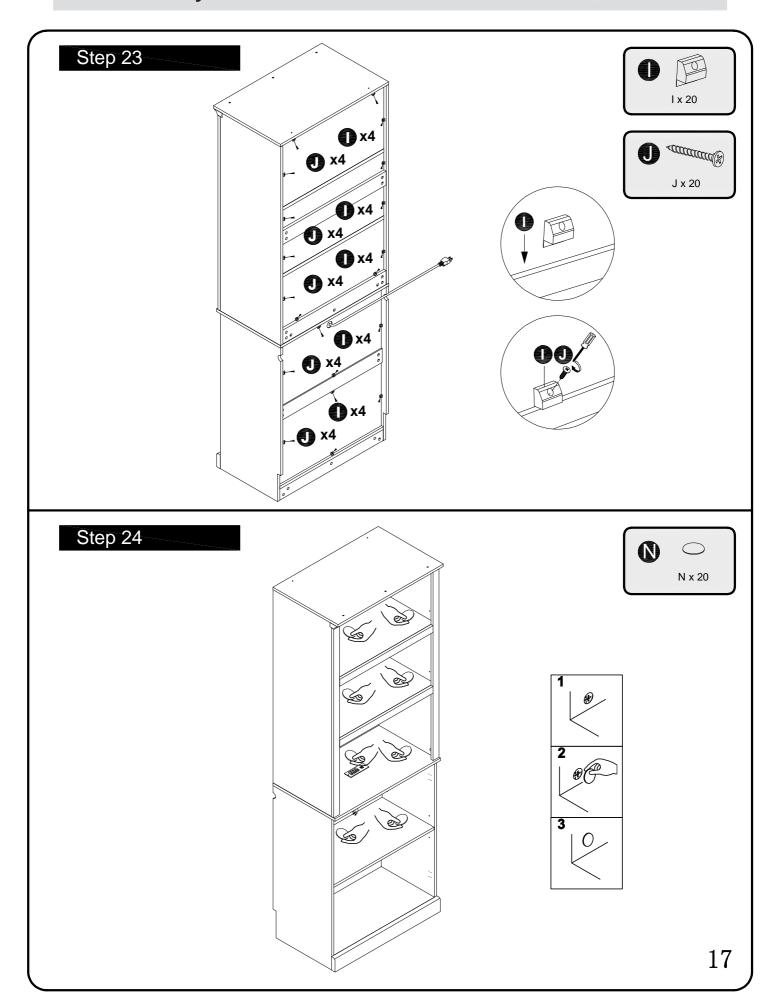

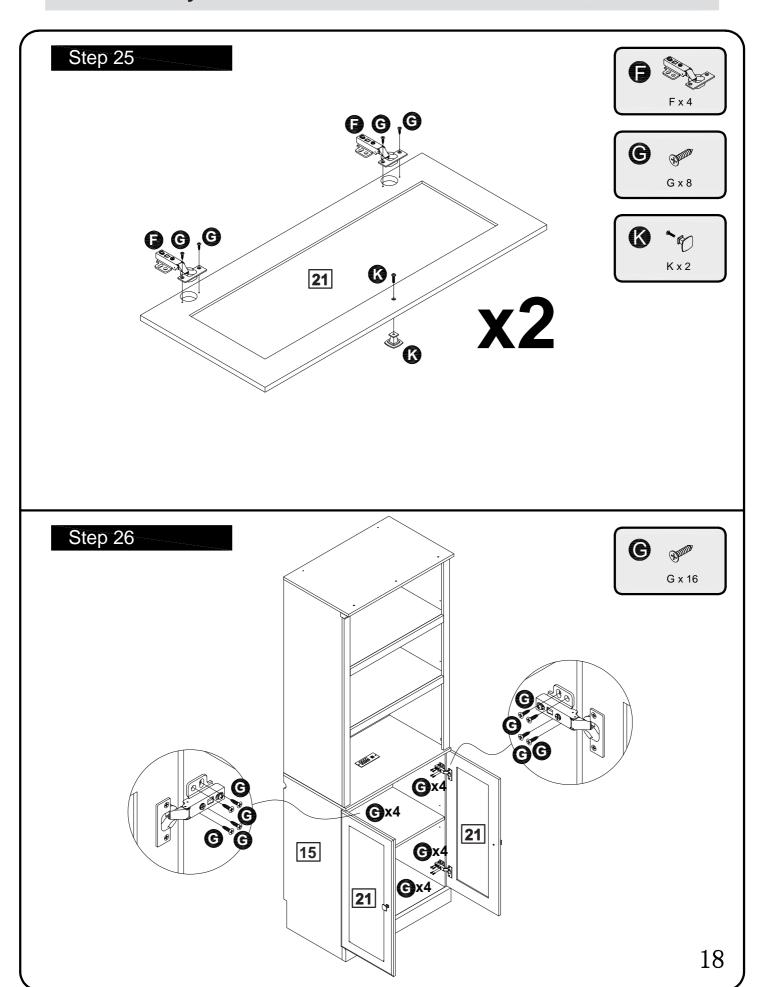

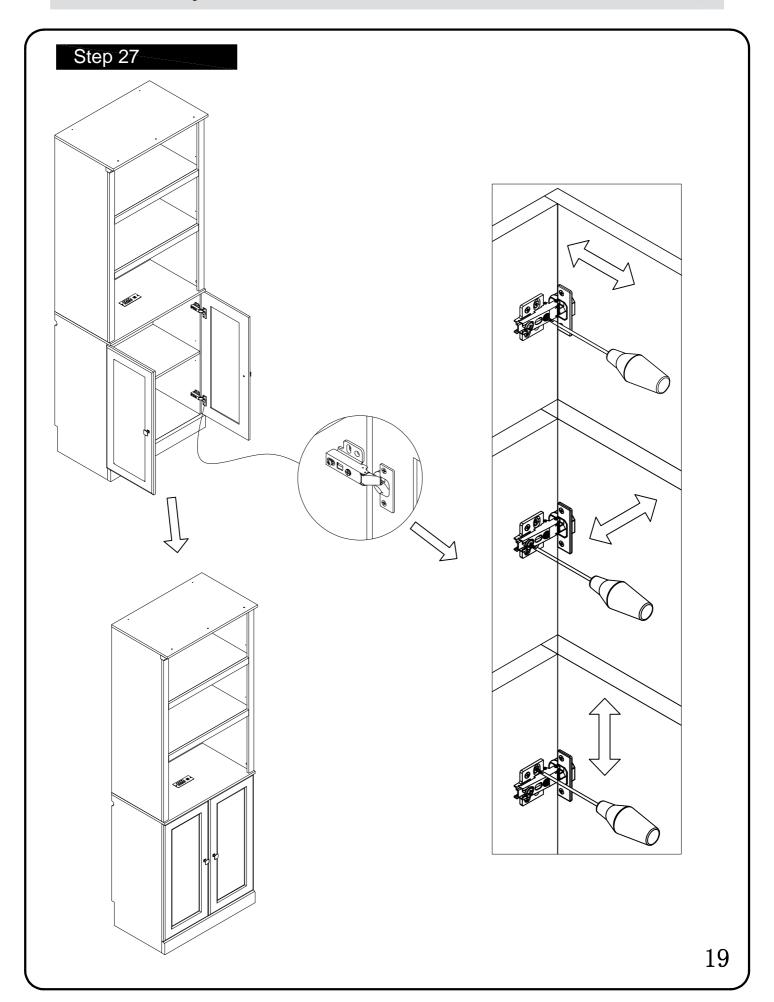


#### Step 28






#### ATTENTION:

For safety and stability, we suggest you have to secure the anti tip accessories to the wall to prevent tipping, injury, and property damage.

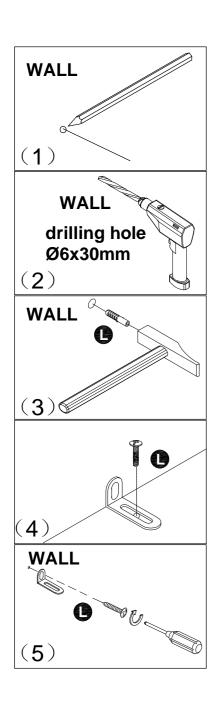



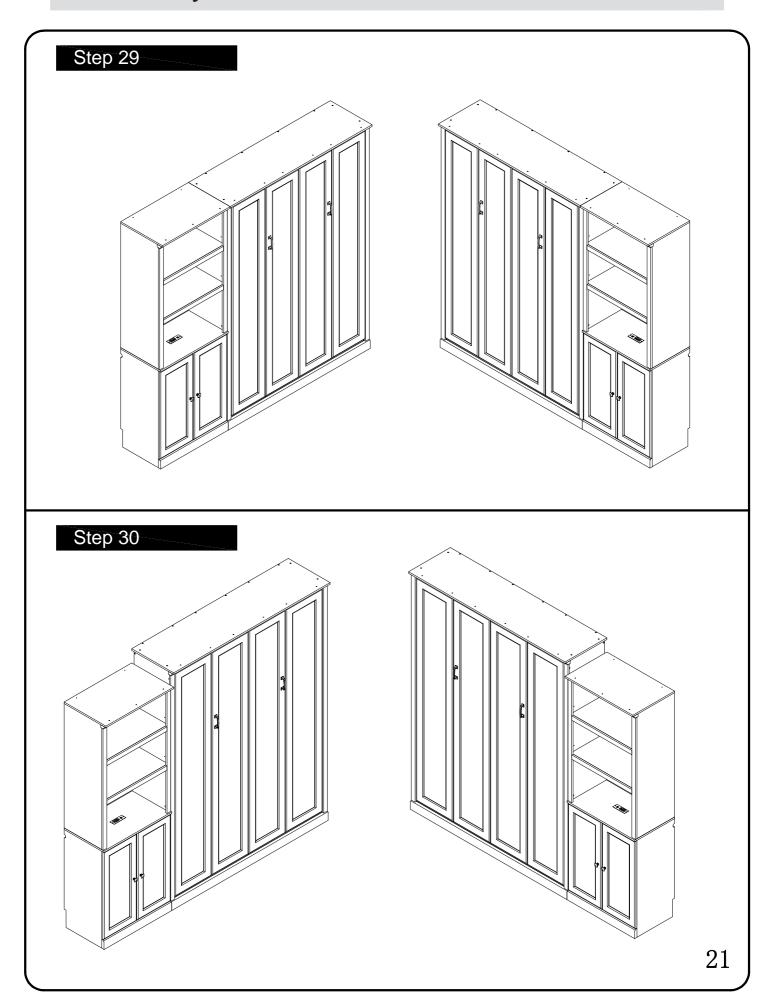

#### A Guide to Wall Mounting & Fixings

#### Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
#### Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

#### Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

#### No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 " Plasterboard" wall plug




For use when attaching light loads onto plasterboard partitions.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.4 " Cavity Fixing – Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 " Shield Anchor" wall plug – heavy loads



For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.