

Note Safe use method:

1. Please read all the materials carefully before you use the electric cooker for the first time.
2. When using, the thermostat is connected to the pot body in place, and then batched on the power supply.
3. After you have finished using the thermostat, then set to the "OFF" position, and then the power finger is unplugged. Only the electrical accessories provided by the company can be used to avoid accidents.
4. Avoid wire contacting with high temperature objects, pot body should be placed on a safe horizontal plane, avoid collision and causing burns.
5. When there is hot soup or hot oil, please move carefully.
6. When there is hot oil, you should take care of it: when frying, please do not close the cover. Please do not touch the thermostat when using, be careful of the beam hand.
7. Before cleaning, unplug the temperature control zone and place it in a dry place, so that it will naturally cool down to avoid electric shock, and do not lose the thermostat and plug in liquid or water. Do not change its purpose.
8. When cleaning, put a small amount of cleaning agent or water in the pot. and then dry the pot body with soft cloth. Electrical base is strictly prohibited to immerse. or ask the base to pour water. so as not to cause leakage, endangering safety.