





working. If your bulb not working, first replace the bulb, and if it still doesn't work, please check whether the copper inside of the socket is pop-up.6: if you meet any problem, please contact with us simon@werfactory.com

http://www.china-lamp.org