 


ASSEMBLY INSTRUCTIONS

36 INCH CABINET

 
 
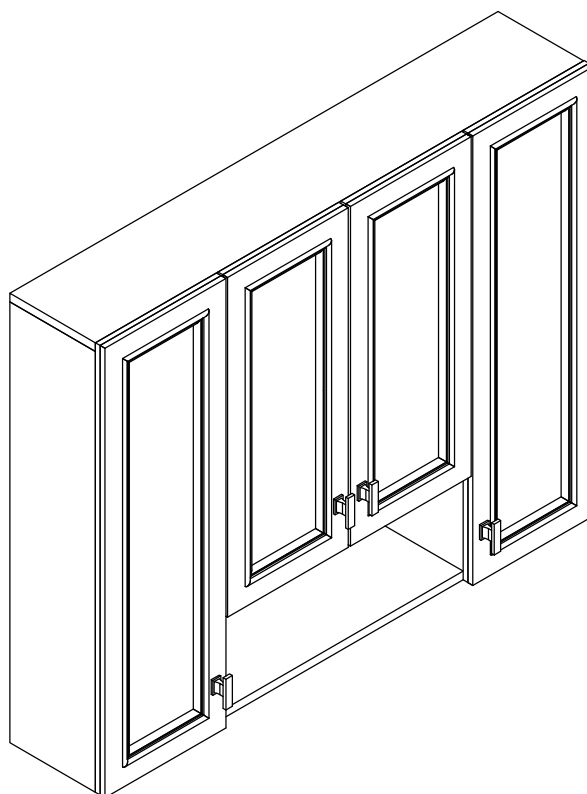 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

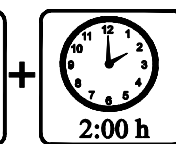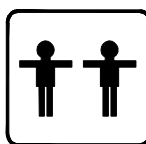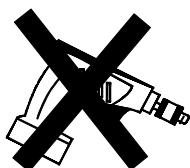

Tools Required

 

(Not included)

 

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation








Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions






 
 
 
 
 
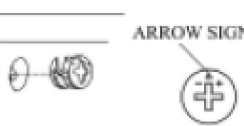 
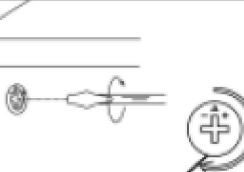 
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

 Detail View - CABINET



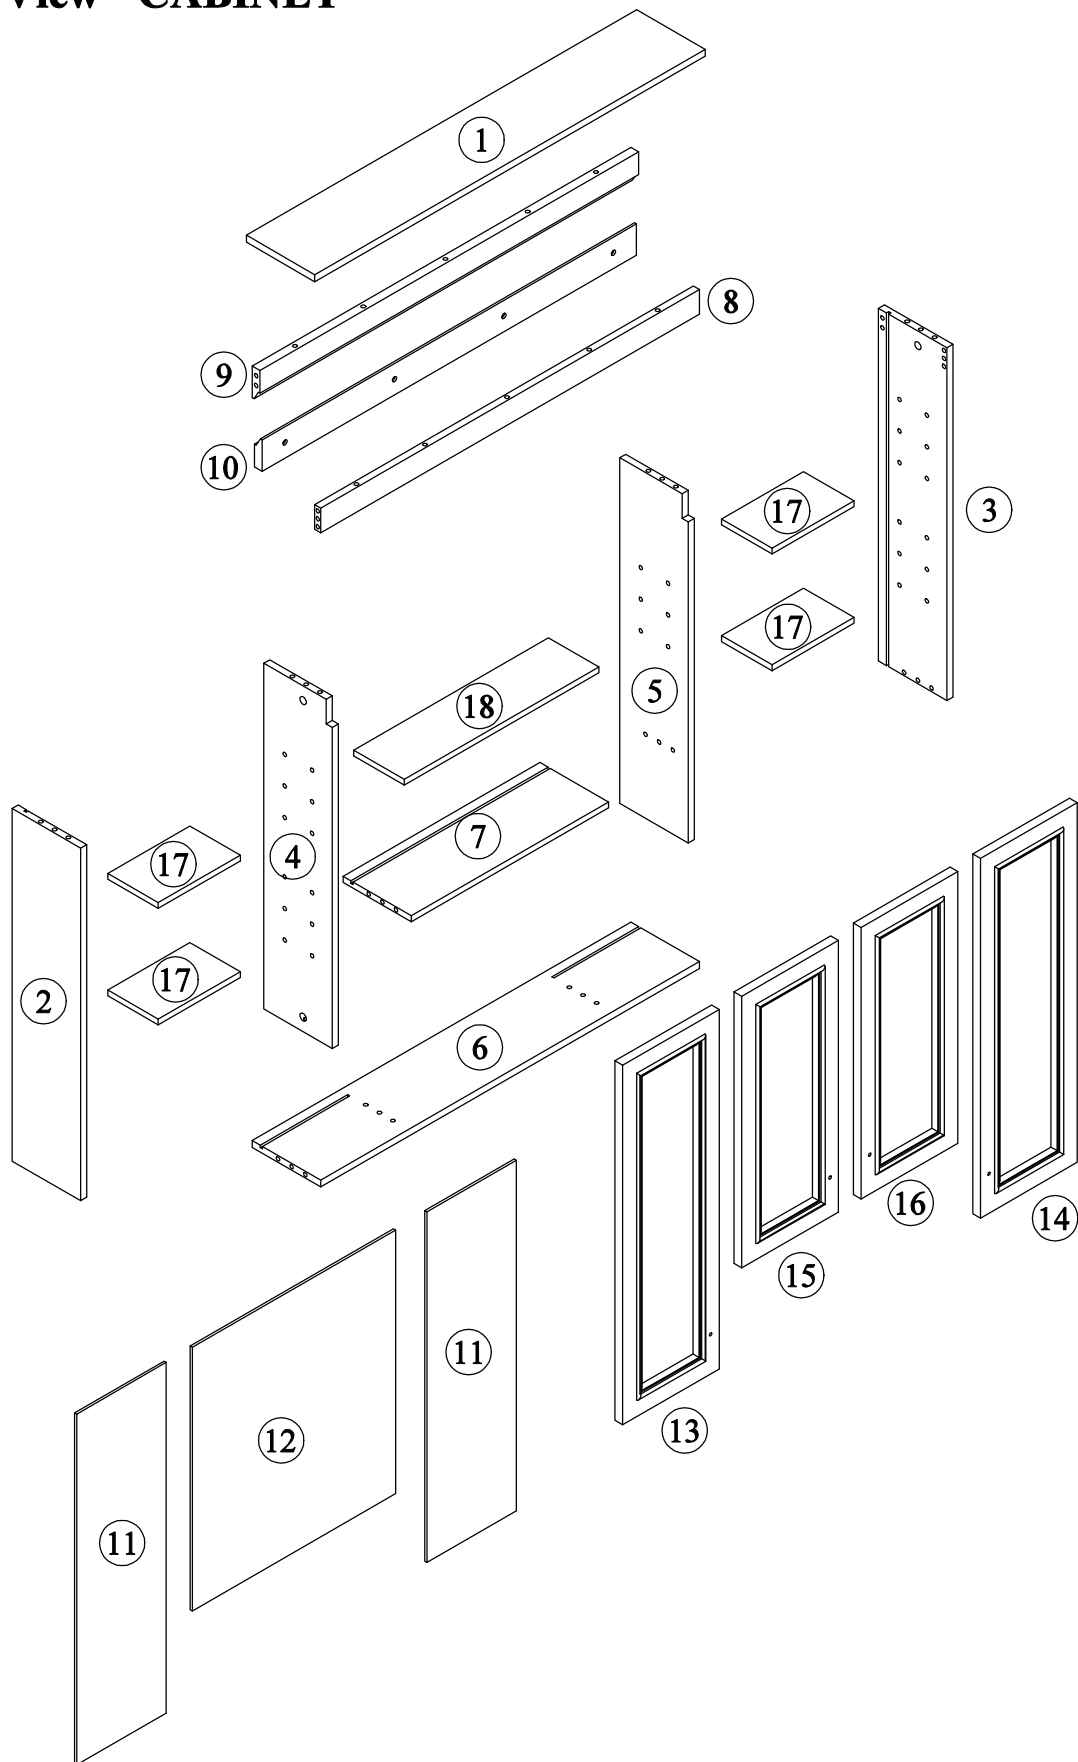


Identifying the Hardware-Identify the hardware using the illustrations below.

          
 
 
Part List - N710P358592

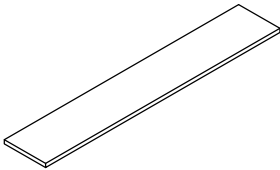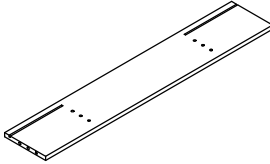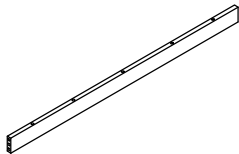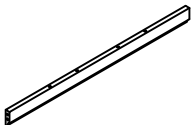1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Side Panel Right - 1pc	4	 Mid Panel (L) - 1pc
5	 Mid Panel (R) - 1pc	6	 Mid Panel - 1pc
7	 Mid Panel - 1pc	8	 Front Top Bar - 1pc
9	 Rear Top Bar - 1pc	10	 Connect Bar - 1pc
11	 Back Panel (A) - 2pcs	12	 Back Panel (B) - 1pc
13	 Door Cabinet (A) - 1pc	14	 Door Cabinet (B) - 1pc


 
 
 
Part List - N710P358592

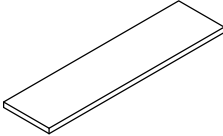15  Door Cabinet (C) - 1pc	16  Door Cabinet (D) - 1pc
17  Adjustable Shelf (A) - 4pcs	18  Adjustable Shelf (B) - 1pc

   Hardware List - N710P358592


A  ø6x35mm	B  ø14.5x9mm	C  ø10xø5x50mm
Three in one bolts (20pcs)	Three in one lock (20pcs)	Flat head screw (4pcs)
D  ø12x55mm	E 	F  ø5/32" x25mm
Plastic stopper (4pcs)	Handle (4pcs)	Handle screw (4pcs)
G 	H 	I  ø7xø3.5x15mm
Damping hinge (4pcs)	Damping hinge (4pcs)	Flat head screw (48pcs)
J 	K  ø8x30mm	L  ø7xø3.5x15mm
Laminate pad(20pcs)	Wood dowel (26pcs)	Round head screw(4pcs)
M  ø6x30mm Wood dowel (4pcs)		

    STEP: 1

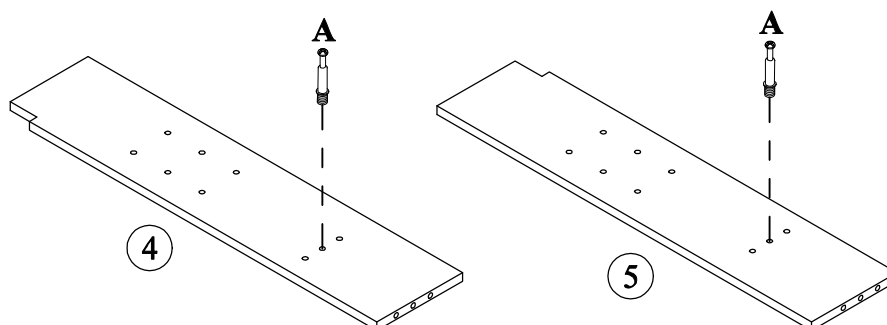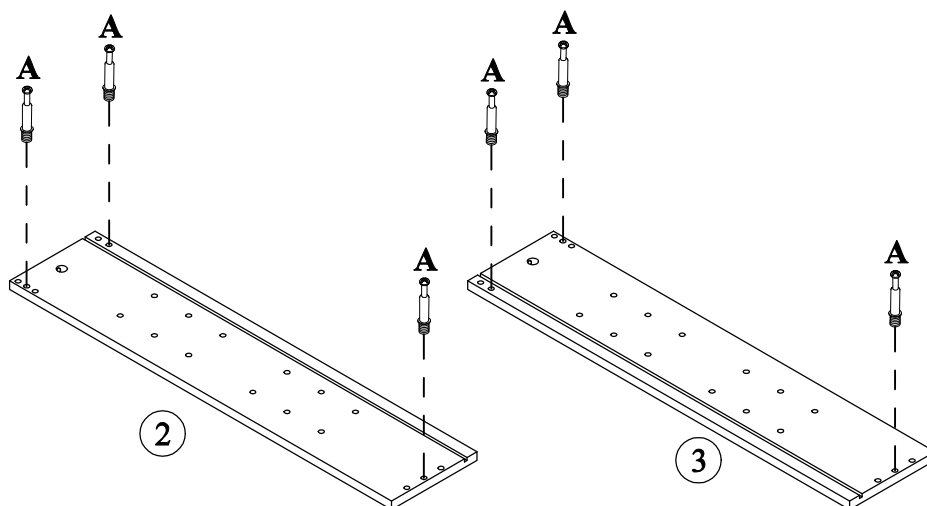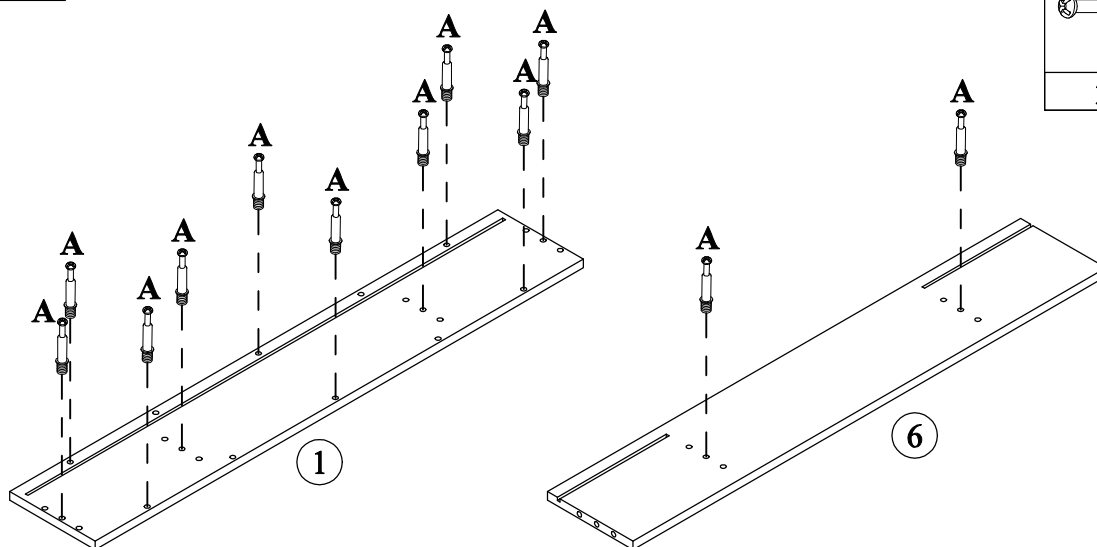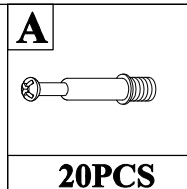


STEP: 2

B		M	
2PCS		4PCS	

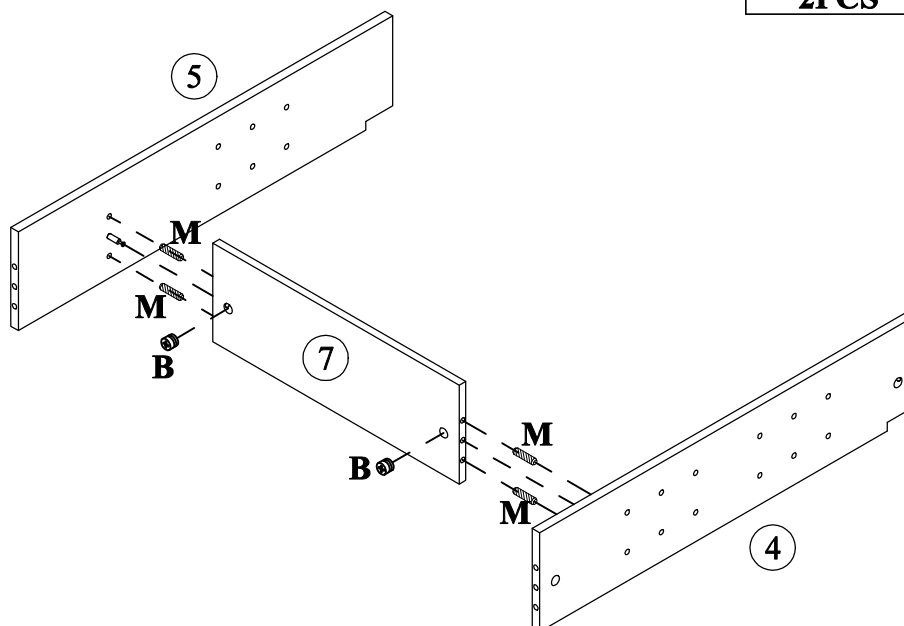 


STEP: 3


B		K	
2PCS		4PCS	

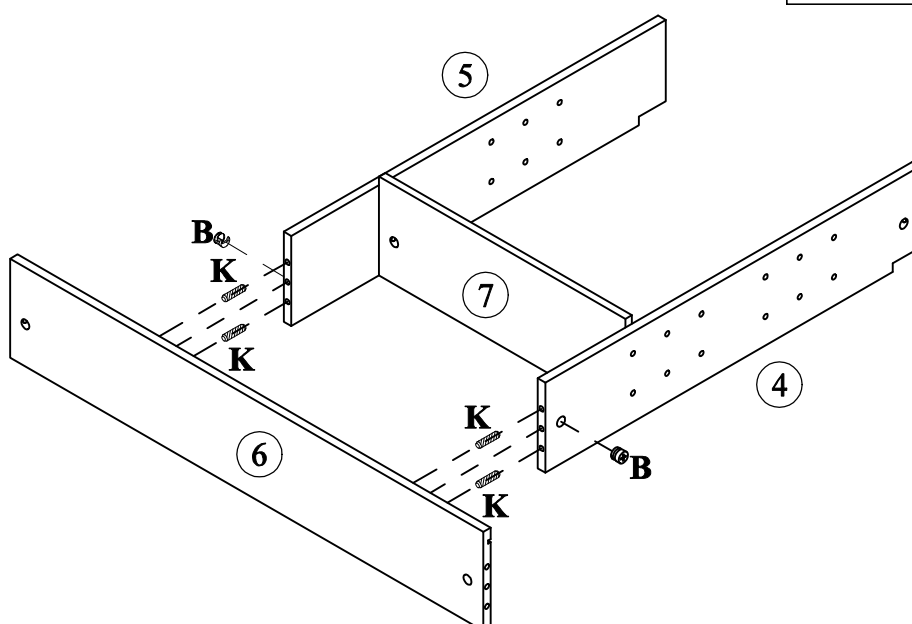 


STEP: 4

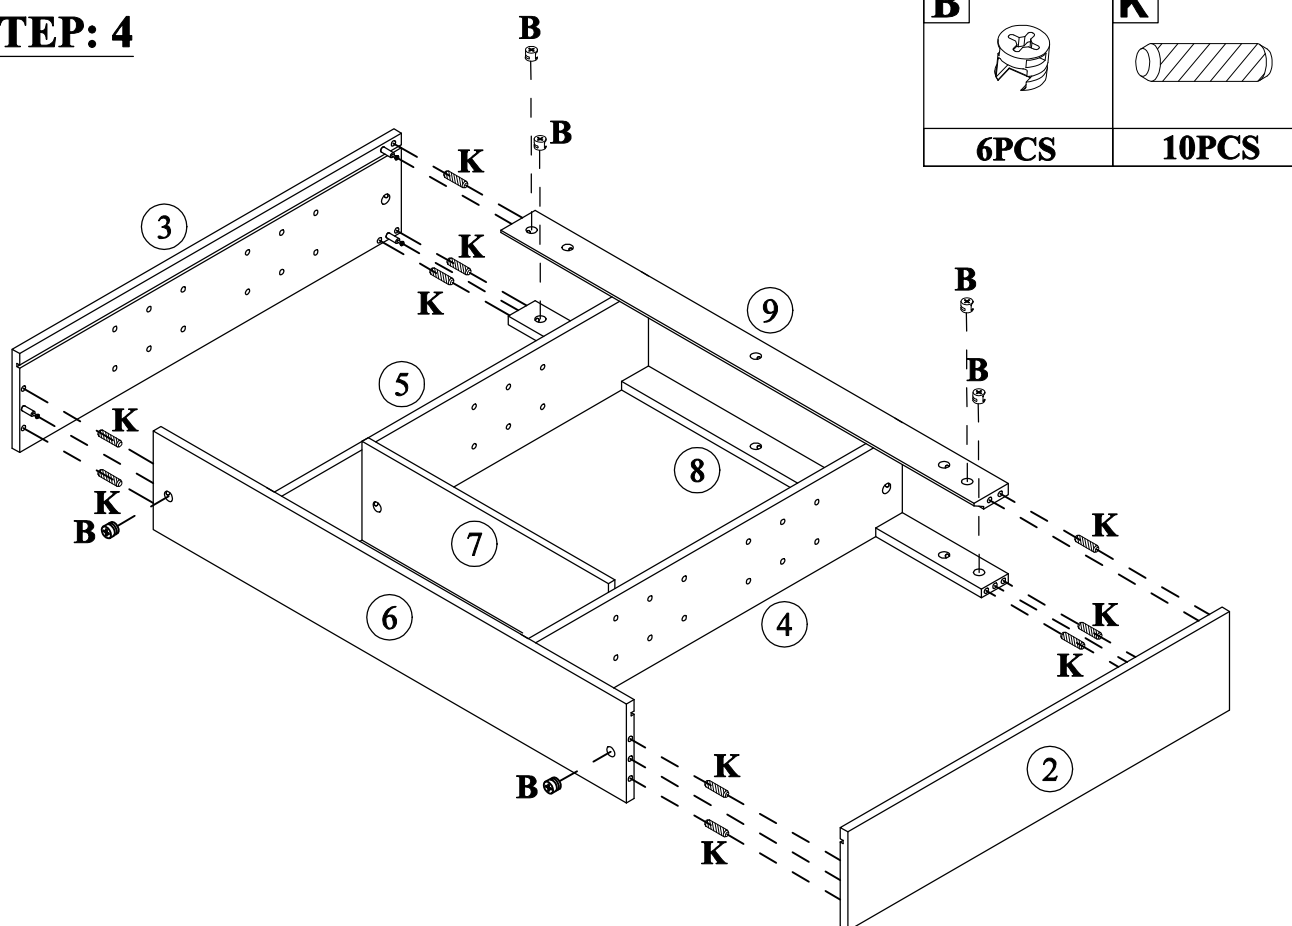 


STEP: 5

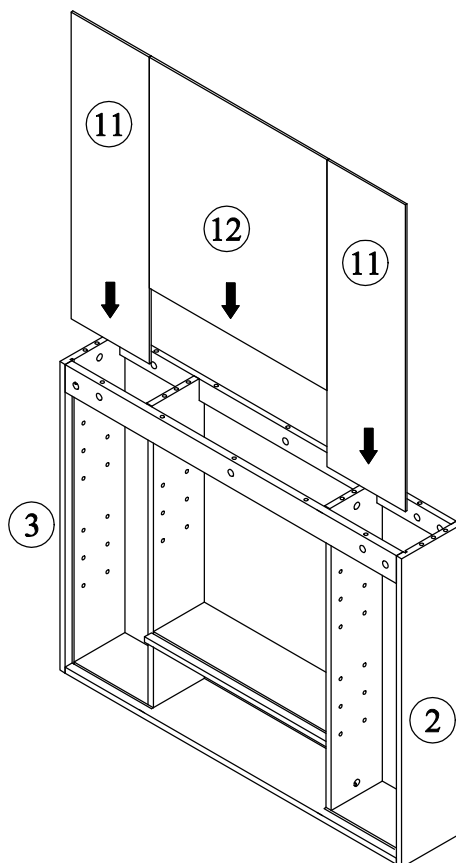 

STEP: 6

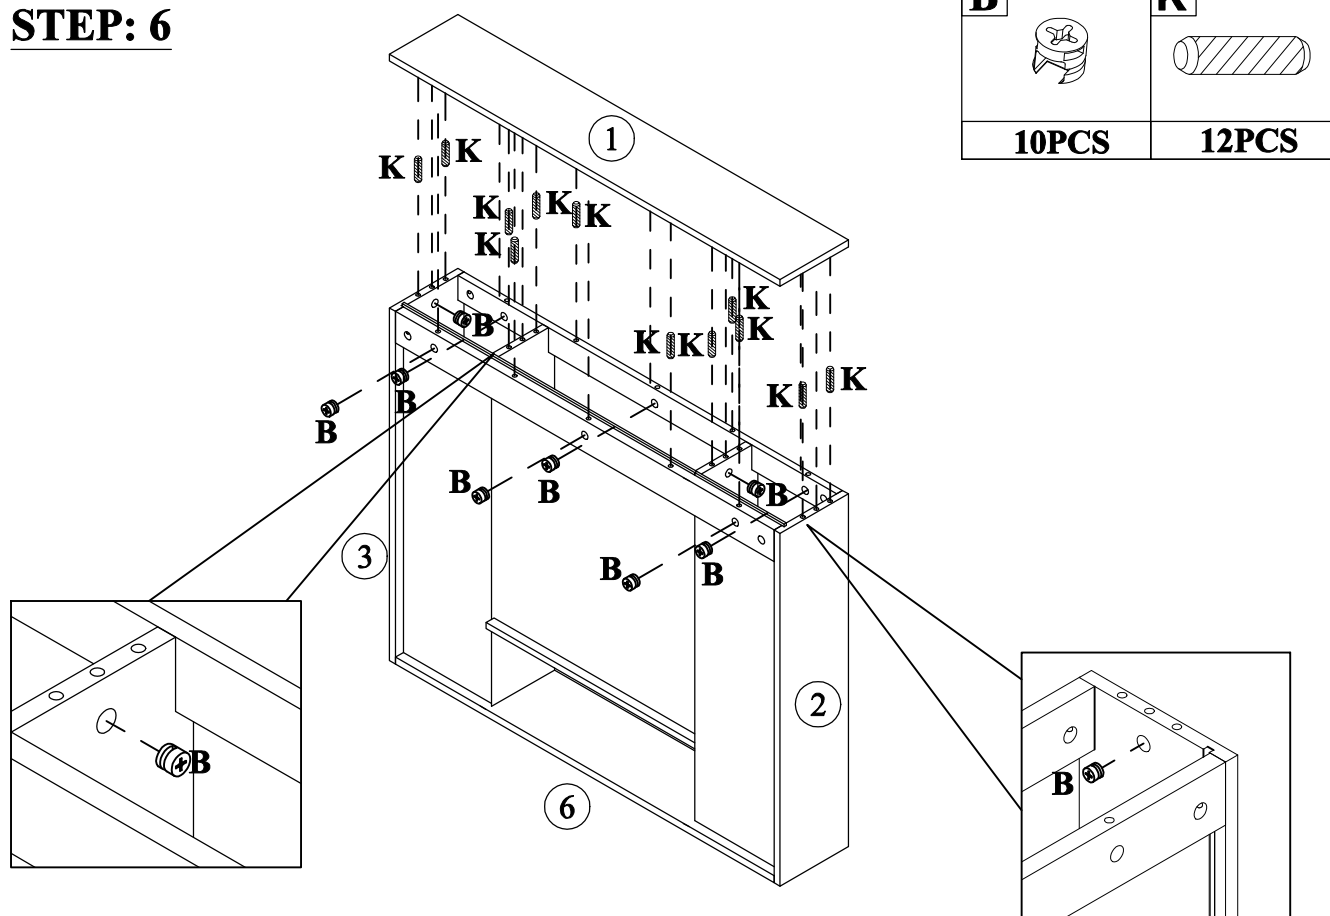 


STEP: 7

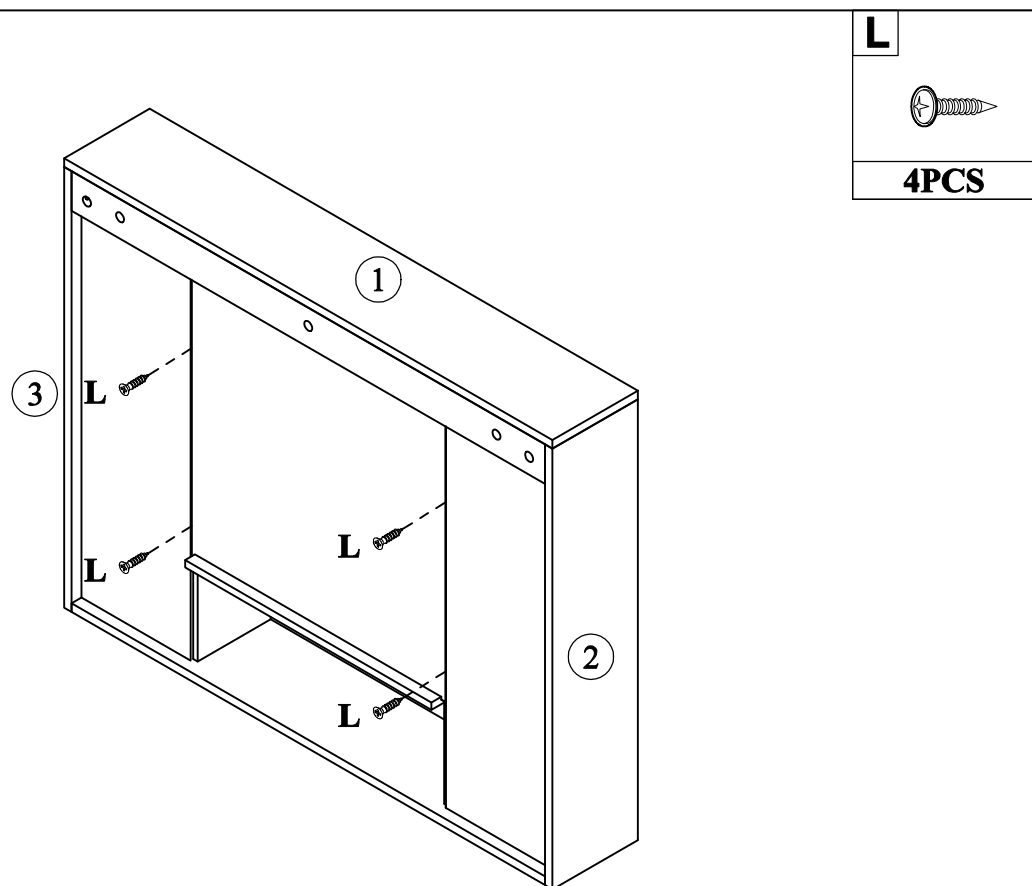 




STEP: 8

H	I
	
4PCS	8PCS


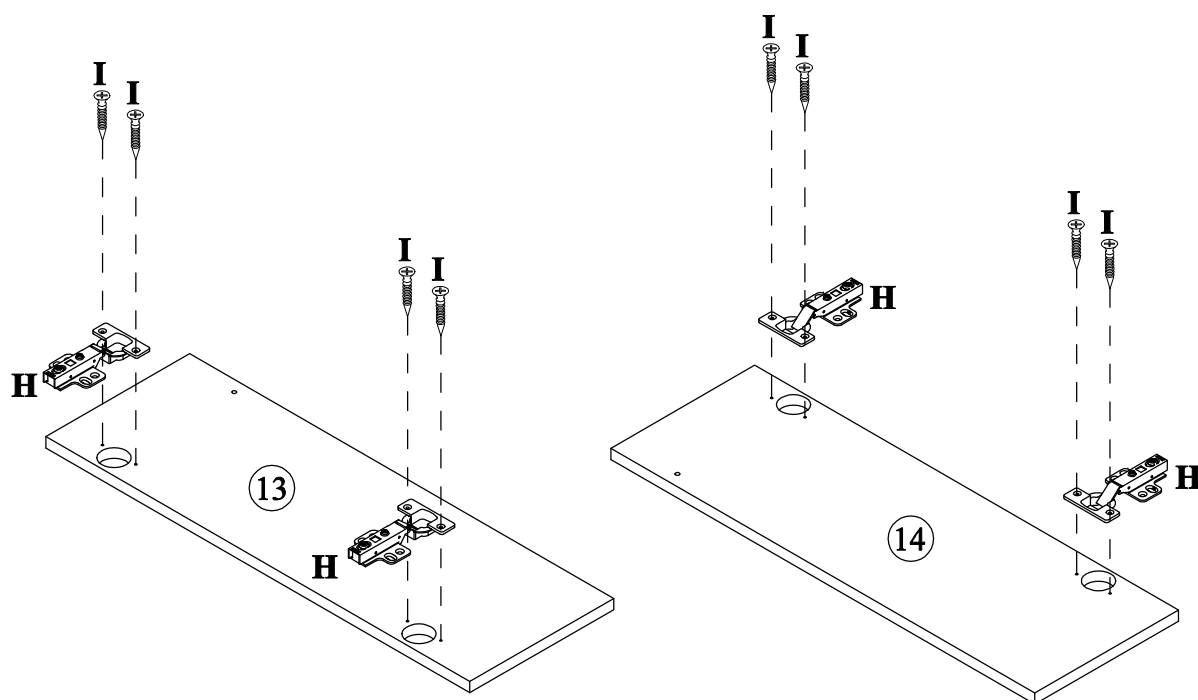 


STEP: 9

 E	F	I
		
2PCS	2PCS	16PCS

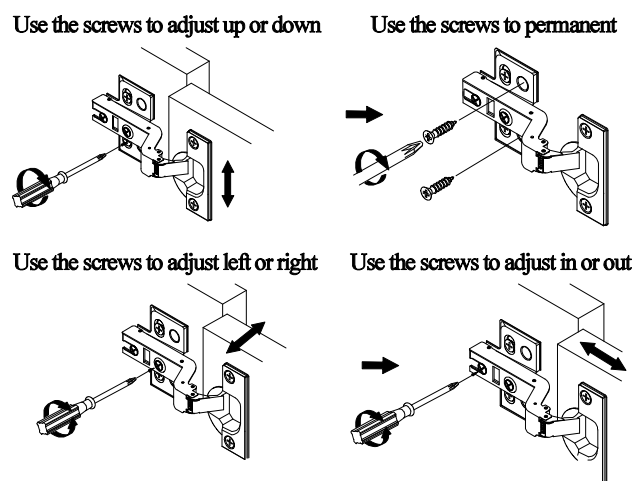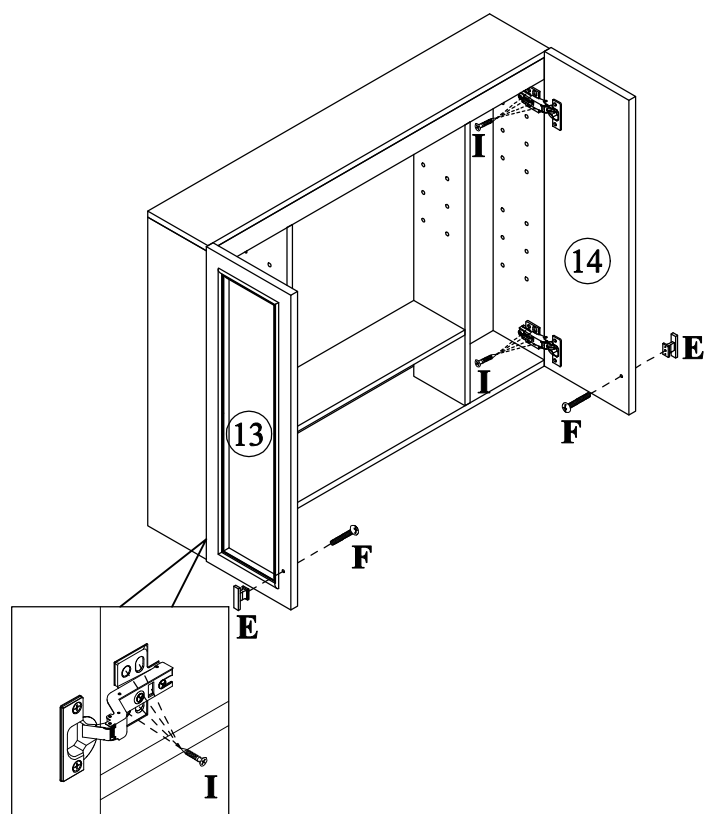  

STEP: 10

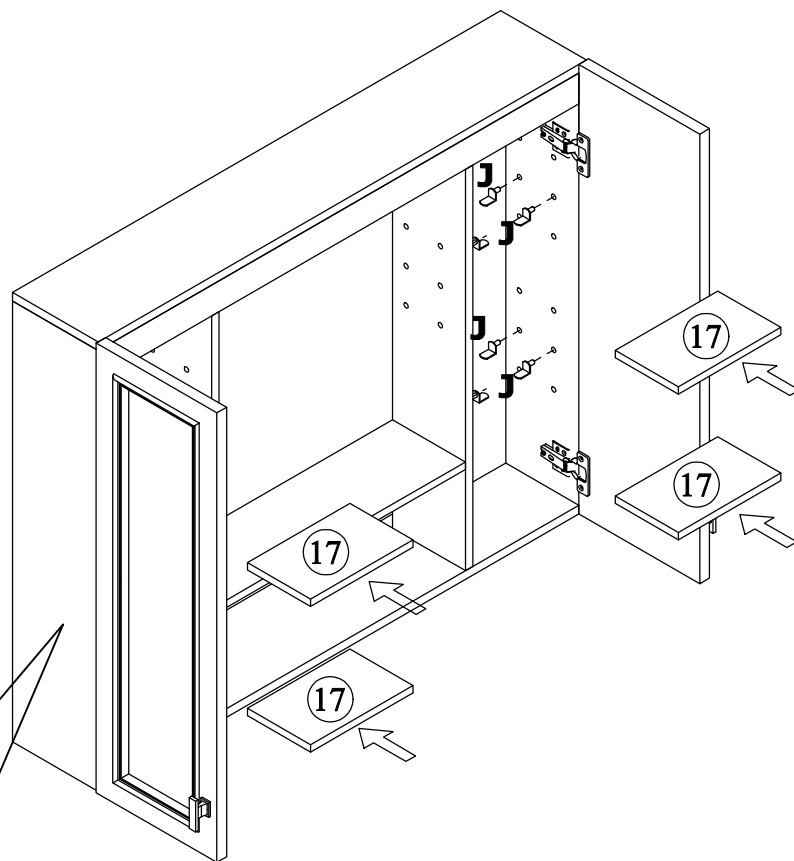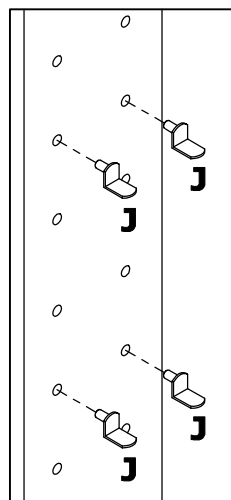  


J



16PCS

STEP: 11

 G





4PCS



I




  8PCS

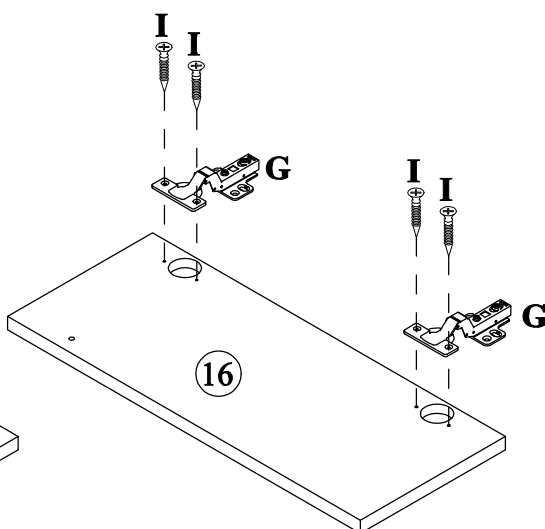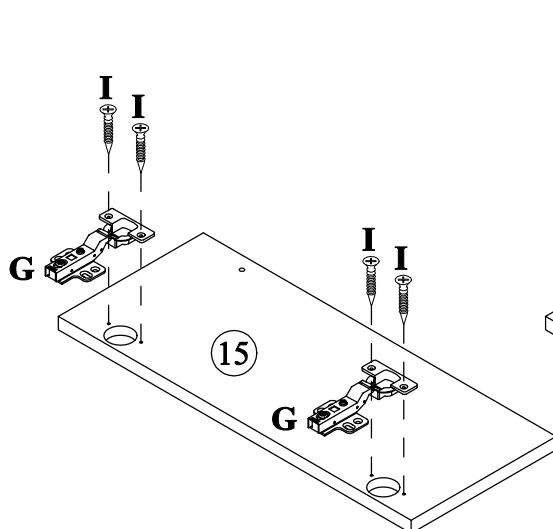


STEP: 12

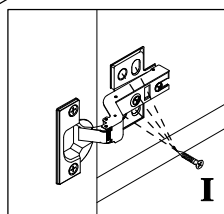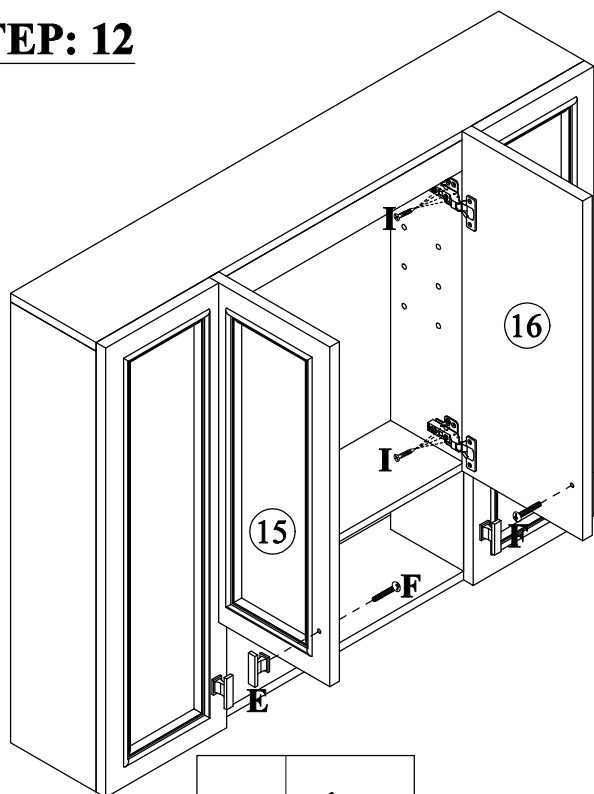  


 E		F		I	
2PCS		2PCS		16PCS	

 
Use the screws to adjust up or down

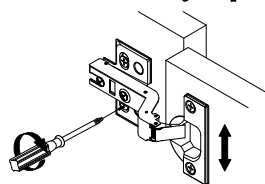


Use the screws to permanent

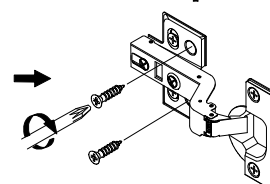 



Use the screws to adjust left or right

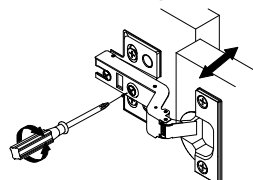 

Use the screws to adjust in or out

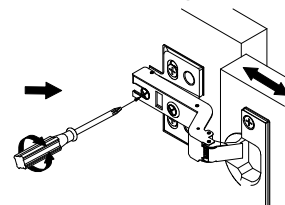 


STEP: 13

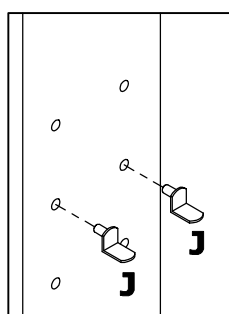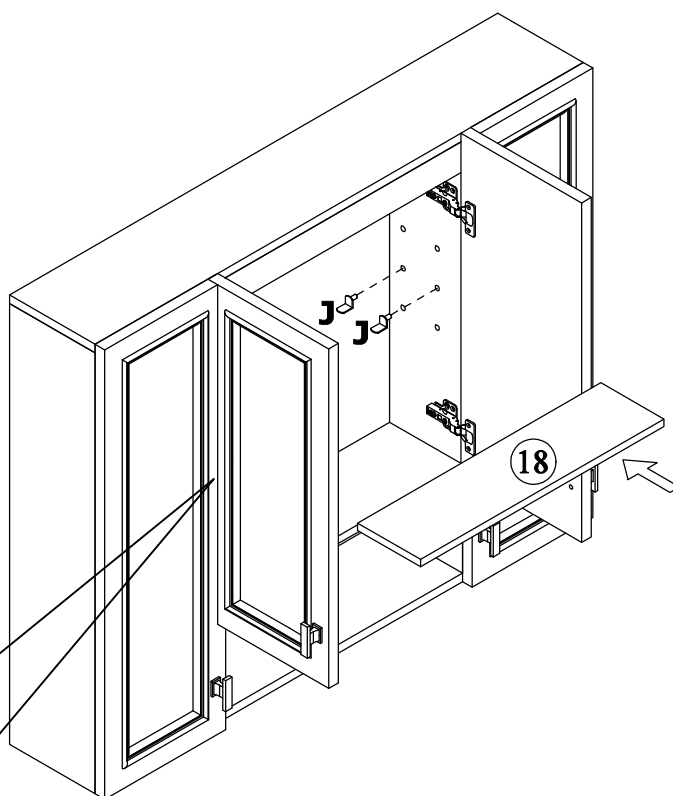  


J	
4PCS	

 STEP: 14

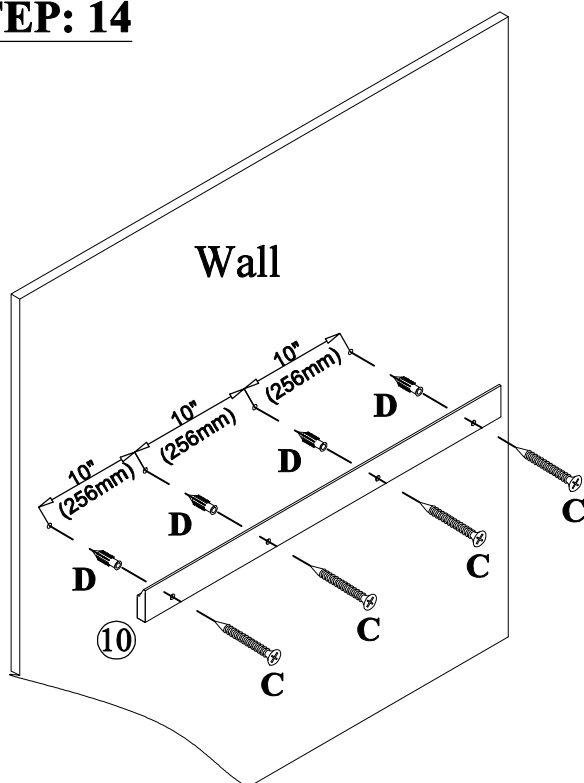


C	D
4PCS	4PCS

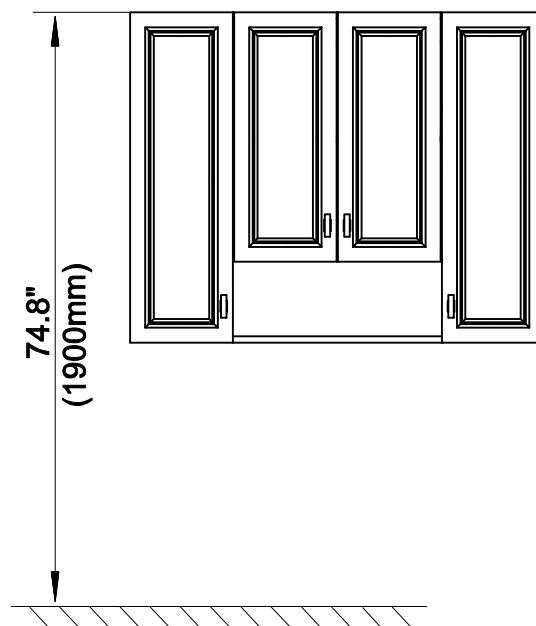 


Draw the spacing between the walls and the No.10, punch holes in the wall, and fix the No.10 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".

 
STEP: 15

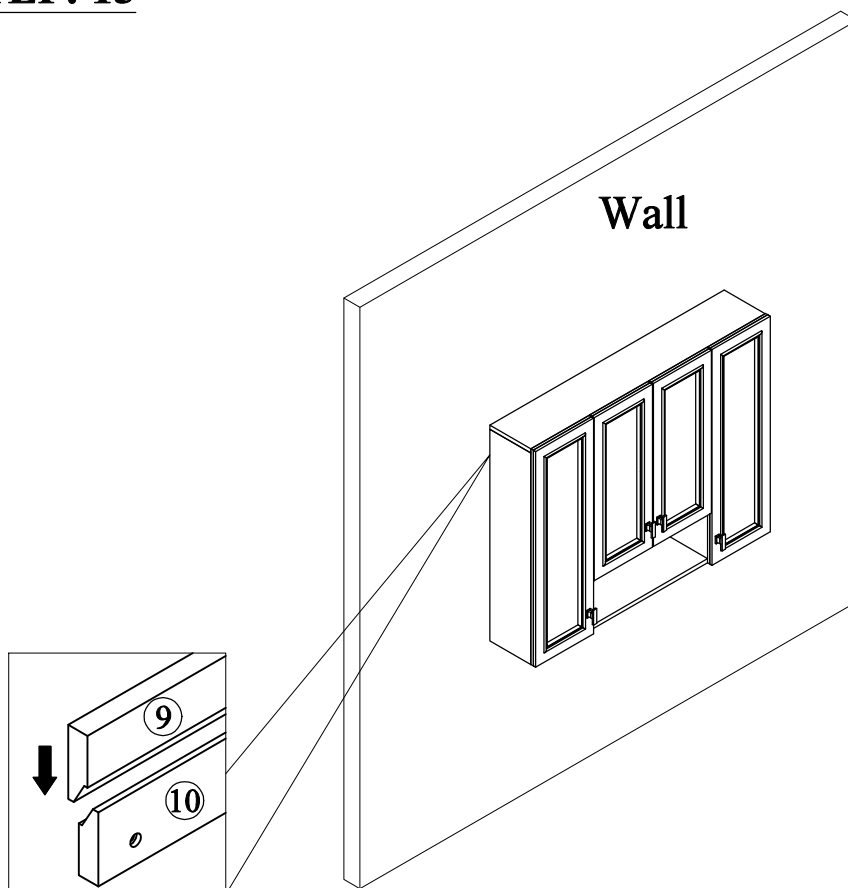

STEP: 16

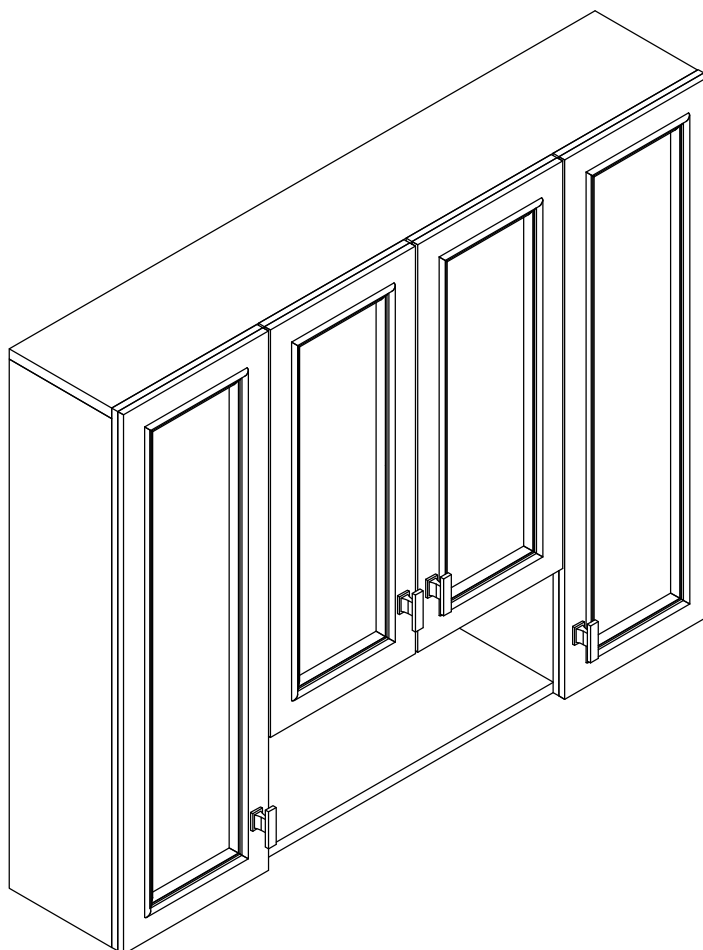 

HINGE ADJUSTMENTS

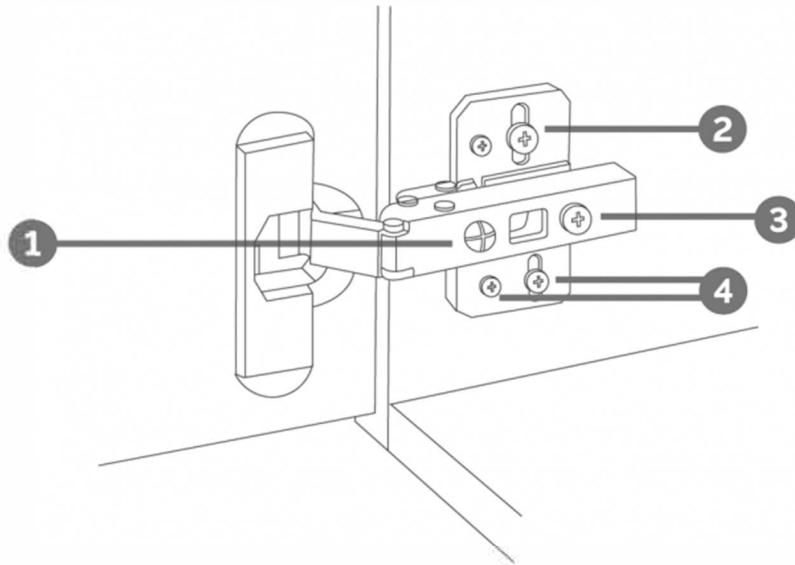 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

 anticlockwise to move the door closer to the side of the cabinet

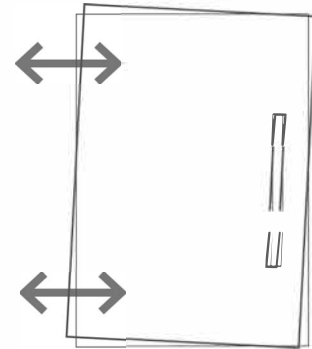


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

 anticlockwise to move the door down

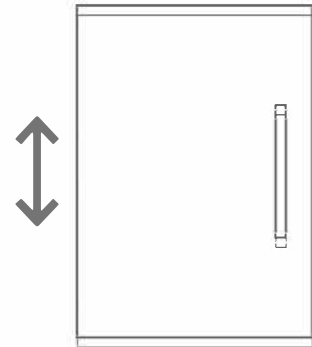

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

