 


Tower Fan

Instruction Manual

TS-35IN

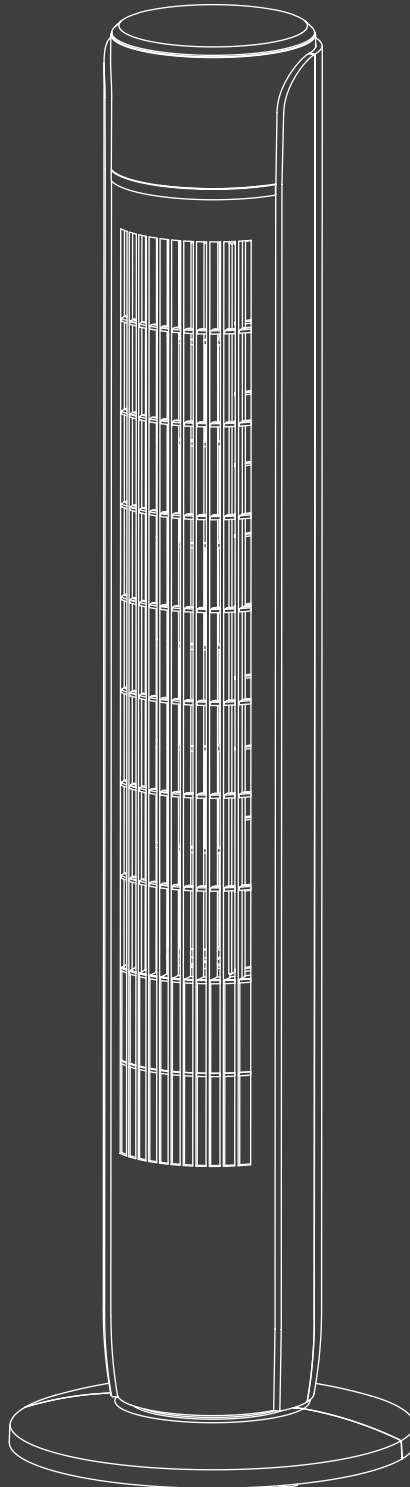

✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM

IMPORTANT SAFEGUARDS

1. Please read this user manual carefully before using the product and keep it for future reference.
2. When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- This fan is for household use only.
- Before using the fan for the first time, please check that your voltage matches the product nameplate requirements.
- Please check the power cord and plug for any damage before use. Do not operate any fan with a damaged cord or plug.
- If the fan's power supply cord is damaged, it must be replaced by a professional technician to avoid a safety hazard.
- Always turn the fan OFF and unplug it from the electrical outlet when not in use.
- Caution is necessary when the appliance is used near children.
- Do not run the power cord under carpeting and do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from traffic areas so that it will not be tripped over.
- Use the fan in a well-ventilated area. When in use, place the fan at least 8 inches from any walls to ensure proper air flow. The fan must not be located immediately below or beside a curtain.
- Do not obstruct the airflow with any objects or place anything inside the fan opening.
- Do not use in areas where curtains could be sucked into the fan.
- Only place the fan on a hard, flat, dry floor.
- Do not use in extreme temperatures, humidity, or dusty environments.

- Do not place heavy objects on the fan.
- Do not place the fan directly below a power outlet, as this may cause the cord to be sucked in.
- When the fan is oscillating, do not manually turn the fan to avoid damage.
- Always turn off the power supply before unplugging the power cord from the electrical outlet to prevent a short circuit, fire or electric shock.
- Do not twist or pull the power cord.
- Do not unplug the fan if your hands are wet, as there is a danger of electric shock.
- Children under 8 should not operate the fan.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or who lack experience or knowledge, unless they are supervised or instructed on the proper use of the appliance by a person responsible for their safety. Ensure that children do not play with the appliance.
- Ensure that the fan is switched off from the power supply before removing the guard.
- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Please unplug or disconnect the appliance from the power supply before servicing.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or contact our after-sales service for further assistance.

 
Warning

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the electric receptacle, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to bypass or tamper with this safety feature.


Fuse Replacement

The following should ONLY be conducted by a qualified professional:

- Grasp the plug and remove it from the electrical receptacle. Do not unplug by pulling on the cord.
- Slide the fuse access cover on the top of the plug toward the blades to open the fuse cover as shown in the diagram on the right.
- Carefully remove the fuse. Push the fuse from the opposite side or turn the fuse holder upside down to remove the fuse.
- Replace the fuse only with a maximum 5 Amp, 125 Volt fuse (Risk of fire).
- Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
- Do not replace the polarized plug, as it contains a safety device that should not be removed (Risk of fire).
- Discard the product if the polarized plug is damaged.

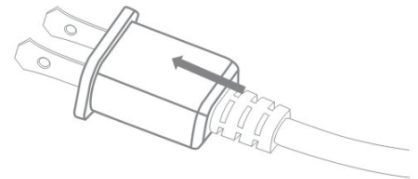

Product Introduction

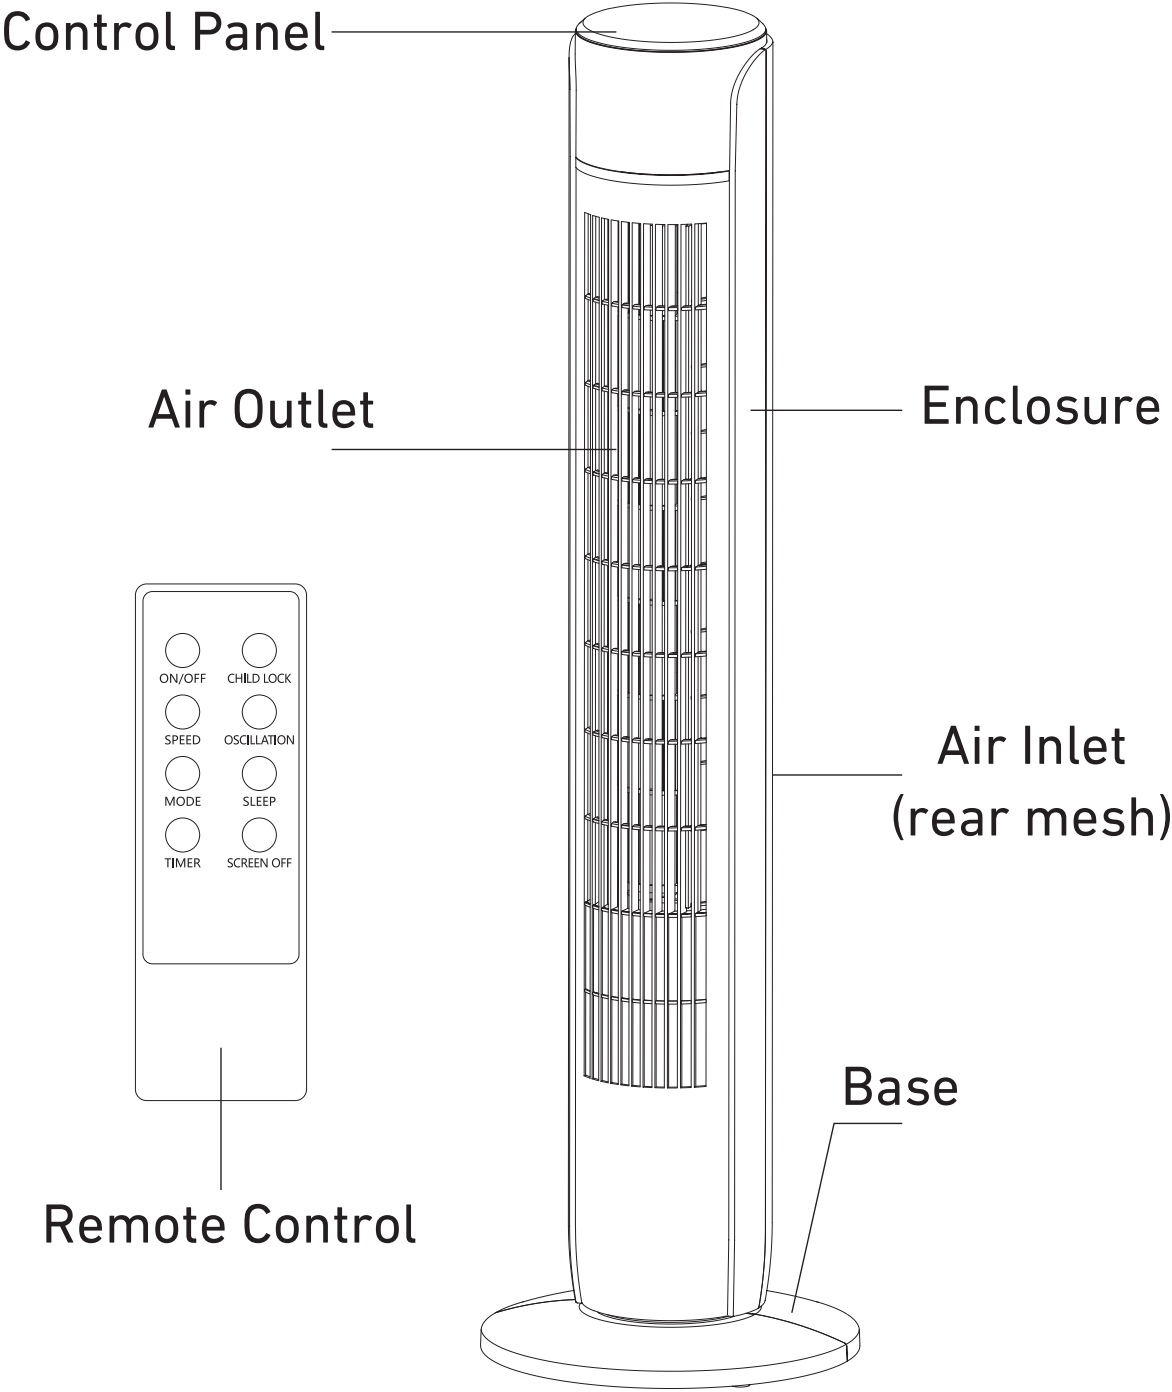 


Model	Rated Voltage	Rated Frequency	Rated Power
TS-35IN	120V	60Hz	40W

Packing List


Name	Quantity
Tower Fan	1
Base	1
Instruction Manual	1
Remote Control	1
Base Screws	8

Product Assembly Instructions

 - Open the packaging box and take out the tower fan and the base. Place the tower fan on a flat surface and check if the parts inside match the packing list in the instruction manual.
- First, pass the power cord through the middle hole of the base. Then, align and fit the two parts of the base columns with the screw columns, and secure them with four screws to assemble the base. Finally, fix the power cord in the designated slot on the base. (As shown in Fig.1)

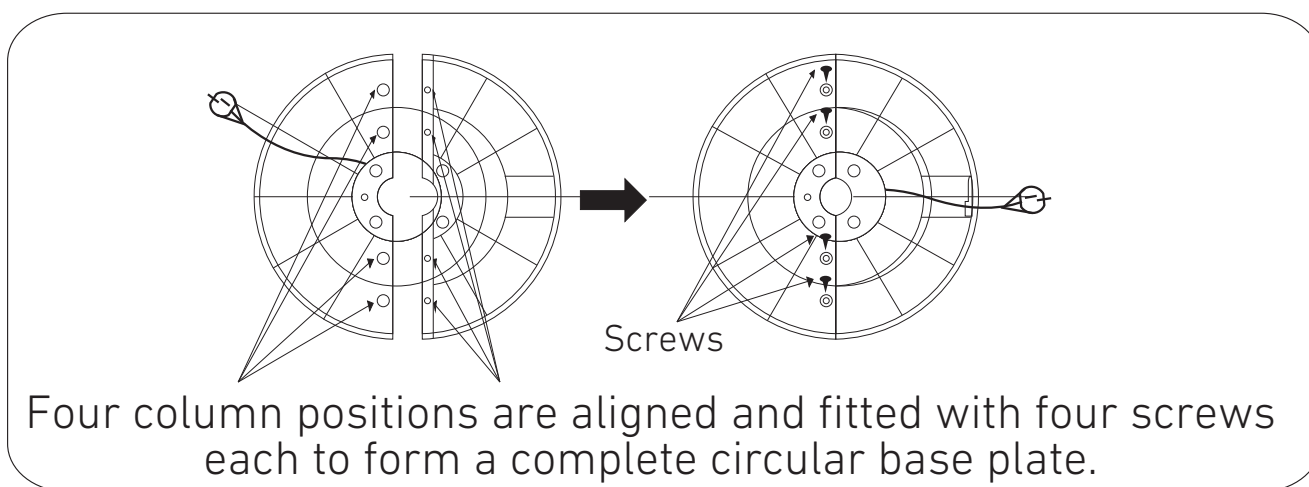


 - Align the swivel part of the body with the holes in the base, ensuring the screw holes on both parts are aligned. Then, use a screwdriver to tighten and secure the base to the body with 4 screws. (As shown in Fig.2)
- To disassemble the base: first, remove all screws that secure the base, then detach the base.

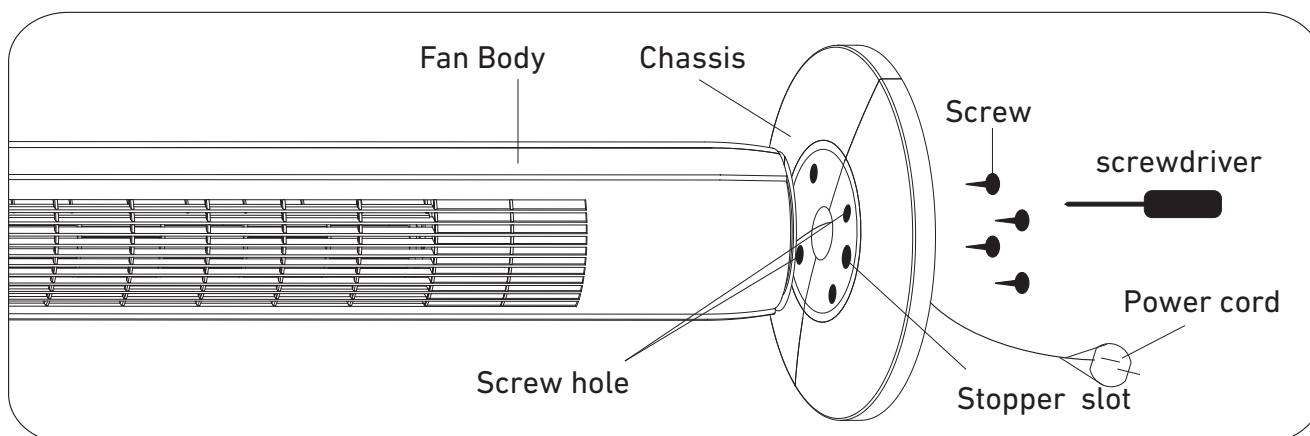


Usage Instructions

 Control Panel Operation

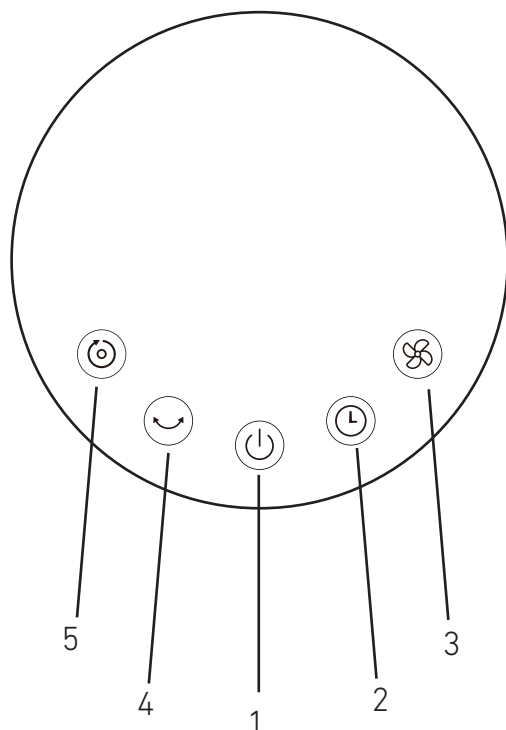

1. Power Button“  ”
2. Timer Button “  ”
3. Wind Speed Button “  ”
4. Oscillating Button “  ”
5. Wind Mode Button“  ”

 Remote Control

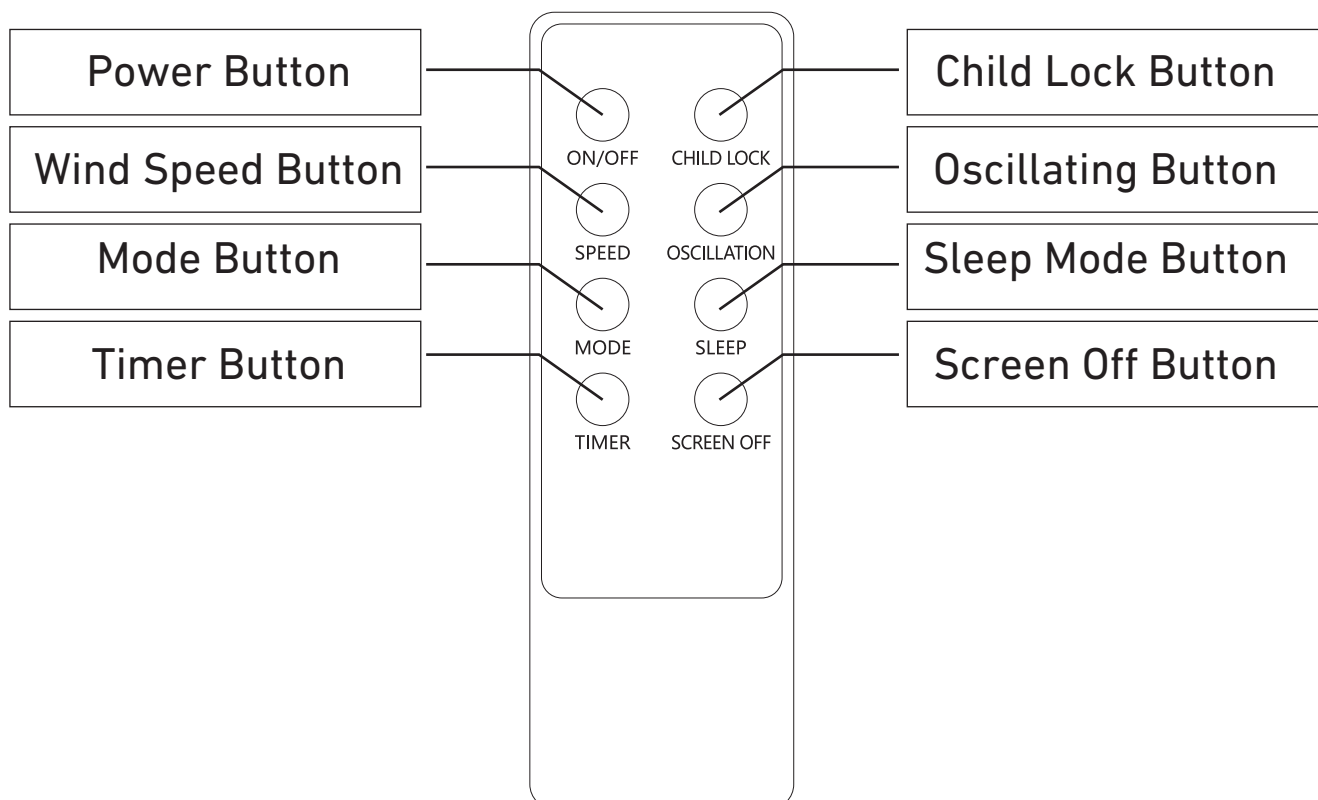

Control Panel / Remote Control Functions

1. Turn on/off the tower fan.



or



After plugging in, the tower fan enters standby mode. The buzzer emits a "Bi" sound as a prompt. Press this button to turn the tower fan on and press it again to turn it off.

2. Setting timer.



or



When the tower fan is operating, press this button to enter timer mode. The timer duration can be set anywhere between 1 and 12 hours. If the timer is set to 12 hours, pressing this button again will cancel the timer function.

3. Setting oscillating mode.



OSCILLATION

or



Press this button once to make the tower fan oscillate left and right. Press it again to cancel the function.

4. Setting wind speed.

 


SPEED

or





Press this button repeatedly. The wind speed will switch with corresponding indicator lights displayed. This device is equipped with 5 wind speed settings.

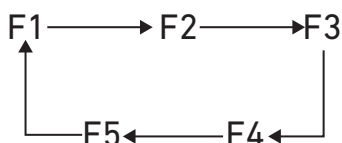


The display shows " F1--F2--F3--F4--F5".

  
5.Setting wind mode.

 MODE	Press this button on the remote control to cycle through the following wind modes: normal wind (C1), natural wind (C2), and automatic mode (C3), with corresponding indicator lights displayed.
 SLEEP	Press this button on the remote control to activate sleep mode (C4).
	Press this button on the control panel to cycle through the following wind modes: normal wind (C1), natural wind (C2), automatic mode (C3), and sleep mode (C4), with corresponding indicator lights displayed.
C1→C2→C3→C4 The display shows “ C1--C2--C3--C4”.	

 6.Setting child lock mode.

 CHILD LOCK	Press this button on the remote control to lock or unlock the controls.
	Press the wind mode button on the control panel for 3 seconds to activate the child lock function (CL), which locks other functions. Any function button press will not activate the corresponding function. To unlock, press the wind type button for 3 seconds again.
CL	The display shows“ CL”.

 7.Setting screen off.

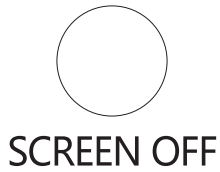

Press this button on the remote control to turn off the display immediately. Press it again to wake the display.

NOTE: This product features an automatic screen-off function. When in working mode, if no button is pressed for about 30 seconds, the screen will automatically turn off. Press any button to wake it up.

Proper usage of the remote control and battery replacement

 
Open the battery cover on the back of the remote control and insert two No. 7 batteries. The "screen off" button on the remote control can turn the screen-off function on or off. The other buttons function in the same way as those on the control panel. When in use, the remote control should be pointed at the receiving window. The effective distance is 5 m.

When not in use, store the remote control for future use.

NOTE:

1. Old and new batteries should not be mixed.
2. Remove the batteries if the remote control is not in use for an extended period.

Circuit diagram

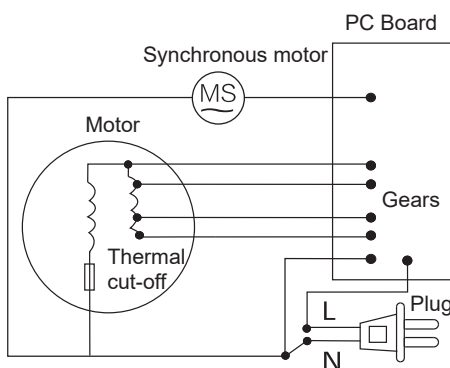

(The technology is continuously being improved, and no further notice will be provided in the event of any changes.)

Cleaning and Maintenance

- Before cleaning this product, ensure that the power is turned off.
- Do not use water or any other liquids to clean the electrical components. Instead, wipe them clean with a dry cloth.
- Do not use grinding tools or solvents that may damage the surface when cleaning the product. You can clean the product with detergent and wipe it dry with a clean cloth.
- Do not take the product apart for modification. It is recommended to inspect and clean the product annually to extend its service life.


Troubleshooting

Please do the following checks before you request a repair.

PROBLEM	PROBLEM CAUSE	SOLUTION
Not running	1. The power cord is not plugged in or is poorly connected. 2. The “” button on the control panel is not pressed.	1. Connect the power supply and ensure a good connection. 2. Press the “” button on the control panel to power on the device.

Please send for repair under the following conditions:

 - Unstable operation or no operation, and the above methods are ineffective.
- Ingress of foreign matter or water, causing unstable operation.

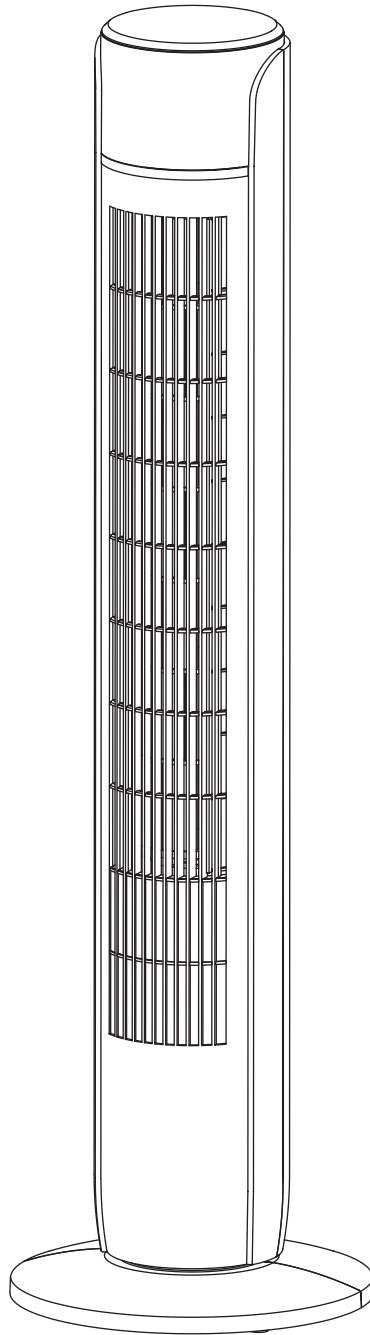

Technical Support

(909)637-7665 | (909)637-7593

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.