
 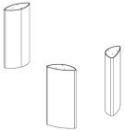
 



HARDWARE LIST

A	TABLE TOP		1 PCS.
B	TABLE BASE		3 PC.
C	SCREW 1 1/4" TOP		9 PCS.
D	SCREW 1 1/4" BASE		9 PCS.
E	WASHER 1/4"		18 PCS.

ASSEMBLY INSTRUCTIONS FOR POKER VELA

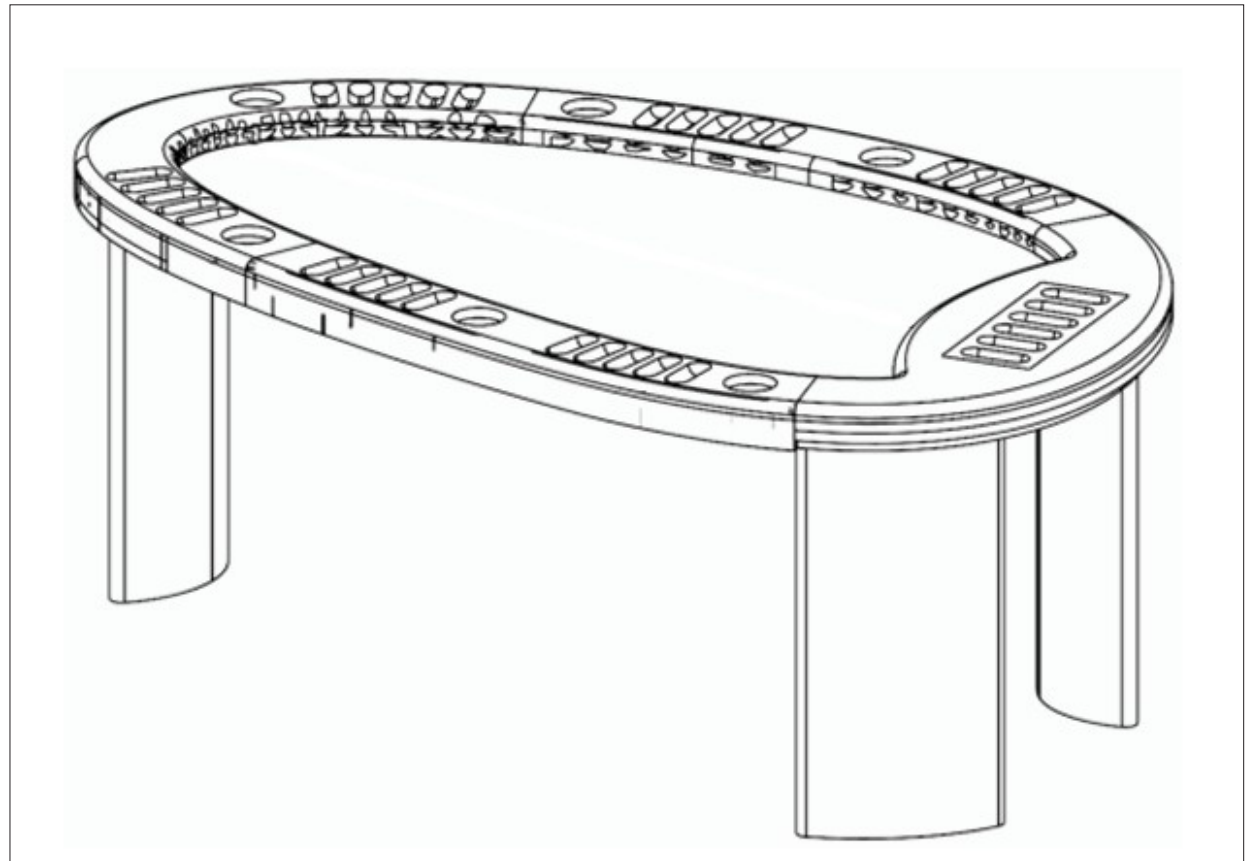


**“EACH BASE HAS
SPECIFIC POSITION
AND IS NOT INTERCHANGEABLE
WITHIN THE SAME ITEM”**

**“HEAVY ITEM HANDLE
WITH CARE.**



NOTE: HEX SOCKET NOT INCLUDED



NOTE: REQUIRES HEX SOCKET 7/16" (11MM)

ASSEMBLY INSTRUCTIONS FOR POKER VELA

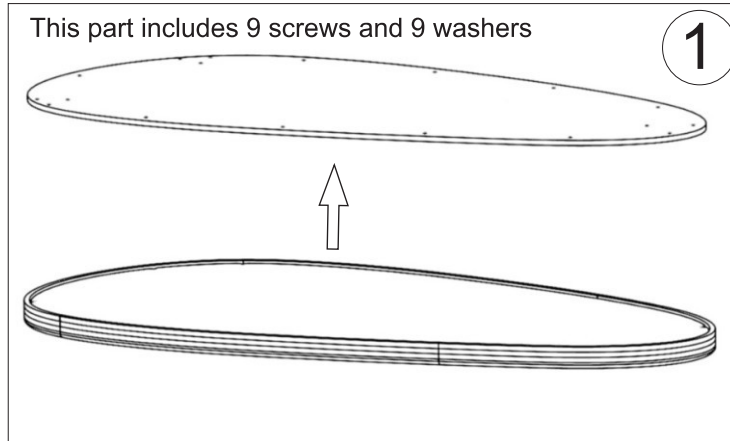

REMOVE THE FIX PLATE FROM THE COVER

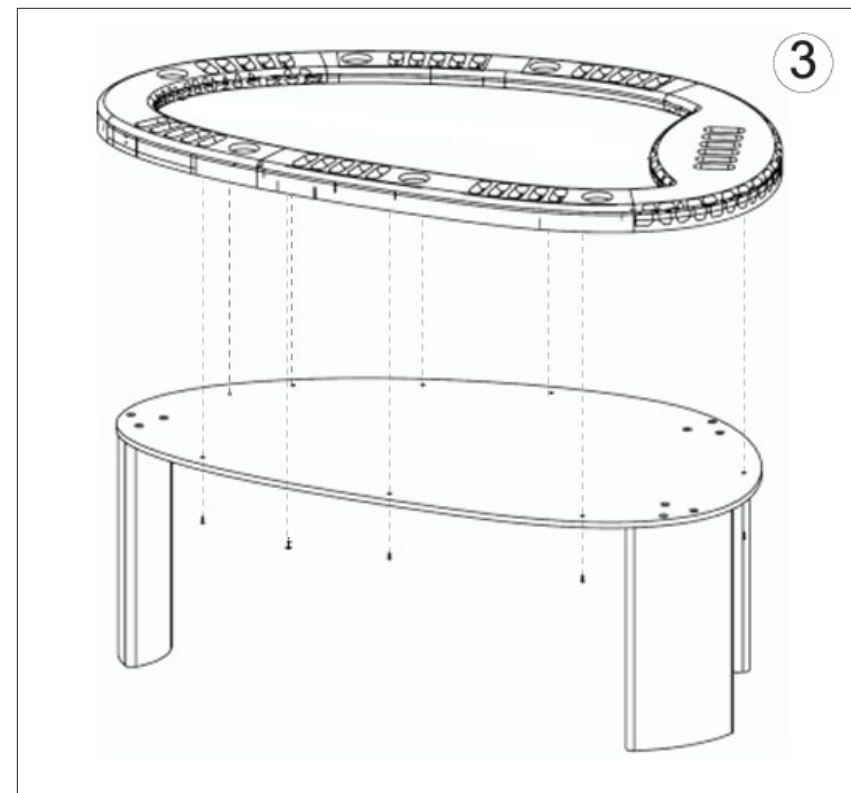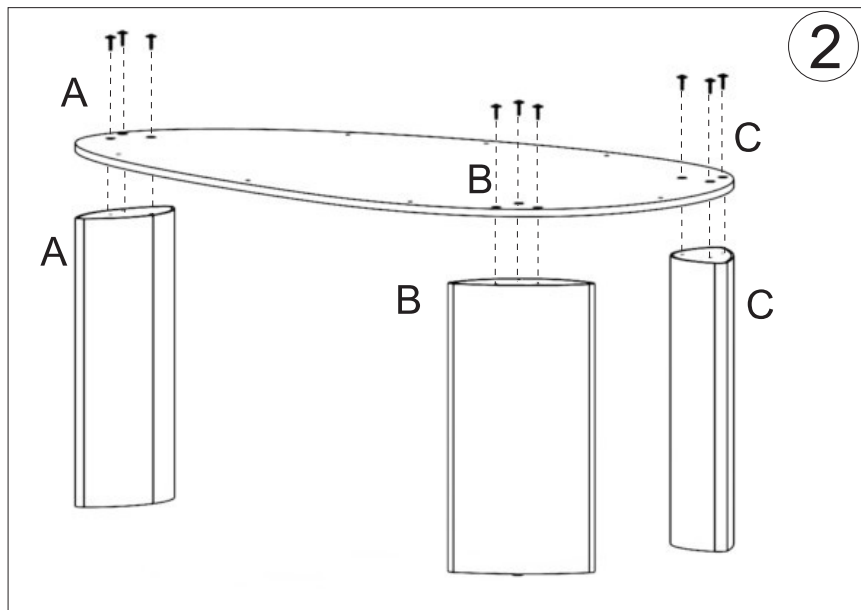

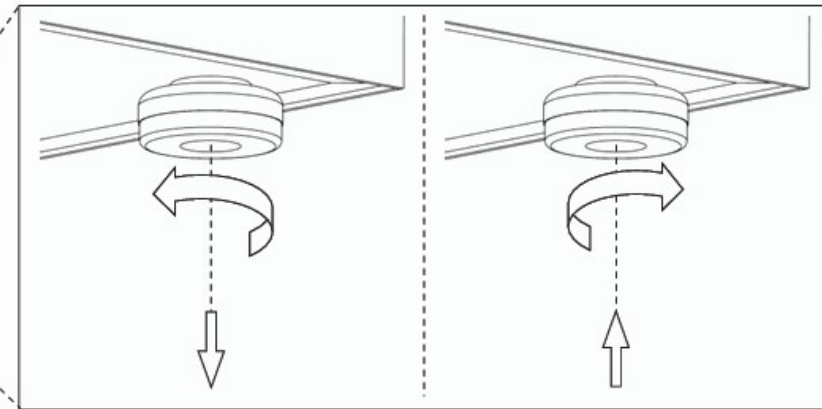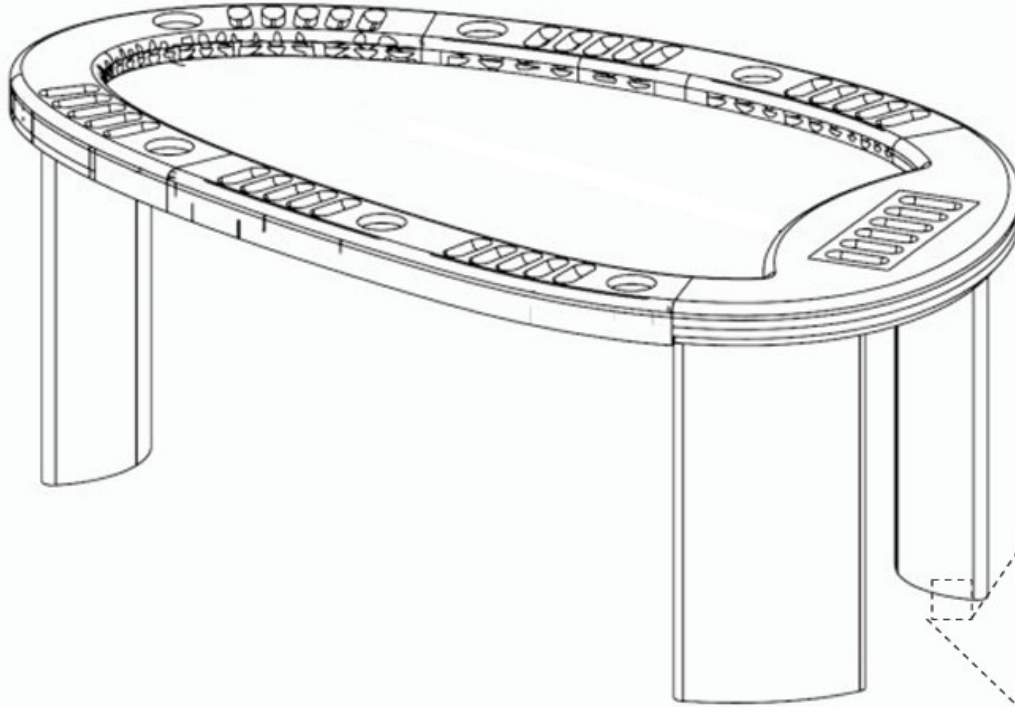

ADJUST LEVELER FOR BALANCE

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.