 


Thank you for your purchase!

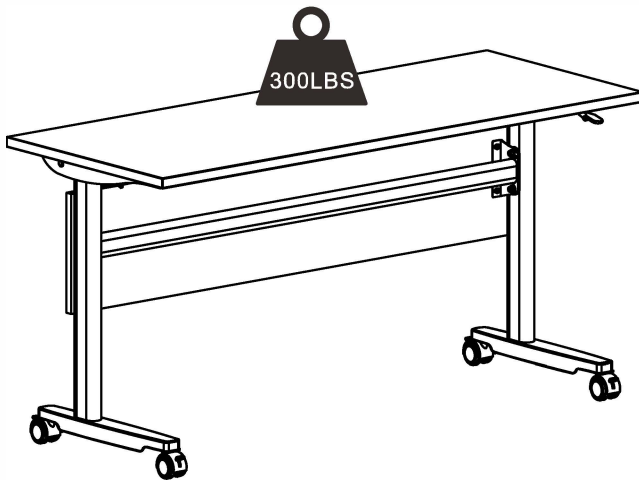

FLIP-TOP MOBILE TRAINING TABLE

ASSEMBLY INSTRUCTIONS

Before You Begin

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Installation of the product requires two people to assemble the product.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

Injury may result from tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping and causing any accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.



 

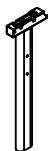 
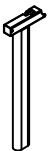 
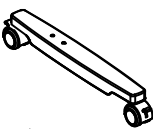 

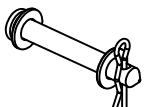 
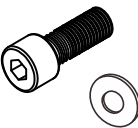 
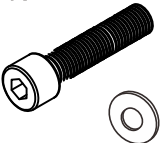 



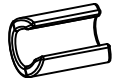 
This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Serious or fatal crushing injuries can occur from furniture tipping over. To prevent furniture from tipping over it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home.


Failure to detach this restraint before moving furniture may result in injury or damage.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

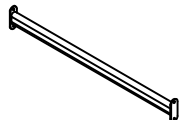
PARTS

A×1  Top	B×1  Top Frame	C×1  Beam	D×1  Modesty Panel	E×1  Pneumatic Leg	F×1  Leg without Pneumatic	G×2  Foot	
H×2  Panel Connector	I×3  Pin and Clip	J×4  M8 Bolt	K×4  M8 Bolt	L×14  M6 Bolts	M×1  M6 Allen Wrench	N×1  M4 Allen Wrench	O×2  Plastic Piece


 
STEP 1

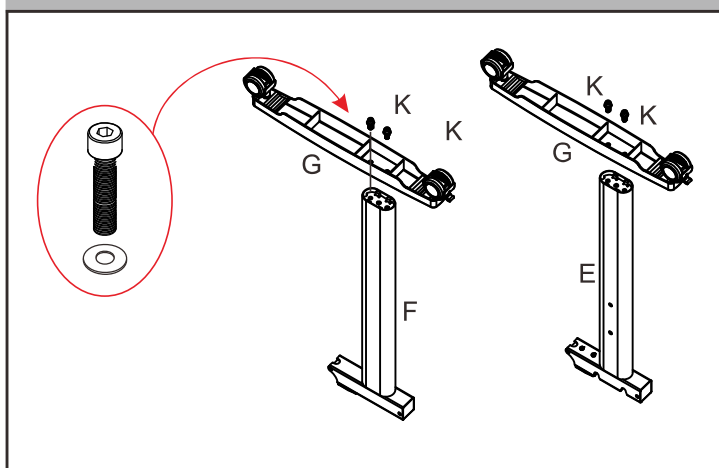


 
STEP 2

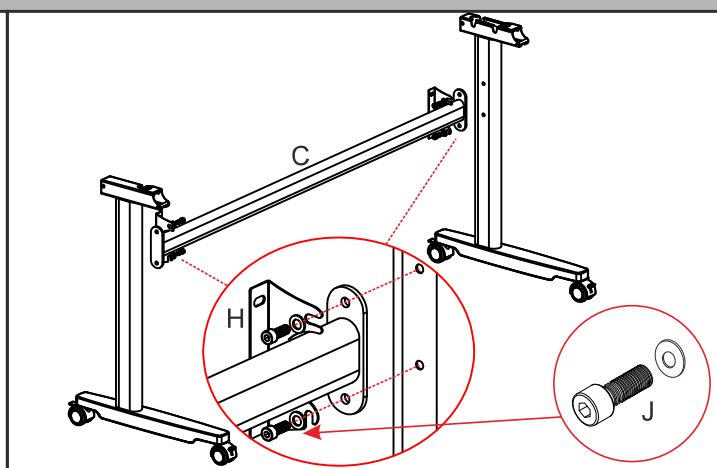

  STEP 3

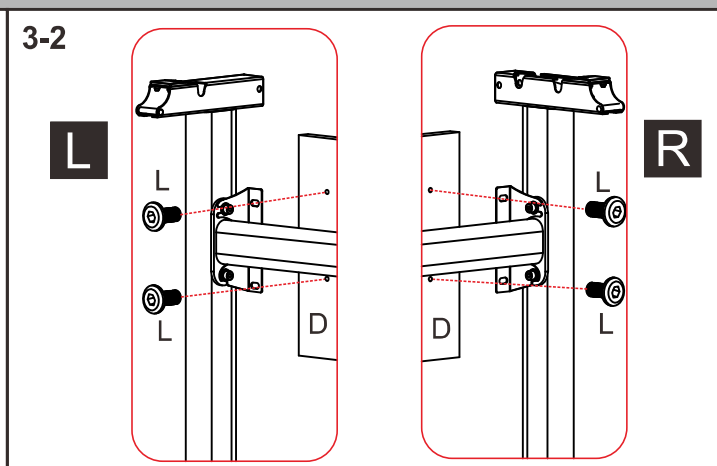
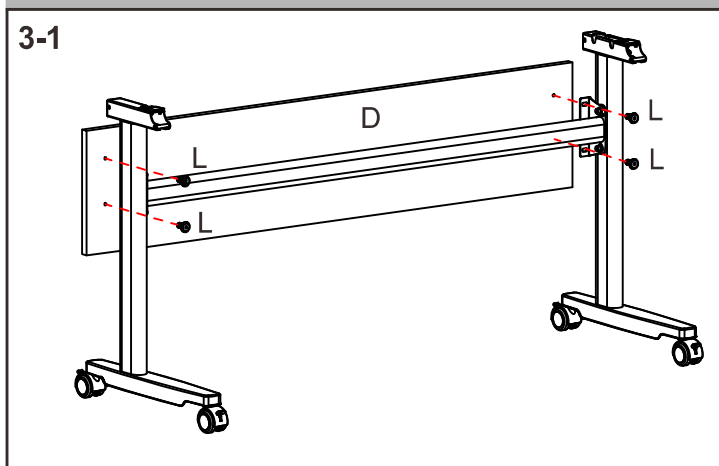


  STEP 4

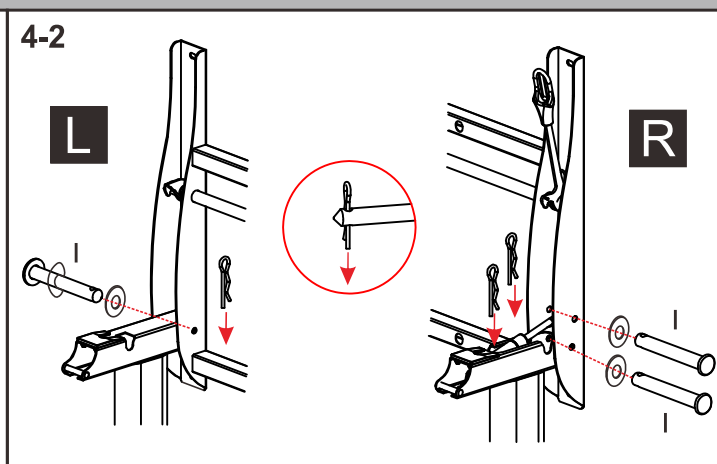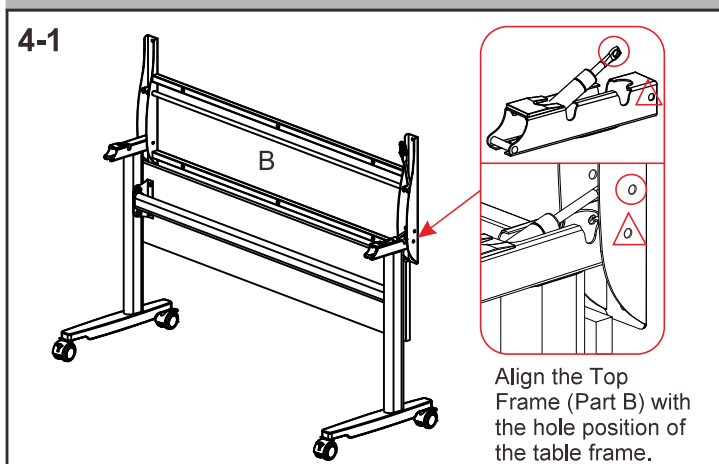

STEP 5

  
4-3

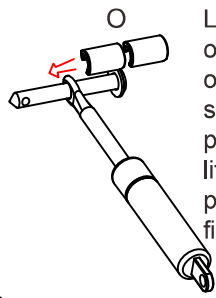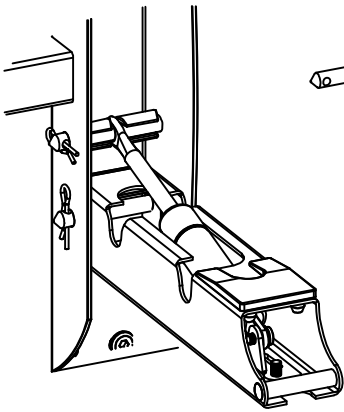

Lay part O onto the pin on both sides of the pneumatic lift then press down firmly.


5-1

 Lay the table top upside down on a smooth clean surface. Turn the table frame upside down and attach the table top to the frame.

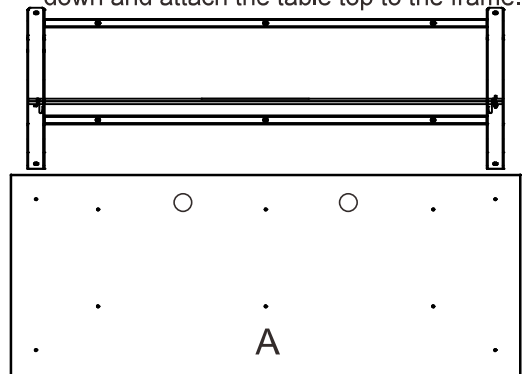



STEP 5

 5-2

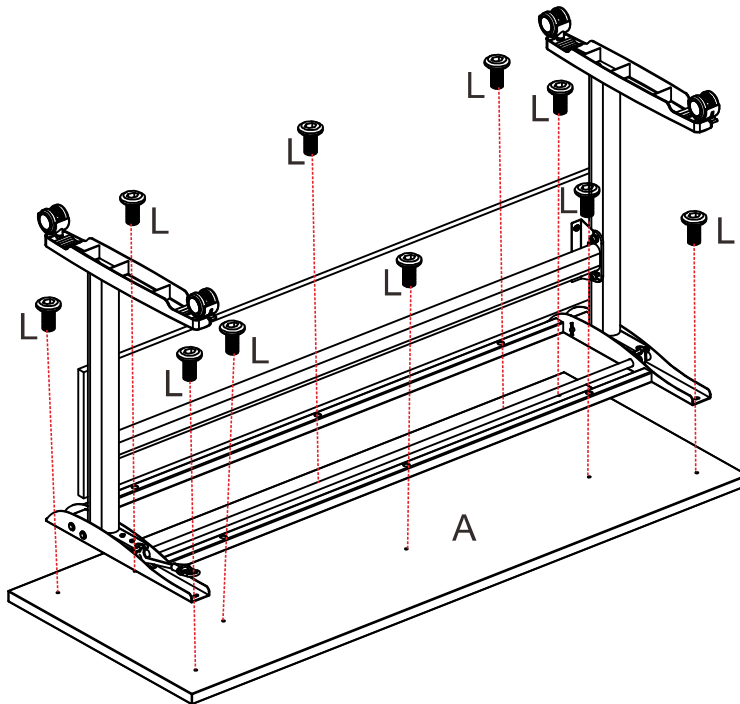


STEP 6

  Return table to the upright position.


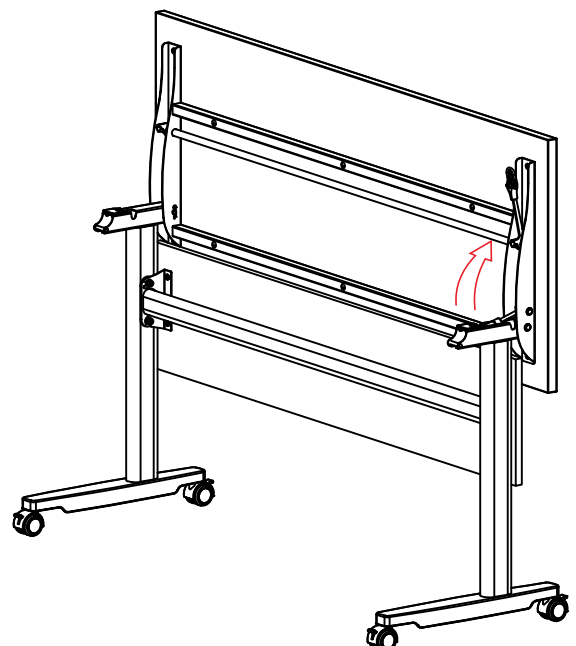
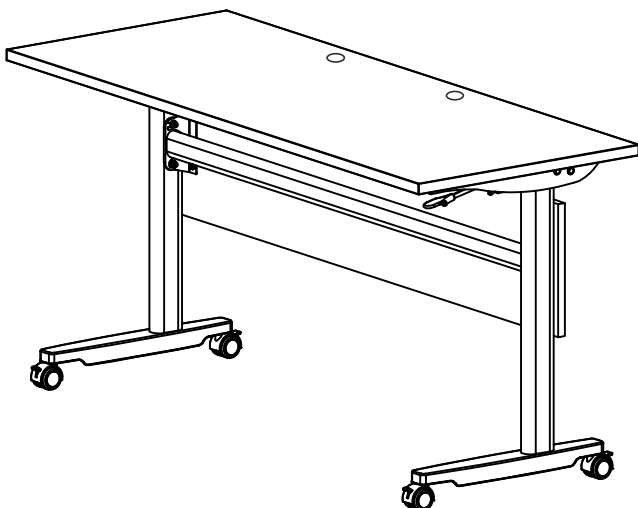


Instructions For Use

 How to engage the flip-up top.


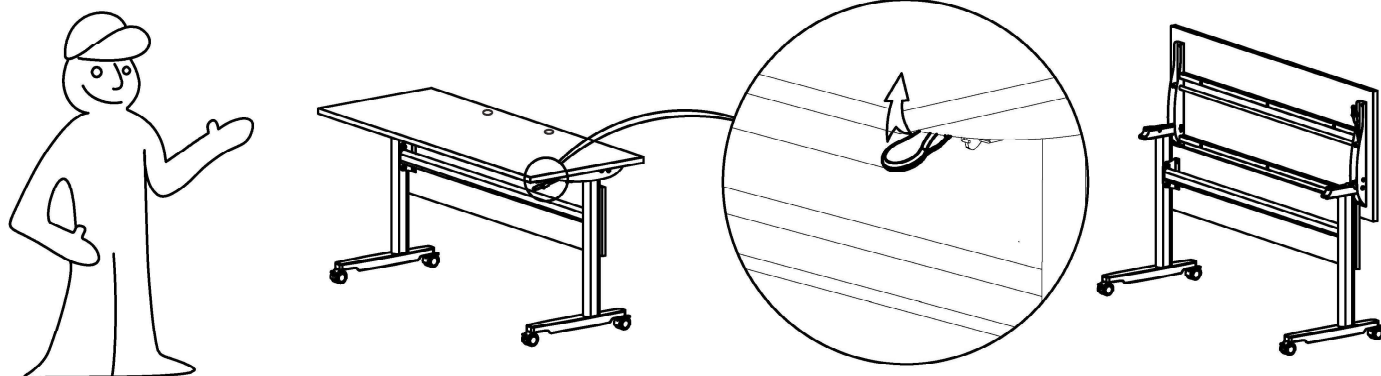


   When lowering the top, ensure your fingers are away from the pneumatic mechanism.

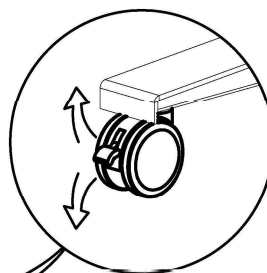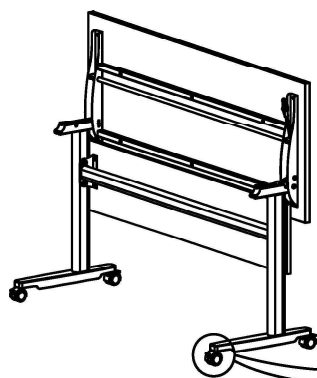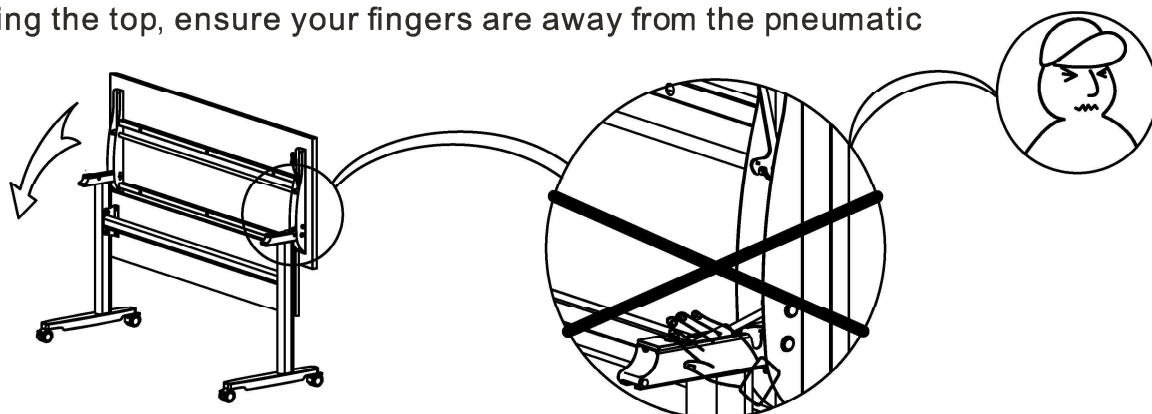

Release the locks on the casters to move then re-engage the locks when in the desired location.

  Pay attention when moving the table to avoid injury.

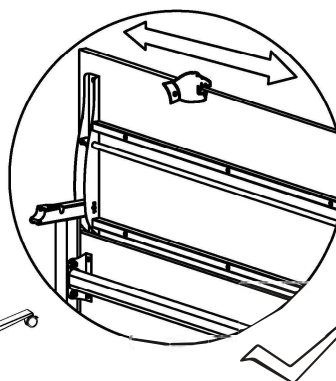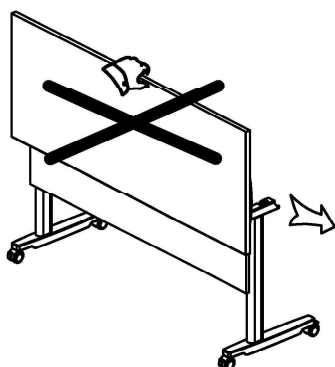

Move the table left or right from this side only.



To avoid tipping, never move the table from this side.

Quality and Safety Guidelines:

- Please follow the static and dynamic weight capacity limits provided on this item. If you are unsure of the weight capacities for this product, email us
- Please use this item on a stable, level surface only. All legs, feet should contact the flooring surface when in use. Do not use this item if any instability is detected.
- For maintenance instructions and replacement parts, please email us
- This item is intended to be used as a table only. Do not climb, hang, stand or sit on this item. Do not use this item as a TV stand. Do not place heavy objects on top of this product.
- To prevent pinching or crushing injuries, ensure all areas are clear when rotating the table top.
- Please keep hands and fingers away from all moving segments to include all hinges and other contact points on the tabletop and frame while the tabletop is in motion.
- Hold tabletop securely with both hands on the front edge while in motion to prevent uncontrolled openings or closures that could cause significant injuries to the hands and possible amputation of the fingers.
- The tabletop is not soft close and will drop quickly if not controlled securely.
- The item is intended to be used indoors.
- Please inspect this product regularly to make sure there are no damaged or worn parts. Also inspect to make sure all hardware is tightened correctly and securely. For inspection instructions, please email us
- If any parts are damaged or worn, please stop using the product. Repair this product with manufacturer supplied parts only.
- For product longevity, product safety and product integrity, protect from wet and humid weather or other wet, humid or moist conditions and store indoors in a dry location. For additional storage and usage instructions, please email us