

Capresso

grind^{SELECT}

Coffee Burr Grinder



Model
#597.04

110W / 120V~ / 60Hz

- Operating Instructions
- Warranty

Read all instructions before operating the appliance

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or body of machine in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. The use of accessory attachments not recommended by Capresso may result in fire, electric shock, or injury to persons.
7. Do not use outdoors.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use this appliance for other than intended use.
11. Use this appliance to grind roasted whole coffee beans only. Grinding other substances, such as nuts, spices or unroasted beans, may dull the burr and cause poor grinding or injury.
12. Check bean container for presence of foreign objects before using.
13. Avoid contacting moving parts.
14. To prevent clogging and overheating of motor, never grind above the "Max- Line" of the ground coffee container.


SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

Regarding your Cord Set:

- A. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Fig. 1

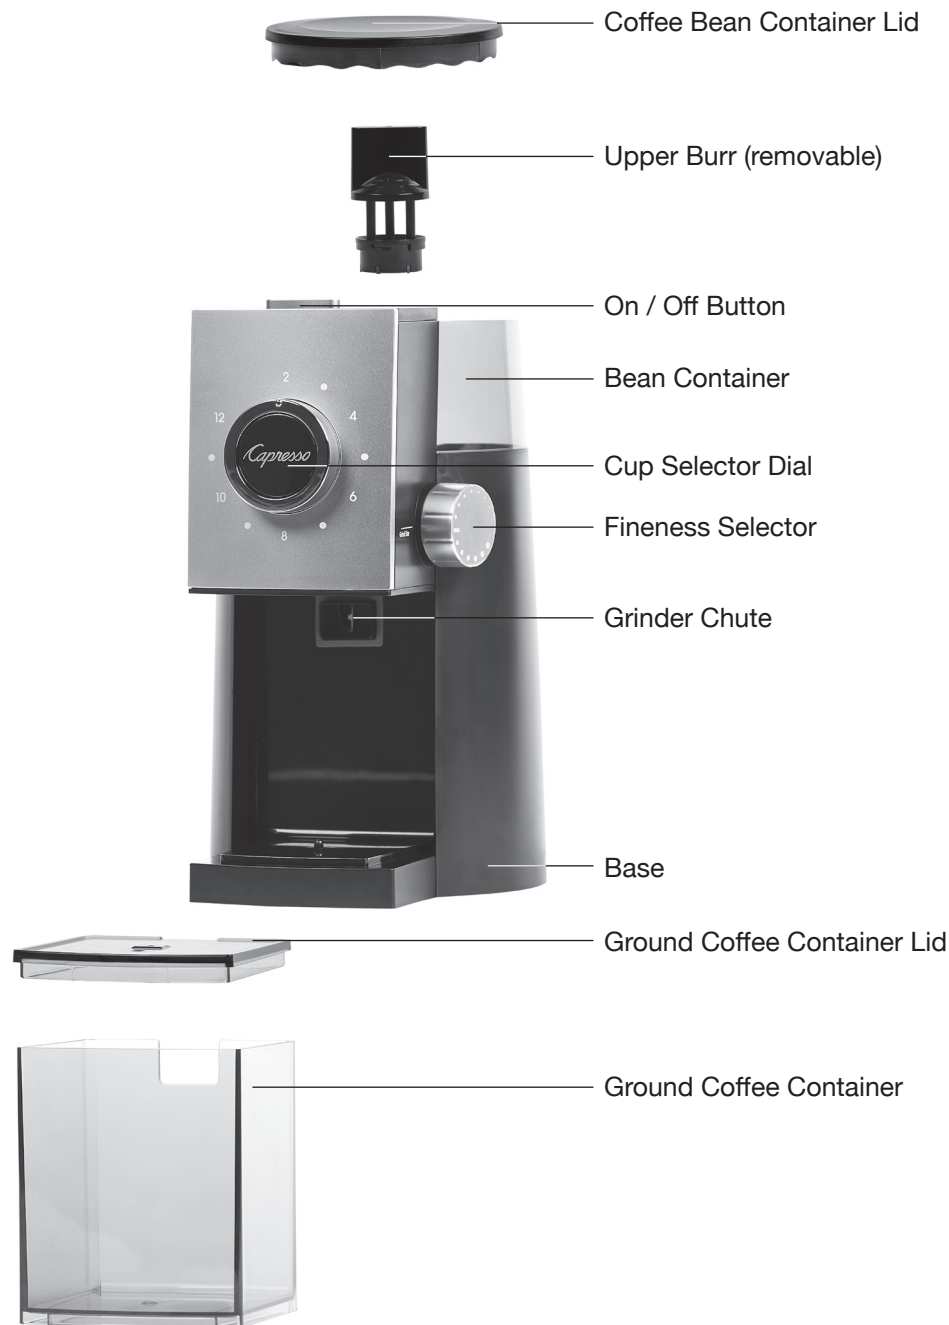

IMPORTANT: Grinder was tested with beans during assembly. Despite cleaning, traces of ground coffee may be found in a new machine.

Before First Use

Important: Coffee grinder will stop automatically if parts are not correctly aligned on the machine.

- 1. Unpack the grinder and remove all packaging materials.
- 2. Clean all loose parts with a dry cloth. NEVER clean any parts of the grinder in the dishwasher. NEVER get the burrs wet.
- 3. To remove any dust that may have accumulated on the removable parts during packing, wash the ground coffee container, its lid, and coffee bean container lid with a warm water and a mild liquid soap solution. Rinse and dry.
Important: Do not use harsh or abrasive agents to clean these parts.
- 4. Allow parts to dry completely before use.
Warning: Putting wet parts back onto the grinder can damage the machine.
Caution: Do not immerse grinder or the removable upper burr in water.
Important: Do not place the ground coffee container, its lid, or the bean container lid in the dishwasher.
- 5. Check the bean container for presence of foreign objects before using.
- 6. Make sure the bean container is completely clean and dry before using.
- 7. Ensure upper burr is locked into place by turning it counterclockwise.
- 8. Always operate the grinder with the coffee bean container lid, ground coffee container and lid in place.
- 9. Do not place your hand in or near the burrs.
- 10. Any servicing other than cleaning and user maintenance should be performed by an authorized Capresso service representative.

Important: Burr grinder will not operate if the coffee bean container lid, ground coffee container or ground coffee container lid are not properly in place.

Proper placement of removeable parts



Removable parts not in place - machine won't turn on



Grinding

- 1. Place your Burr Grinder on a flat, level surface.
- 2. Ensure all parts are locked into place as described in **Before First Use**.
- 3. Plug the grinder into an outlet.
- 4. Fill the bean container with coffee beans and replace the lid. The bean container can hold up to 10 ounces of coffee beans.
Note: Only coffee beans should be filled into the bean container. Never fill any of the following into the bean container: sugar-coated beans, syrups or other coatings, and instant coffee. Never fill water or any other liquid into the bean container.
- 5. Set the cup selector dial to the number of cups of coffee you want to grind by turning the dial to the number of cups you will brew.
Note: These numbers are to be used as a guide. The amount of ground coffee varies quite a bit depending on how coarse or fine you grind and whether you use light, dry beans or dark, oily beans. After grinding a few times, you will find the correct grind amount position for the amount of coffee you want to grind.
Note: Never grind more coffee than indicated by the “MAX” fill line of the ground coffee container. Over filling the ground coffee container can cause clogging in the grinder chute, and can damage the machine.
- 6. Set the fineness selector to the desired setting (see Section “Guidelines for Fineness Selector Settings”).
Caution: Never change the fineness selector setting while grinding!
- 7. Push the On/Off button down to start your Capresso grinder. The grinder will begin grinding the whole bean coffee directly into the ground coffee container. It will stop automatically.
Attention: Beans may stick to the wall of the bean container, preventing them from falling into the burrs. You will hear a high-pitched noise from the motor when this happens. Gently shake the grinder so that the beans slide down into the burrs.
Note: If you need to turn the grinder off before the grinding cycle is finished, simply push the On/Off button.
- 8. Be sure to unplug the appliance after every use.
Note: Coffee beans can stay in the bean container for up to 1 week before they will start to lose their aroma.

Guidelines for Fineness Selector Settings

Grind	Brewing Method
Fine	Pump Espresso Machines
Medium / Fine	Drip Coffee Makers / Steam Espresso
Medium	Manual Pour-Over Coffee Brewing
Medium / Coarse	Percolator
Coarse	French Press

The fineness selector knob has 15 different settings to control the size of the ground coffee. The smallest dot corresponds to the finest setting and the largest dot corresponds to the coarsest setting. The medium setting has a line to easily distinguish the medium setting, perfect for drip coffee. From the medium setting, turn the knob counterclockwise to set the level finer or turn the knob clockwise from the medium setting to set the level coarser. The fineness settings are approximate guidelines. When using dark, oily beans, use a coarser grind; with light, dry beans, use a finer grind. For espresso pump machines: if your espresso brews too fast, try a finer setting. If your espresso brews too slowly, try a coarser setting than the ones recommended above.

Note: The finer the grind setting, the longer it takes to grind the coffee.

Grinding Tips

- Never grind in advance, only grind the amount of coffee you will use. Ground coffee loses aroma and flavor quickly and attracts other odors.
- Do not grind for more than 75 seconds at a time. Let machine cool down for 5 minutes before grinding again.
- Empty the ground coffee container before it is completely full, otherwise ground coffee can back up into the grinding chute (Fig. 1) and block the grinding mechanism. Prolonged use with the ground coffee container full can damage the grinder.
- Before removing the ground coffee container, tap the machine a few times. This will relieve some of the static build-up which occurs during grinding.

Cleaning

Always unplug your coffee grinder before cleaning.

- Remove the ground coffee container, its lid, and the bean container lid and clean them in a warm water and mild liquid soap solution. Do not place these items in the dishwasher.
- Empty the bean container. The transparent part of the bean container can be wiped on the inside and outside with a damp cloth. Do not clean the bean container with water.
- Remove excess ground coffee from the grinder chute with a small brush.
- The base of the grinder can be wiped clean with a damp cloth.

Caution: Never immerse the grinder in water or any other liquid. Do not use harsh or abrasive materials to clean the coffee grinder.

Cleaning/Removing the Upper Burr Disk

1. Set the fineness selector dial to the finest grind setting.
2. Grasp the top of the upper burr disk, turn clockwise until loose and then pull upward vertically to remove it from the bean container.
3. Lift the upper burr disk out of the grinder.
Note: Do not unscrew the upper burr from its housing!
4. Clean both the removable upper burr disk, and the permanent lower burr disk with a brush.
Note: Never use water to clean the burr disks!
5. To reinsert the upper burr disk, set the fineness selector dial to the coarse grind setting. Insert the upper burr and turn counterclockwise until it is locked into place.

Troubleshooting

1. *The grinder does not work when On/Off button is pushed*

- Make sure that the plug is inserted correctly into a working outlet.
- Ensure the lid of the bean container is properly placed onto the housing.
- Check that the ground coffee container and its lid are placed correctly into the base.

2. *The grinder stops during operation*

- The grinder is overheated. The resettable thermostat of the motor was activated. To reset the thermostat, allow the appliance to cool down for approximately 30 minutes. To avoid overheating, do not exceed the MAX indications of the ground coffee container.
- A removable part has become dislodged. Check that the coffee bean container lid and the ground coffee container and its lid are correctly placed into the housing of the machine.

3. *Grinder clogs easily*

- Unplug the unit and ensure the grinder chute is clear of any clogs. Clean the grinder chute often.
- Try a new type of coffee bean. Do not use flavored or coated beans.
- If you are using oily beans, try a coarser grind setting.

4. *The fineness selector does not work*

- Check if the upper burr disk is correctly positioned in the bean container (see chapter “Cleaning/Removing the Upper Burr Disk”)

Limited One Year Warranty

This warranty covers your CAPRESSO machine, model #597.04 Grind Select. The model # can be found on the bottom of the machine. This warranty is in effect for one year from the date of the first consumer purchase. This warranty covers all defects in materials or workmanship (parts and labor).

This warranty does not cover:

- Any machine not purchased from an Authorized Capresso Dealer.
- Commercial use of the machine.
- Damage caused by accident, abuse, negligence, misuse, improper operation or failure to follow instructions contained in this manual.
- Any service or alteration performed by an unauthorized person, company or association.

Other limitations and exclusions:

Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranty set forth above and no person is authorized to assume for JURA any other liability in connection with the sale of the machine. JURA expressly disclaims liability for incidental and consequential damages caused by the machine. The terms “incidental damages” refers to the loss of the original purchasers time, loss of the use of the machine or other costs relating to the care and custody of the machine. The term “consequential damages” refers to the cost of repairing or replacing other property which is damaged when this machine does not work properly. The remedies provided under this warranty are exclusive and in lieu of all others. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service

1-800-767-3554

Mon-Thu 8AM – 9PM • Fri 8AM – 8PM • Sat 9AM – 5PM

Eastern Time Zone

contact@capresso.com

JURA Inc.

20 Craig Road, Montvale, NJ 07645

201-767-3999 • Fax: 201-767-9684

www.capresso.com