 


ASSEMBLY INSTRUCTION

70" Modern TV Stand

THE PRODUCT MAY RECOMMENDED ASSEMBLING BY
MORE THAN ONE PERSON

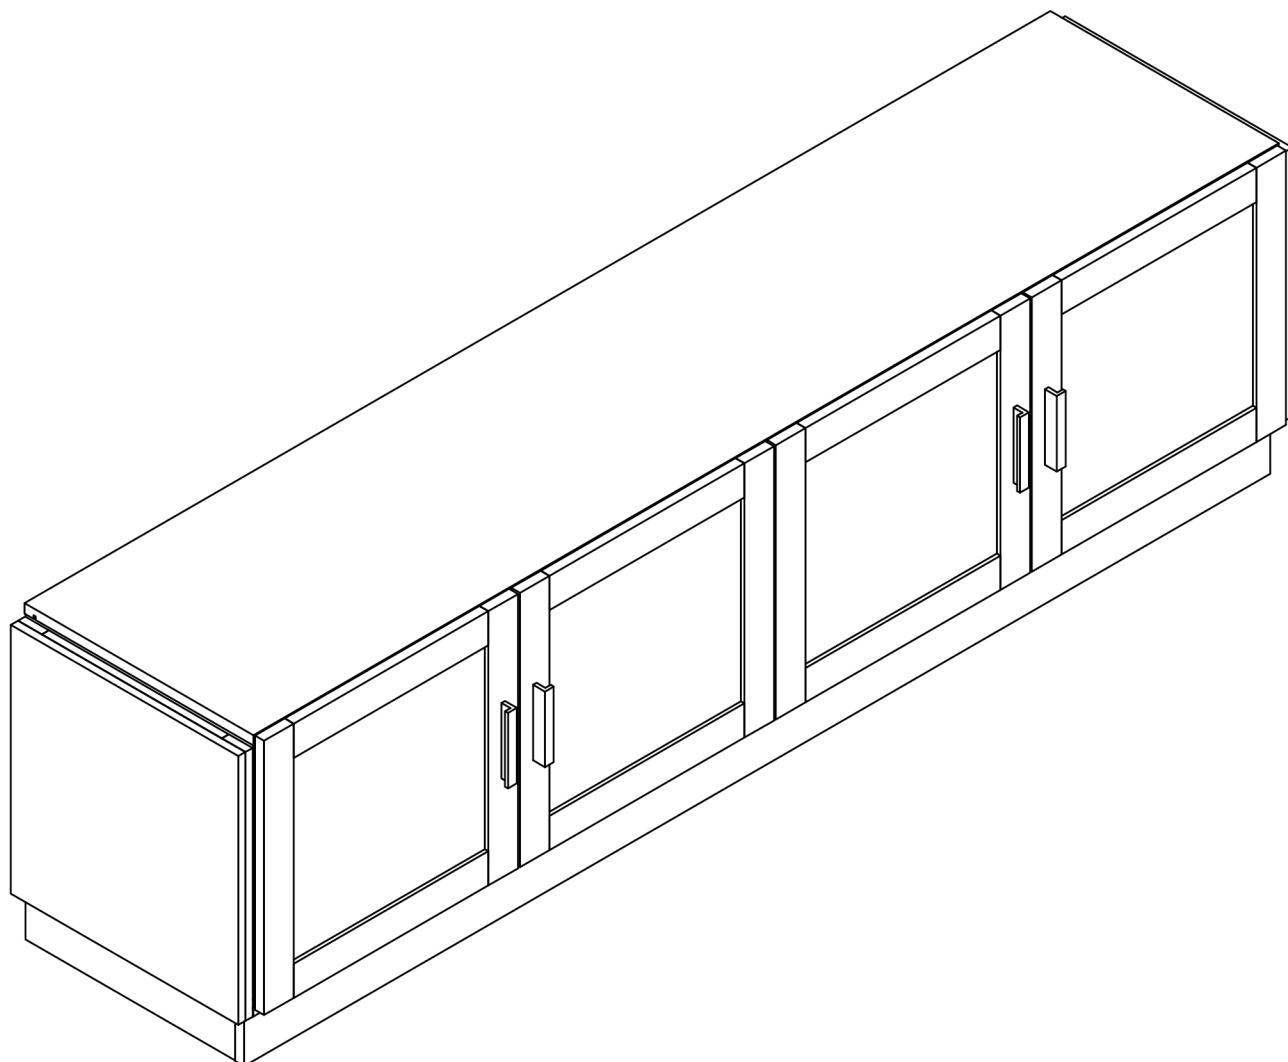

 
REPLACEMENT PARTS

We are devoted to provide the best products and services for customers.
Please contact us via the **“Contact seller”** button in the detail page of your order for
any concern and we'll response as soon as possible.

Before You Start



Read through each step carefully and follow the proper order

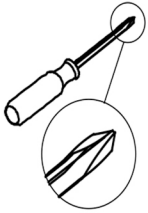

Separate and count all your parts and hardware



Give yourself enough room for the assembly process

 


Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.


1

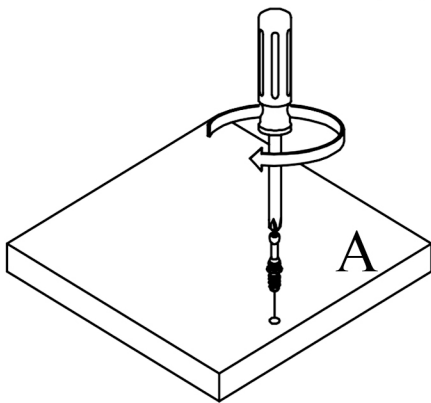


2

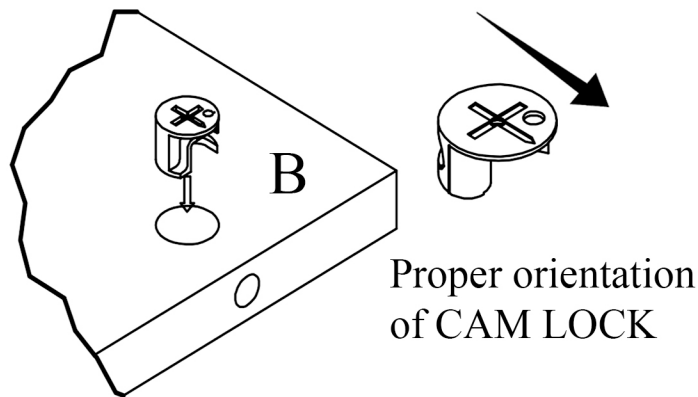 


3

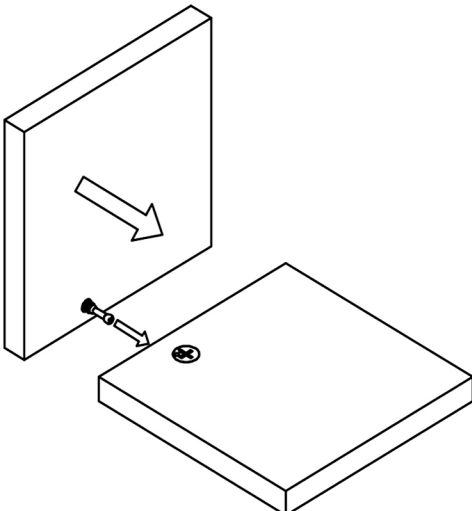 


4

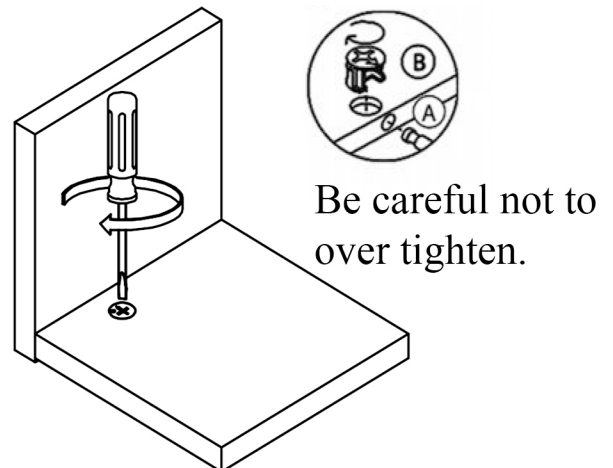 

Parts Identification

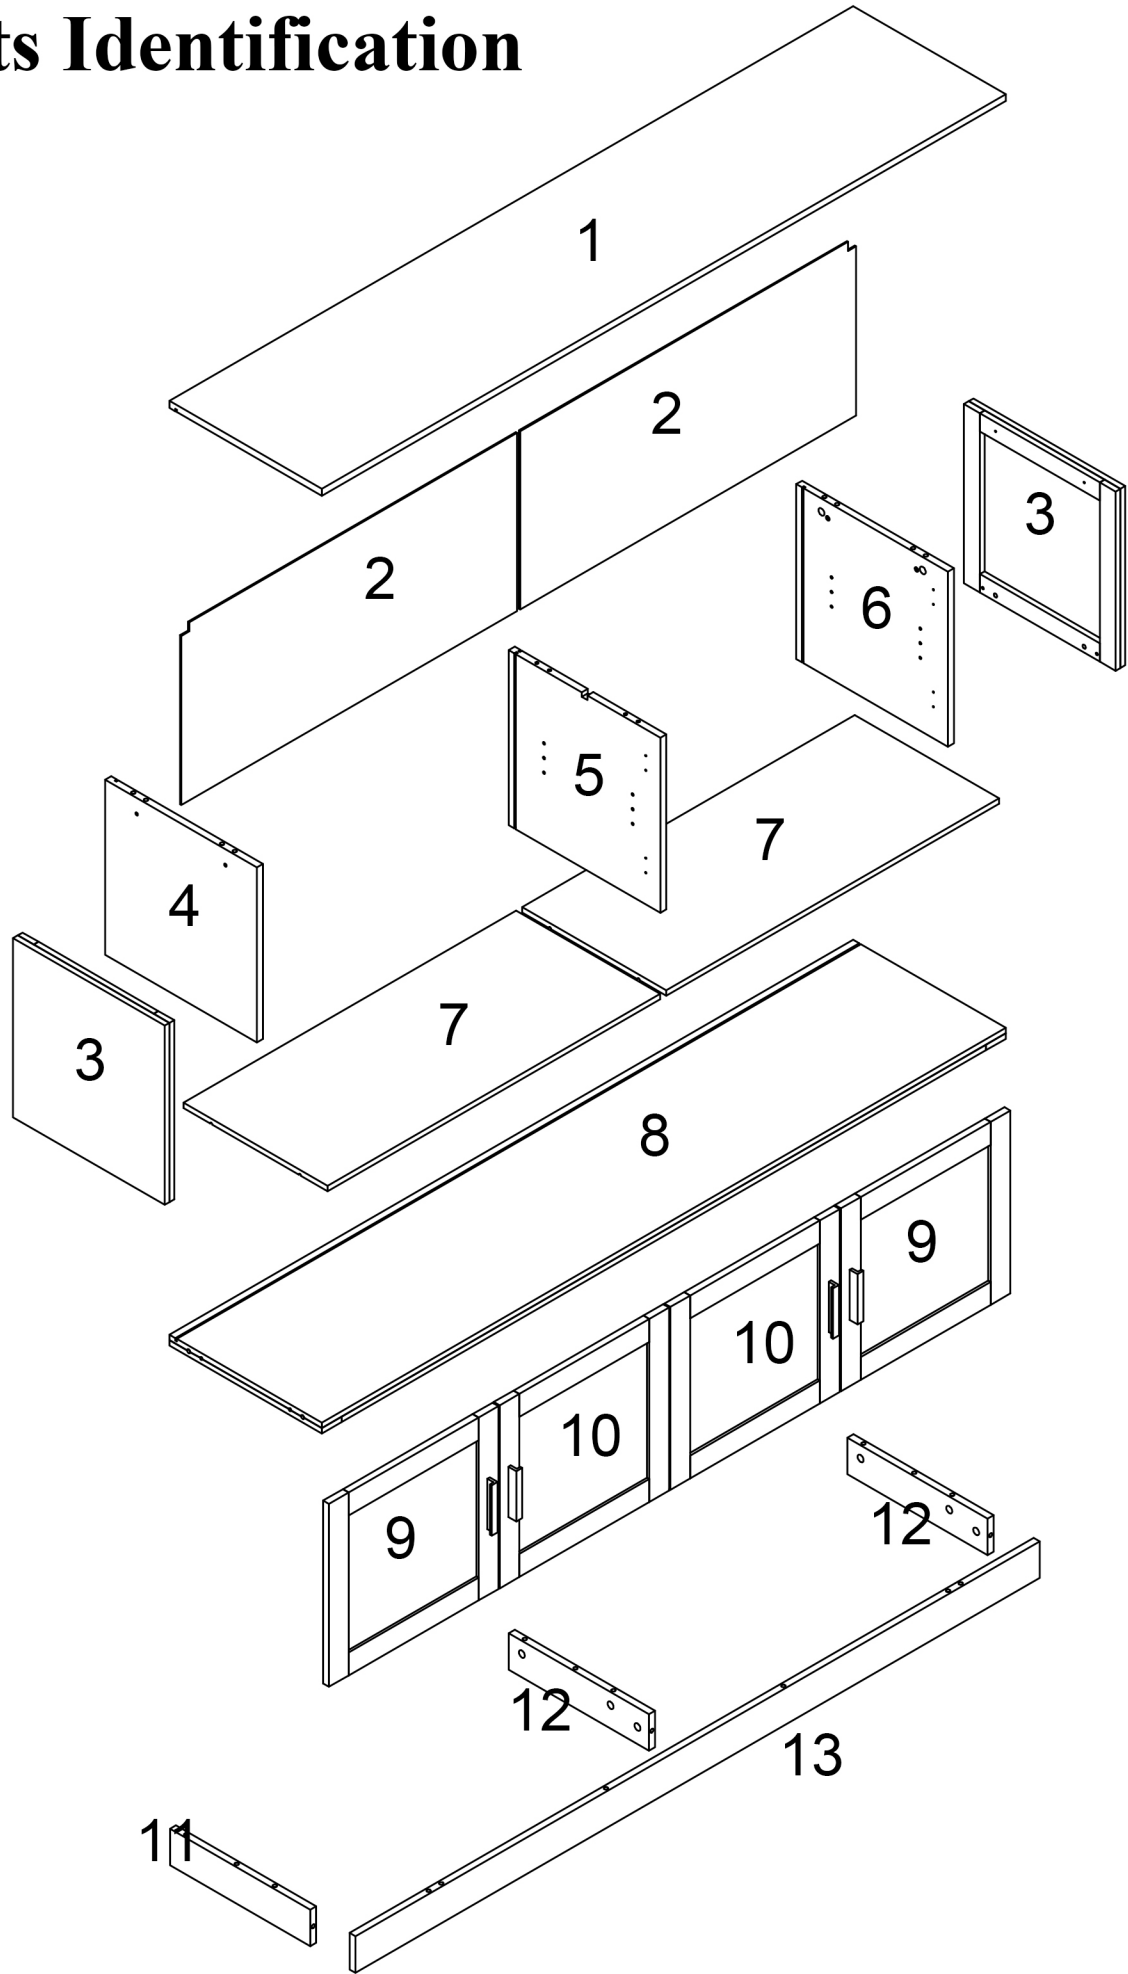 


Parts List

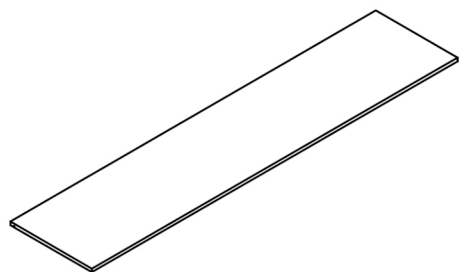 


①

 TOP

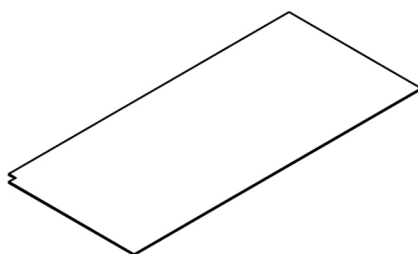


②

 BACK PANEL x2

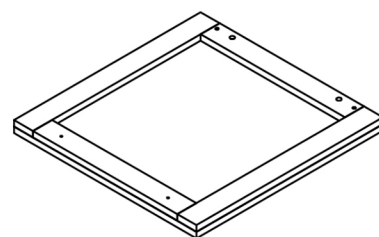


③

 SIDE DECORATIVE PANEL x2

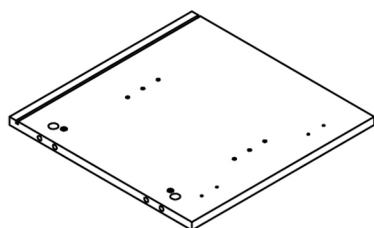


④

 LEFT

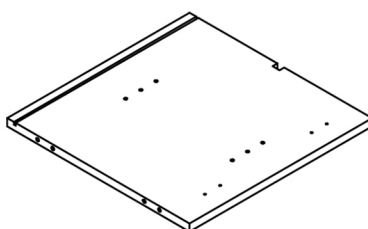


⑤

 MIDDLE

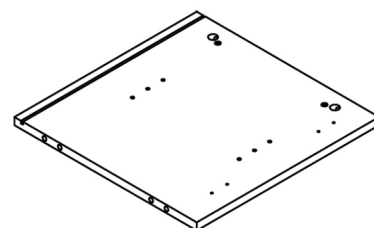


⑥

 RIGHT

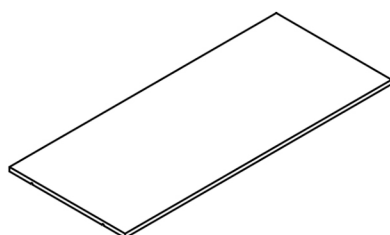


⑦

 SHELF x2

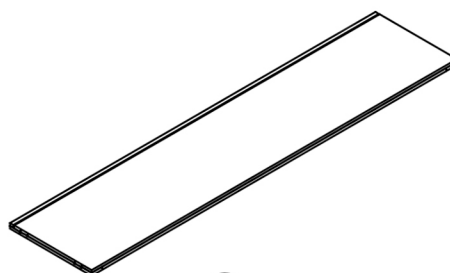


⑧

 BOTTOM

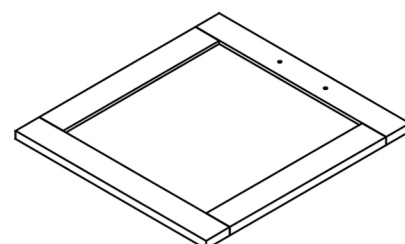


⑨

 DOOR x2

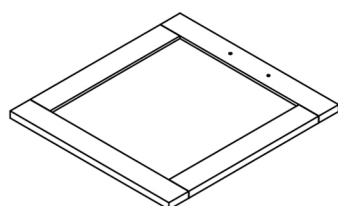


⑩

 DOOR x2

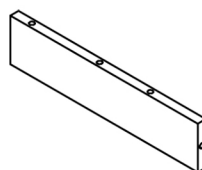


⑪

 LEFT END

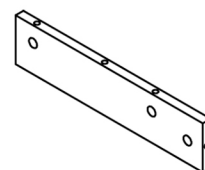

⑫

 MIDDLE and RIGHT END x2

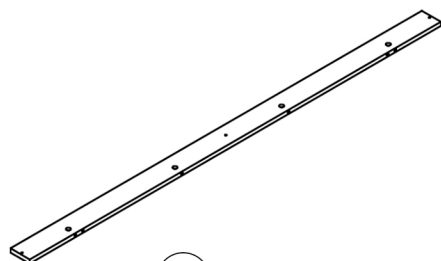

⑬

LOWER SUPPORT

Hardware List

 
CAM BOLT



A

23PC

CAM LOCK

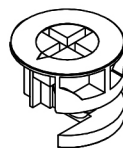

Ø15

B

23PC

WOOD DOWEL

 


Ø8*30mm

C

21PC

SCREW

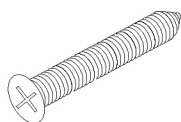


Ø4*40mm

D

6PC

 
DOOR HANDLE

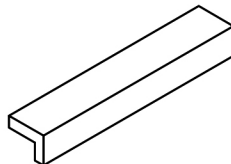

E

4PC

 BOLT

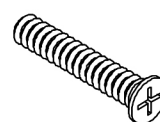

M4*18mm

F

8PC

SCREW

 


Ø3.5*14mm

G

32PC

SCREW




Ø4*30mm

H

4PC

 
HINGE

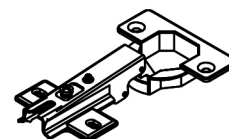

I

4PC

 
HINGE

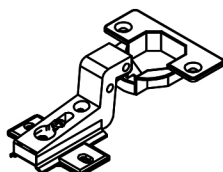

J

4PC

 LIGHT STRIP

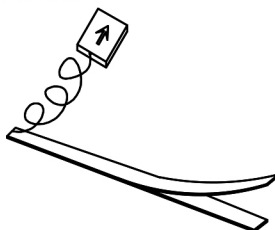

K

1PC

 
 
 
SHELF SUPPORT








L

8PC




STEP 1

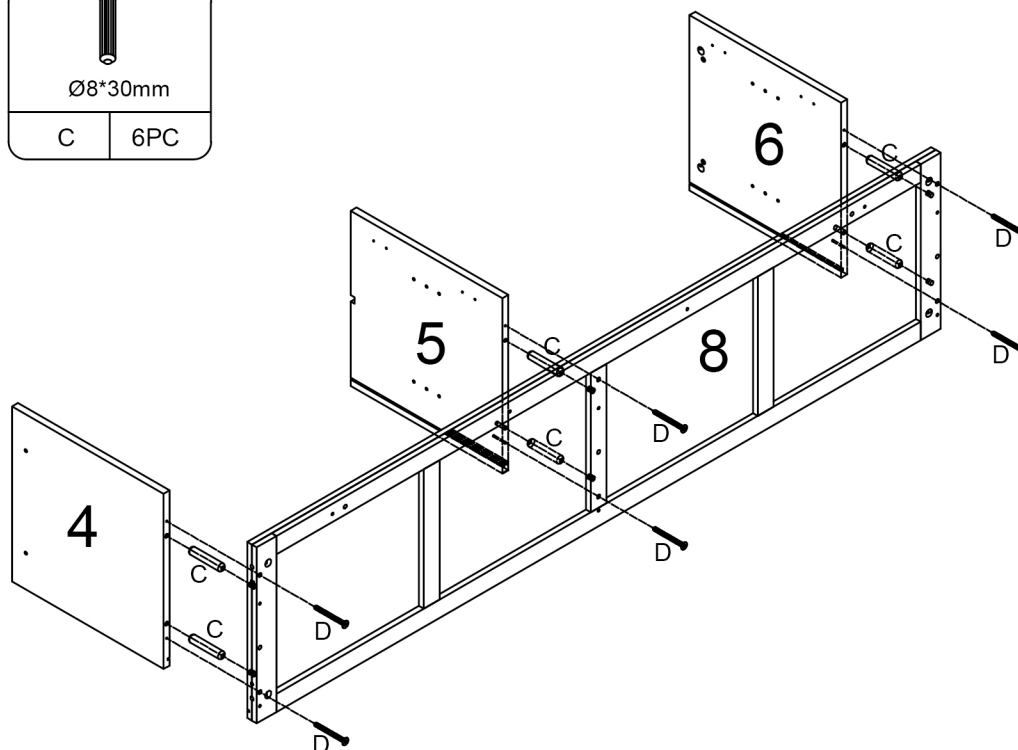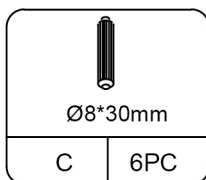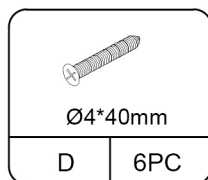

  
 
 
 
STEP 2

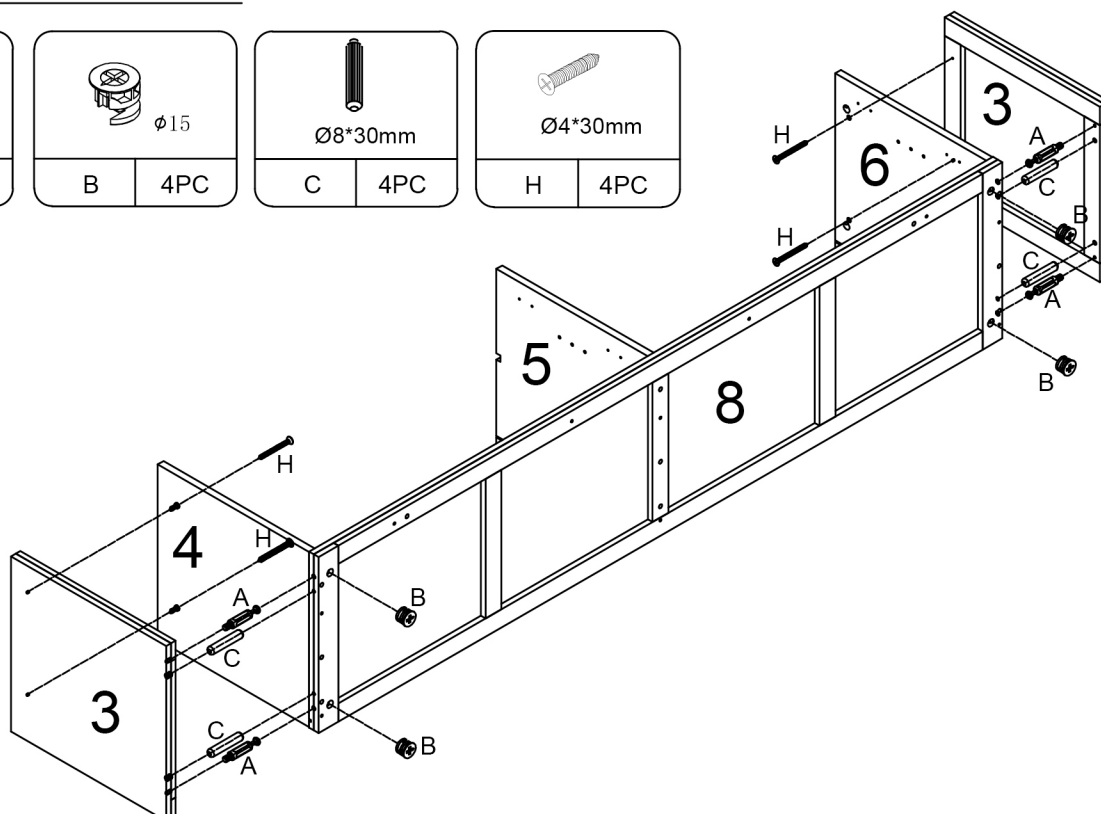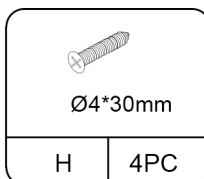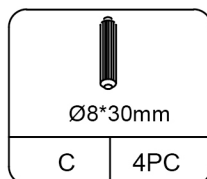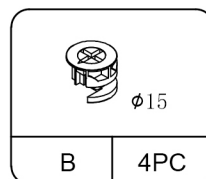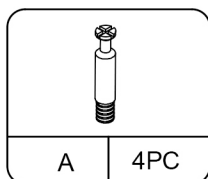

   
STEP 3

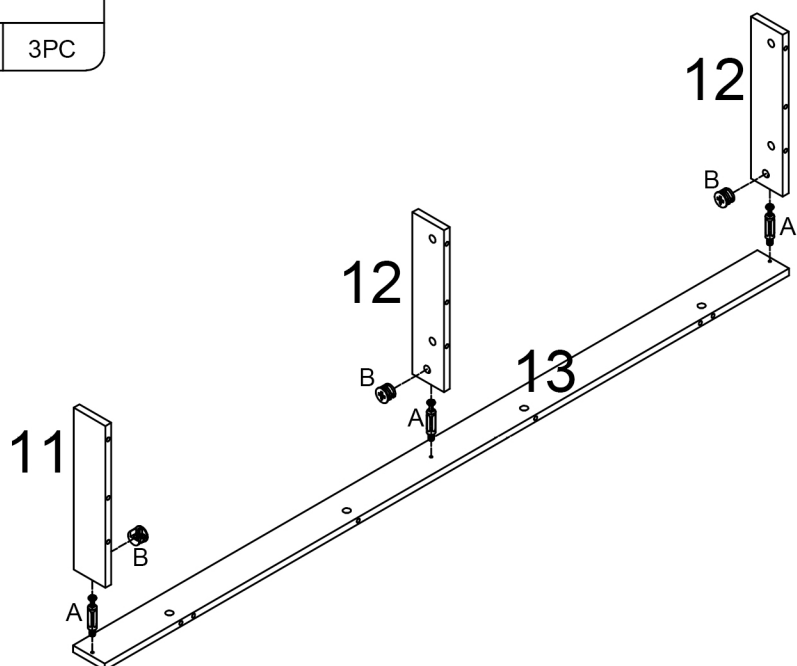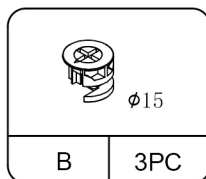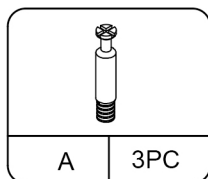

   
 
STEP 4

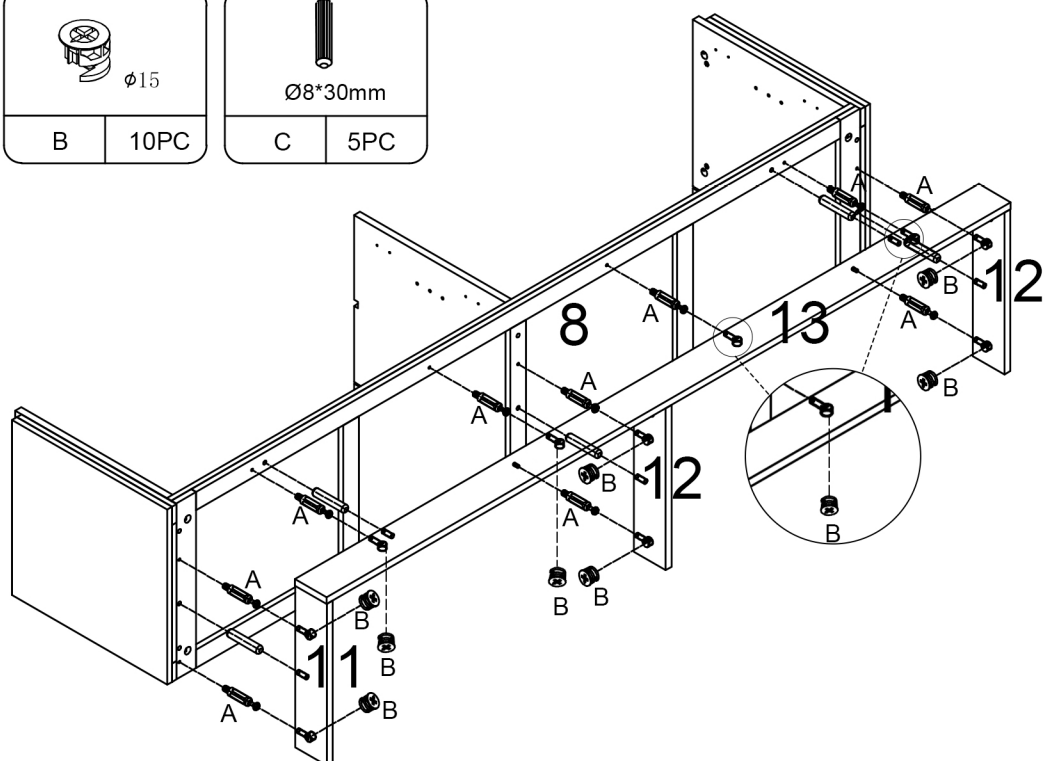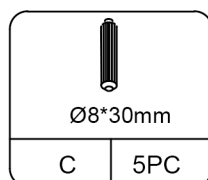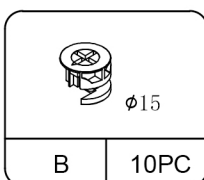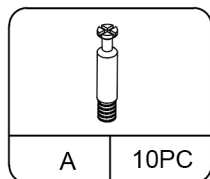




 
STEP 5

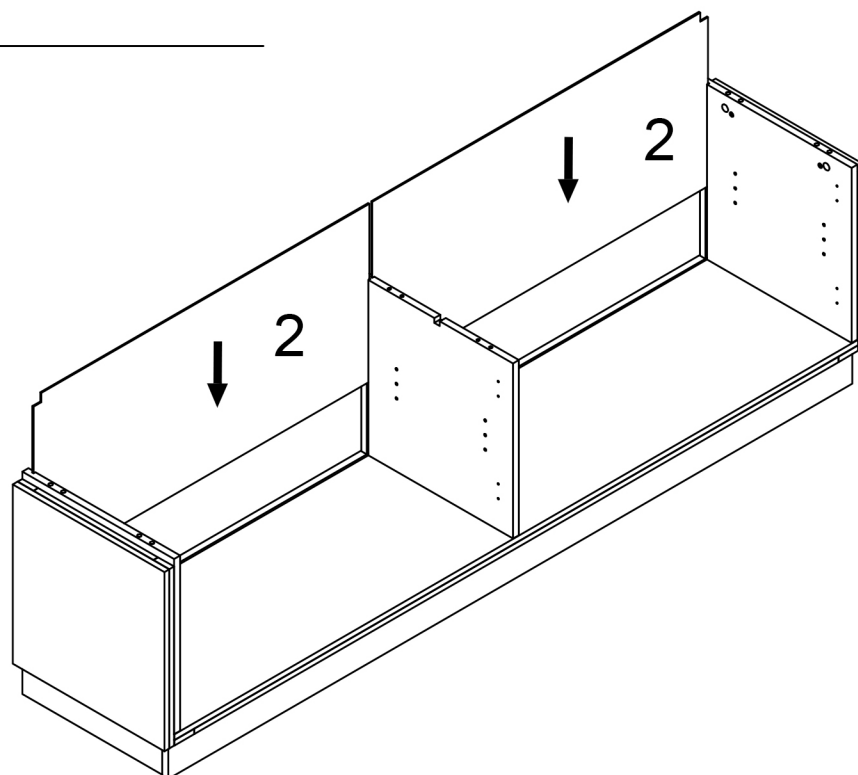


 
 
STEP 6

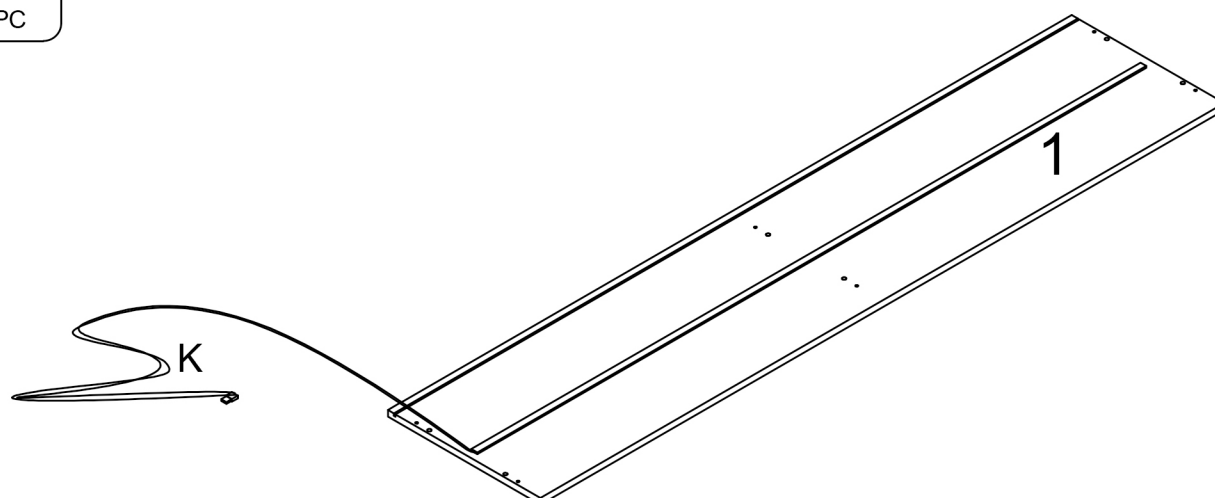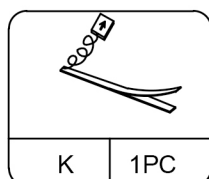

    
STEP 7

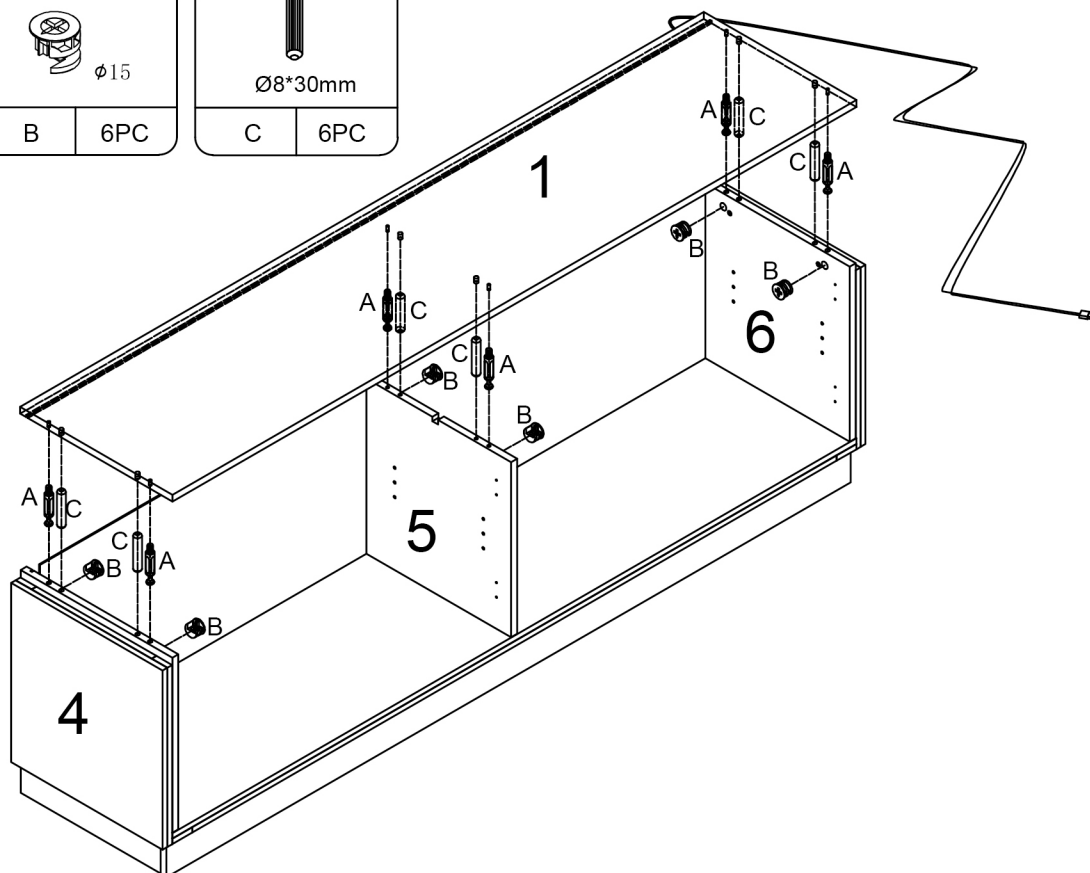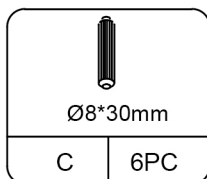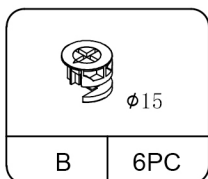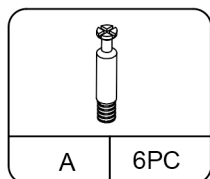

 
 
 
STEP 8

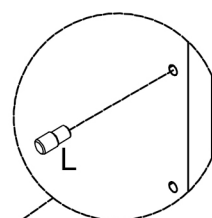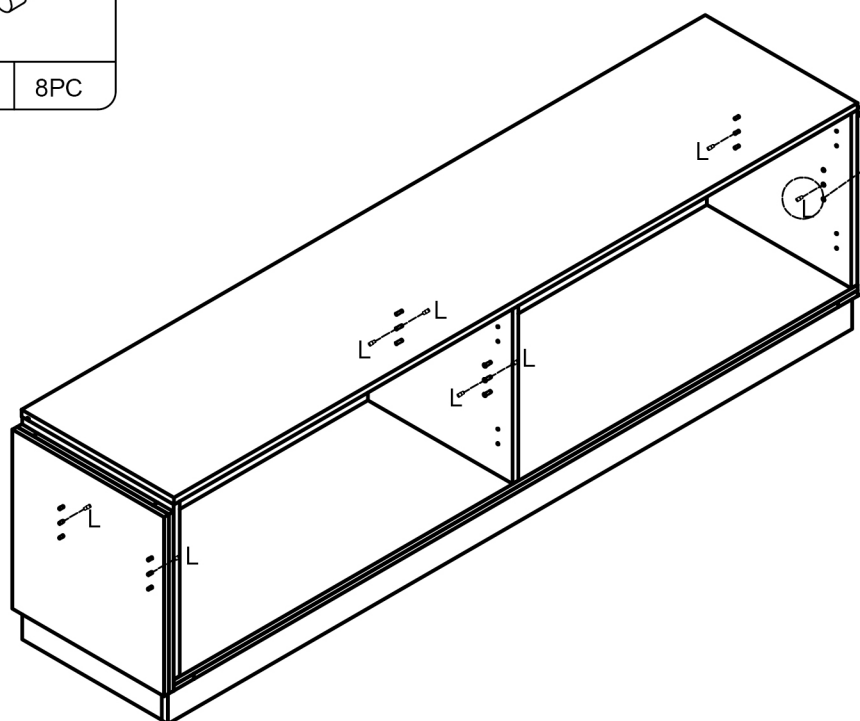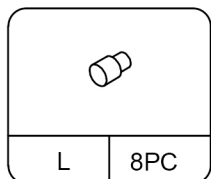

 
STEP 9

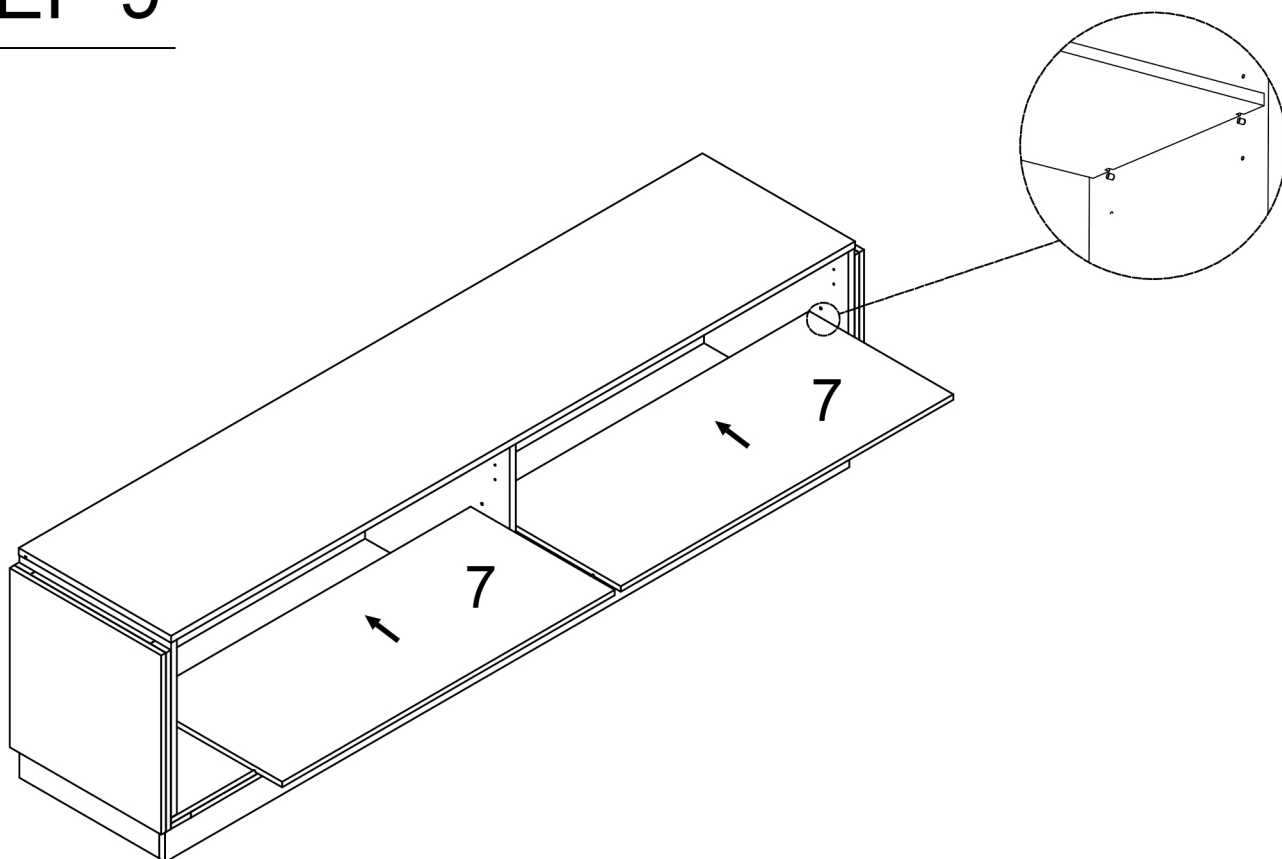


   STEP 10

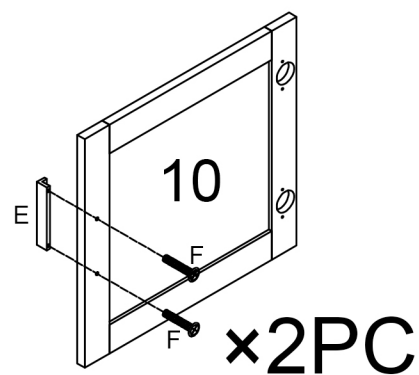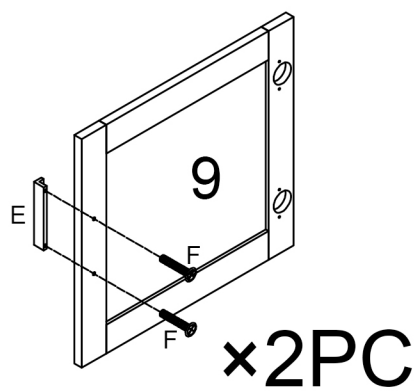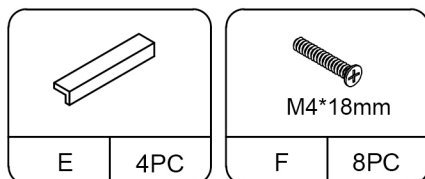

 
STEP 11

 $\phi 3.5 \times 14 \text{mm}$		 J 4PC		 I 4PC	
G	16PC	J	4PC	I	4PC

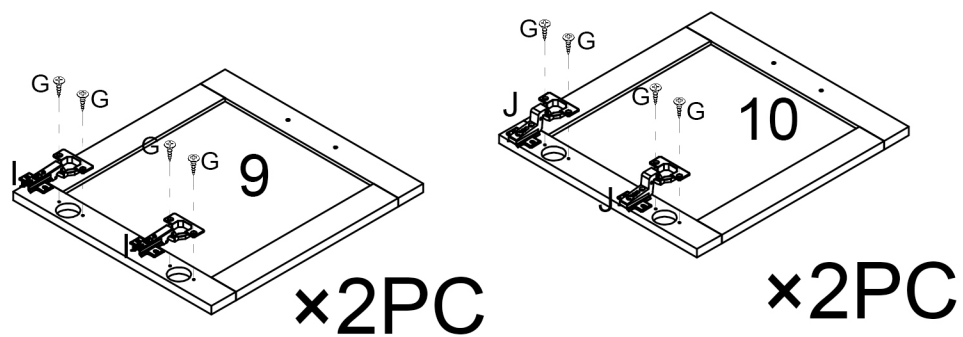 




STEP 12

 $\phi 3.5 \times 14 \text{mm}$	
G	16PC

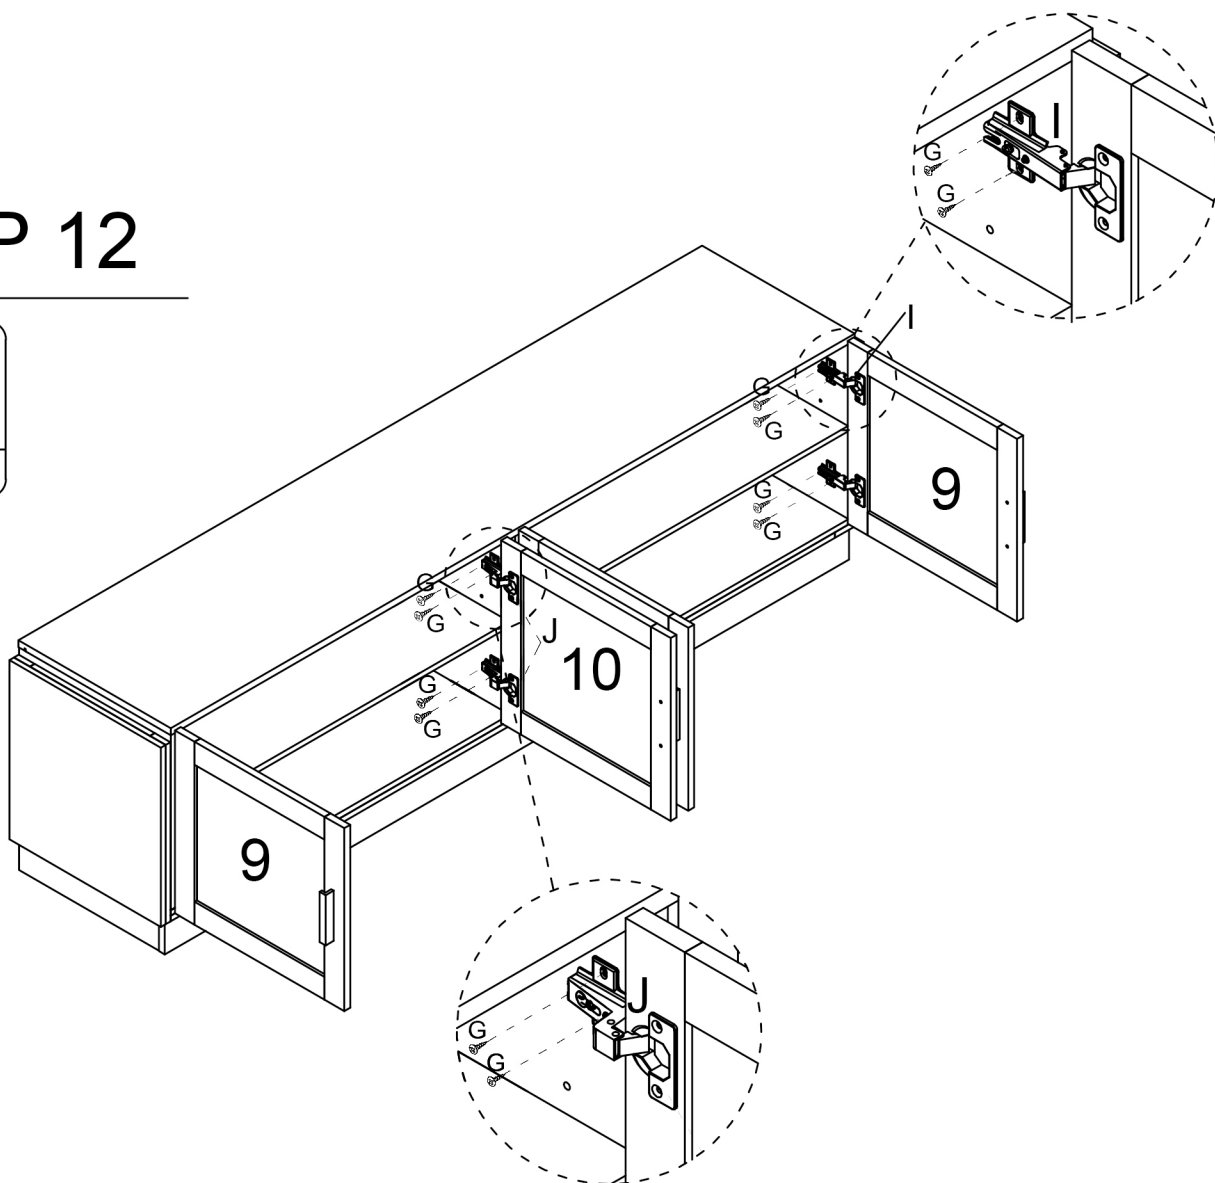 



STEP 13

   Door Hinge Adjustment Instructions

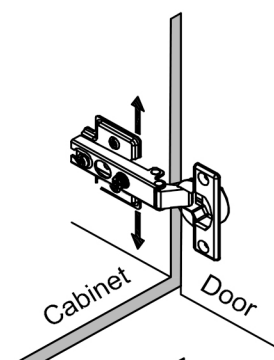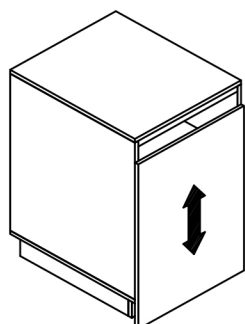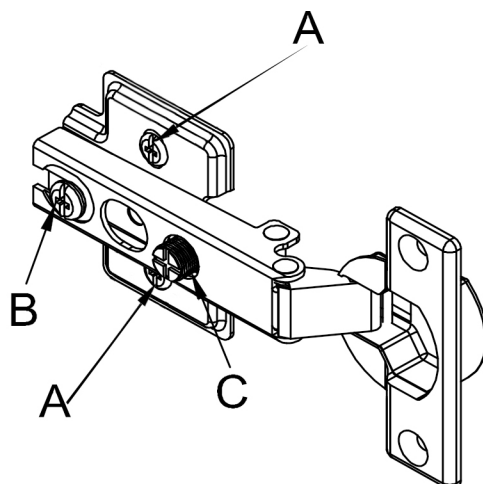



To adjust the vertical height.

  Loosen the two screws "A" on hinges. Usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back.

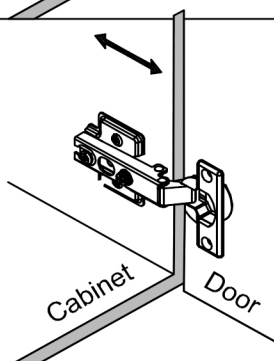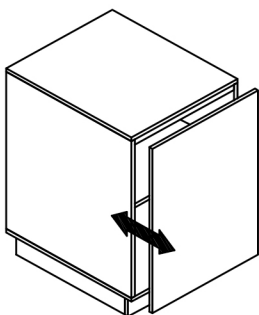

To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

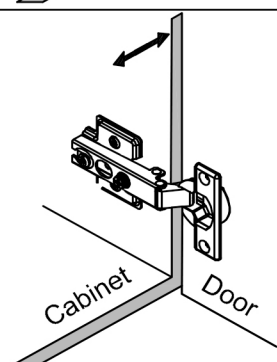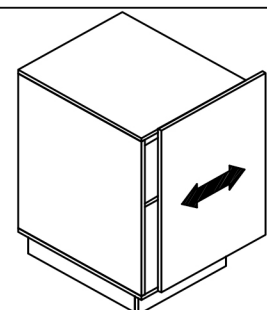

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

Well done! You've finally finished installing.

