



Assembly video please scan the QR code .




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

- 1-Protection class I: The fitting has an earthing connection: The earth wire (yellow /green) has to be connected to the clip marked with  .
- 2-This fitting should only be installed in rooms where direct contact with water is impossible.
- 3-Consumption in w, according to the speed of the motor.
- 4-May be operated with a remote control.

WARNINGS

- Read entire booklet carefully before beginning installation and save these instructions.
- To reduce the risk of personal injury, attach the fan directly to the support structure of the building according to these instructions, and use only the hardware supplied.
- To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location.
- All wiring must be in accordance with national and local electrical codes. If you are un-familiar with wiring, you should use a qualified electrician.
- To reduce the risk of personal injury, do not bend the blade attachment the system when installing, balancing or cleaning the fan. Never insert foreign objects between rotating fan blades.
- To reduce the risk of fire, electrical shock or motor damage, do not lift or carry the fan by the lead wires.
- Ensure that when mounting the ceiling fan that the fixing can support the moving weight of the fan which is 15.8kg(35lb) minimum.
- The fan blades cannot be installed lower than 2.3m from the floor.


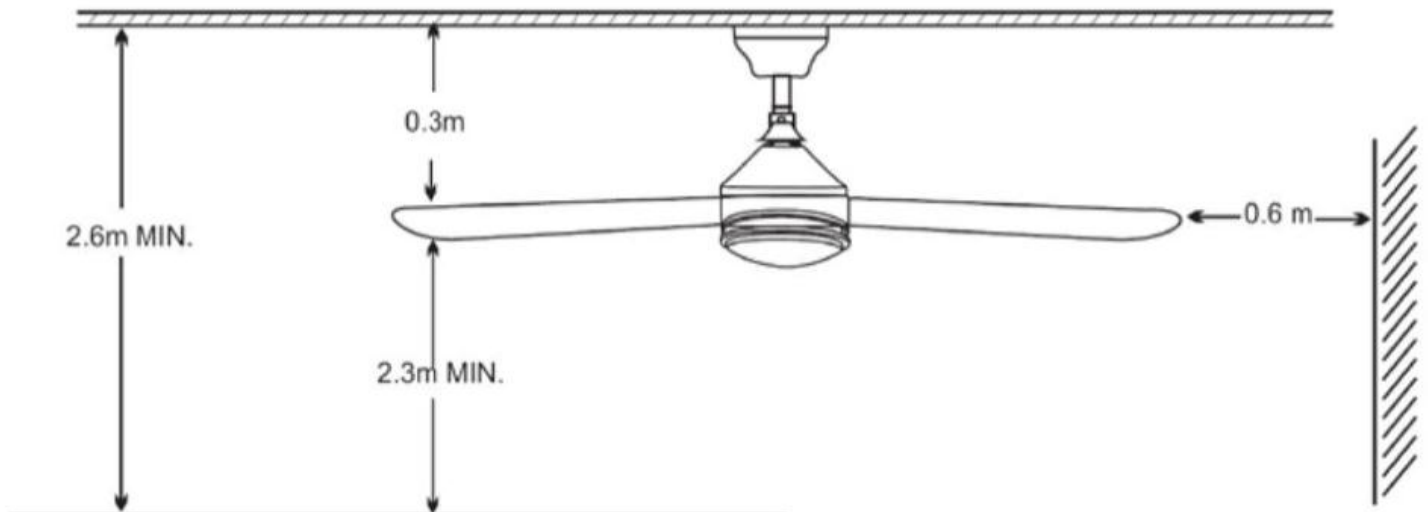


NOTE:

The important precautions, safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and carefulness are factors which cannot be built into this product. These factors must be supplied by the person(s) installing, caring for and operating the unit.

IMPORTANT SAFETY PRECAUTIONS

To ensure the success of installation, Be sure to read instructions and check parts for completeness before starting.

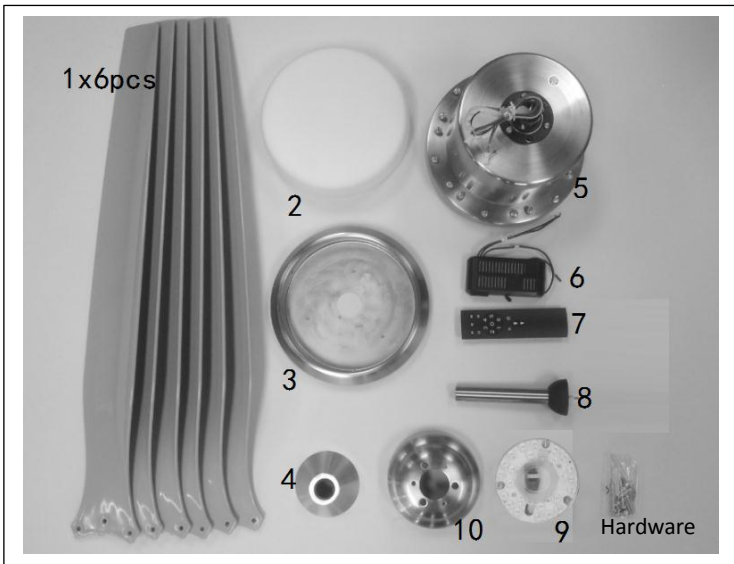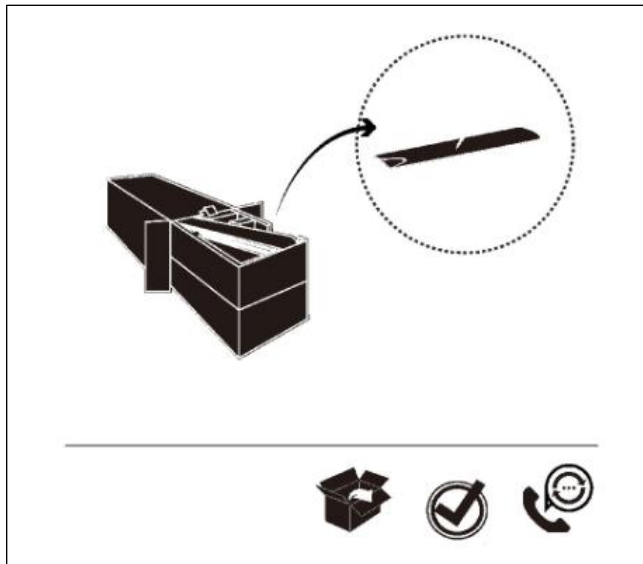

Hardware List

Ax2pcs



Φ6X40

Bx2pcs



ST4. 8*38

Cx1pcs



1/4-20*17

Dx2pcs




SM4*20


NOTE:

To reduce the risk of personal injury, only use the mounting kit provided with this ceiling fan.


TOOLS REQUIRED

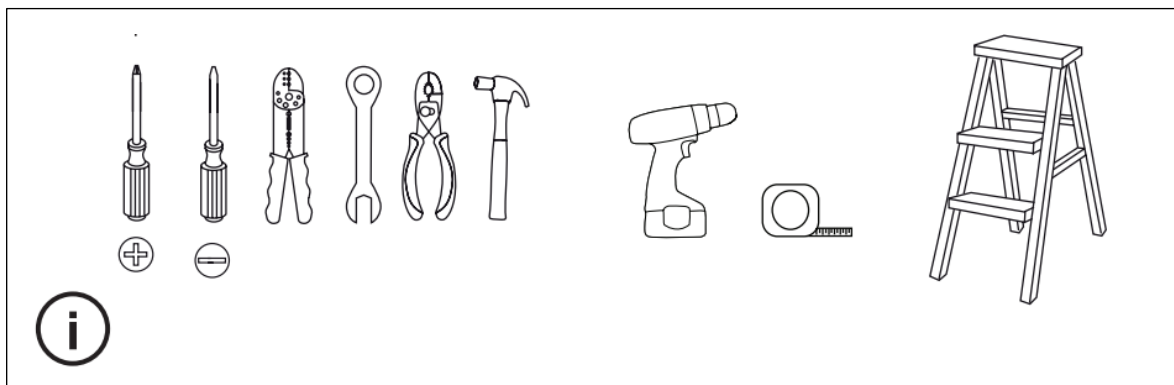




Be sure to turn off the power before preparing for installation

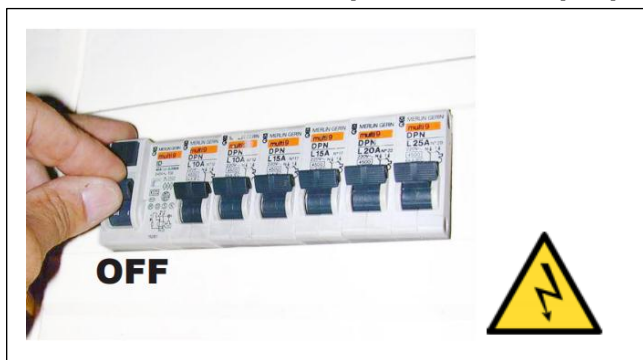


PREPARING FOR MOUNTING

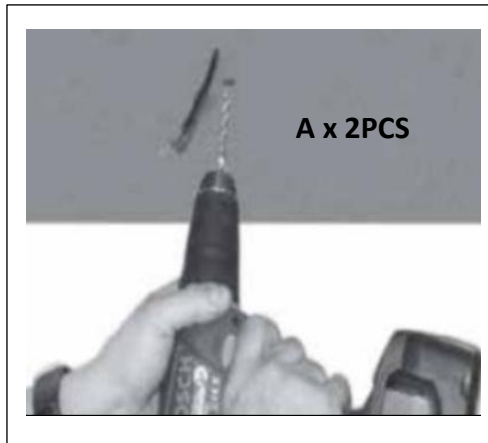


1. Remove the canopy from the mounting bracket, install the mounting bracket to the ceiling. (please ensure the fixing is able to support minimum moving weight of the fan which is 15.8kg=35Lb)

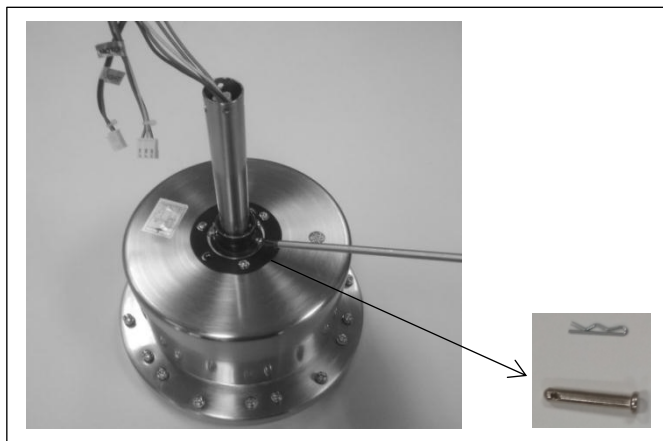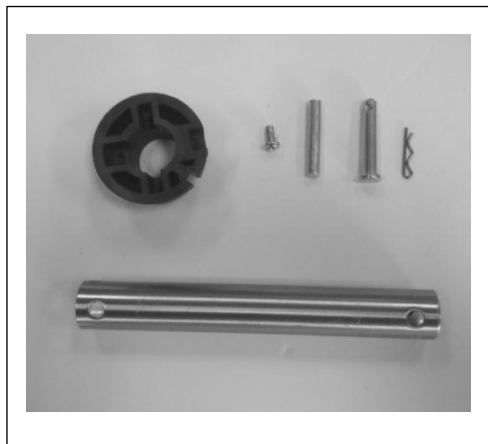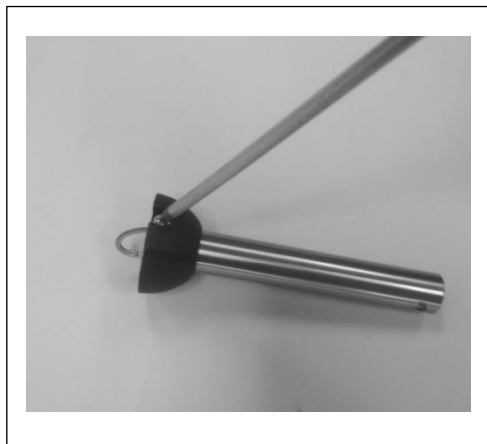



2. Remove the nylon ball from the down rod and push the pin and clevis from the motor assembly, pass the wires through the down rod and reinsert the pin and clevis, tighten the screw holding the down rod in place.

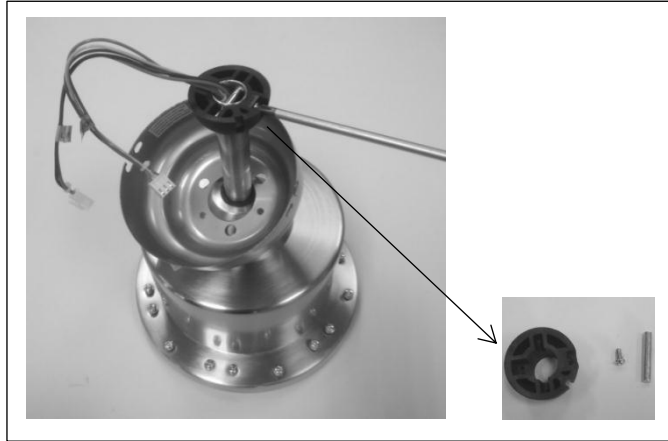


3. Put the yoke cover and canopy through the down rod, reinsert the nylon ball, pin and screw on the down rod.

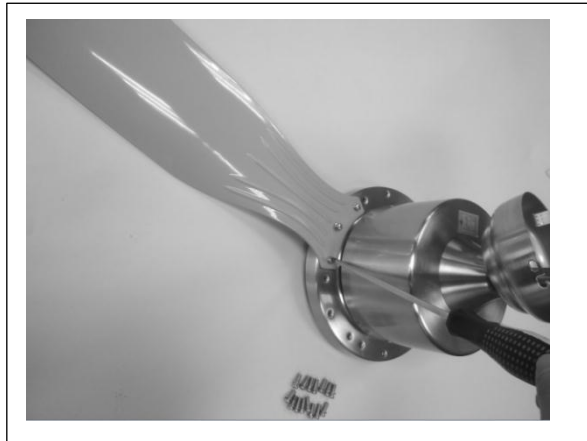


4. Install the fan blades. Be sure to tighten the screws.

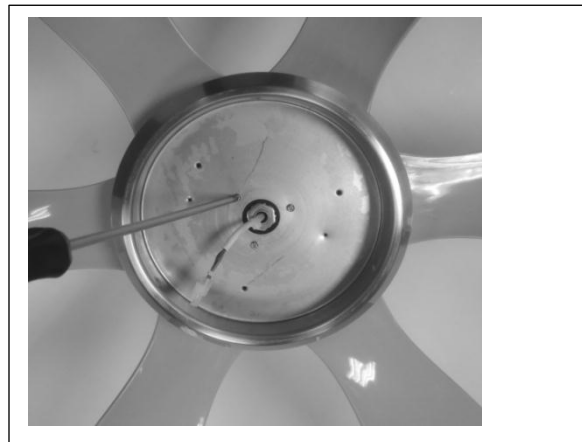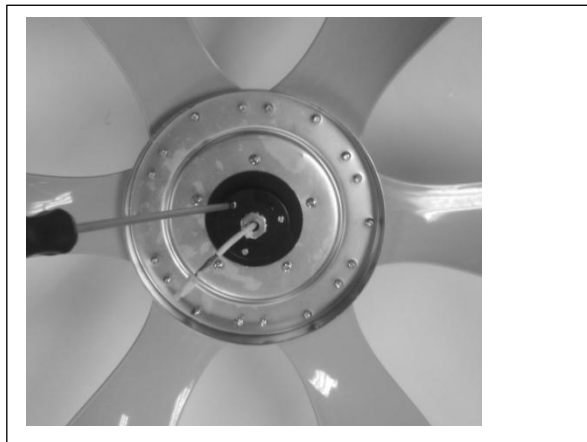


5. Install the light kit pan to the motor assembly by tighten the screws.

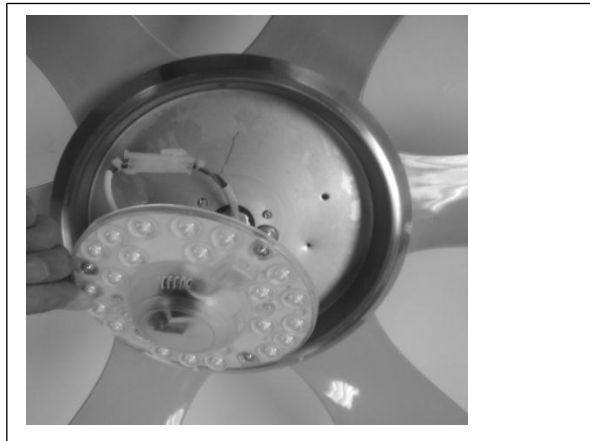


6. Connect two plugs to connect the LED plate to the entire motor. Place the LED in the center of the panel.

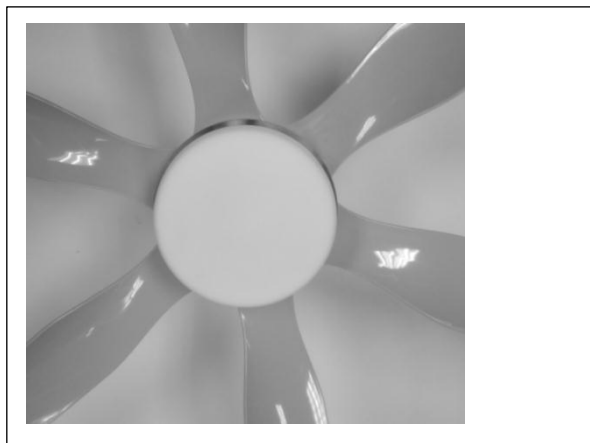

7. Turn the glass bowl clockwise until it stops.


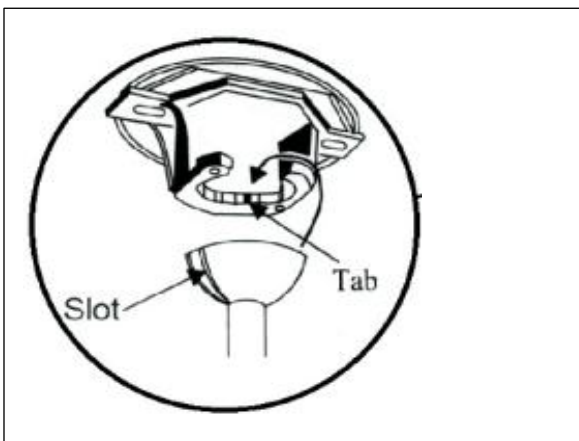


8. Lift the fan up and place the nylon ball onto the bracket, Make sure the guide pin of the bracket fits into the slot of the ball.

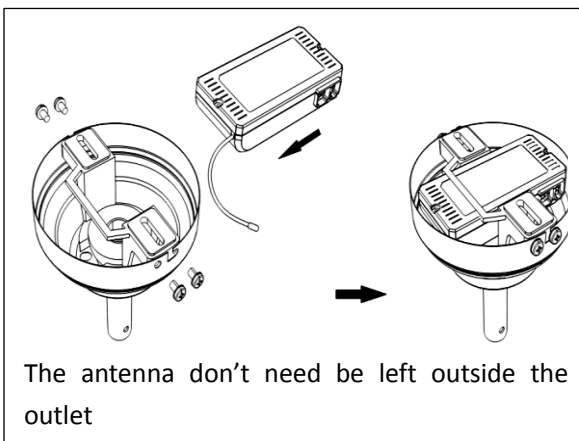

9. put the remote receiver into the middle of the bracket and connect the wires. (connect the wires according to the wiring instructions)



power supply from ceiling (230V/50Hz)

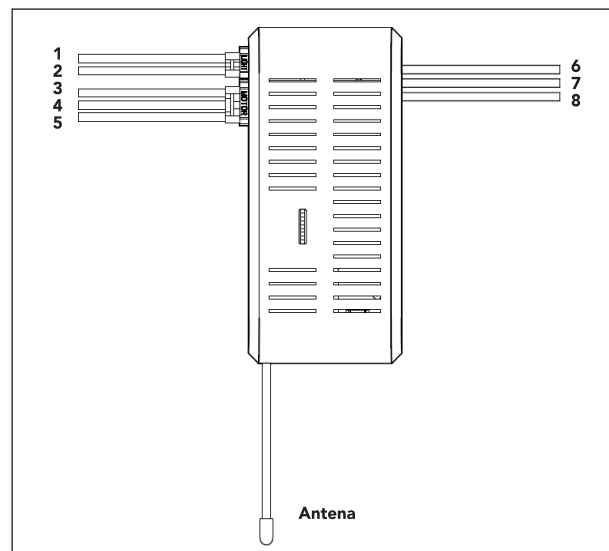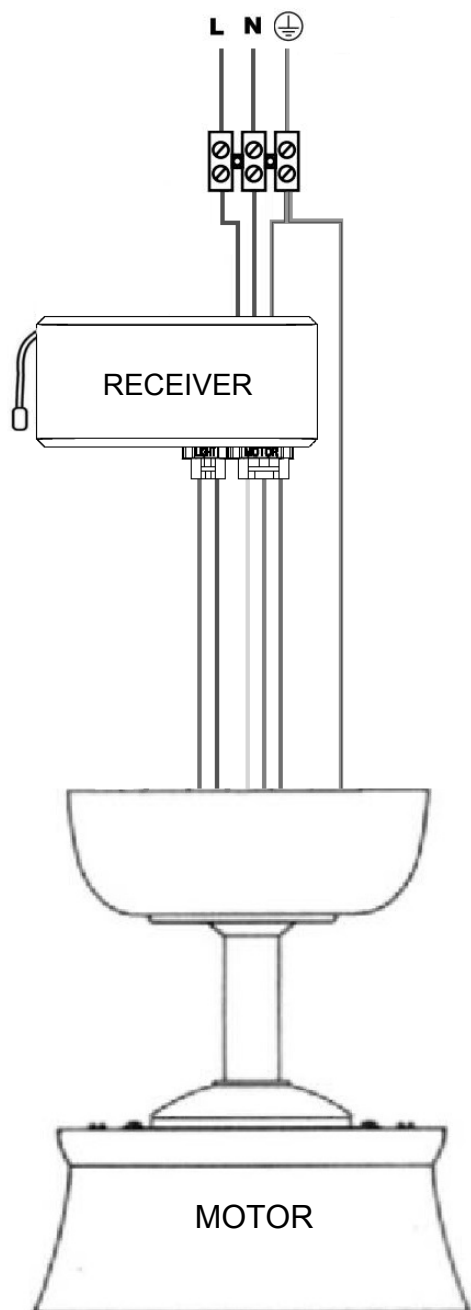

Subtitle:


- 1: Light wire L (Red)
- 2: Light wire N (Blue)
- 3: Motor phase wire U (Gray)
- 4: Motor phase wire V (Yellow)
- 5: Motor phase wire W (Red)
- 6: AC IN L (Brown)
- 7: AC IN N (Blue)
- 8: Ground wire (Green & Yellow)

10. Remote control connection diagram.

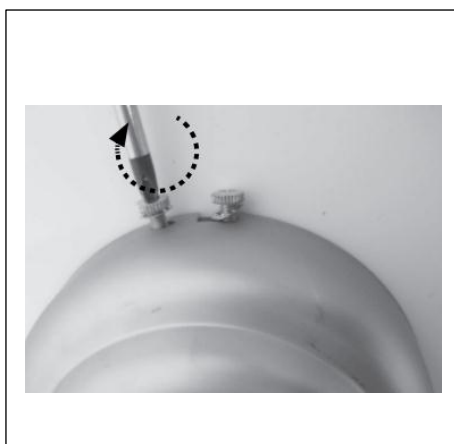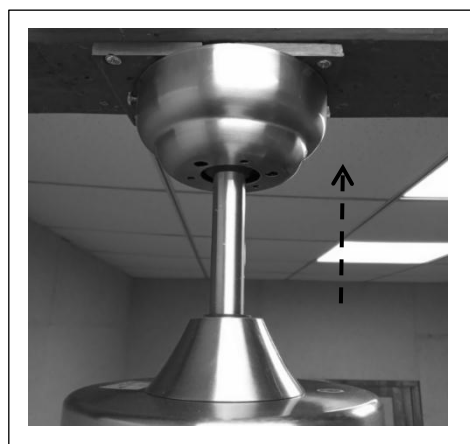

11. Assemble the canopy with the bracket again and using the fixing screws to tighten the canopy, make sure that the canopy is secured and that you have not trapped any wires.

REMOTE CONTROL

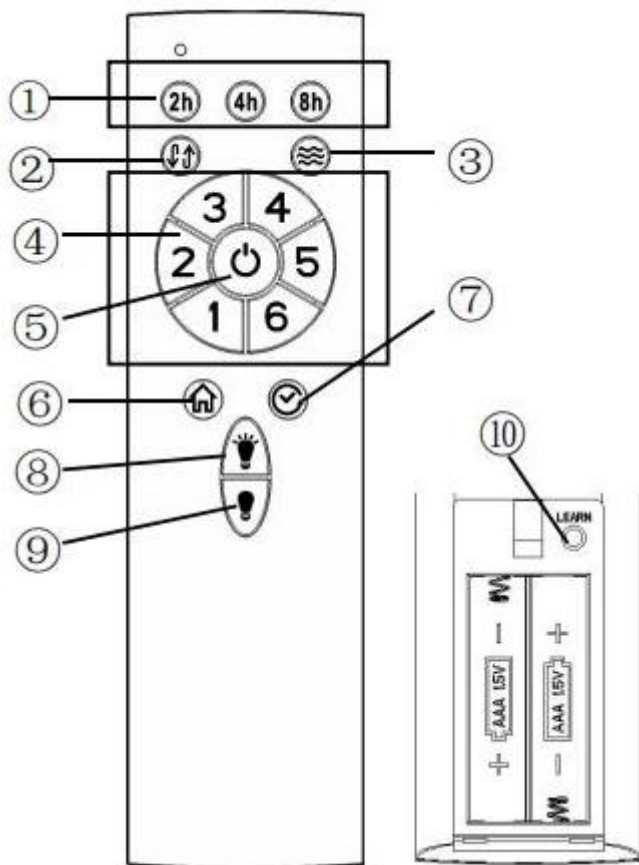

- ① Timer function: fan and light can set timer 2 hours/4 hours / 8 hours to turn off . (When both the light and the fan are off, the light and fan are automatically turned on and then activate timer function).
- ② Direction forwarding and reversing of fan.
- ③ Comfort Breeze : The fan will cycle randomly from speed 2 to speed 5.
- ④ Fan speed: control the fan speed 1~6 separately
- ⑤ Power switch: control fan ON or OFF
- ⑥ Home shield light: When starting, the fan is turned off, and the light flashes 2 times and then circulates in A-B-A mode:
A. Turn on 5-20 minutes at random.
B. Turn off 60 minutes.
- ⑦ Delay off function: the fan and light will off after 1 minute.
- ⑧ Light: ON
- ⑨ Light: OFF
- ⑩ Learn key: Tap to activate learning code pairing

Using 2pcs of AAA 1.5V batteries.

! IMPORTANTE

1. When the transmitter cannot control the receiver, please check whether the battery switch contact is normal, whether the positive and negative poles are placed correctly, and whether the battery is sufficient. If the battery voltage is too low, it will affect the transmitting intensity and cause remote control failure. Please replace the battery in time.
2. When the transmitter cannot control the receiver, please check if there are similar products nearby. The simultaneous transmission of radio waves by the same kind remote control products will cause interference to each other and affect the receiving effect.
3. The battery will decrease in power over time. Please replace the battery before it leaks to avoid damage to the transmitter. Please handle the used battery properly. Keep the battery out of the reach of children.
4. If you do not use it for a long time, please remove the batteries from the transmitter.

Care and Cleaning



WARNING: Make sure the power is off before cleaning your fan.

- ☐ Because of the fan’s natural movement, some connections may become loose. Check the support connections, brackets, and blade attachments twice a year. Make sure they are secure. It is not necessary to remove the fan from the ceiling.
- ☐ Clean your fan periodically to help maintain its new appearance over the years. Do not use water when cleaning, as this could damage the motor, or the wood, or possibly cause an electrical shock. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer to minimize discoloration or tarnishing.
- ☐ You can apply a light coat of furniture polish to the wood for additional protection and enhanced beauty. Cover small scratches with a light application of shoe polish.
- ☐ You do not need to oil your fan. The motor has permanently-lubricated sealed ball bearings.

Troubleshooting

Problem	Solution
The fan will not start.	☐ Check the main and branch circuit fuses or breakers. ☐ Check the line wire connections to the fan and switch wire connections in the switch housing.
The fan is noisy.	☐ Ensure all motor housing screws are snug. ☐ Ensure the screws that attach the blade bracket to the motor hub are tight. ☐ Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. ☐ Allow a 24-hour “breaking in” period. Most noises associated with a new fan disappear during this time. ☐ If you are using the Ceiling Fan light kit, ensure the screws securing the glassware are tight. Check that the light bulbs are also secure. ☐ Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling. ☐ Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.
The fan wobbles.	☐ Check that all blade and blade arm screws are secure. ☐ Most fan wobble problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure from a point on the center of the blade to the point on the ceiling. Rotate the fan until the next blade is positioned for measurement, and measure from the same point on each blade to the ceiling. Repeat for each blade. Any measurement deviation should be within 1/8 in. Run the fan for ten minutes. If the fan continues to wobble please contact Customer Service and a balancing kit will be sent to you at no charge.

EN: This product contains a light source of energy efficiency class <F>.

US

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

CA

Imported by Aosom Canada Inc.
7270 Woodbine Avenue, Unit 307, Markham, Ontario Canada
L3R 4B9
MADE IN CHINA

Importé par Aosom Canada Inc.
7270 Woodbine Avenue, unité 307, Markham, Ontario Canada
L3R 4B9
Fabriqué en Chine

UK

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

FR

ADRESSE D'IMPORTATION:
MH FRANCE
2 Rue Maurice Hartmann
92130 Issy Les Moulineaux
France
FABRIQUÉ EN CHINE



Adresses sur quefairedemesdechets.fr

ES

IMPORTADOR:
SPANISH AOSOM, S.L.
C/ROC GROS, N°15.08550, ELS HOSTALET DE BALENYÀ, SPAIN.
B66295775
WWW.AOSOM.ES
ATENCIONCLIENTE@AOSOM.ES
TEL: 931294512
HECHO EN CHINA

PT

SPANISH AOSOM, S.L
C.ROC GROS N.15, 08550. ELS HOSTALET DE BALENYÀ
TEL: 931294512 (SEG-SEX DAS 7:30H ÀS 16:30H)
INFO@AOSOM.PT
WWW.AOSOM.PT

DE

ADRESSE DES IMPORTEURS:
MH Handel GmbH
Wendenstraße 309
D-20537 Hamburg
Germany
IN CHINA HERGESTELLT

IT

IMPORTATO DA:
AOSOM Italy srl
Centro Direzionale Milanofiori
Strada 1 Palazzo F1
20057 Assago (MI)
P.I.: 08567220960
FATTO IN CINA