


MOUNT-IT!

Installation Manual

SKU: MI-395

SKU: MI-395WHT

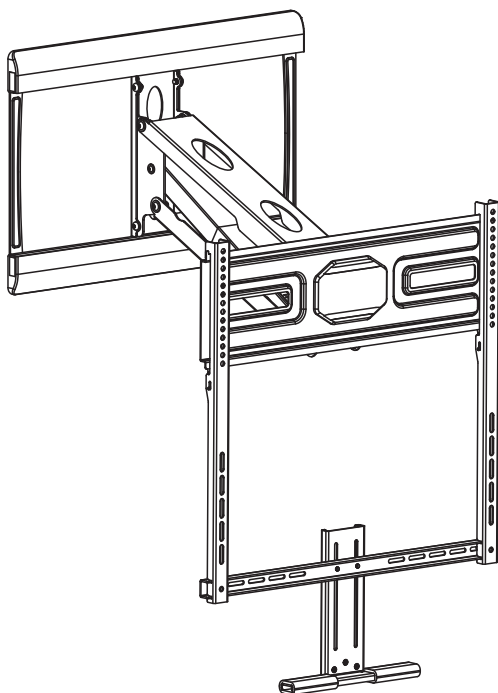

Scan this QR code for
product information, videos,
and assembly assistance.

FIREPLACE TV MOUNT



HAVE QUESTIONS?

Monday - Friday from 8:00am - 4:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com

Thank you for choosing Mount-It!

EN Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact Mount-It! for assistance.

CAUTION: Use with products heavier than the rated weights indicated may result in instability causing possible injury.

- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact Mount-It! for a replacement.

MAINTENANCE: Check that the product is secure and safe to use at regular intervals (at least every three months).

DE Lesen Sie die gesamte Bedienungsanleitung, bevor Sie mit der Installation und Montage beginnen. Wenn Sie Fragen zur Anleitung oder Warnungen haben, wenden Sie sich bitte an Ihren örtlichen Händler.

VORSICHT: Die Verwendung mit Produkten, die schwerer als die angegebenen Nenngewichte sind, kann zu Instabilität führen und zu möglichen Verletzungen führen.

- Bitte befolgen Sie die Montageanleitung genau. Eine unsachgemäße Installation kann zu Schäden oder schweren Verletzungen führen.
- Sicherheitsausrüstung und geeignete Werkzeuge müssen verwendet werden. Dieses Produkt sollte nur von Fachleuten installiert werden.
- Dieses Produkt ist auf massiven Betonwänden oder Mauerwerkswänden zu montieren.
- Stellen Sie sicher, dass die Aufliegfläche des Geräts und aller angeschlossenen Hardware und Komponenten sicher trägt.
- Verwenden Sie die mitgelieferten Befestigungsschrauben und die Befestigungsschrauben NICHT ZU FEST ANZIEHEN.
- Dieses Produkt enthält Kleinteile, die beim Verschlucken eine Erstickungsgefahr darstellen können. Halten Sie diese Gegenstände von Kindern fern.
- Dieses Produkt ist nur für den Innenbereich bestimmt. Die Verwendung dieses Produkts im Freien kann zu Produktversagen und Verletzungen führen.

WICHTIG: Stellen Sie vor der Installation sicher, dass Sie alle Teile gemäß der Komponenten-Checkliste erhalten haben. Bei beschädigten oder fehlenden Teilen, wenden Sie sich an Ihren Verkaufsstelle, um Ersatz zu erhalten.

WARTUNG: Überprüfen Sie das Produkt in regelmäßigen Abständen auf Sicherheit und Stabilität (am besten alle drei Monate).

FR Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.

ATTENTION: L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.

Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.

- Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
- Ce produit est conçu pour être installé sur des murs avec poteaux en bois, des murs en béton massif ou murs en brique.
- Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composants associés.
- Utilisez les vis de montage fournies et NE SERREZ PAS TROP les vis de montage.
- Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
- Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner un défilage du produit ou des blessures aux personnes.

IMPORTANT: Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.

MAINTENANCE: A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable.

RU Перед началом установки и сборки прочитайте руководство по установке. Если у Вас возникли какие-либо вопросы относительно инструкций или предупреждений, свяжитесь с Вашим локальным распространителем для получения помощи.

Внимание: Использование продуктов, вес которых превышает указанный расчетный вес, может привести к неустойчивости и возможным травмам.

- Опоры должны быть установлены, как это показано в монтажных инструкциях. Неправильная установка может привести к получению серьезных травм.
- Необходимо использовать предохранительное устройство и специальные инструменты. Продукт должен устанавливаться только профессионалами.
- Продукт предназначен для установки на деревянные каркасные стены, твердые цементные стены или кирпичные стены.
- Убедитесь, что несущая поверхность выдержит вес всего установленного оборудования и комплектации.
- Необходимо использовать монтажные винты, входящие в комплект поставки, и НЕ ПЕРЕТЯГИВАТЬ монтажные винты.
- Данный продукт содержит маленькие детали, которые представляют опасность удушья при проглатывании. Такие детали необходимо хранить в недоступном для детей месте.
- Данный продукт предназначен только для эксплуатации в помещениях. Использование данного продукта на улице может привести к поломке продукта и получению травм.

ВАЖНО: Перед установкой убедитесь, что Вы получили все детали в соответствии со списком комплектации. Если не хватает каких-либо деталей или они поломаны, свяжитесь с Вашим местным распространителем по вопросу замены.

ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ: Необходимо регулярно проверять (как минимум, раз в три месяца), чтобы крепежи были зафиксированы, и его использование было безопасным.

ES Lea todo el manual de instrucciones antes de comenzar la instalación y ensamble de la unidad. Si tiene alguna inquietud con respecto a las instrucciones o advertencias, comuníquese con su distribuidor local.

PRECAUCIÓN: utilizar con productos de mayor peso al indicado en los límites de peso podría ocasionar inestabilidad y posibles heridas personales.

- Los soportes deben acoplarse tal como se indica en las instrucciones de ensamble. Una incorrecta instalación podría ocasionar daños y serias heridas personales.
- Utilice las herramientas y equipo de seguridad adecuados. Este producto solo debe ser instalado por profesionales.
- Este producto está diseñado para instalaciones en paredes de madera sólida, concreto sólido o bloques.
- Asegúrese de que la superficie de fijación sostenga de manera segura el peso total del equipo y todos sus componentes y hardware.
- Utilice los tornillos de ensamble suministrados y NO aplique demasiada tensión a los tornillos.
- Este producto contiene piezas pequeñas que representan un riesgo de asfixia. Mantenga estas piezas fuera del alcance de los niños.
- Este producto está diseñado para uso en interiores solamente. Utilizar este producto en exteriores podría ocasionar fallas y heridas personales.

IMPORTANTE: Asegúrese de que haya recibido todas las piezas según la lista de verificación de componentes para la instalación. Si falta alguna de las partes, o está dañada, comuníquese con su distribuidor.

MANUTENIMIENTO: Compruebe periódicamente que el soporte esté asegurado y listo para usar (al menos cada tres meses).

PT Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre quaisquer uma das instruções ou avisos, por favor, entre em contato com o seu distribuidor local para assistência.

ATENÇÃO: O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos.

- Os suportes devem ser anexados como especificado nas instruções de montagem. A instalação incorreta pode causar danos ou sérias lesões pessoais.
- Equipamentos de segurança e ferramentas adequadas devem ser utilizadas. Este produto só deve ser instalado por profissionais.
- Este produto é projetado para ser instalado em paredes verticais de paredes de madeira, paredes de concreto sólido ou de tijolos.
- Certifique-se que a superfície de suporte suportará com segurança o peso combinado do equipamento e todas as ferragens e componentes anexados.
- Use os parafusos de montagem fornecidos e NÃO APERTE EXCESSIVAMENTE os mesmos.
- Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha esses itens longe do alcance de crianças.
- Este produto destina-se somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto e lesões pessoais.

IMPORTANTE: Assegure-se que você recebeu todas as peças, de acordo com a lista de componentes, antes da instalação. Se alguma peça estiver faltando ou é defeituosa, contate o seu distribuidor local para substituição.

MANUTENÇÃO: Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses).

COMPATIBLE WITH
TVs UP TO

COMPATIBLE VESA SIZES


200x200 300x200 300x300
400x200 400x300
400x400 600x400

70" MAX


FLAT/CURVED

13-33kg
(28.6-72.6lbs)
RATED


PACKAGE CONTENTS

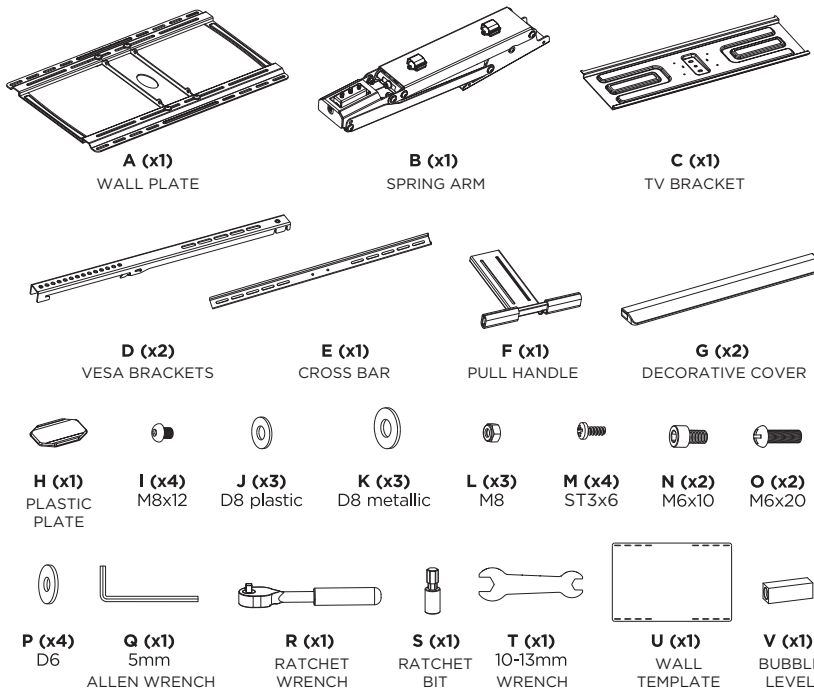

VESA HARDWARE

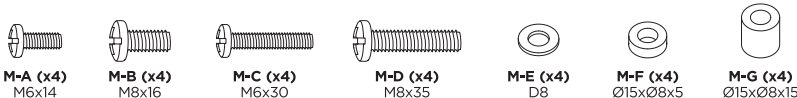

WALL MOUNTING HARDWARE

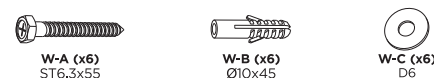

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct wall mounting and TV mounting hardware suitable for your installation.


CHOKING HAZARD. Package includes small parts.
Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.

Step 1

Installing The Spring Arm To The Wallplate


Attach the Spring Arm (B) and Wall Plate (A) with bolts (4 x I) as shown, using the Allen Wrench (Q) to tighten securely.

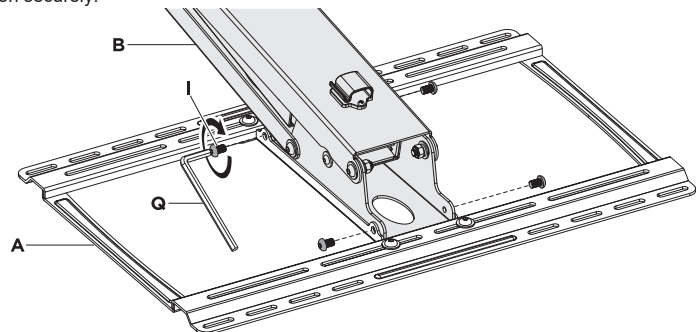

Step 2


Installing The TV Bracket To The Spring Arm

Placing Washer (J) on the 3 exposed bolts on the Spring Arm (B) attach TV BRACKET (C) as shown then secure with Washer (K) and Nut (L). Use Wrench (T) to tighten securely.

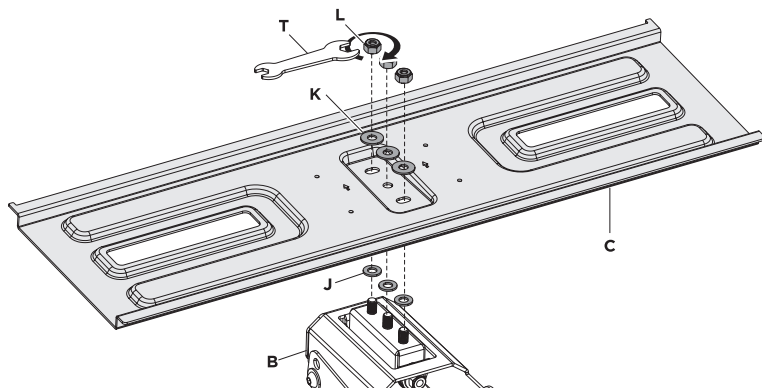

Attaching The Plastic Plate To The TV Bracket

Install Plastic Plate (H) to cover the nuts from the previous step inserting Bolt (M) from the opposite side as shown using a screwdriver to tighten.

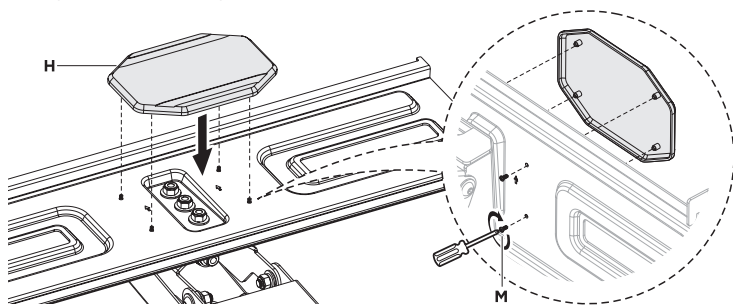

Step 3

Positioning The Mount Over The Fireplace


The height of the mount is dependent on the depth of the mantel to ensure the spring arm clears the mantel when fully lowered.

Determine the proper wall placement using the chart below.

Measure the depth of your mantel and locate the closest measurement in column A that your mantel depth is Smaller Than Or Equal To. The corresponding measurement in column B "Mantel Clearance" indicates the minimum required mounting height to properly clear the mantel. Use Column C "Min. Wall Space Height" to calculate the space your TV+Mount requires. Ensure that the measurement from Column C is less than your total wall space as measured from mantel to ceiling. Include any attached soundbars in the TV Height measurement.

Note: Installing below the required mounting height for your mantel depth will prevent the mount from fully clearing the mantel.

A. Mantel Depth	B. Mantel Clearance	C. Min. Wall Space Height
≤5 inches	1.2 inches	TV Height + 11.5"
≤9.8 inches	3 inches	TV Height + 14.5"
≤11.8 inches	4 inches	TV Height + 15"
≤13.8 inches	5 inches	TV Height + 16.5"

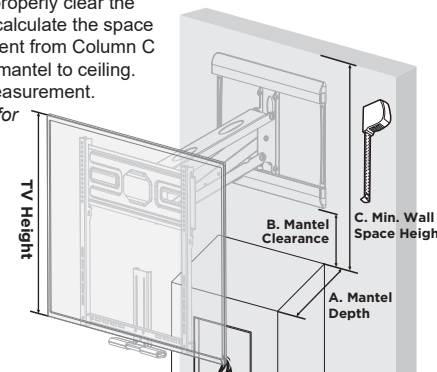

Step 4

Option 1. Wood Studs Installation


Use a stud finder to locate 2 drywall studs and mark the location with a pencil. Using a bubble level to ensure straightness, hold the Wall Template (U) to the wall at required mounting height determined by step 3. Mark the center of the template holes which align with the center of each stud. Use a 3/16" (4.5mm) drill bit to drill pilot holes on the wall with a depth of 2.2" (55mm). Please note, failure to drill pilot holes may result in the lag bolt heads snapping during installation.

Holding the mount to the wall aligned with the pilot holes install Washer (W-C) and Lag Bolt (W-A) and tighten securely. Do not overtighten. Overtightening can damage the lag bolts, greatly reducing their holding power.

NOTE: This step may require assistance of 1 or more persons to hold heavy parts in place.

CAUTION: DO NOT INSTALL ON DRY WALL ALONE. INSTALL MOUNT ON WOOD STUDS. USER MUST VERIFY THE WALL CAN HOLD THE WEIGHT OF THE TV AND THE TV MOUNT.


WARNING: Tighten screws so that the wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.

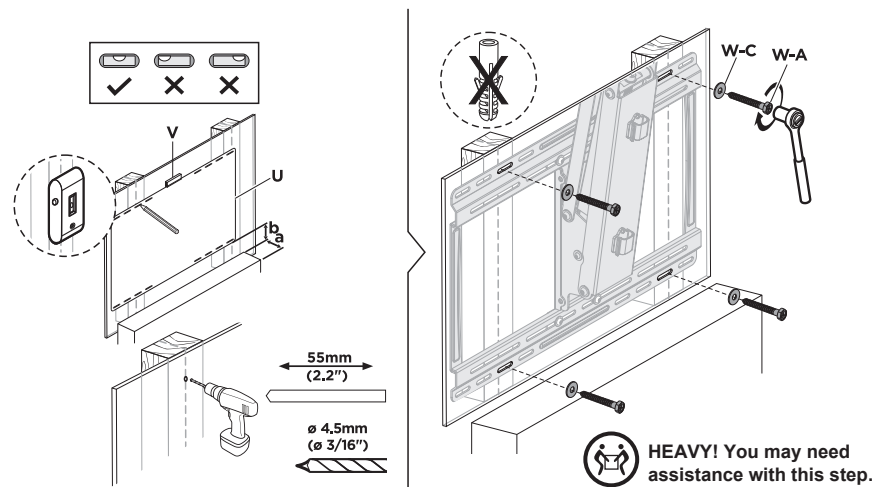


Option 2. Concrete/brick Installation

Using the bubble level (V) to ensure straightness, hold the Wall Template (U) to the wall at the required mounting height determined by step 3. Identify the 4 outermost holes (located at each corner) and mark the center of the holes with a pencil.

Use a 3/8" (10mm) drill bit to drill pilot holes on the wall with a depth of 2.4" (60mm). Please note, failure to drill pilot holes may result in the lag bolt heads snapping during installation, or stone cracking/crumbling. Never drill into the mortar in between the blocks, make sure that the anchors are seated flush with the concrete surface.

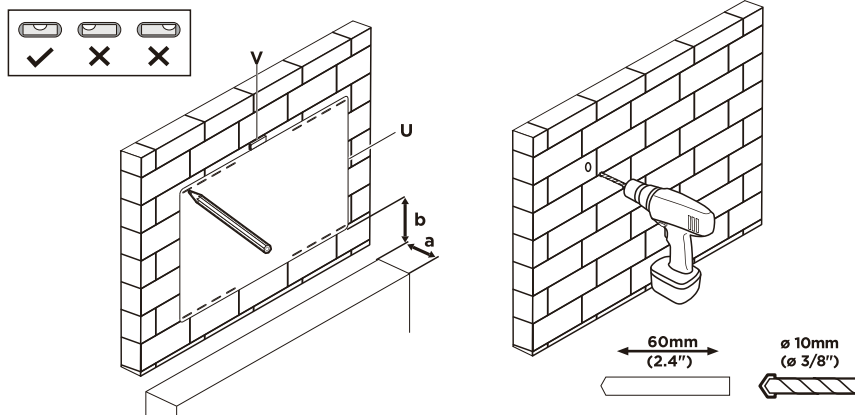

Carefully clear any dust or debris from inside the drilled holes and insert all 4 Plastic Wall Anchors (W-B). Holding the mount to the wall aligned with the pilot holes install Washer (W-C) and Lag Bolts (W-A) and tighten securely. Do not overtighten. Overtightening can damage the lag bolts or the wall, greatly reducing their holding power.

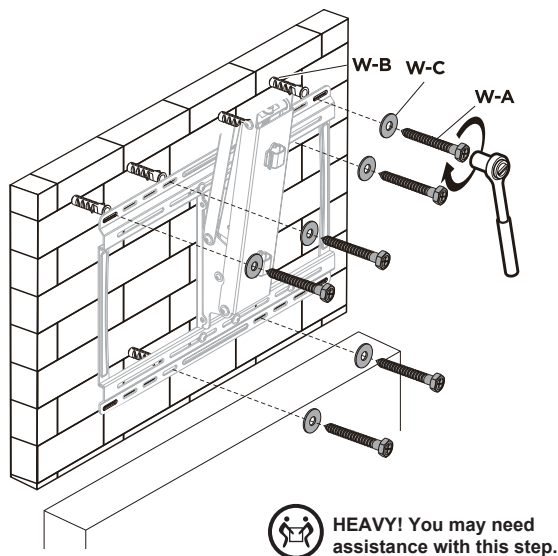


WARNING: Tighten screws so that wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.

Step 5

Attaching The Decorative Plates


Install Decorative Cover (G) as shown over the top and bottom of the wall bracket, covering the now installed lag bolts.

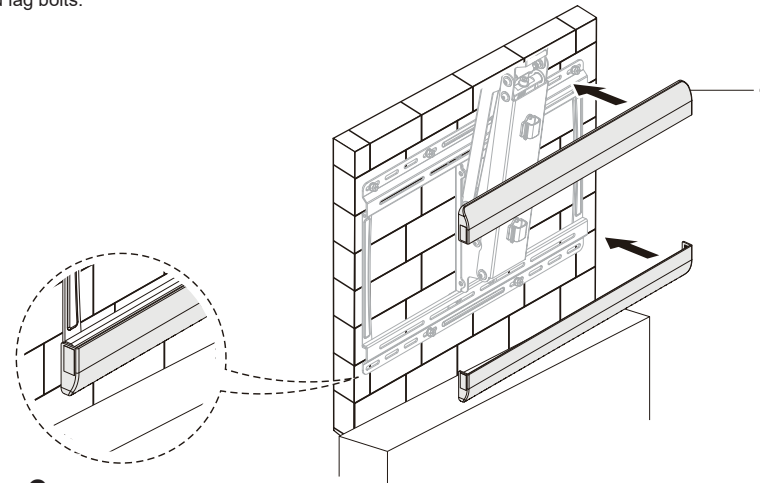

Step 6

Attaching The Vesa Brackets To The TV


Lay your display face down on a soft, flat, or even surface to prevent damage, and place the VESA Bracket (D) over the bolt holes on the rear of the TV so that the VESA Brackets (D) are aligned with one another and not hanging over the top or bottom of the screen. Select the appropriate size mounting bolt for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary use the included spacers (M-F or M-G) between the mount and the TV as shown above to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Square Washer (M-E) must be used in all configurations.

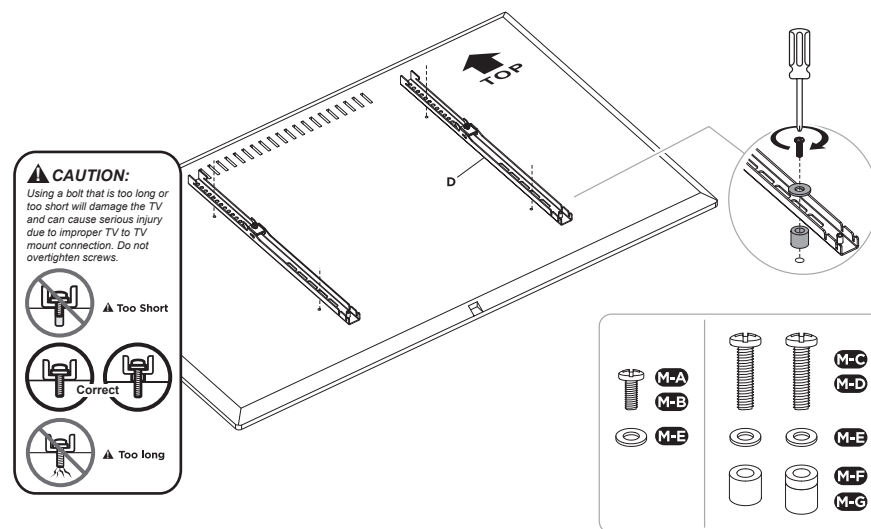

Step 7

Attaching the pull handle

- Attach the Cross Bar (E) to the VESA Brackets (D) using Washer (P) and Bolt (O). Tighten securely using Allen Wrench (Q).
- Attach Pull Handle (F) to the Cross Bar (E) using Washer (P) and Bolt (N). Tighten securely using Allen Wrench (Q).

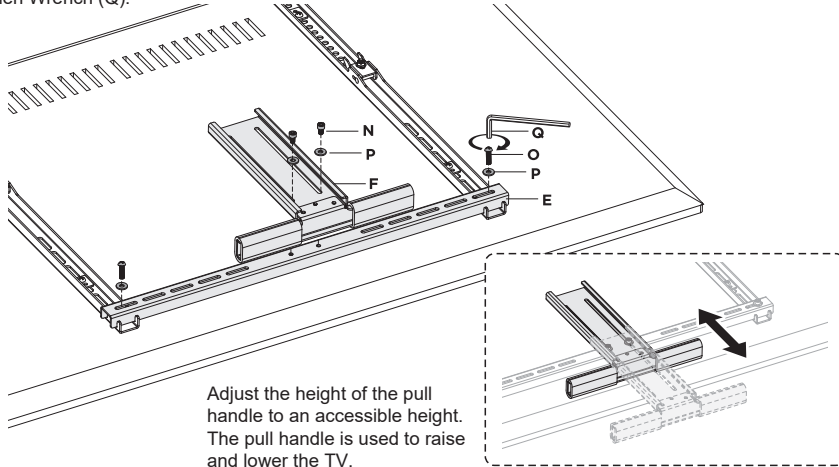


Step 8


Attaching TV To The Spring Arm

- Insert the Allen Key into the hole as shown to prevent the end of the mount from moving when you are hanging the TV.

CAUTION: FAILURE TO FIX THE SPRING ARM POSITION BY INSERTING ALLEN KEY (Q) MAY RESULT IN INJURY

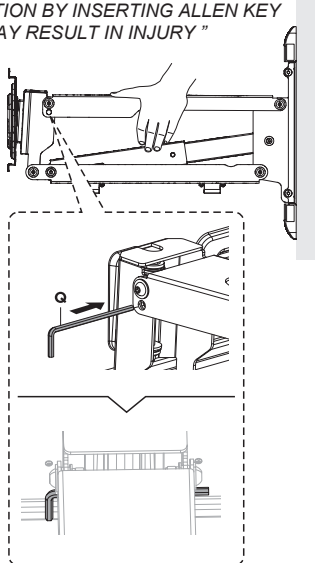

- To attach the TV to the mount, remove the Nut (D1) pictured, lower the latch as shown. Once lowered, attach the VESA bracket to the TV Plate. Raise the latch up and reinstall nut (D1) to secure the TV in place.

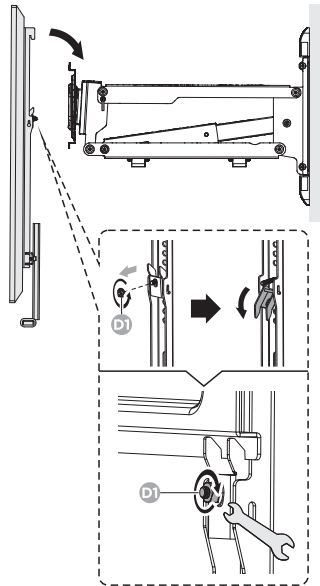


HEAVY! You may need assistance with this step.

Step 9

Adjusting the spring arm tension

The tension of the spring arm must match the weight of the TV for easy height adjustment of the TV. The spring arm tension is set at the lowest level as factory default. Depending on the weight of the TV, the spring arm tension may need to be increased.

Note: Omitting spring arm tension adjustment may result in your TV not staying in the desired position.

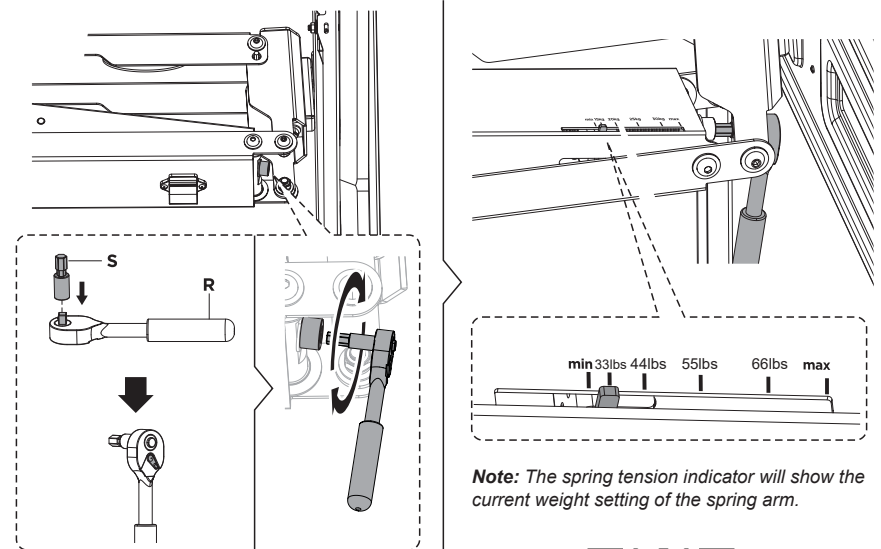


Note: Use the included ratchet wrench (R) and ratchet bit (S) to adjust the tension adjustment. To increase the tension (heavier TV) rotate the Ratchet wrench clockwise (multiple rotations might be required to reach the adequate spring tension level.) To decrease the tension (lighter TV) rotate the Ratchet wrench (R) counter-clockwise (multiple rotations might be required to reach the adequate spring tension level.)



Please scan this QR code for a video guide to adjust the spring arm tension



Step 10

Cable Management

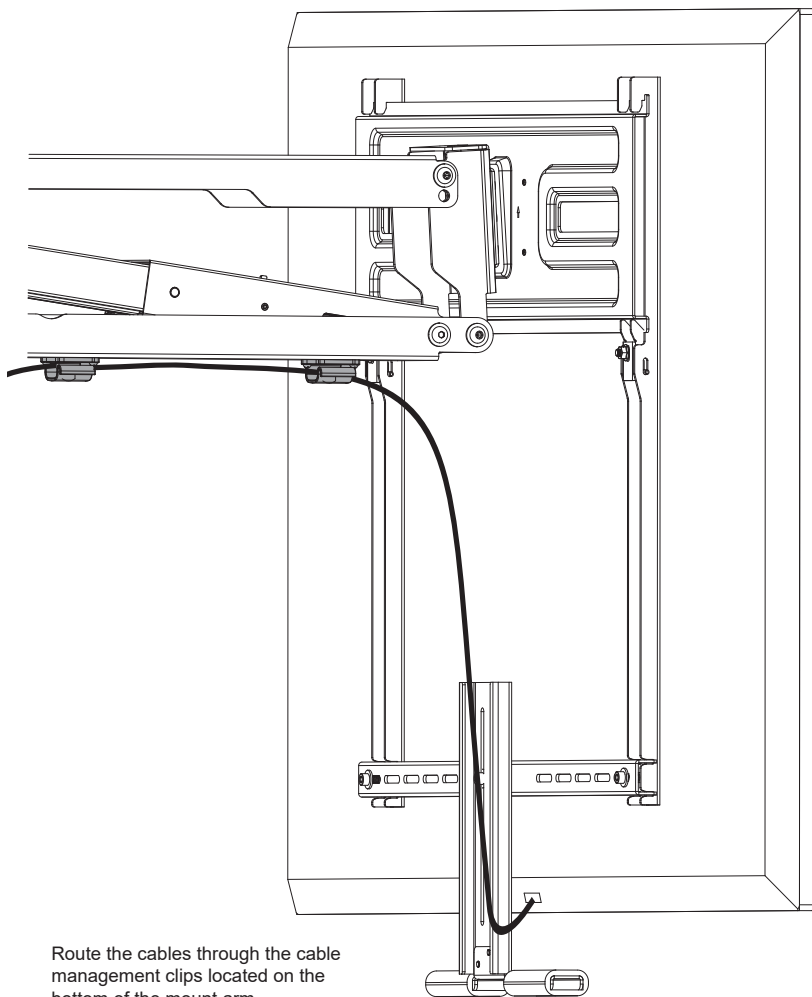


Step 11

Positioning The TV

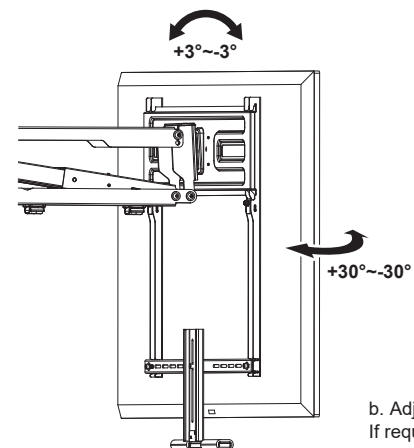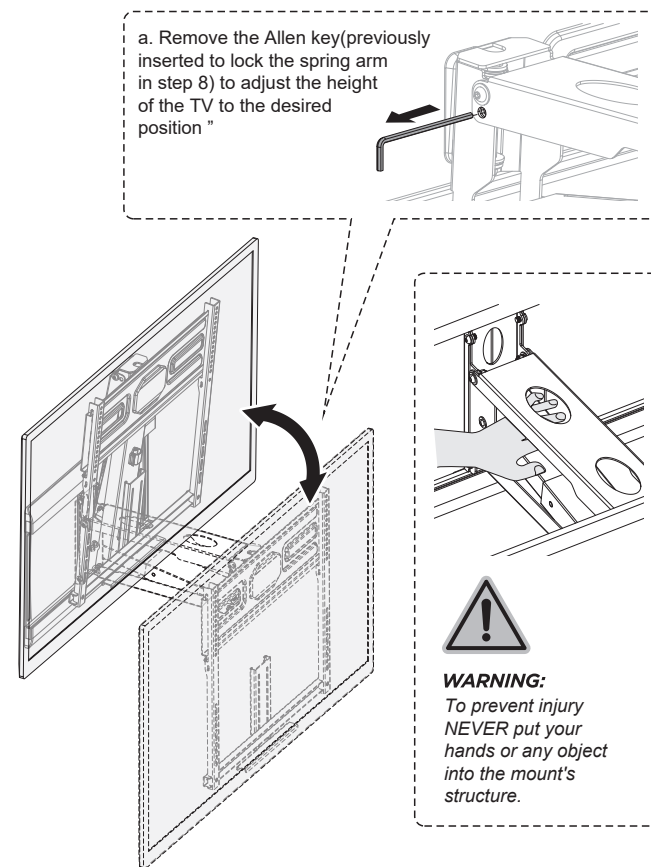

b. Adjust screen angle to desired viewing position. If required the TV can be leveled post installation.

DIMENSIONS & WEIGHT CAPACITY

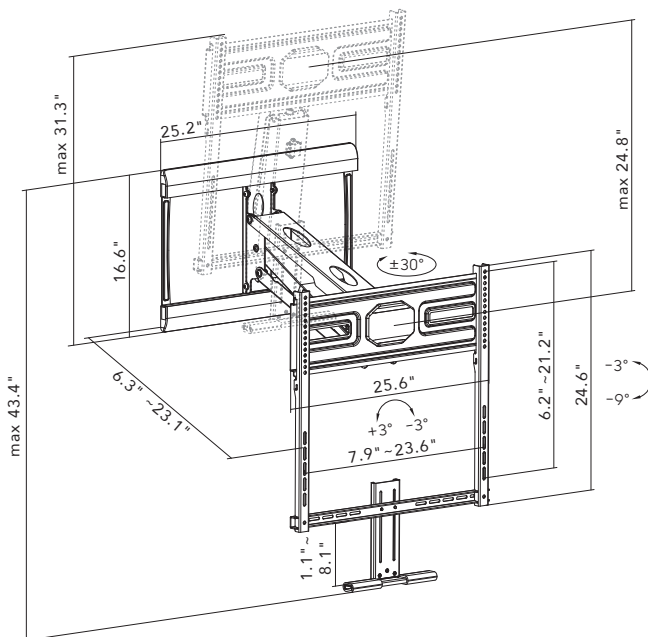

Rated weight capacity is 72.6lbs.

Caution:

Ensure all mounting surfaces are capable of holding the weight of your mount.
DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.
SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.



support@mount-it.com

Available by phone **Monday - Friday from 8:00am to 4:00pm PST.**



(855) 925-5668

Chat live with an agent on our website!



www.mount-it.com