 


Electric Height Adjustable Standing Desk

Assembly Instruction

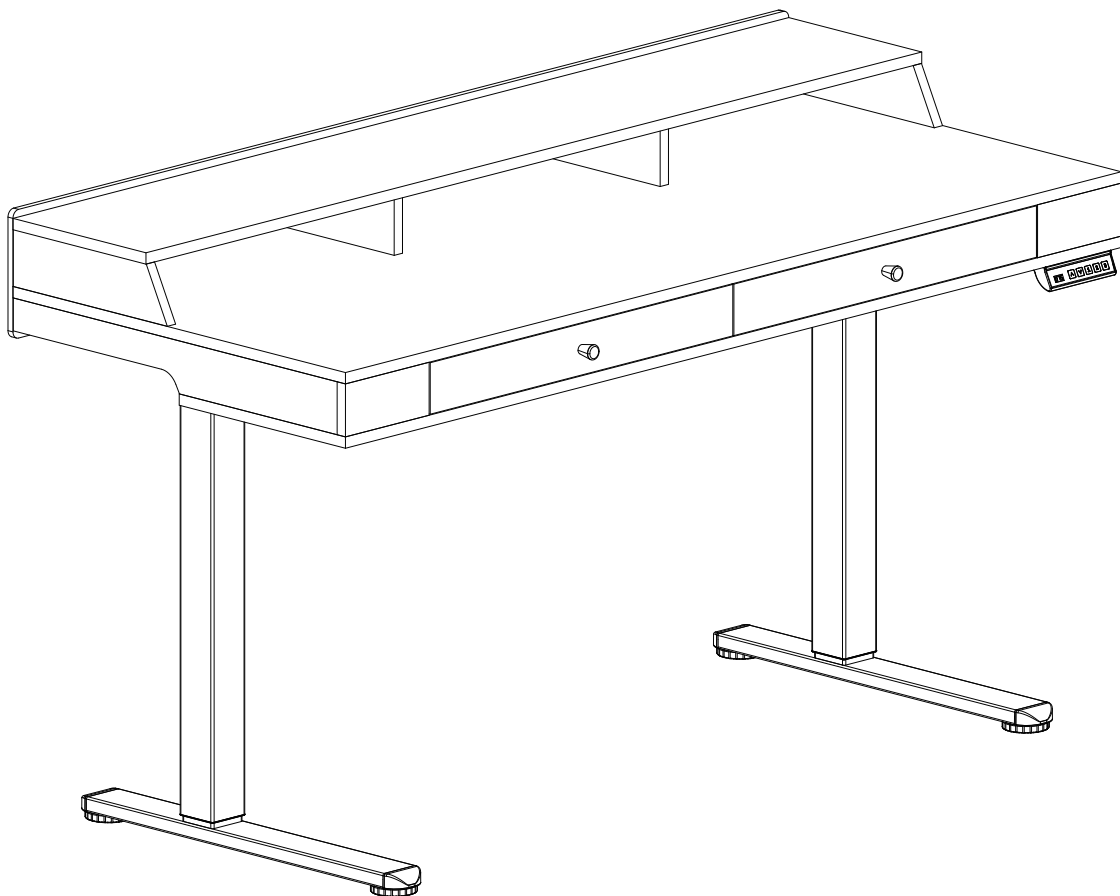

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


PRECAUTIONS

1. There are many components and accessories in the package. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product are relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service on time.

*** PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

 
*** IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.**

Parts List




A

 X1



B

 X1




C

X2




D

 X1




E

 X1




F

 X1



G

 X1




H

X1




I

 X1



J

 X1




K

X1




L

 X1




M

 X1



N

 X1



O

 
X1

HARDWARE LIST



P1

X8



P2

X10



P3

X4



P4

X8



P5

X2



 
P6

X2



P7

X10



P8

X12



 
P9

X1




P10

X1



P11

 X2



P12

X4



P13

X4

SPARE PARTS



P1

X1



 
P2

X2



P3

X1



P4

X1



 
P5

X1




P7

X2



P8

 X2



P12

X1



 
P13

X1

STEP 1

 P1 X4


 P10 X1

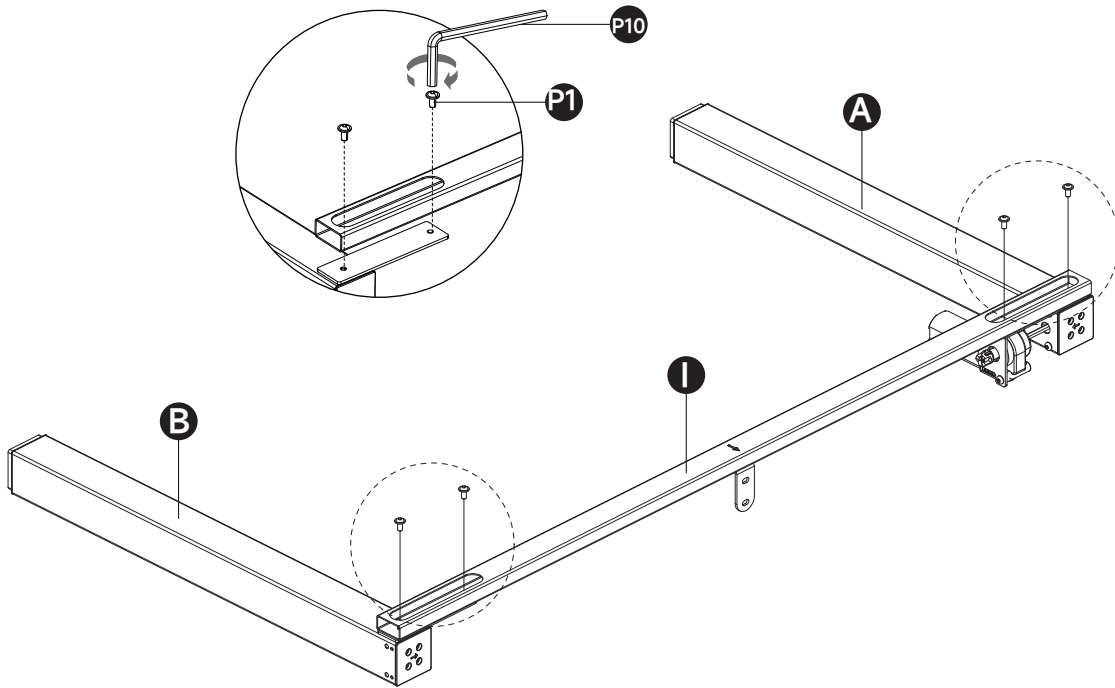

STEP 2

 **P4** X8

 
 **P10** X1

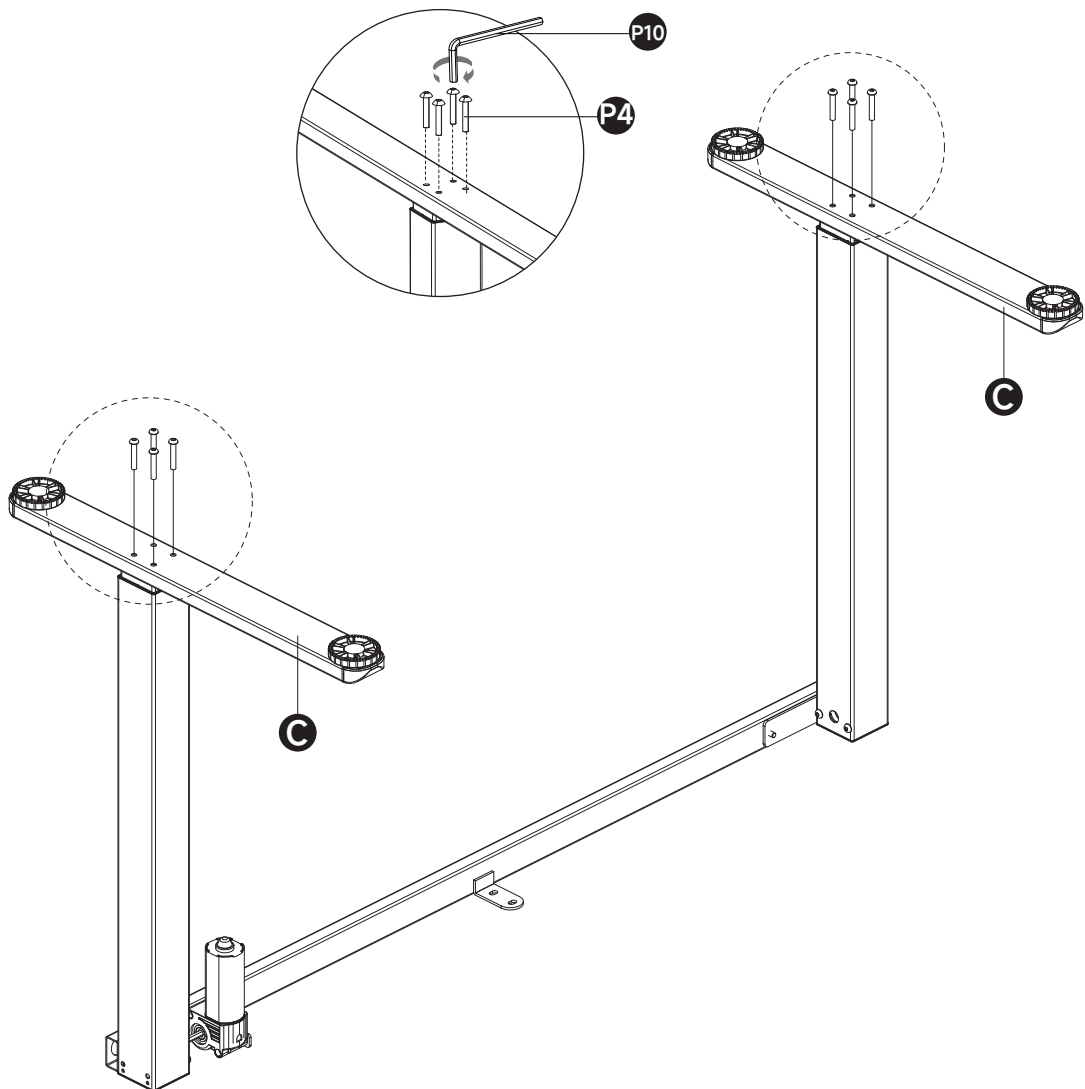

STEP 3


 **P1** X4




 
 **P10** X1

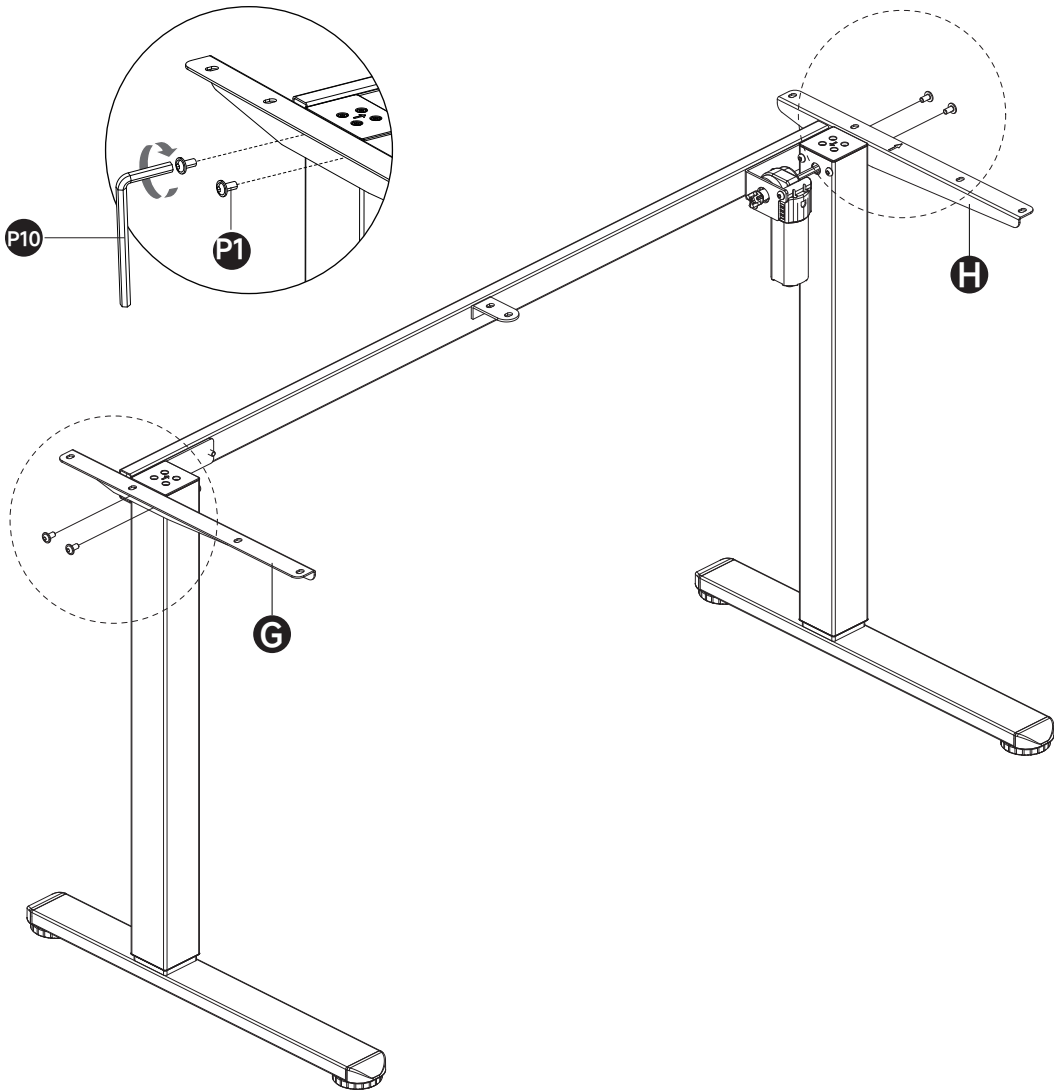

STEP 4

  P9 X1

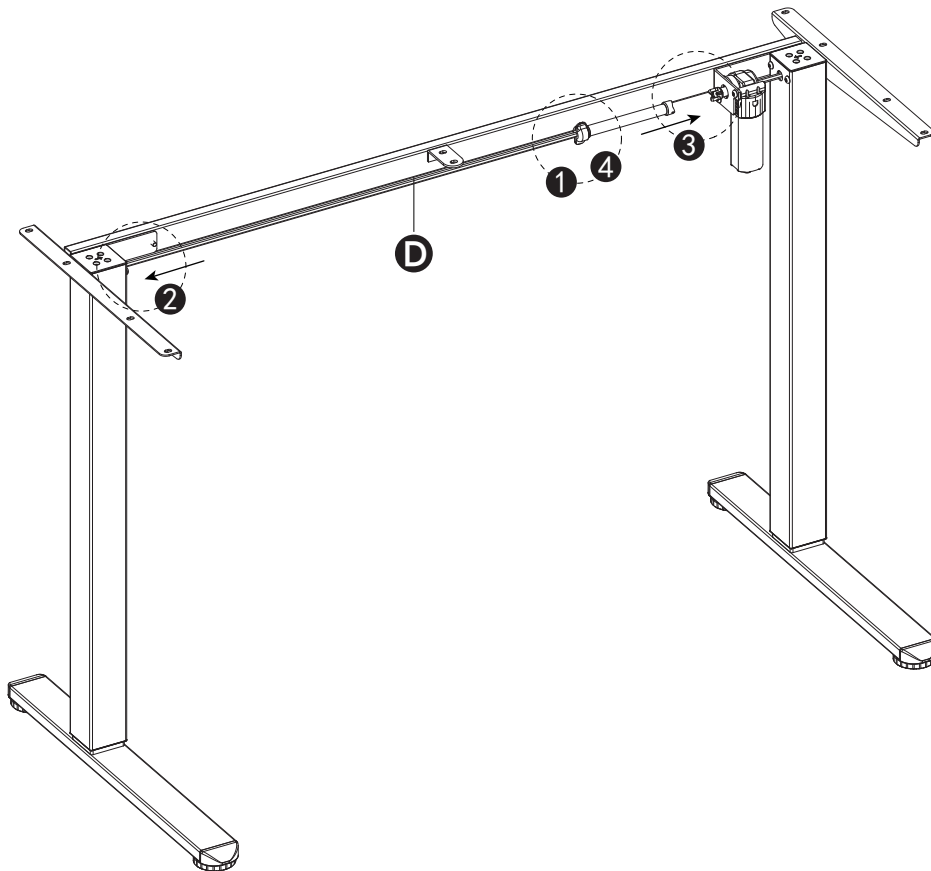

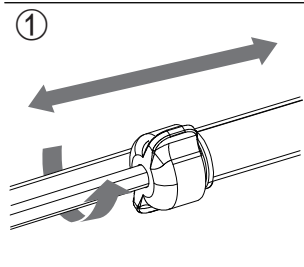
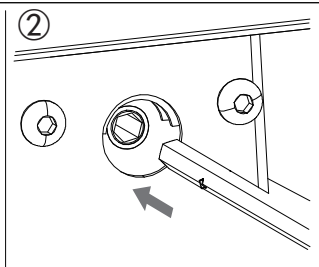
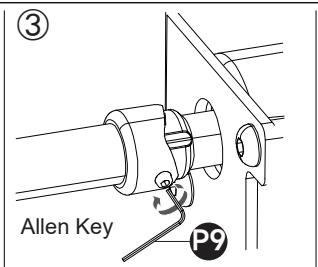
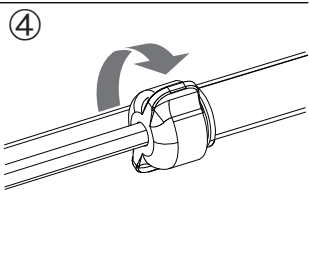
 <p>①</p>	 <p>②</p>	 <p>③</p> <p>Allen Key P9</p>	 <p>④</p>
<p>Loosen the knob</p>	<p>Insert the transmission rod into the hex hole and turn the transmission rod clockwise until the left leg goes to the lowest position.</p>	<p>Insert the other end of transmission rod to the slot on the leg (You may rotate the rod slightly for better installation).</p> <p>Secure the transmission rod to the slot by tightening the pre-assembled set screw using the small Allen key.</p>	<p>Tighten the knob</p>

STEP 5

 P2 X10



    Cross screwdriver
(not included)

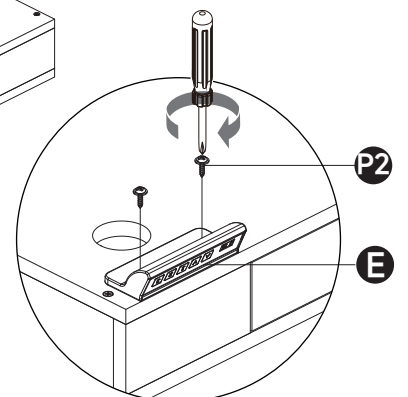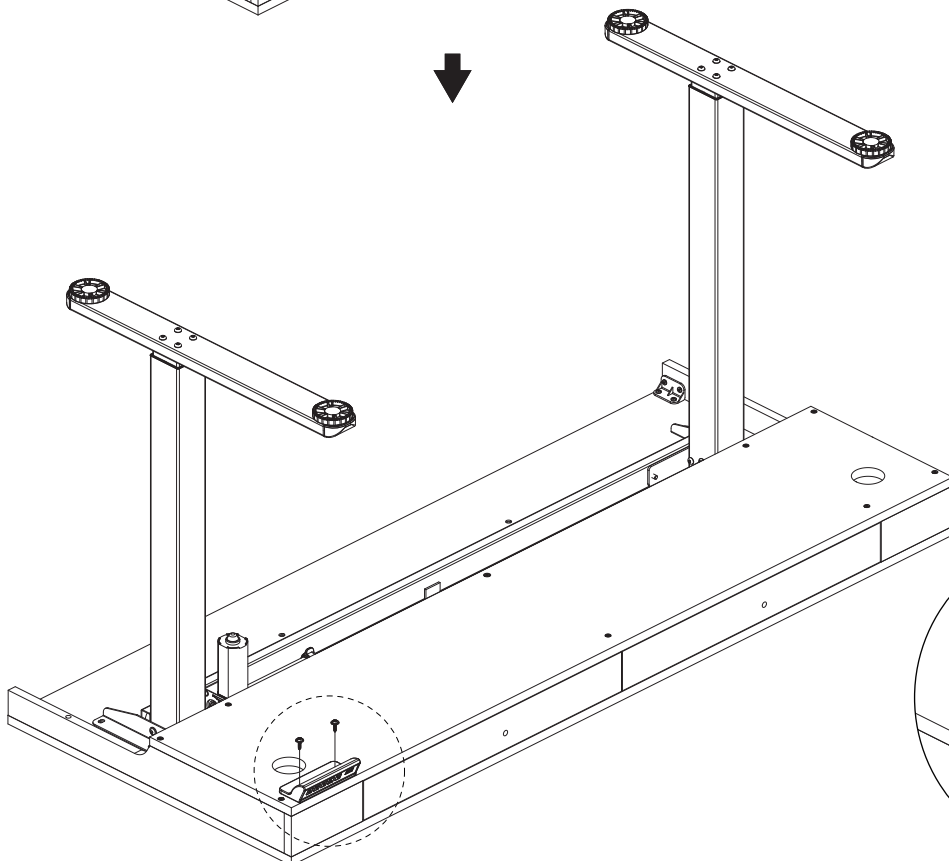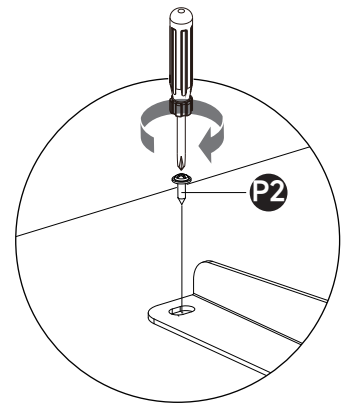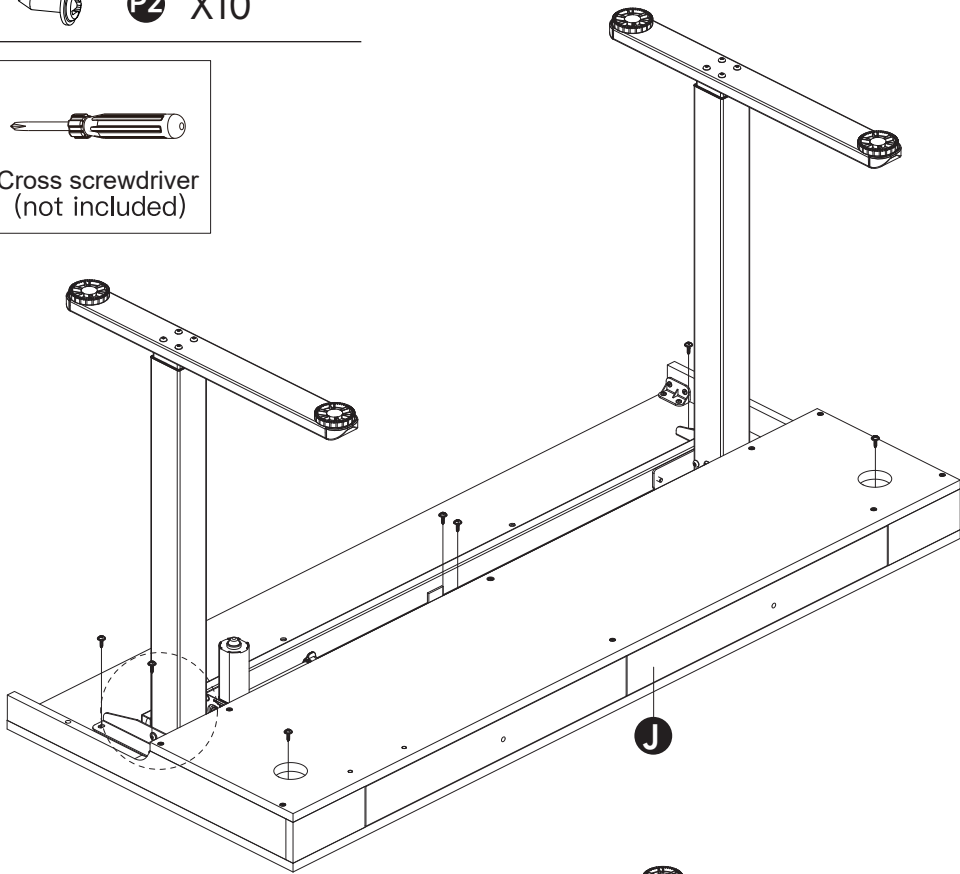


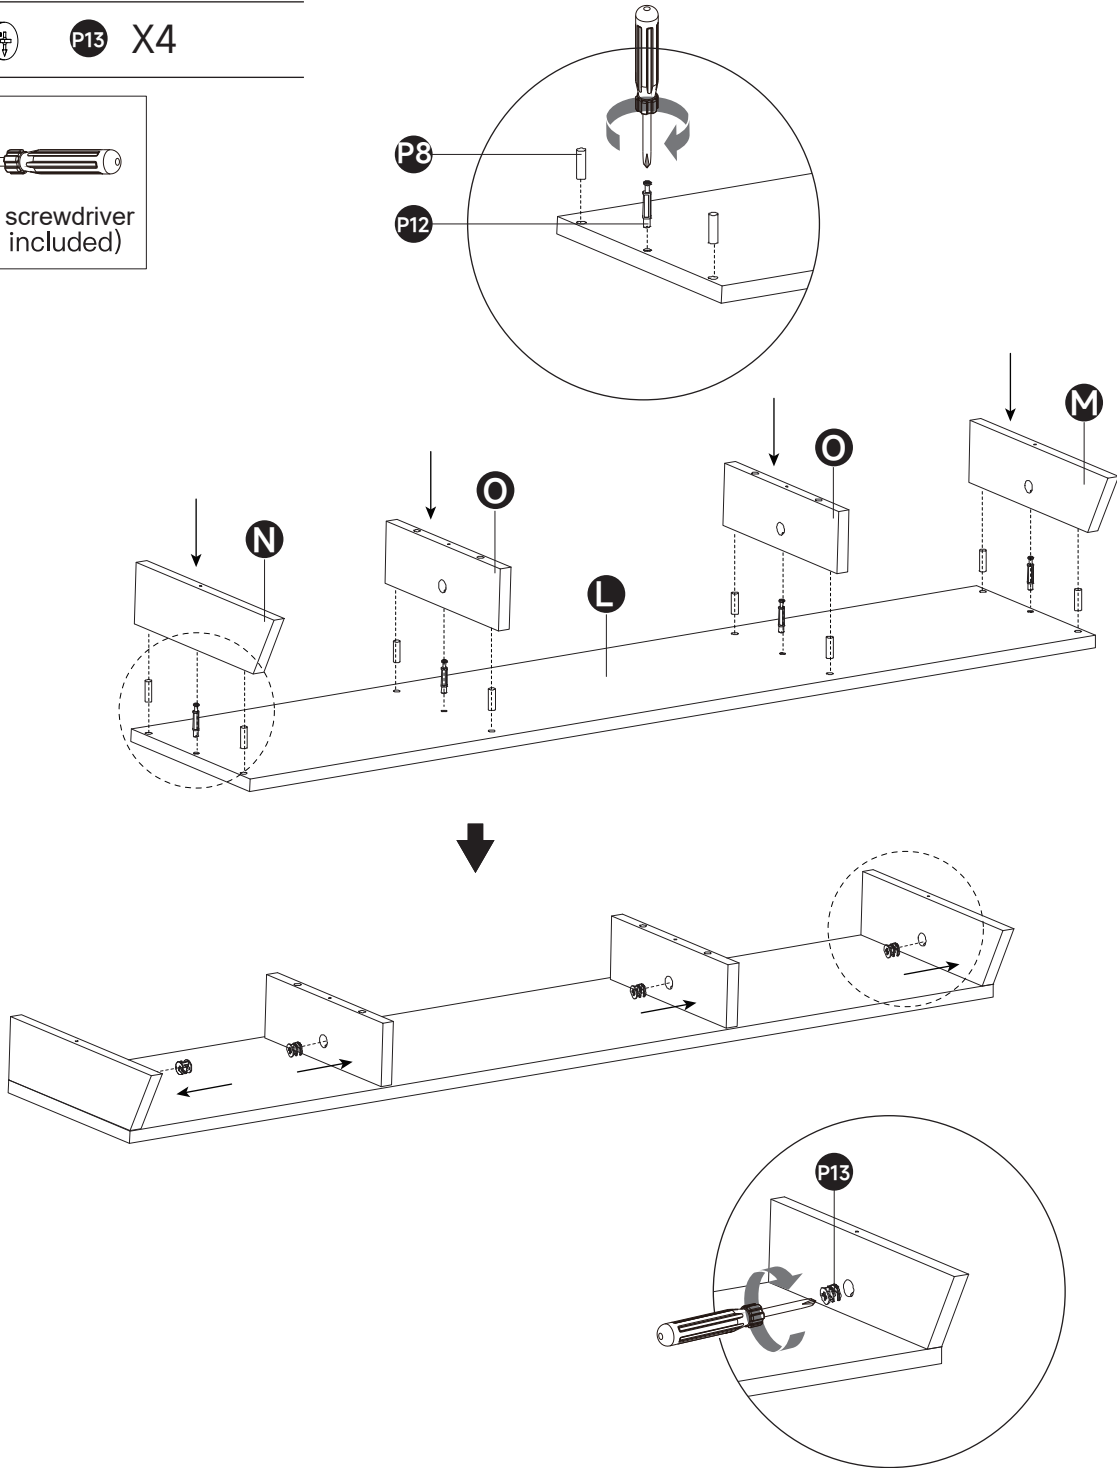 
STEP 6

 P8 X8

 P12 X4

 
 P13 X4


Cross screwdriver
(not included)




STEP 7

 P8 X4

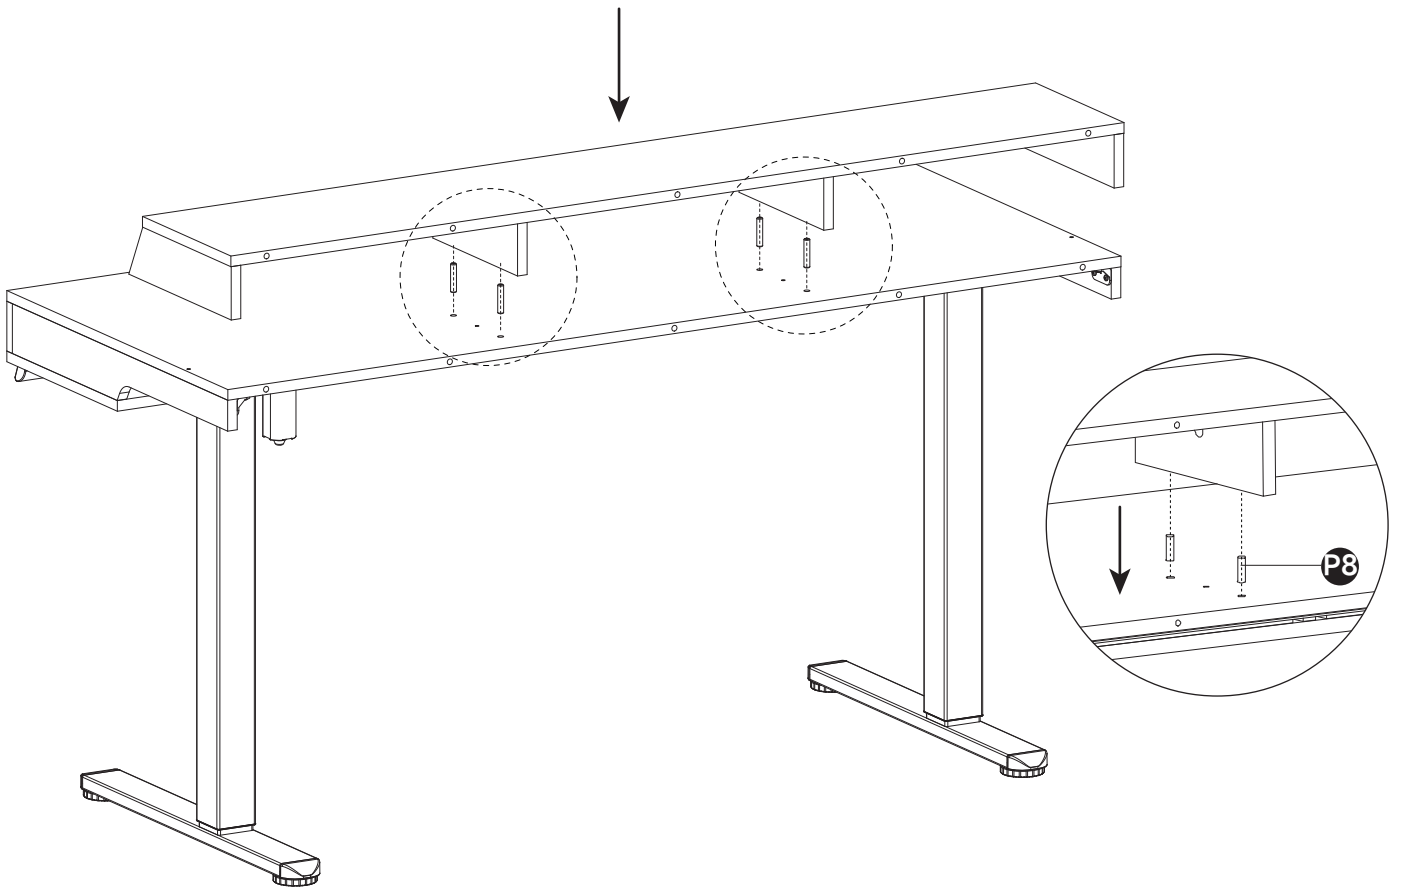


STEP 8

  P3 X4

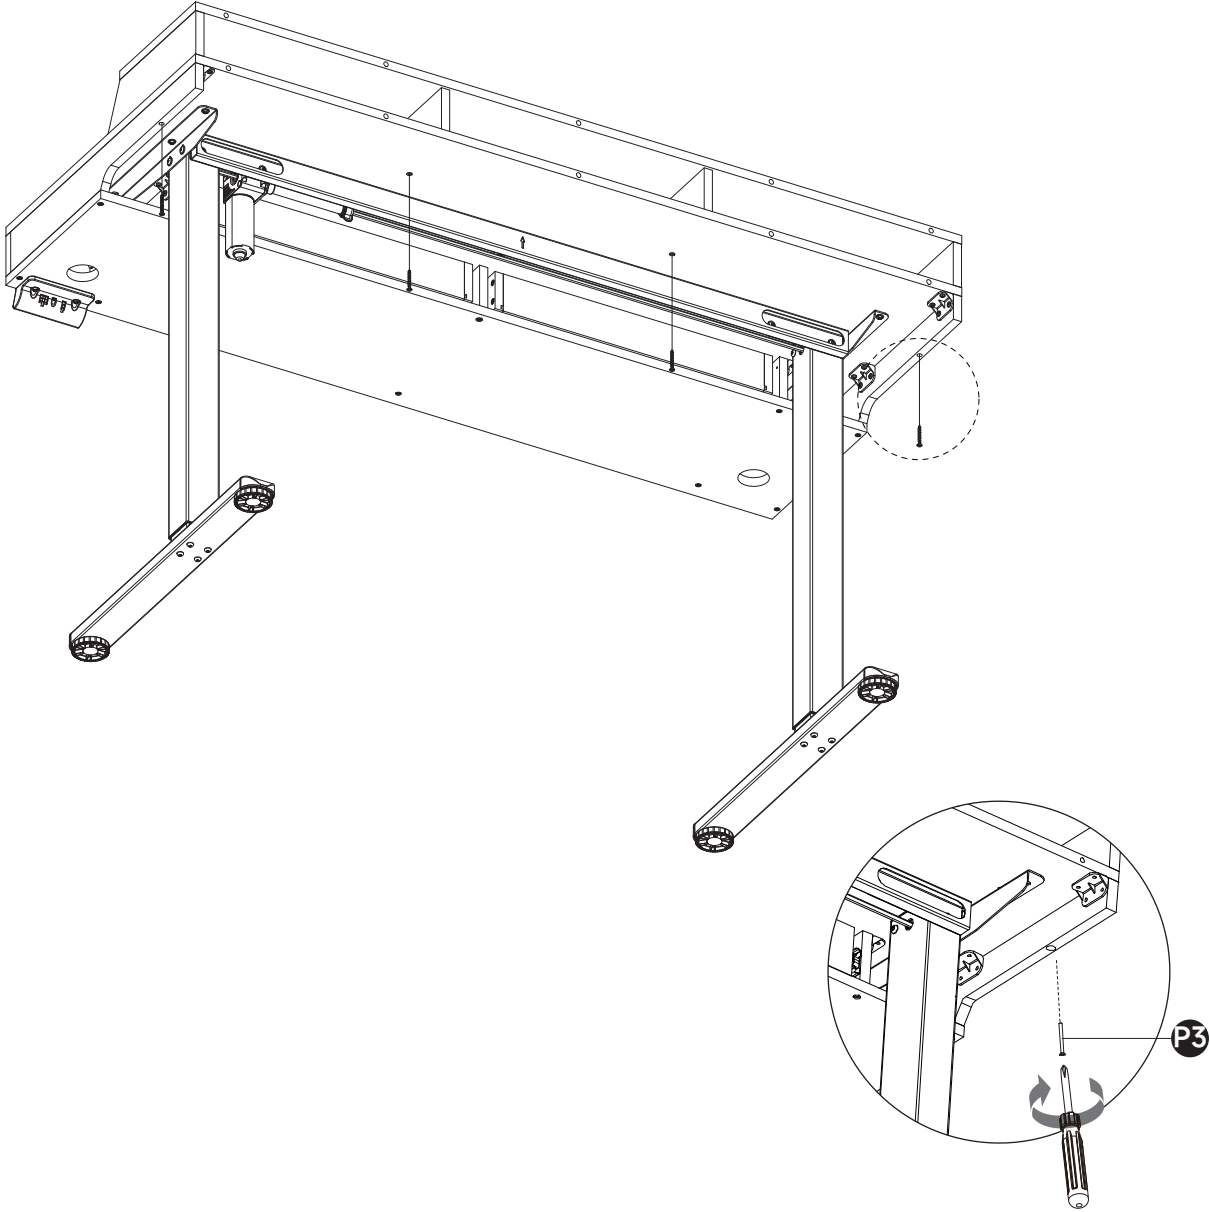

STEP 9

  P7 X10

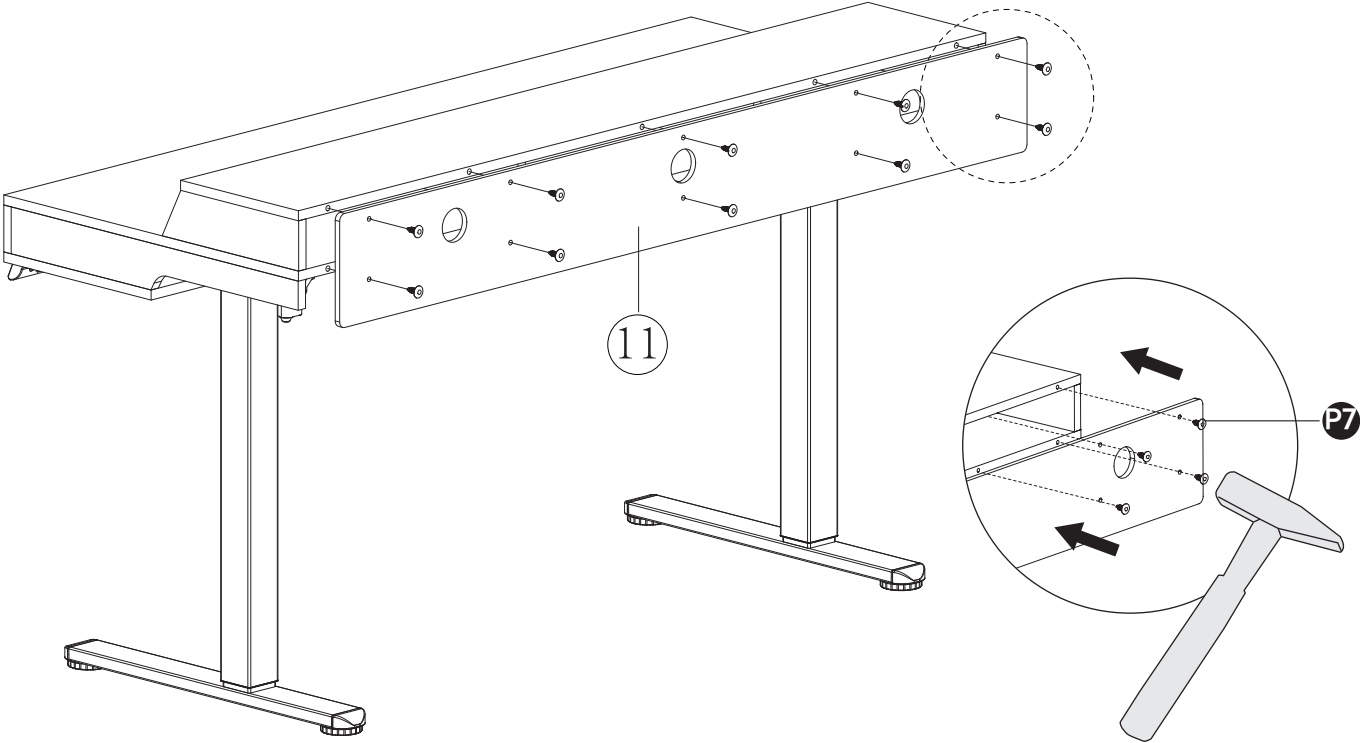


Pound With A Hammer

STEP 10

 P5 X2




 
 P6 X2

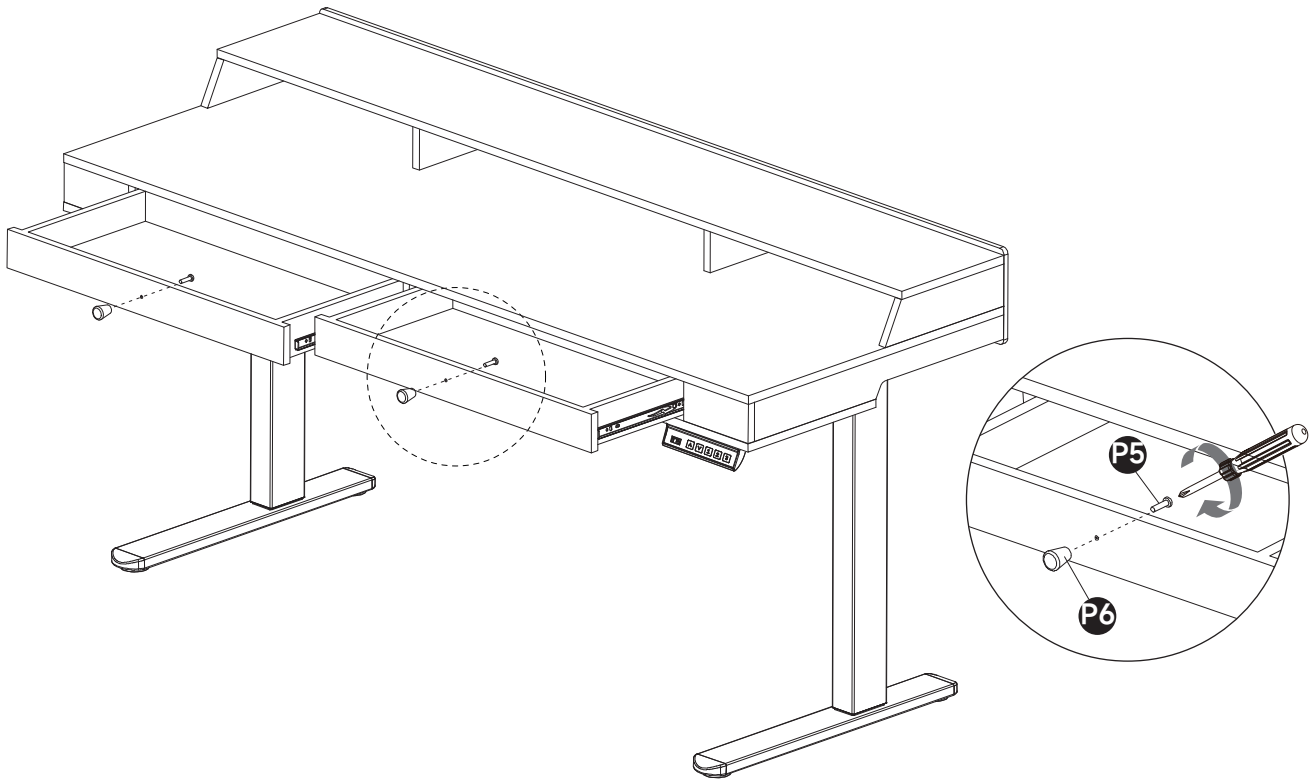

STEP 11




    P11 X2

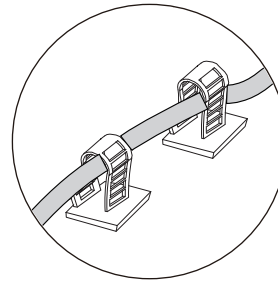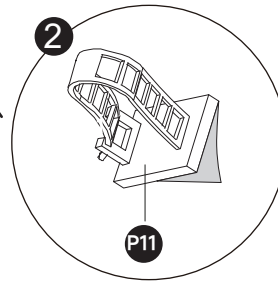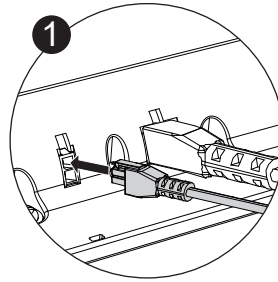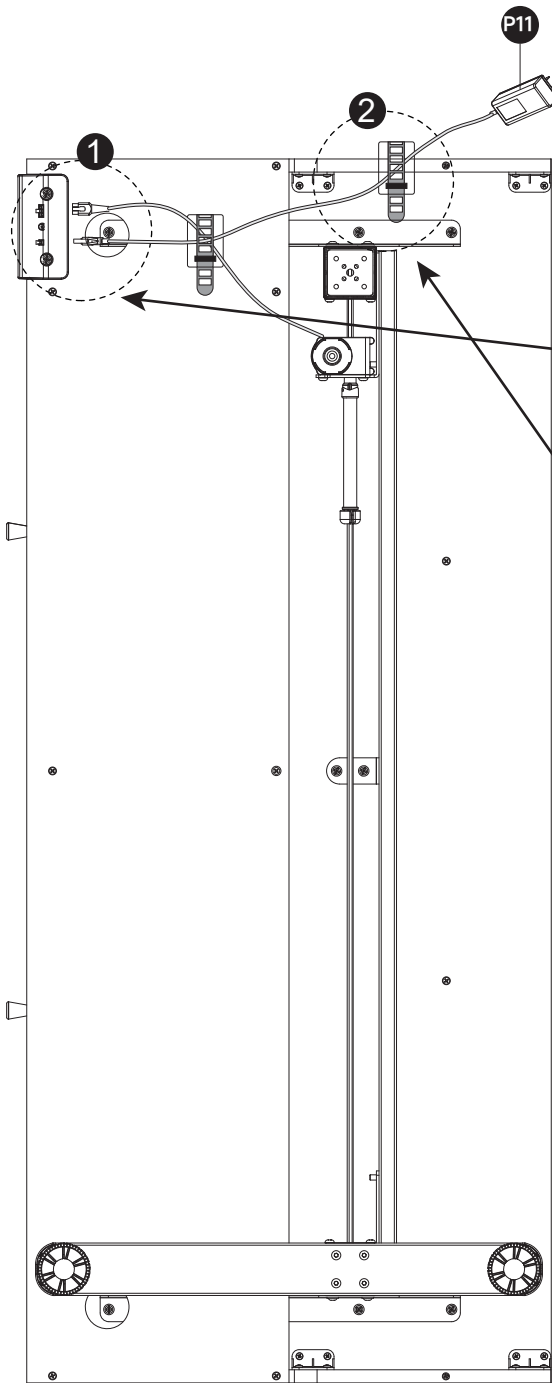

Cable Management

 Controller Introduction

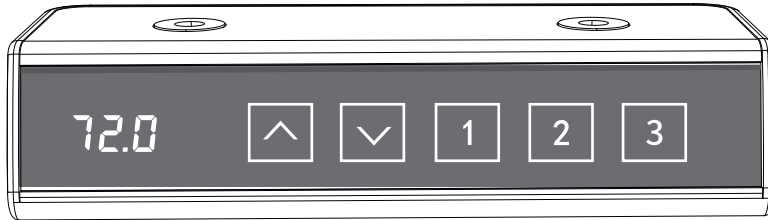

72.0 LED Display: Press any key once to wake up the display.

Press the **1** or **2** or **3** button, the desk will move to the height that was previously set for that button.

Long press the **^** button to raise the desk continually, and desk will stop when the button was released or at the max height (118cm).

Long press the **v** button to lower the desk continually, and desk will stop when the button was released or at the lowest height (72cm).

Memory button settings: adjust the desk to the height you like, then press the long button for about 3 seconds, the height of memory settings complete.

Reset Press and hold the **v** button for 5 seconds, and the screen will show 'RES.'
Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes

Hot	Overheat protection: When the motor operates continuously, it will stop running to prevent damage caused by overheating. Wait for a period of time before making any further height adjustments.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.