



WF302632


ASSEMBLY INSTRUCTION

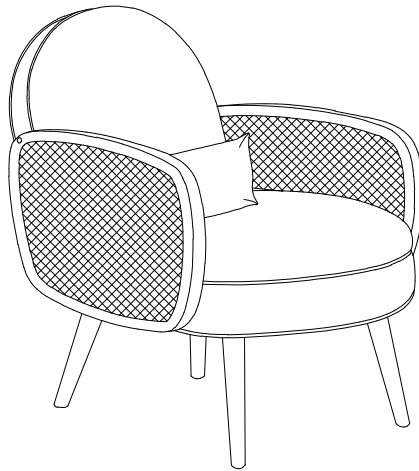


PART

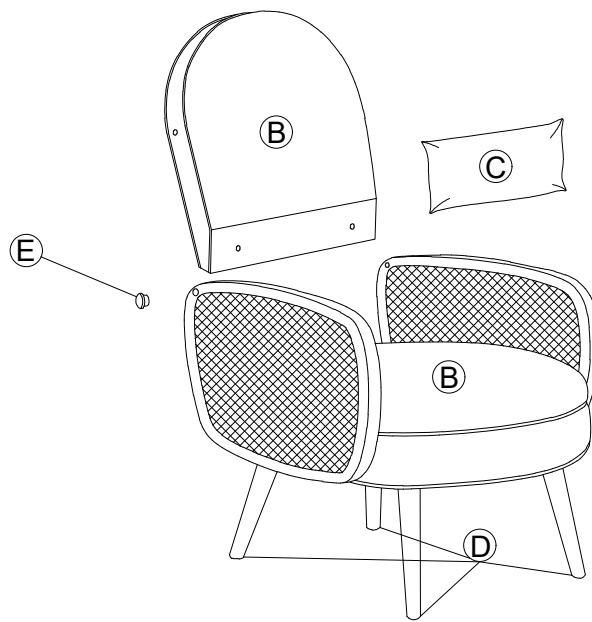


PART LIST

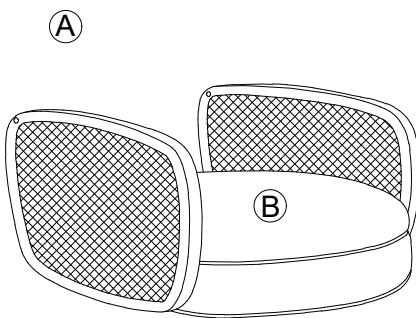


Seat Frame x 1

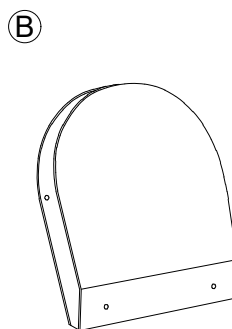

Back Frame x 1

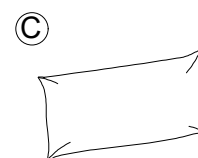

Pillow x 1


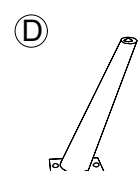


Leg x 4




Wood plug x 2

  HARDWARE LIST


 1 Bolt 5/16"*40mm x 10	 2 Spring washer 5/16"*13mm*1.5mm x 10	 3 Flat Washer 5/16"*19mm*1.5mm x 10	 4 Allen Key 5mm*60mm x 1
 5 Bolt 1/4"*50mm x 2	 6 Spring washer 1/4"*11mm*1.5mm x 2	 7 Flat washer 1/4"*14mm*1.5mm x 2	 8 Allen Key 4mm*60mm x 1

Step 1: Place all parts on a clean, smooth surface.

Attach Seat Frame (A) and Back Frame (B), use Bolt (1), Spring washer (2) and Flat washer (3) and use Allen key (4) to tighten its

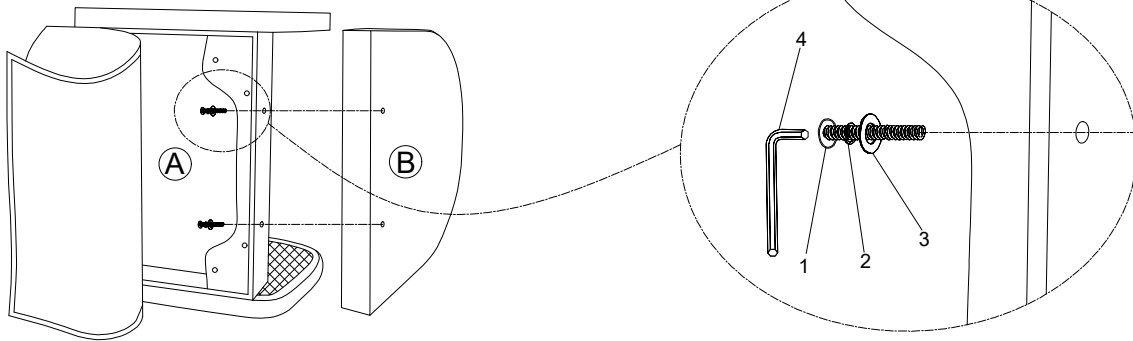

Step 2: Attach Armrest to Back Frame (B) Use Bolt (5), Spring washer (6) and Flat washer (7) and use Allen key (8) to tighten its. Then insert the Wood plug (E).

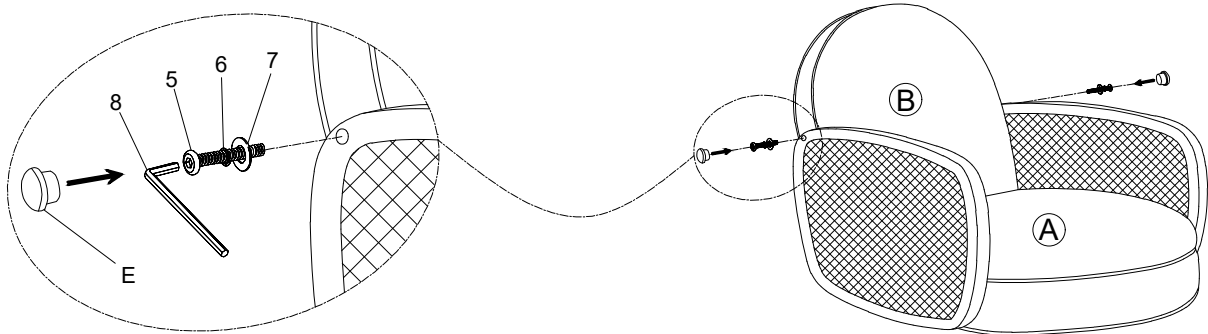

Step 3: Attach Legs (D) and Seat Frame (A), use Bolt (1), Spring washer (2) and Flat washer (3) and use Allen key (4) to tighten its.

