

ASSEMBLY INSTRUCTIONS

WF194545-DINING CHAIR

PLEASE DO NOT RETURN PRODUCT TO STORE

If you have any problem or concerns, please feel free to contact our customer
Service department. We will reply you as soon as possible




E-Mail: csr@merax.com

 

 

 

 

 

 
Tel: 626-912-8886 Ext.100

IMPORTANT NOTE :

- ** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ** BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- **DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

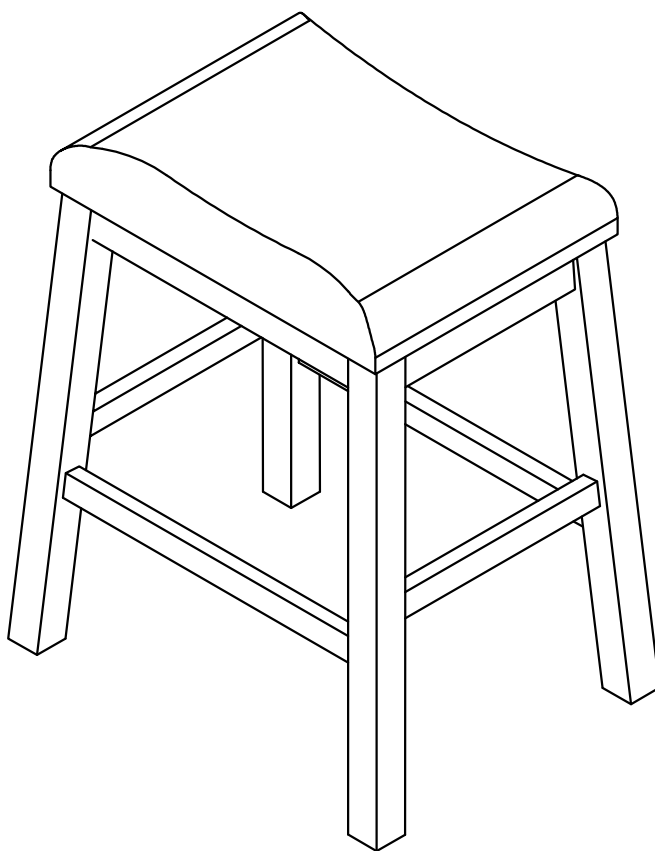


CARTONS ONLY ONE/ CARTONS SEULEMENT UN

PART LISTS				HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	Q'TY	NO.	DESCRIPTION	SKETCH	Q'TY
1	SEAT FRAME		2 PCS	A	BOLT Ø1/4" x 50mmL		16 PCS
2	LEG -L		4 PCS	B	SPRING WASHER Ø1/4" x 13mmL		16 PCS
3	LEG -R		4 PCS	C	FLAT WASHER Ø1/4" x 19mmL		16 PCS
4	LONG STRECHER		4 PCS	D	CREW Ø4 x 45mmL		16 PCS
5	SHORT STRECHER		4 PCS	E	ALLEN KEY		2 PCS
							Not Included


ASSEMBLY INSTRUCTIONS

STEP 1:

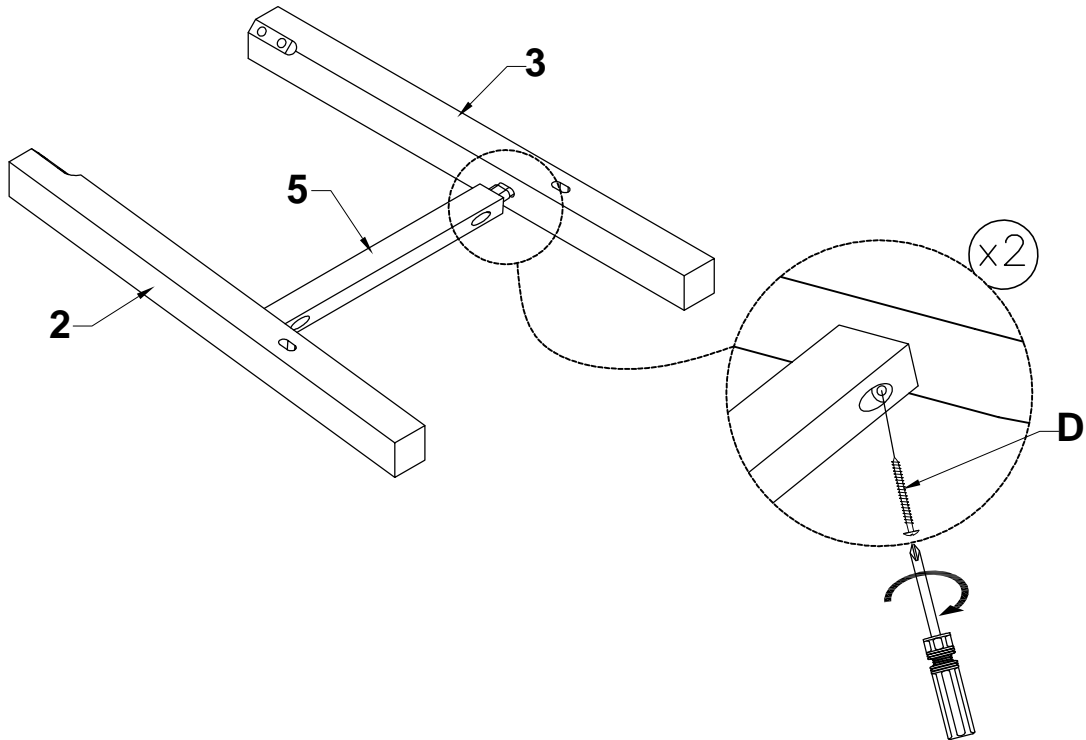


ASSEMBLY INSTRUCTIONS

STEP 2:

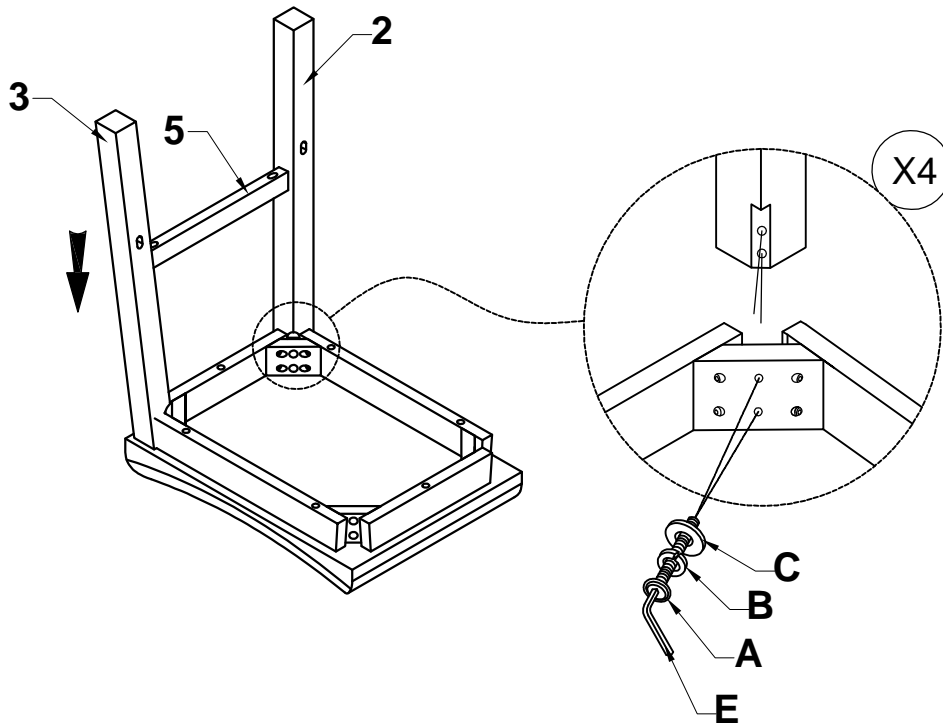


STEP 3:

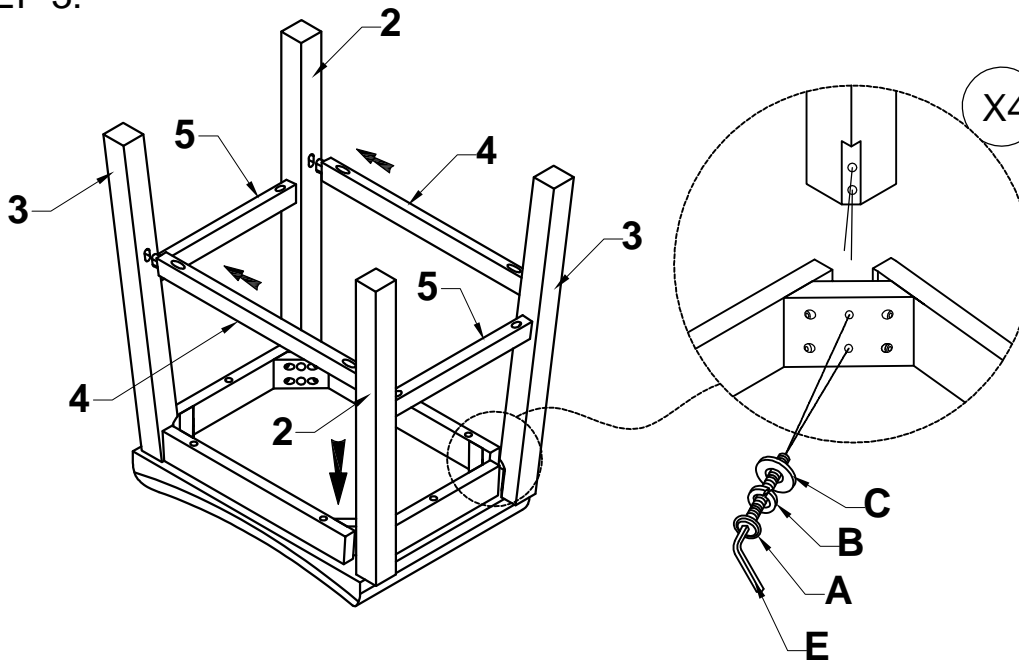

ASSEMBLY INSTRUCTIONS

STEP 4:

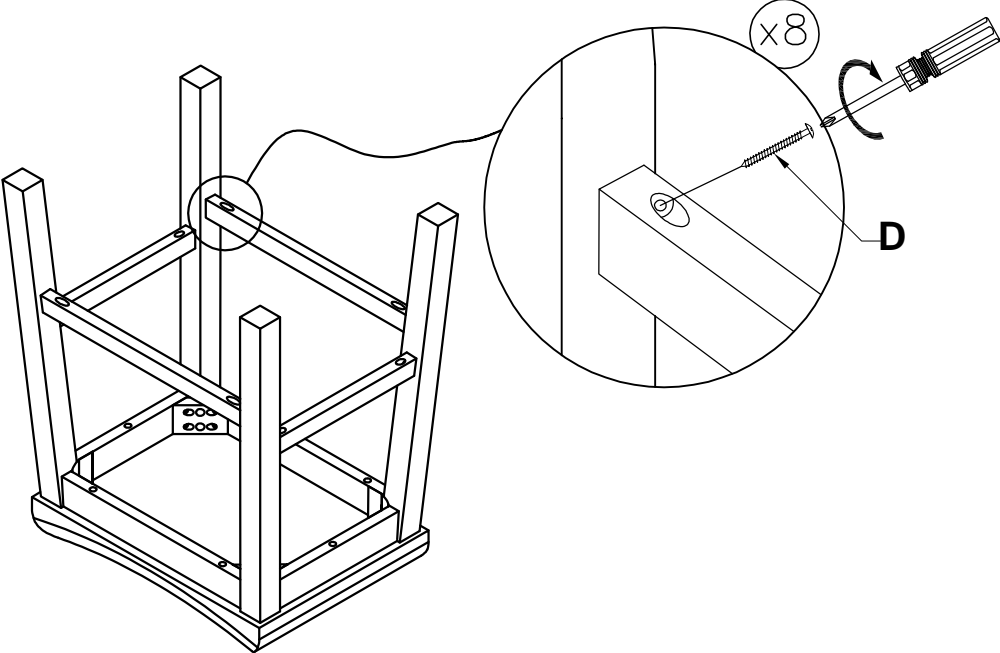

STEP 5:

