


Please consult your electrician for hanging fixture and wiring.

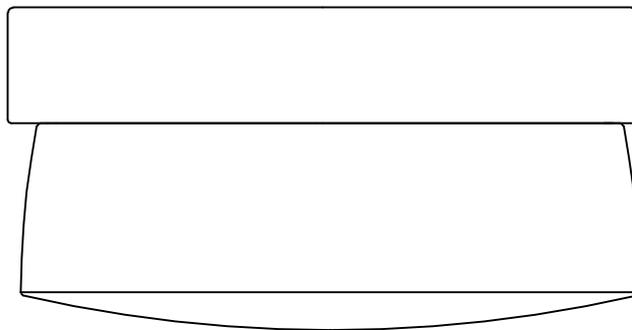

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P

Leviton IPL06-10Z

Leviton 6674-POW

Due to inrush current, wattage should not exceed 150 Watts of product for a 600W dimmer.

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.


15W LED 3000K, DIMMABLE

20W LED 3000K, DIMMABLE

23W LED 3000K, DIMMABLE

CAUTION: Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

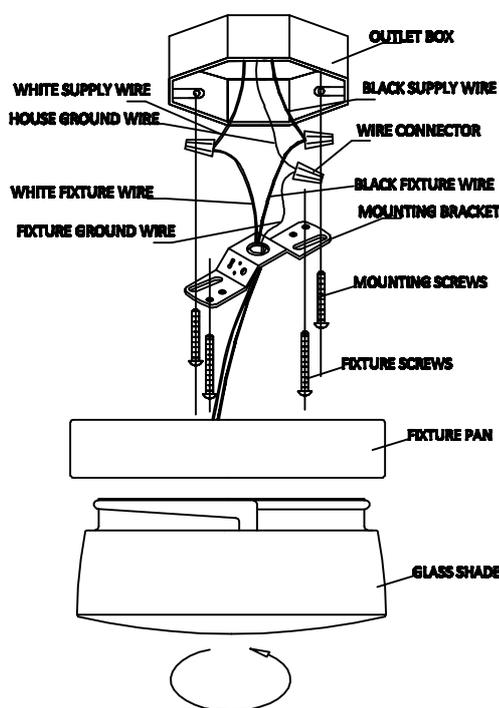

- 1: Pull the **SUPPLY WIRES** and the **HOUSE GROUND WIRE** out from the **OUTLET BOX** and attach the **MOUNTING BRACKET** to the **OUTLET BOX** using the slotted holes on the **MOUNTING BRACKET** and the **MOUNTING SCREWS** provided.
- 2: Thread the **FIXTURE SCREWS** into the appropriate threaded holes of the **MOUNTING BRACKET**.
- 3: Connect the power supply wires to the fixture lead wires by connecting the **BLACK FIXTURE WIRE** to the **BLACK SUPPLY WIRE**, and the **WHITE FIXTURE WIRE** to the **WHITE SUPPLY WIRE** using **WIRE CONNECTOR**. Connect the **fixture GROUND WIRE** to the **SUPPLY GROUND WIRE** by fixed on the **MOUNTING BRACKET**.
- 4: Carefully tuck all wiring back into the **OUTLET BOX**. Raise the fixture pan to mounting surface allowing for mounting screws to protrude through key slots. Rotate the **FIXTURE PAN** clockwise until screws are in narrow part of key slots, and tighten securely.
- 5: **Final Assembly**- Attach **GLASS SHEDE** and rotate in place securely.