ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



PAGE 1 OF 3

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.





10 MINUTES


PARTS IDENTIFICATION


Α	SEAT	1PC
В	LEG	4PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 60MM - BLK)		1PC
2	BOLT (M6 x 50mm - BLK)		8PCS
3	LOCK WASHER (1/4" - BLK)		8PCS
4	FLAT WASHER (1/4" X 19mm - BLK)	\bigcirc	8PCS

PAGE 2 OF 3

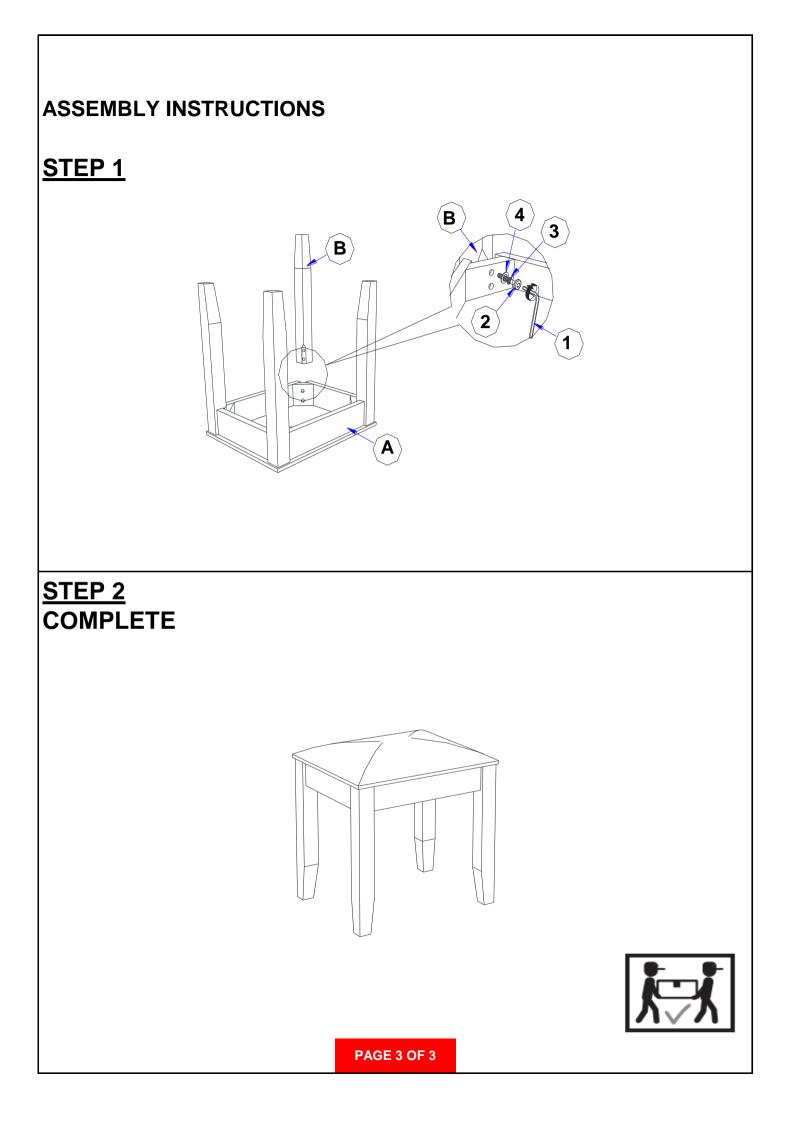

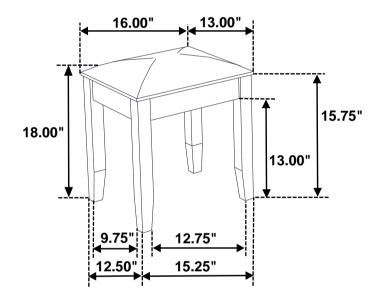

Note : Dimension tolerance ± 5%