 


INSTALLATION

 
Product Manual

Version: 680122US-01-26A-OL

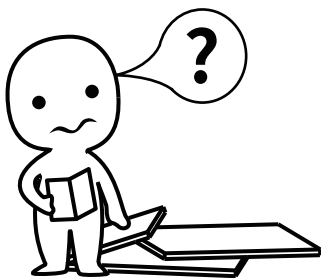

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

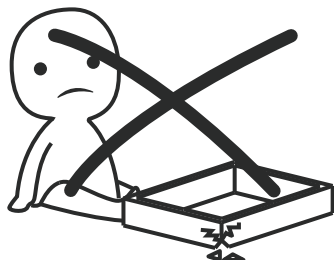


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

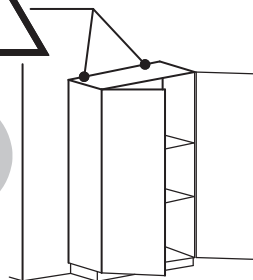

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 26

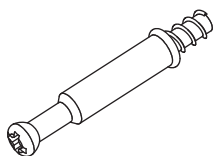


Ø 4 x 35 mm

 B x 26

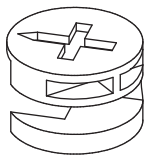

Ø 10 x 10 mm

 C x 2



40 x 40 x 1 mm

D x 12



Ø 4 x 30 mm

E x 32



Ø 3 x 14 mm

F x 10



 
Ø 3.9 x 16 mm

G x 20




Ø 3.9 x 10 mm

H x 2




Ø 3.9 x 40 mm

 J x 2




65 x 15 mm

 
K x 4

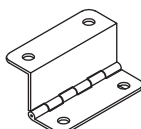

L x 4

 


M x 4

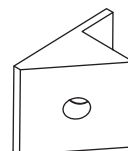 


15 x 13 x 9 mm

 N x 4

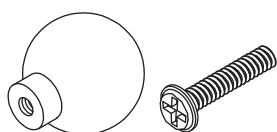


28 x 24 x 24 mm

 
O x 2


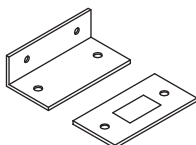



P x 1

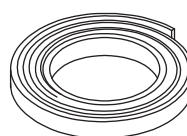 

Q x 2

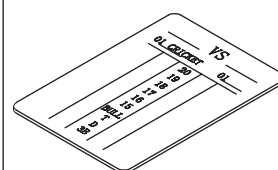 

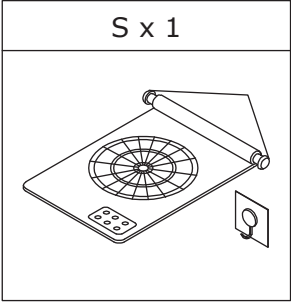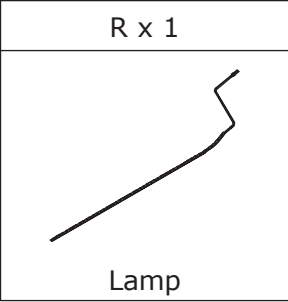  

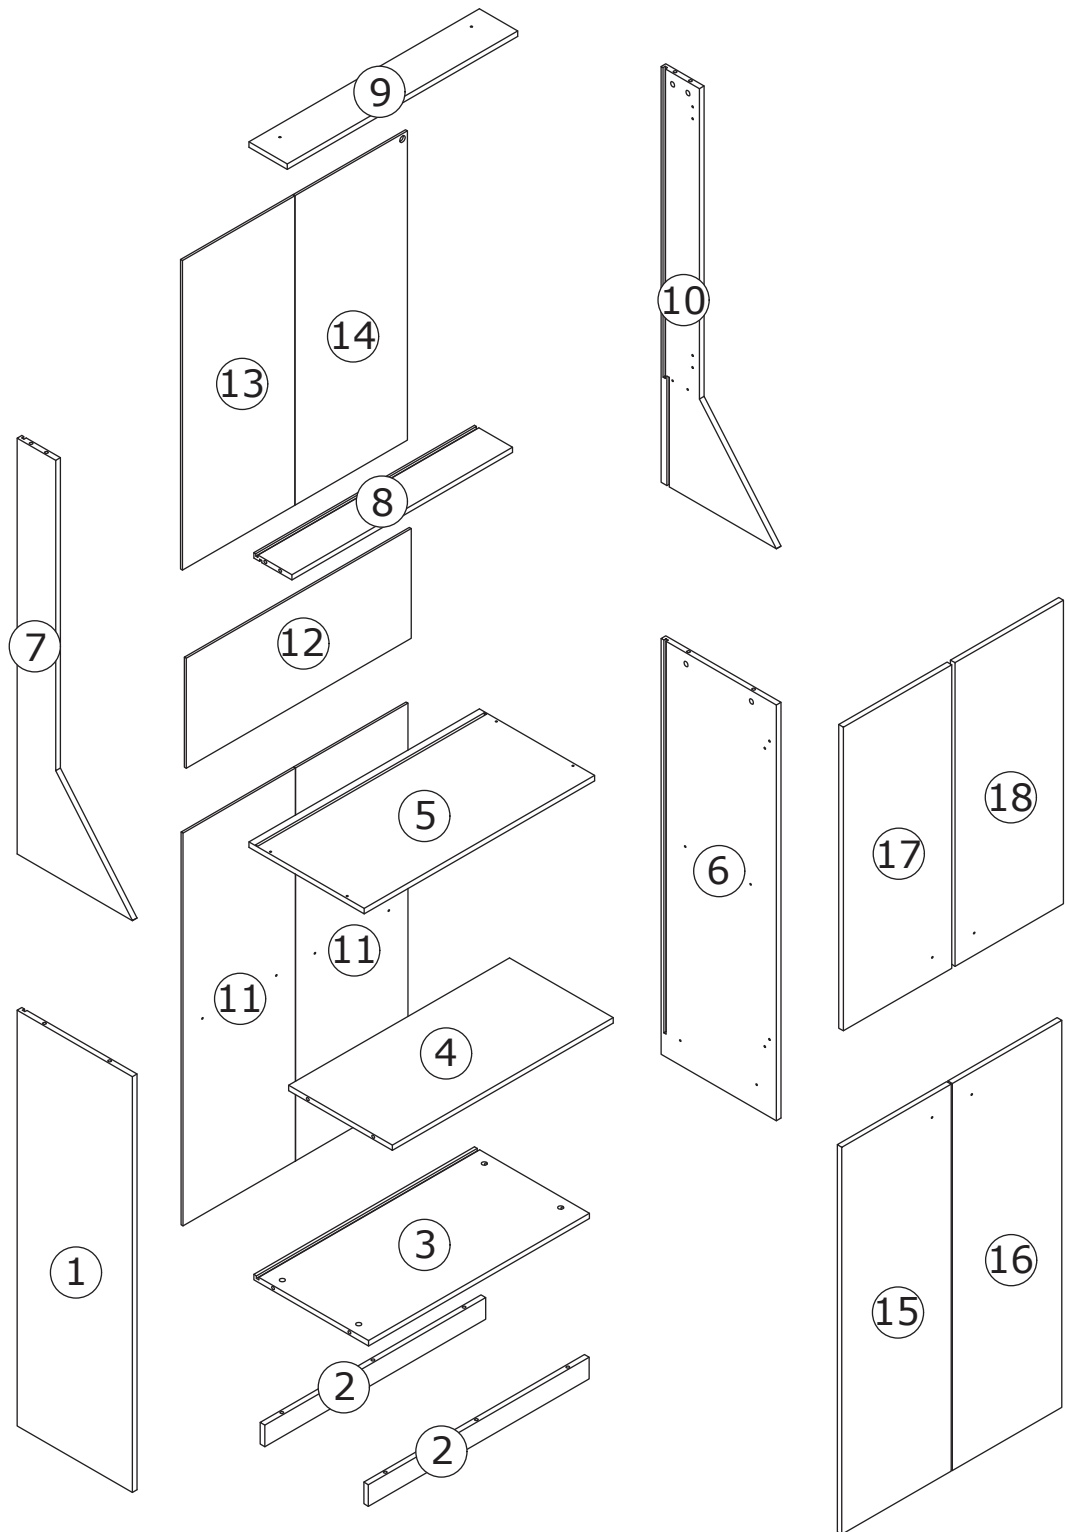 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*




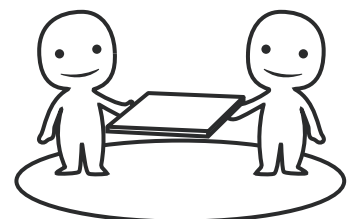


ASSEMBLED BY 2 ADULTS

 
Parts List
BOX 1/1

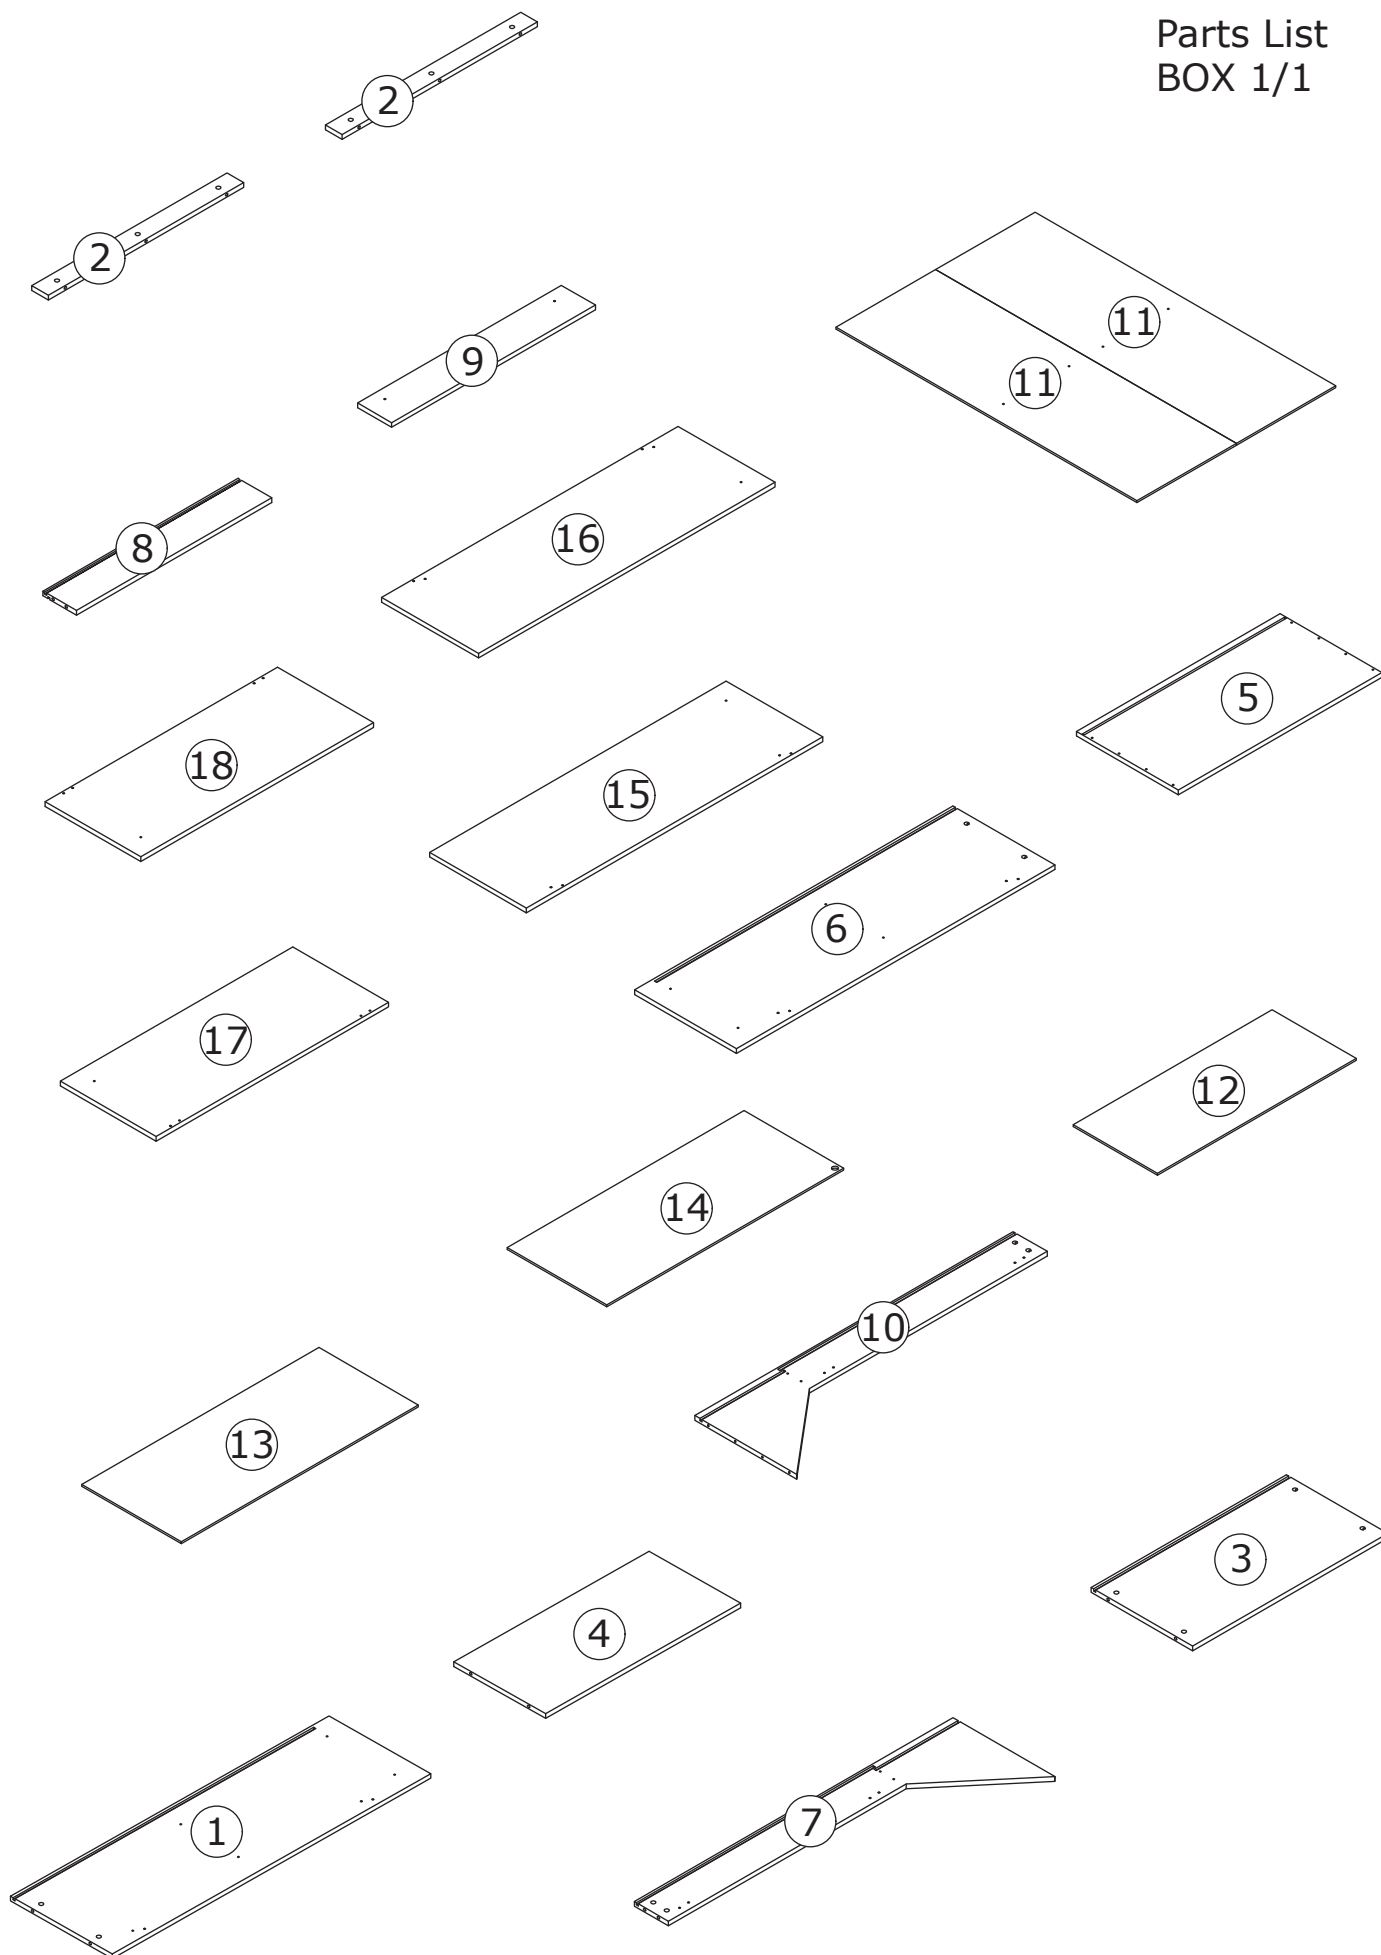





1

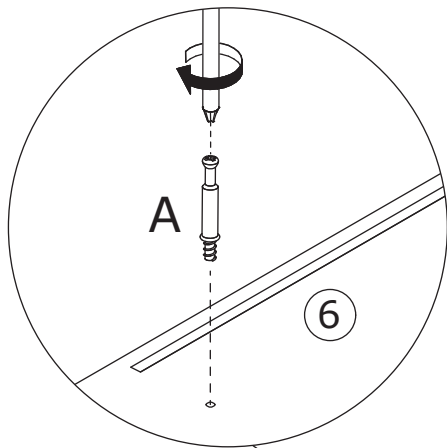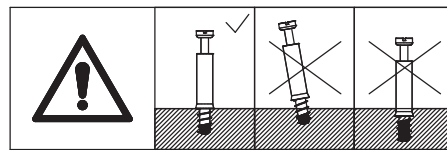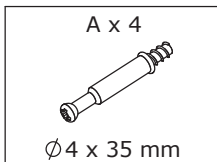    


Screw eccentric rod (A) onto panel 6.

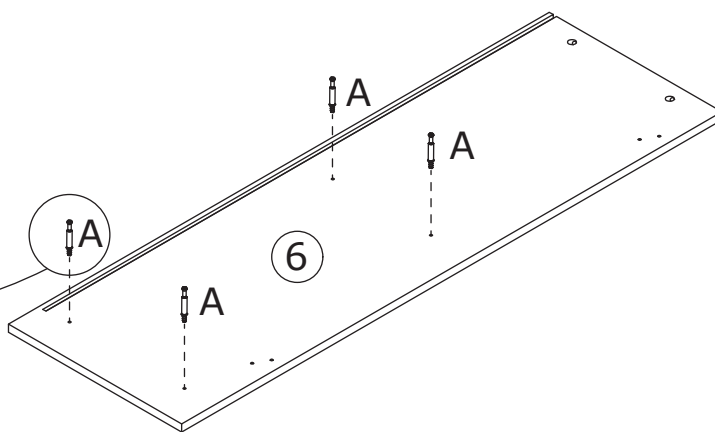 



2

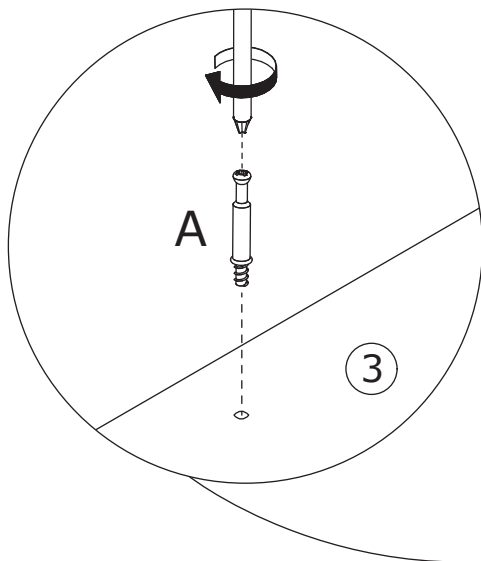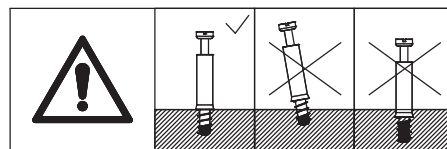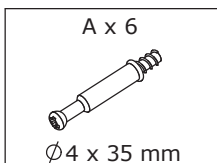    




Screw eccentric rod (A) onto panel 3.

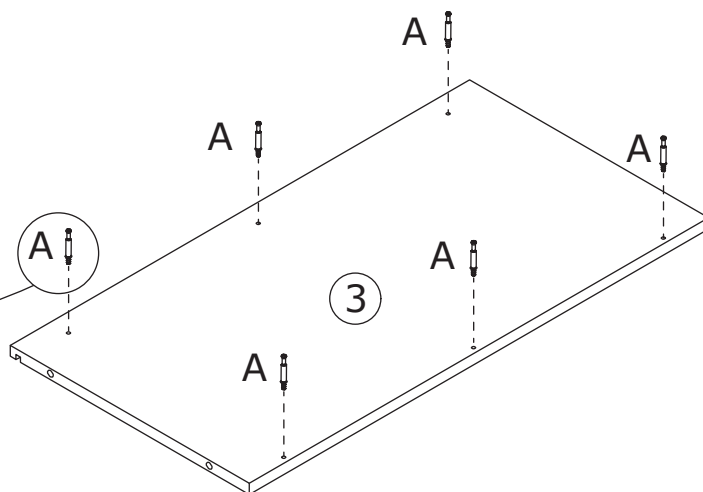 



3

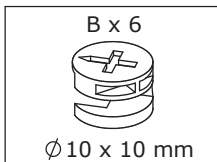  

 
 
 
Connect panel 2 to panel 3, then tighten by turning cam lock (B) clockwise.

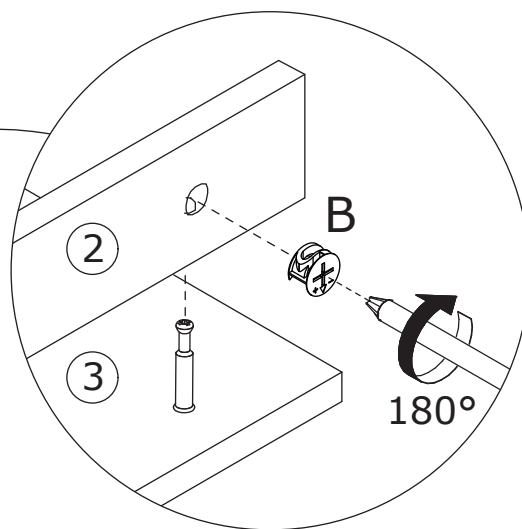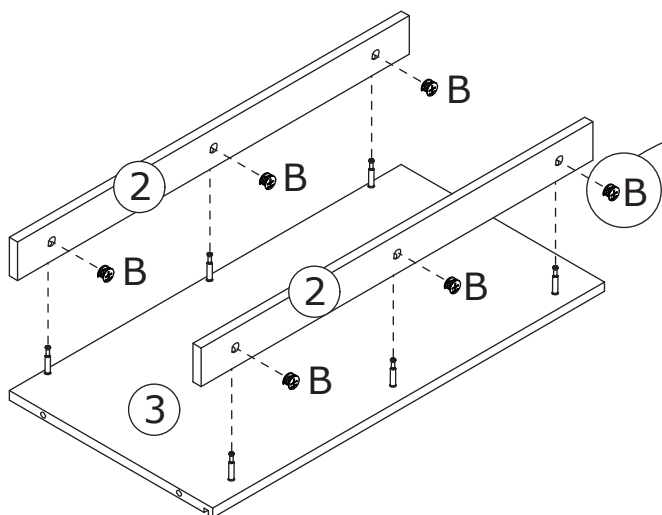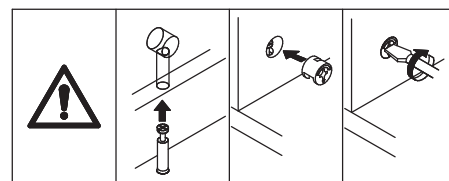



4

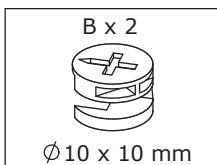  

  
 
Connect panel 2 and 3 to panel 6, then tighten by turning cam lock (B) clockwise.

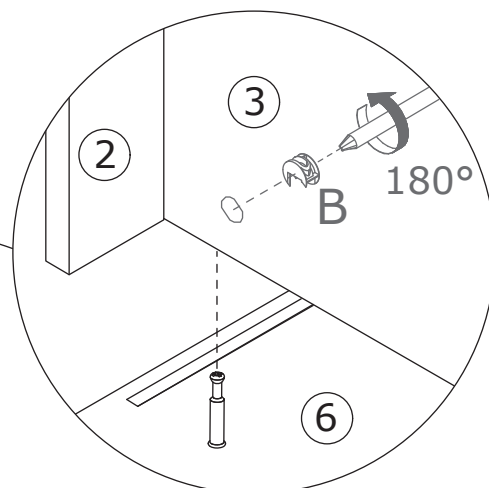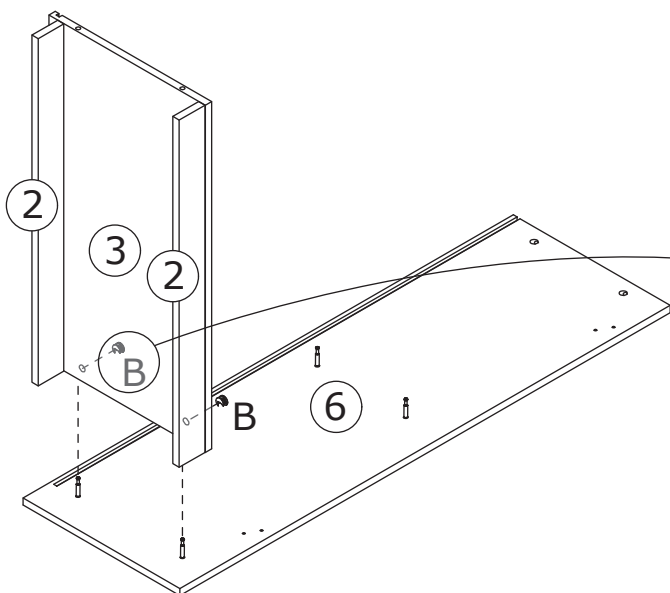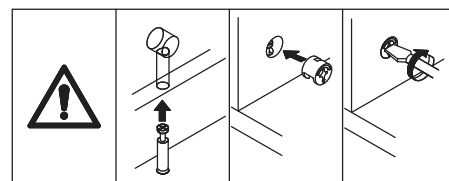

5

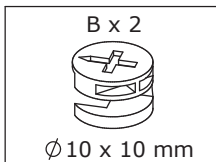  


  Connect panel 4 to panel 6, then tighten by turning cam lock (B) clockwise.

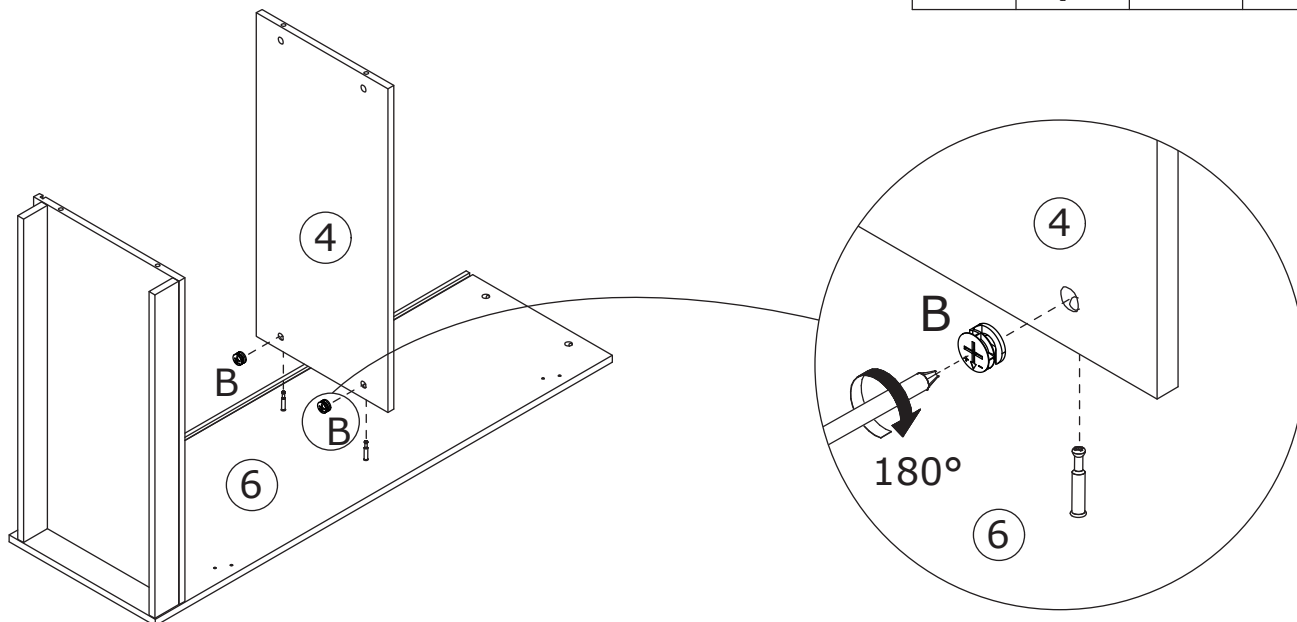
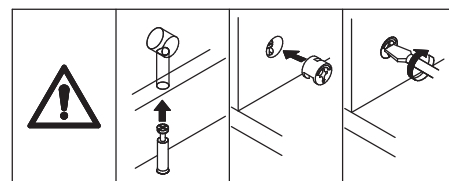


6


 
Insert panel 11 along the available grooves.

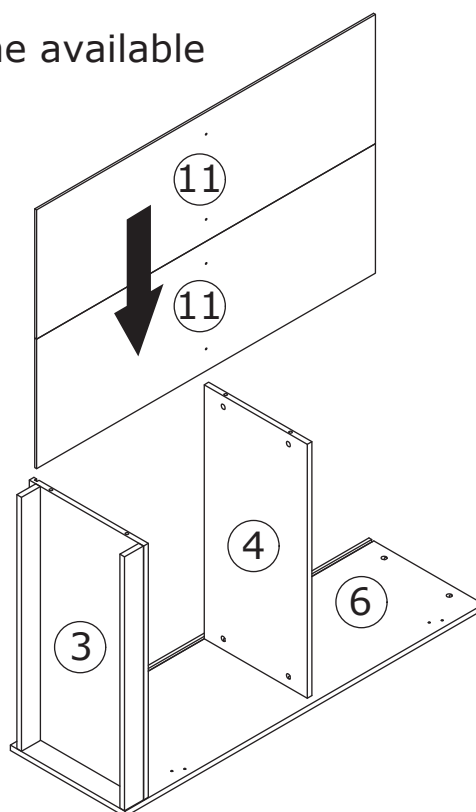



7

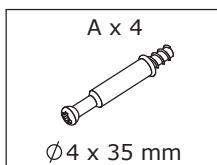  



Screw eccentric rod (A) onto panel 1.

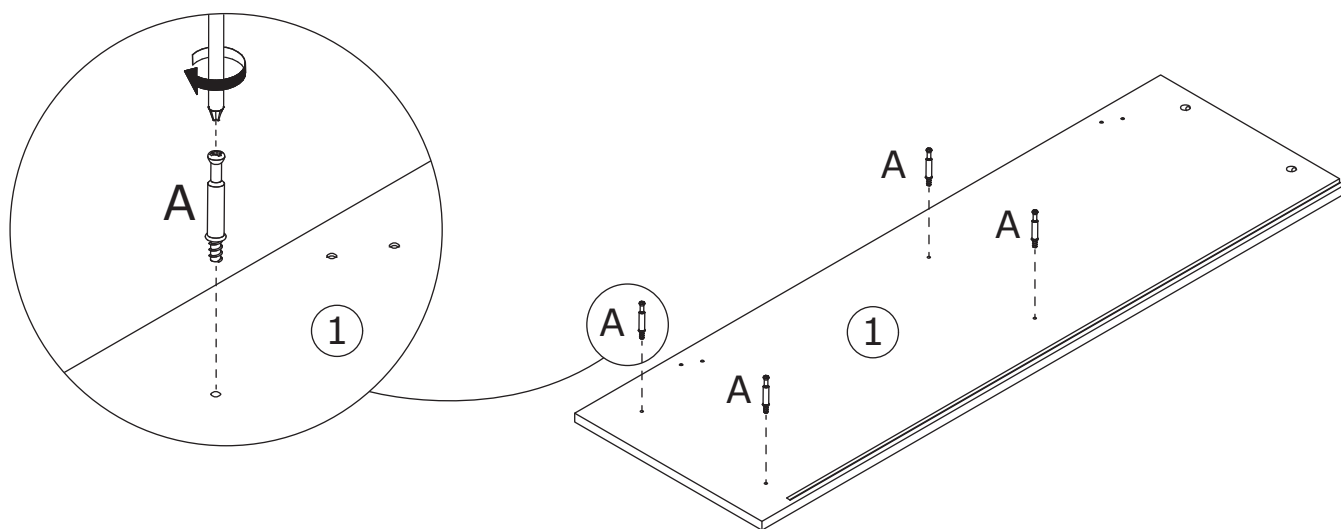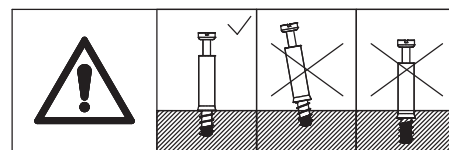  

8

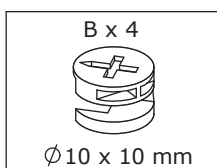  


  Connect panel 3 and 4 to panel 1, then tighten by turning cam lock (B) clockwise.

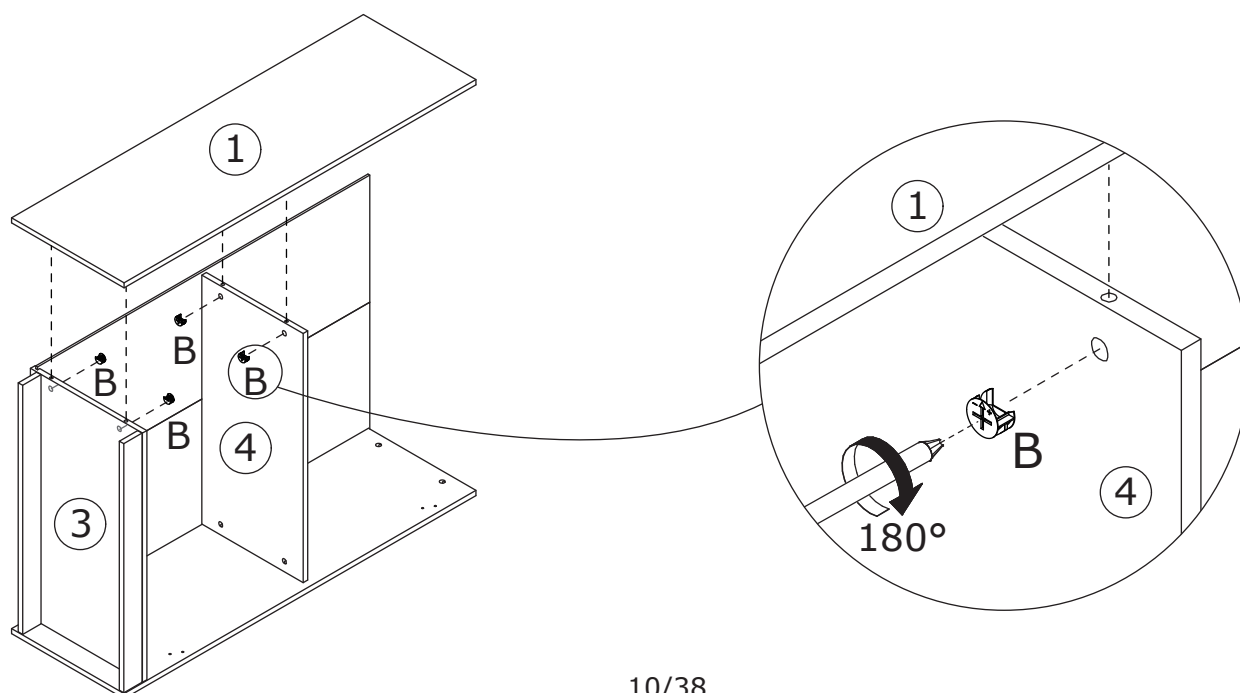
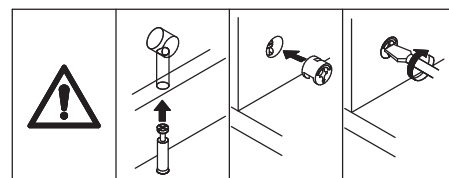


9



 
As shown in the figure,
stand the cabinet upright.

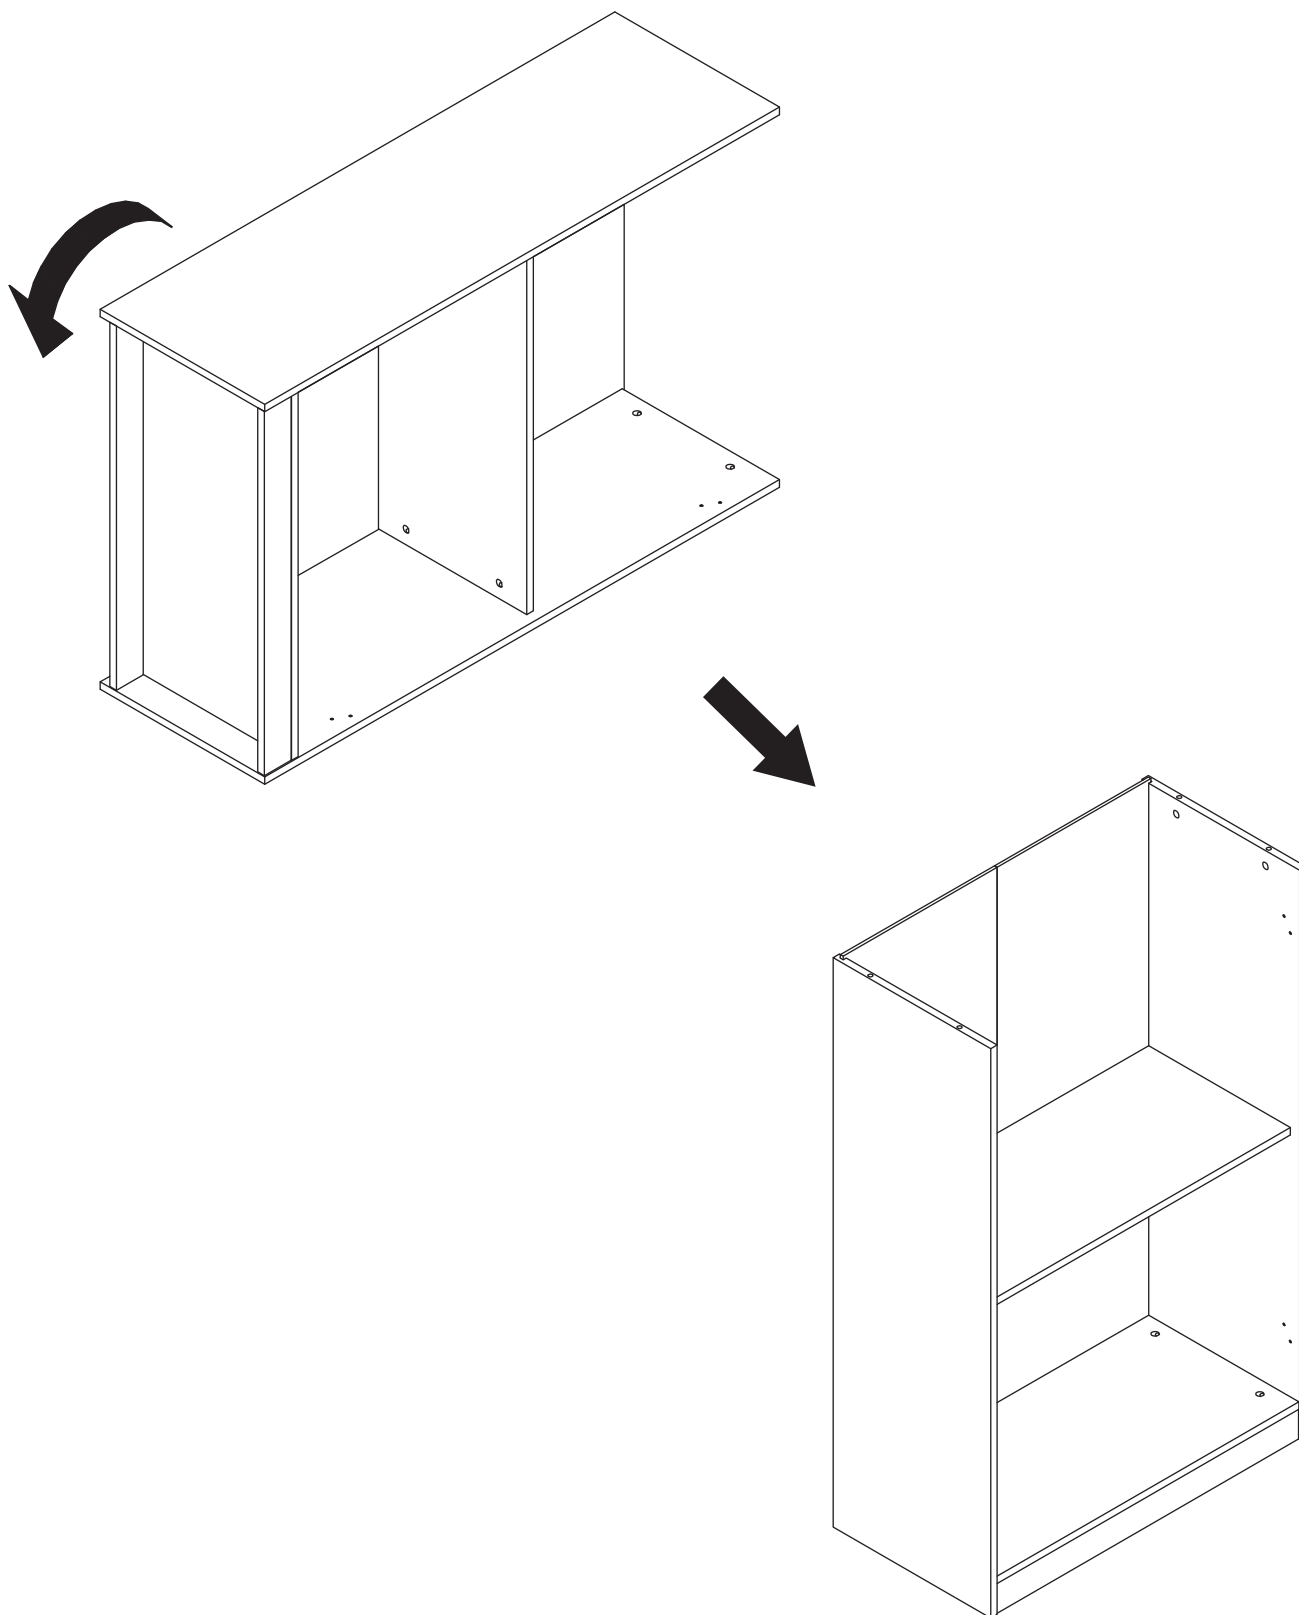



10

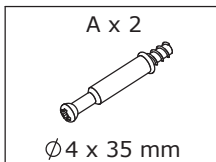  




Screw eccentric rod (A) onto panel 10.

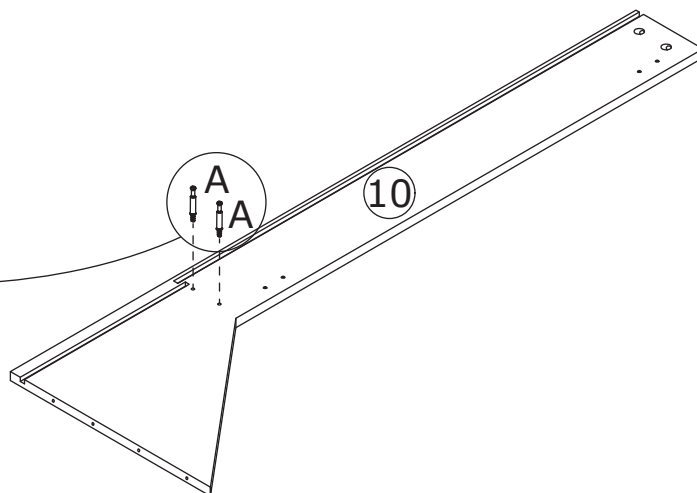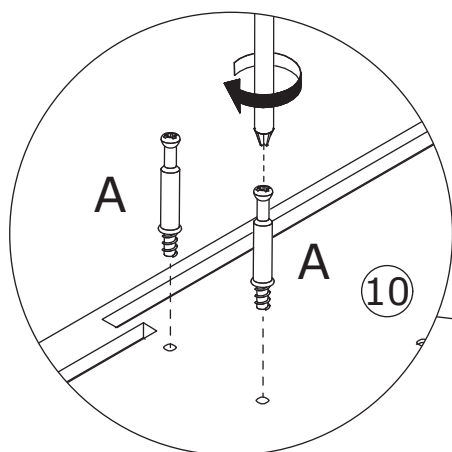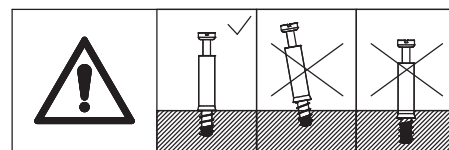   

11

 
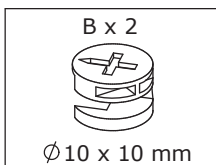 


   Connect panel 8 to panel 10, then tighten by turning cam lock (B) clockwise.

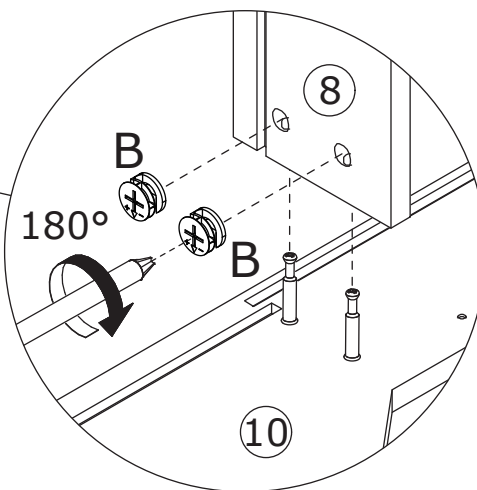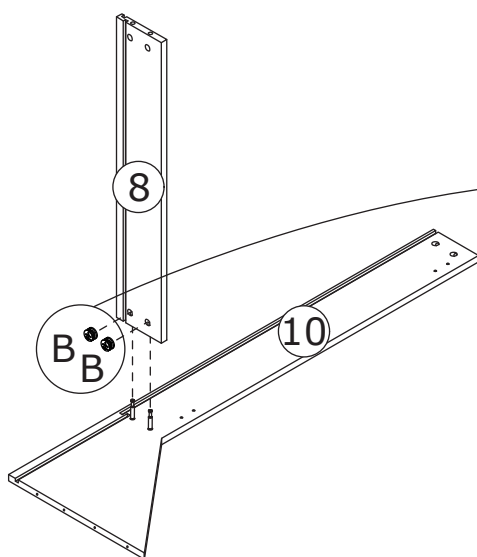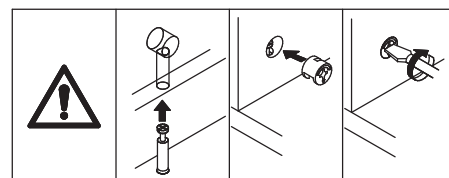


12

  Unfold panel 13 and 14, and insert them along the available grooves.

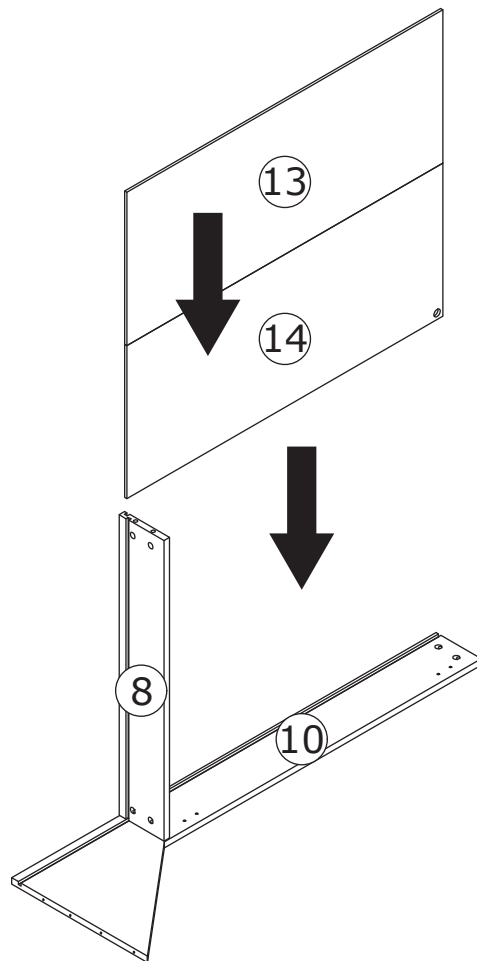
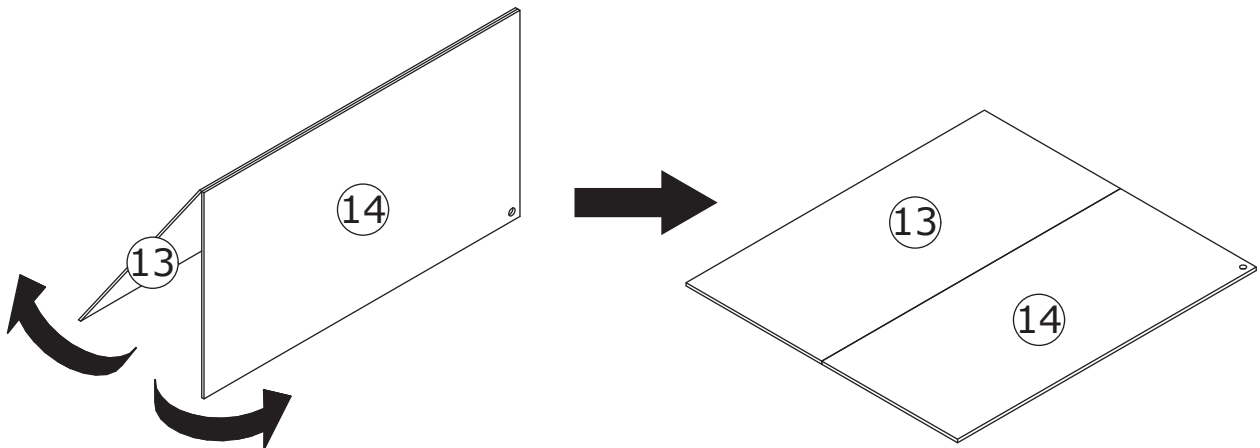


13



 
Insert panel 12 along the available grooves.

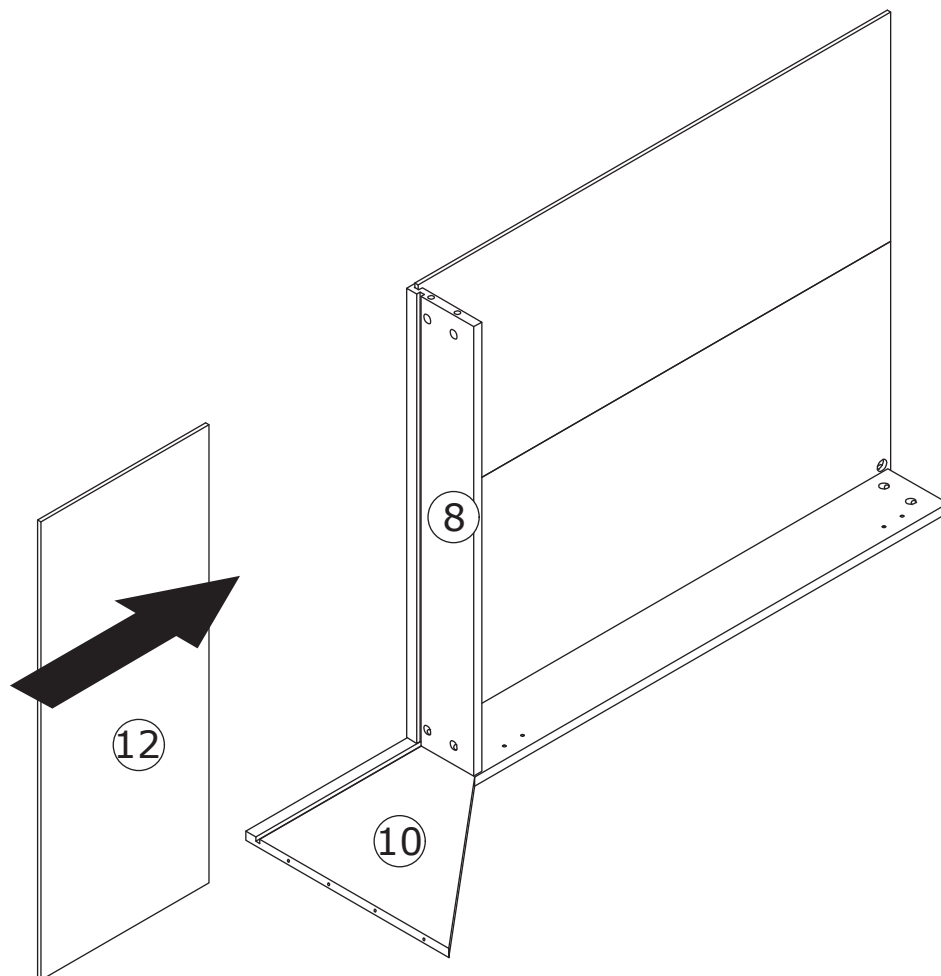


14

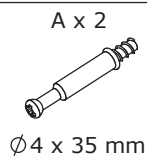  




Screw eccentric rod (A) onto panel 7.

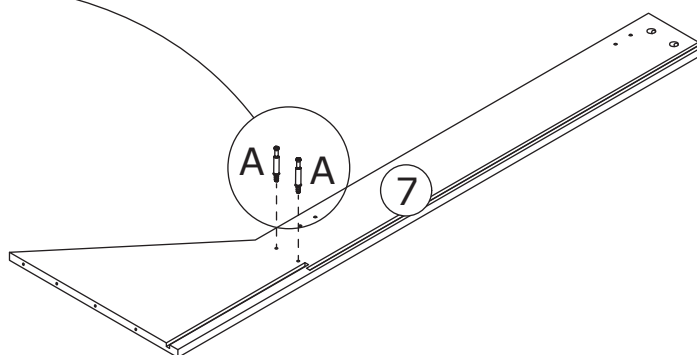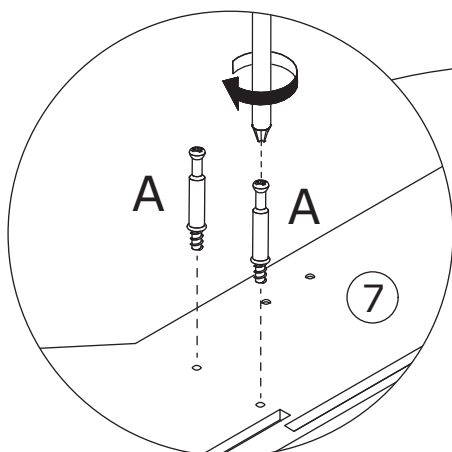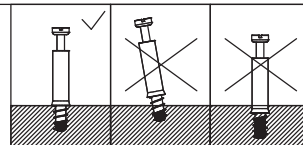   


15

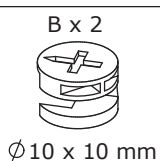 

 
 
 
Connect panel 7 to panel 8, then tighten by turning cam lock (B) clockwise.

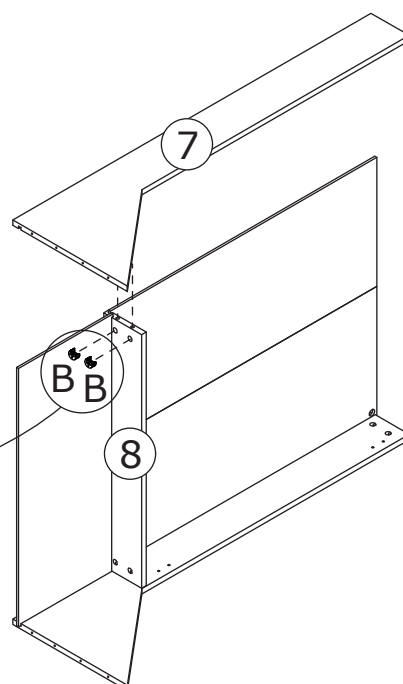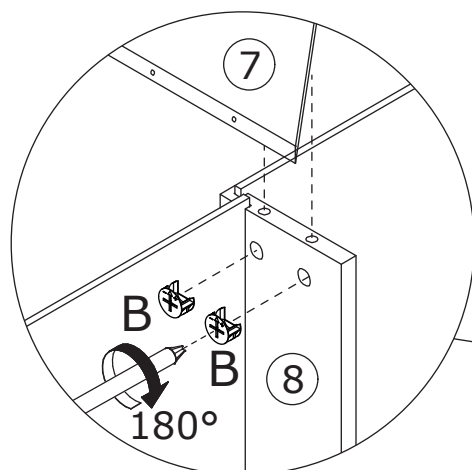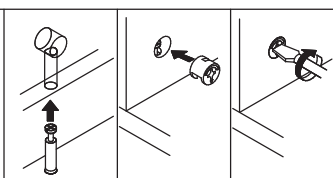



16

 




Screw eccentric rod (A) onto panel 9.

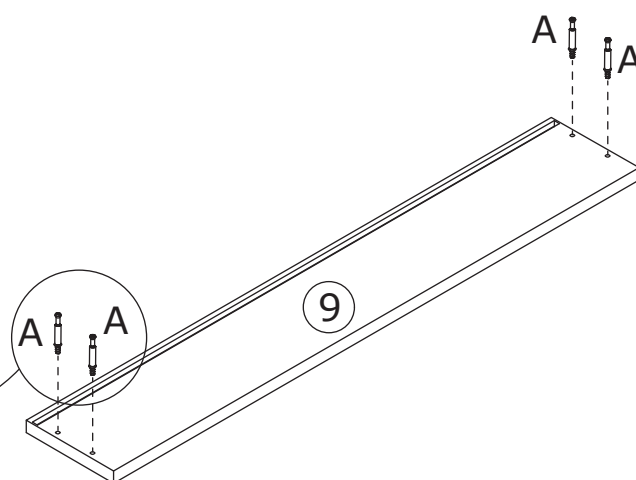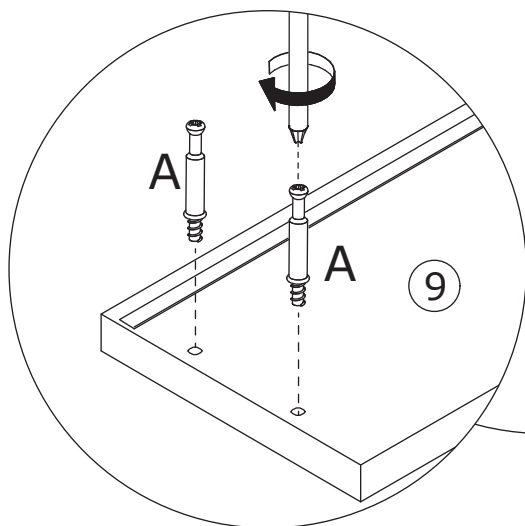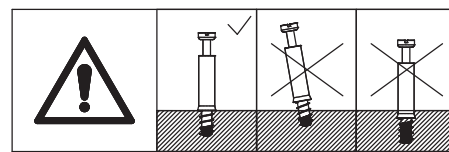   


17

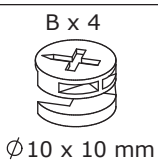  


   Connect panel 9 to panel 7 and 10, then tighten by turning cam lock (B) clockwise.

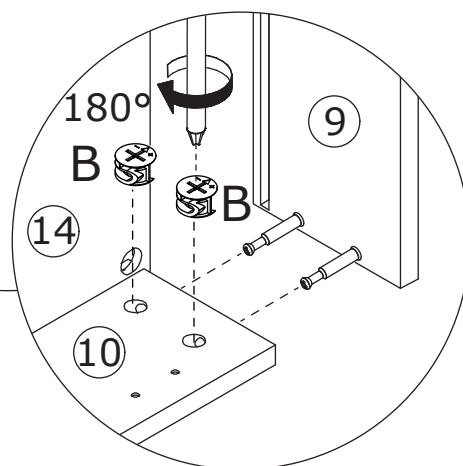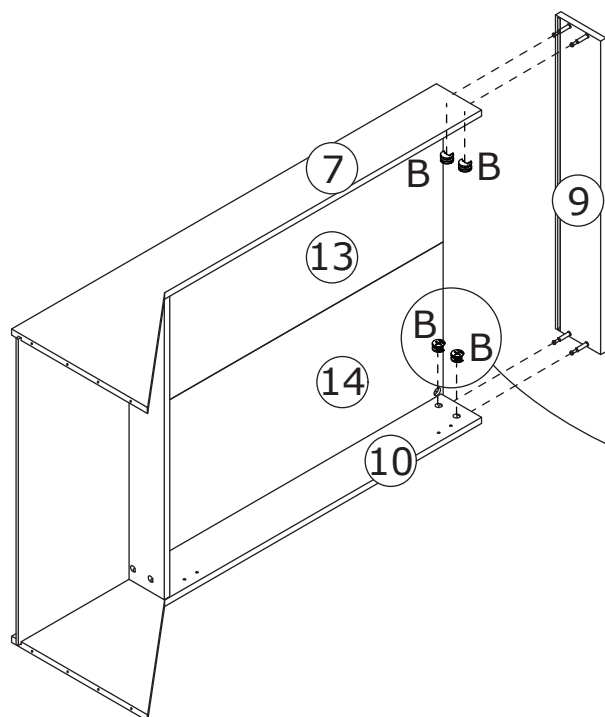
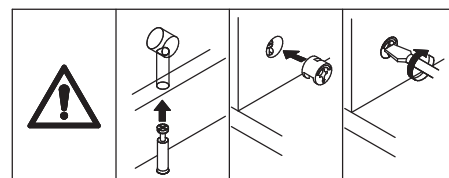


18

 A x 4

  Ø4 x 35 mm

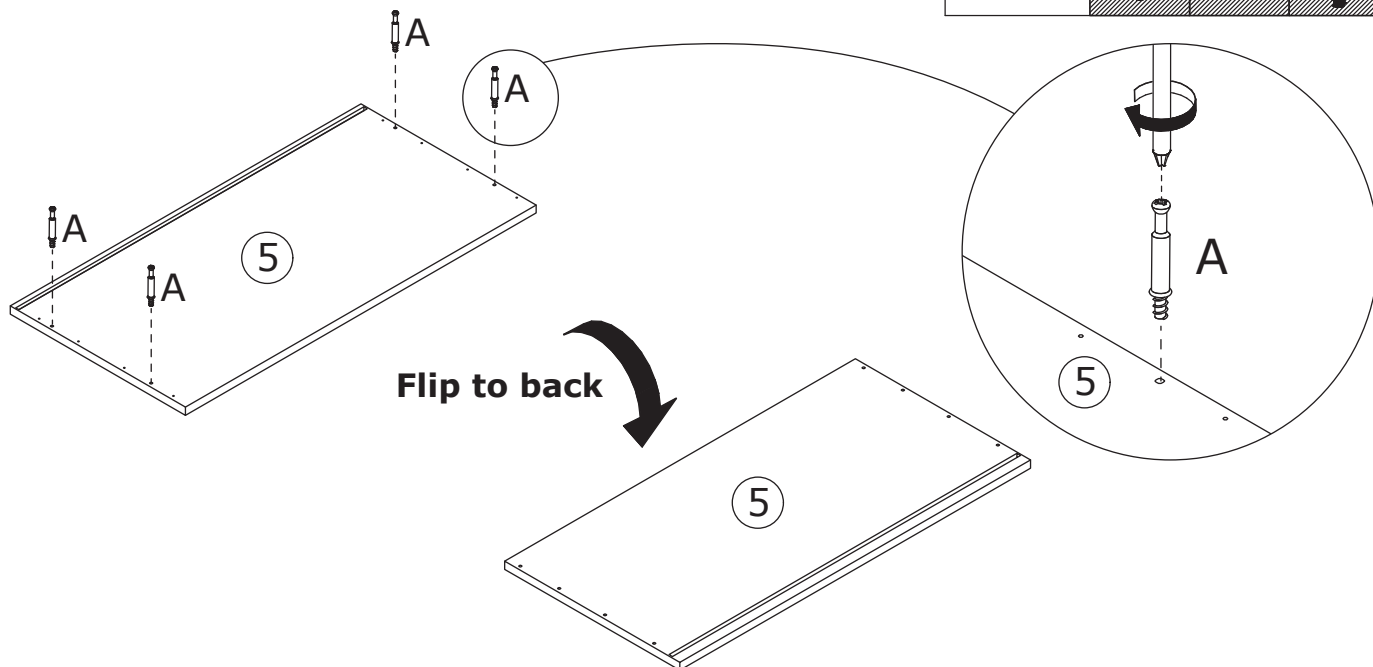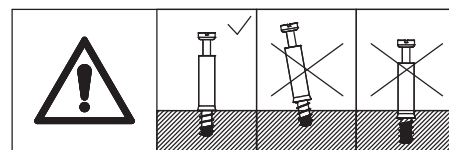  


Screw eccentric rod (A) onto panel 5.




19

D x 8




 
 Ø4 x 30 mm



 
Connect panel 5 to panel 7 and 10 using screw (D).

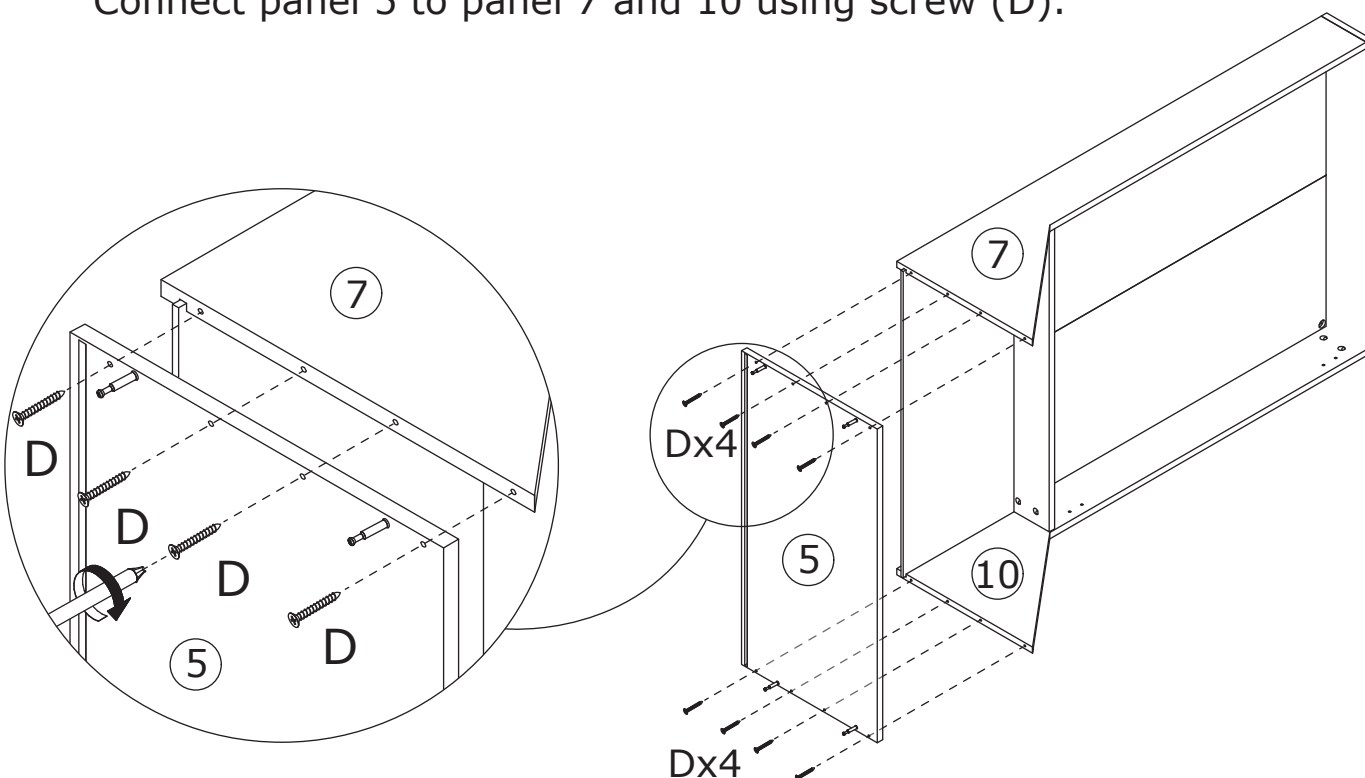

20

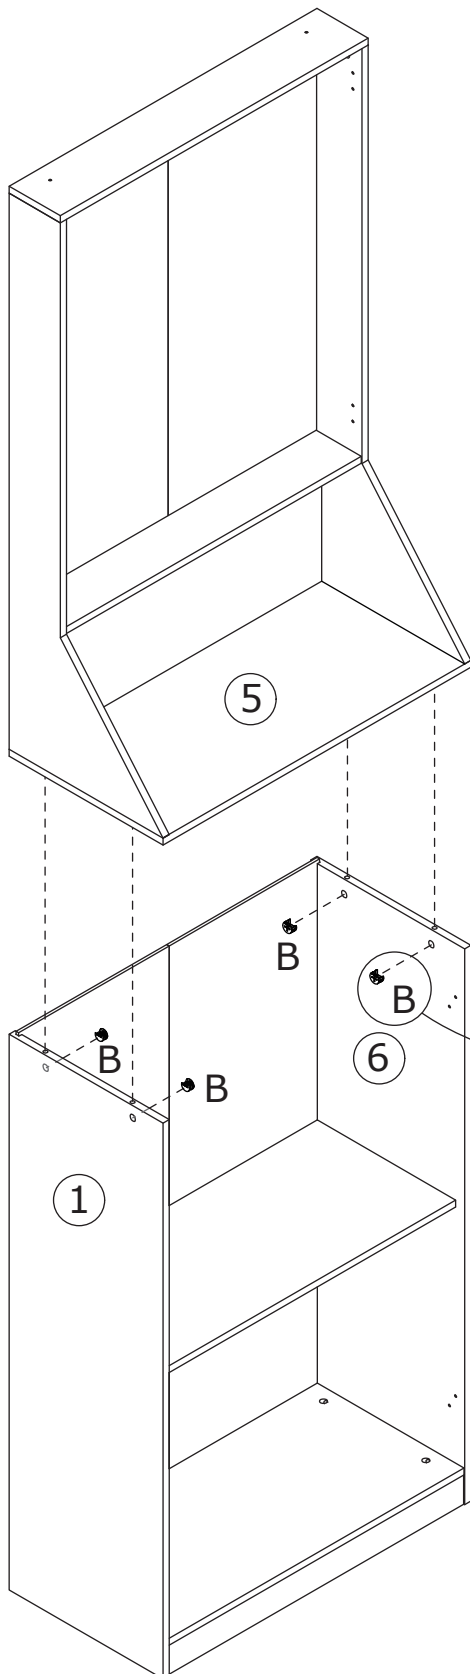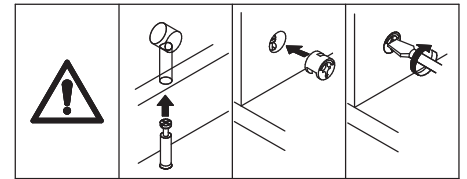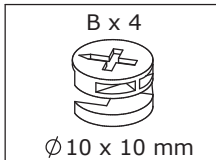    


 Connect panel 5 to panel 1 and 6, then tighten by turning cam lock (B) clockwise.


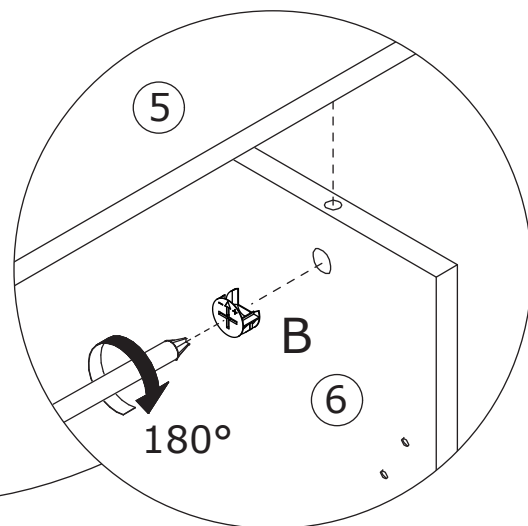


21



 
D x 4
Ø4 x 30 mm




 
 
Secure panel 11 to the unit using screw (D).

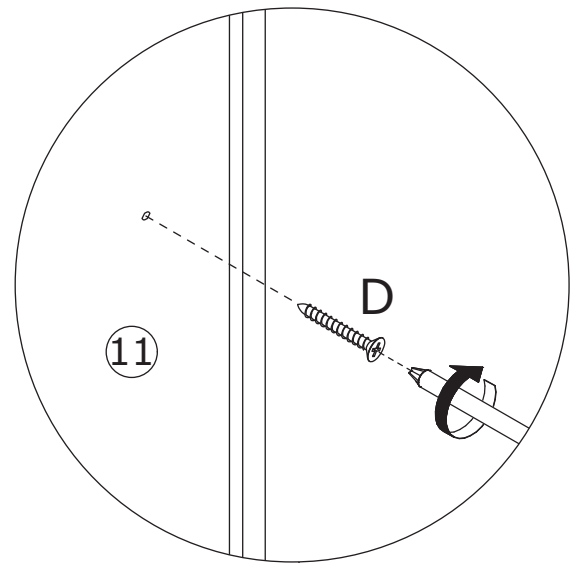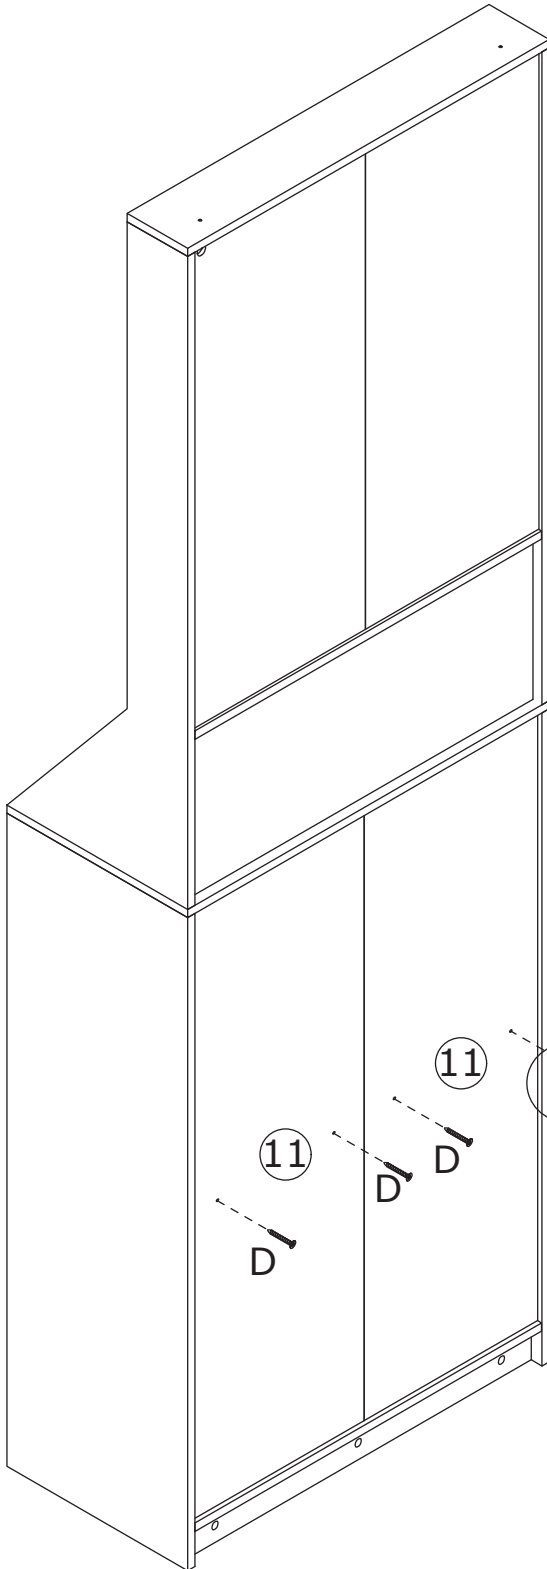




22

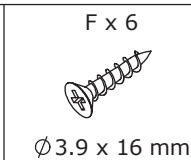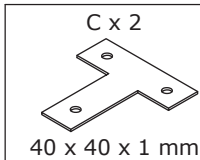   

   
Secure part (C) to the assembly unit using screw (F).

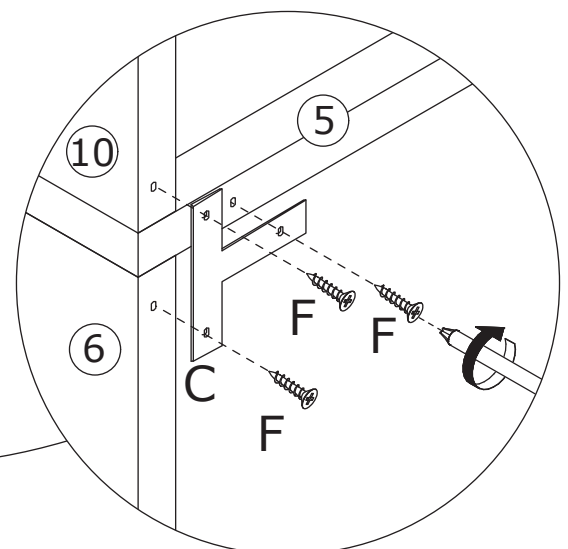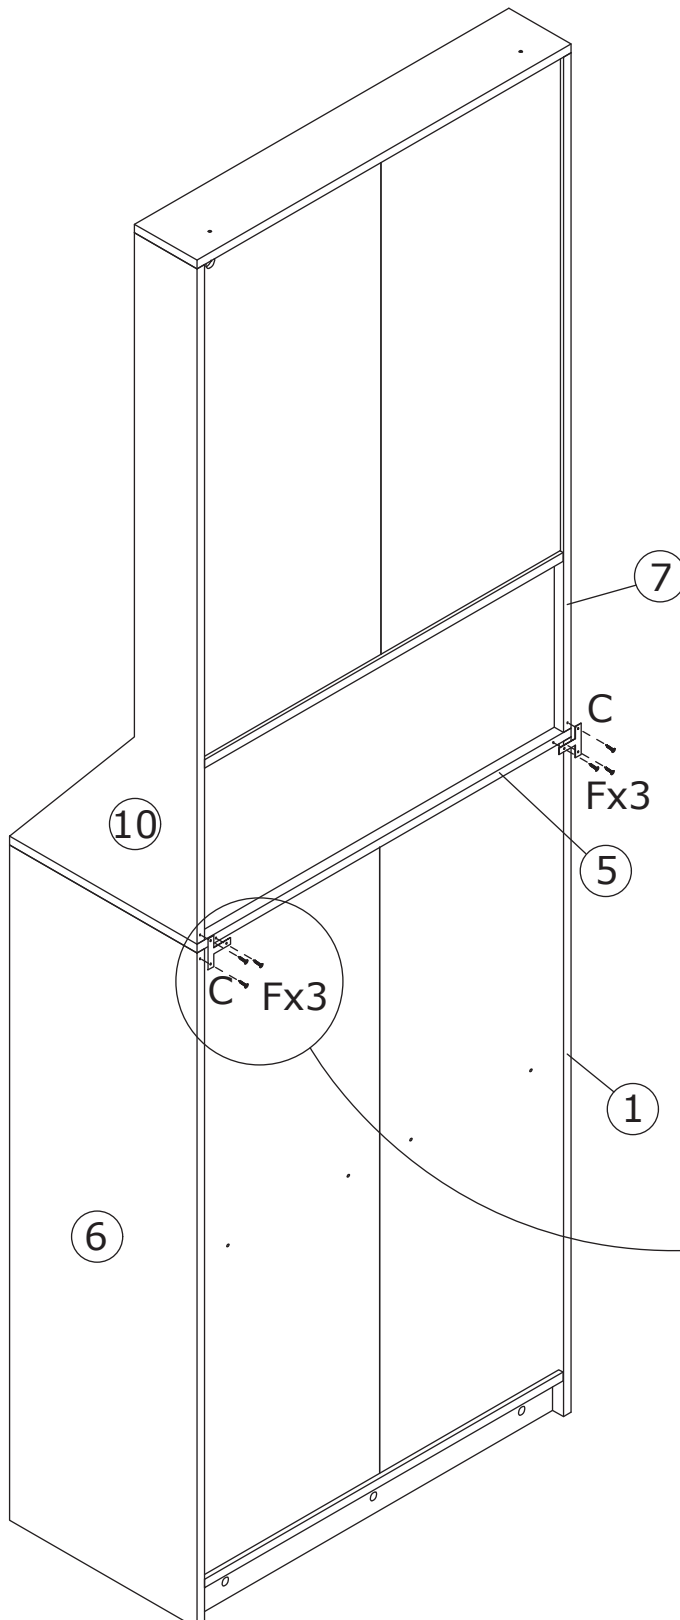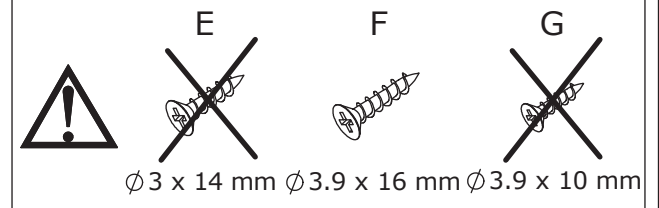


23

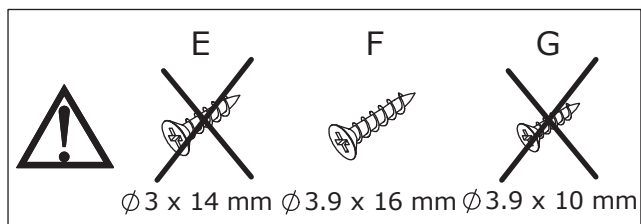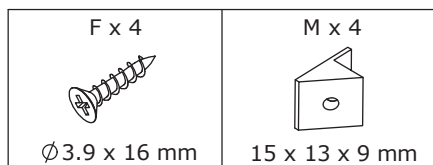   



 
Insert clip (M) into the slots and secure them using screw (F).

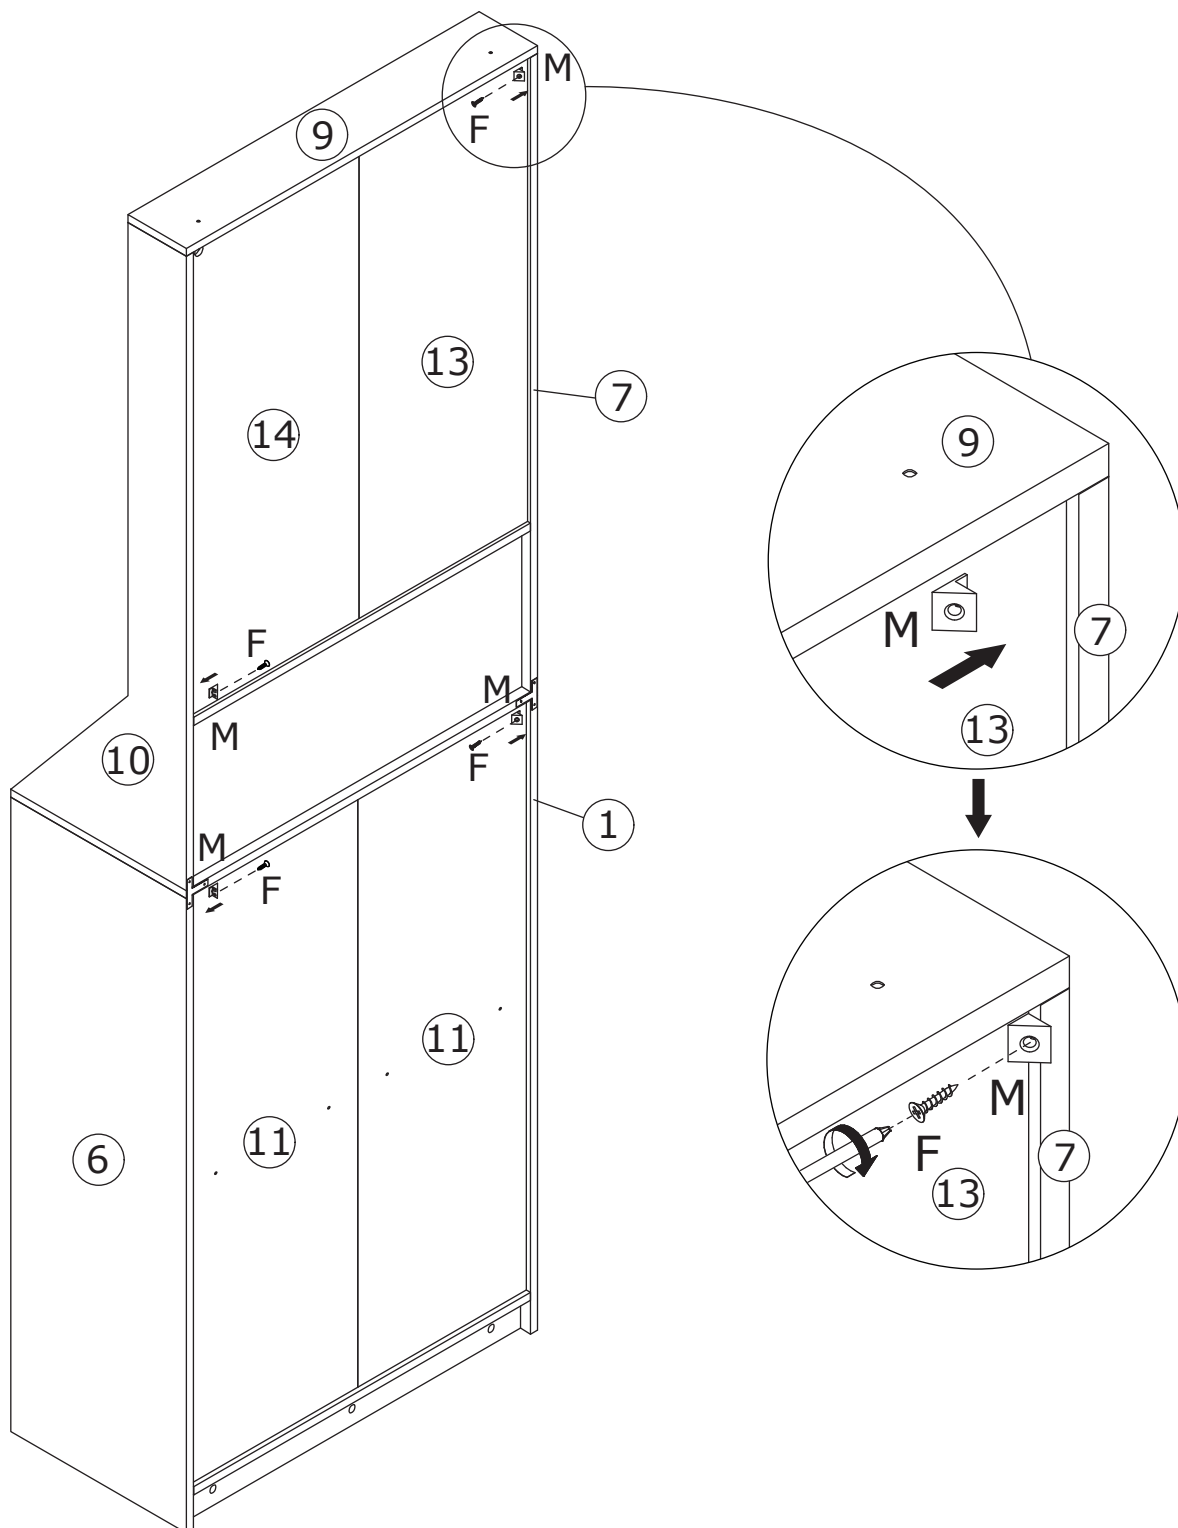

24

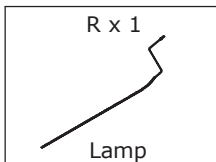 


   Thread the LED light strip through the hole on back panel.

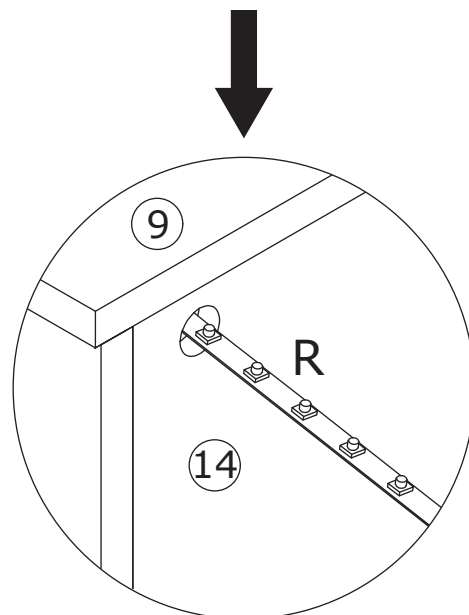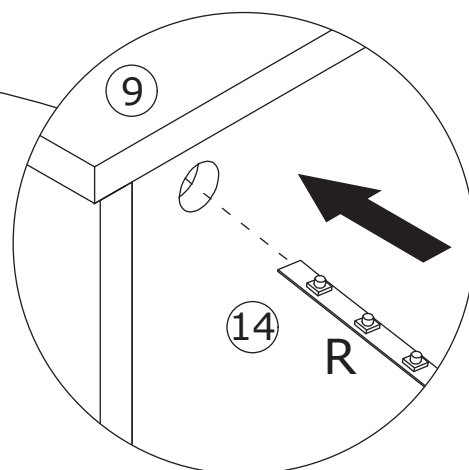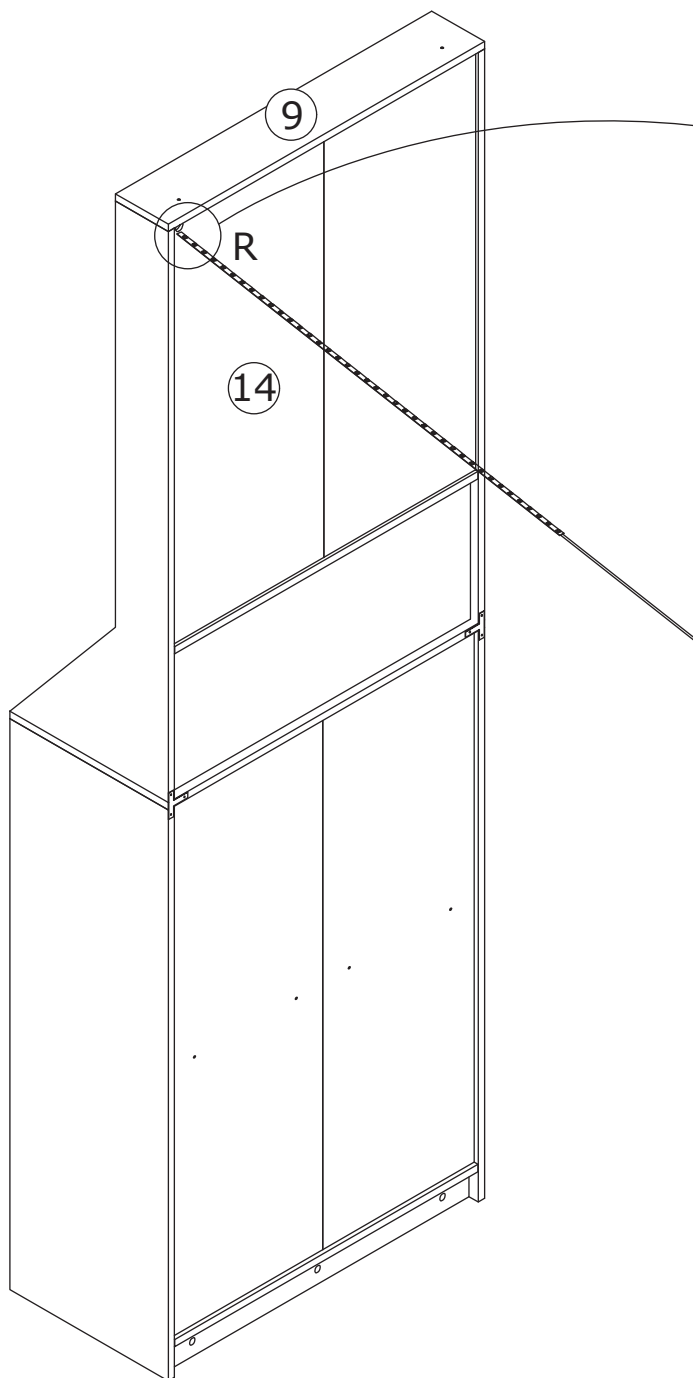


25

 
Thread the LED light strip through the hole on back panel.

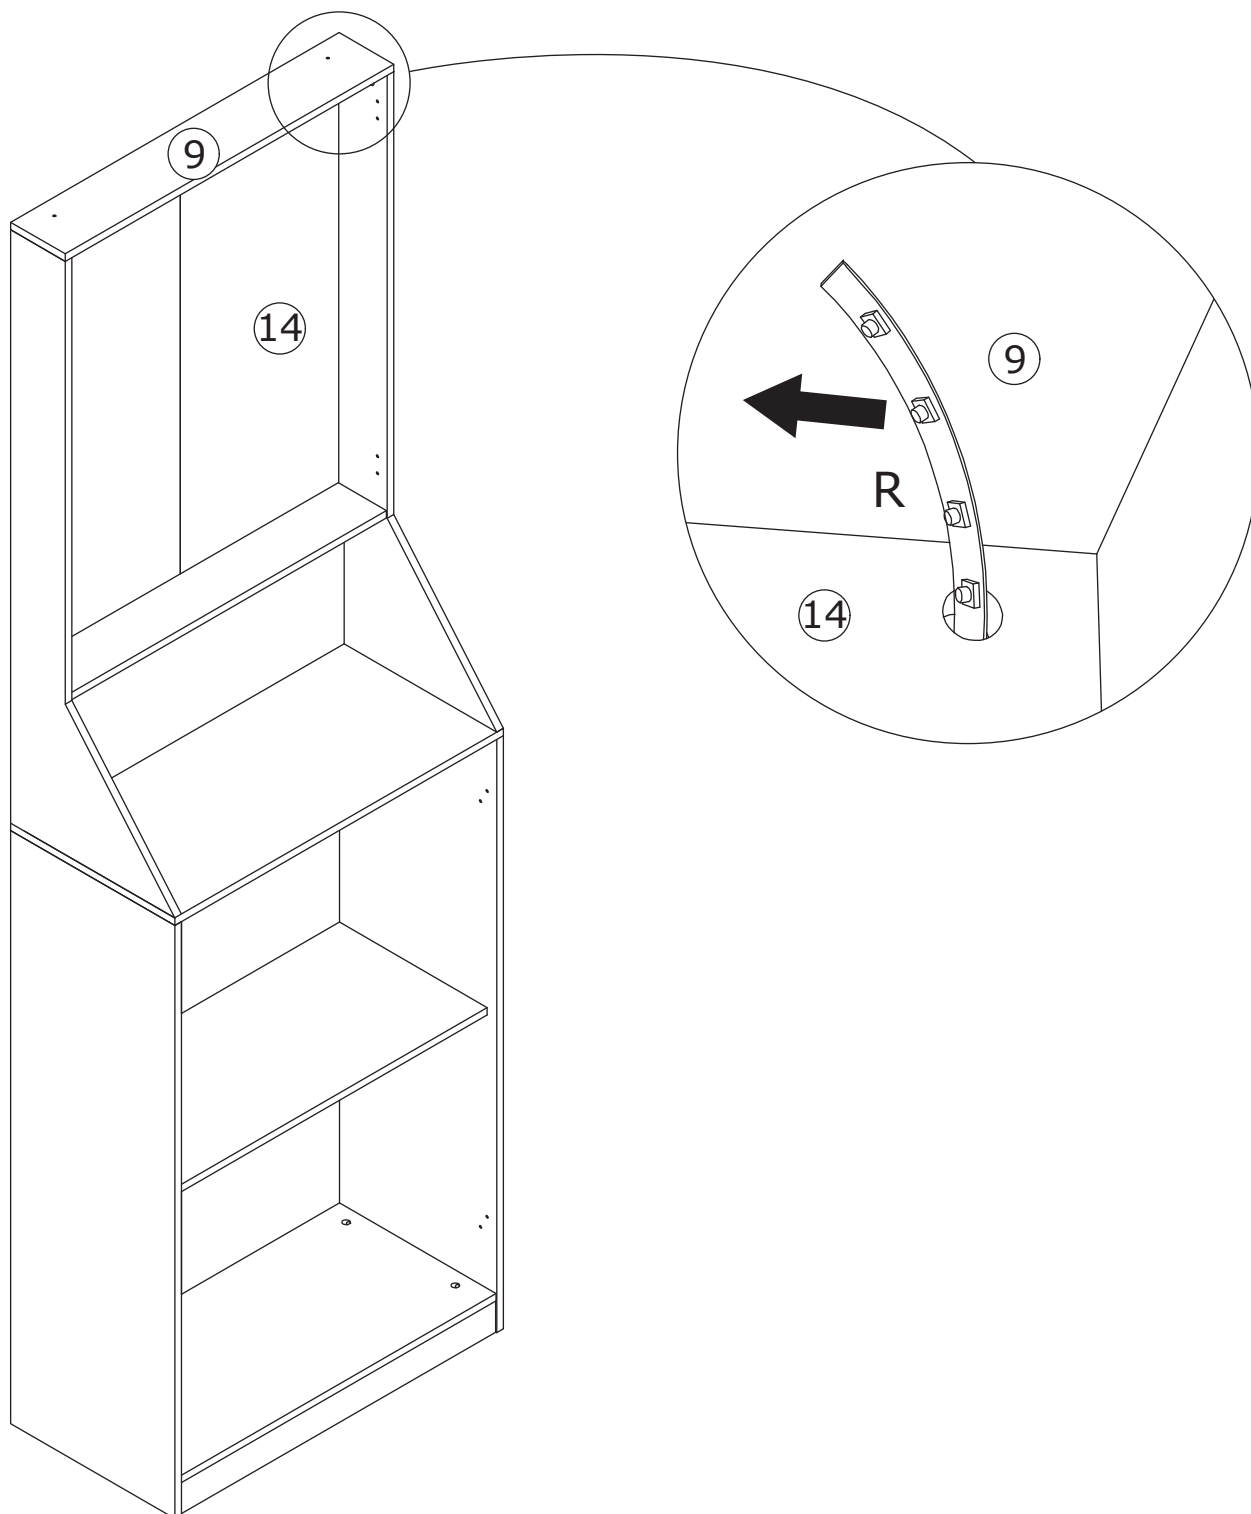

26

  Stick the LED light strip onto the top panel.

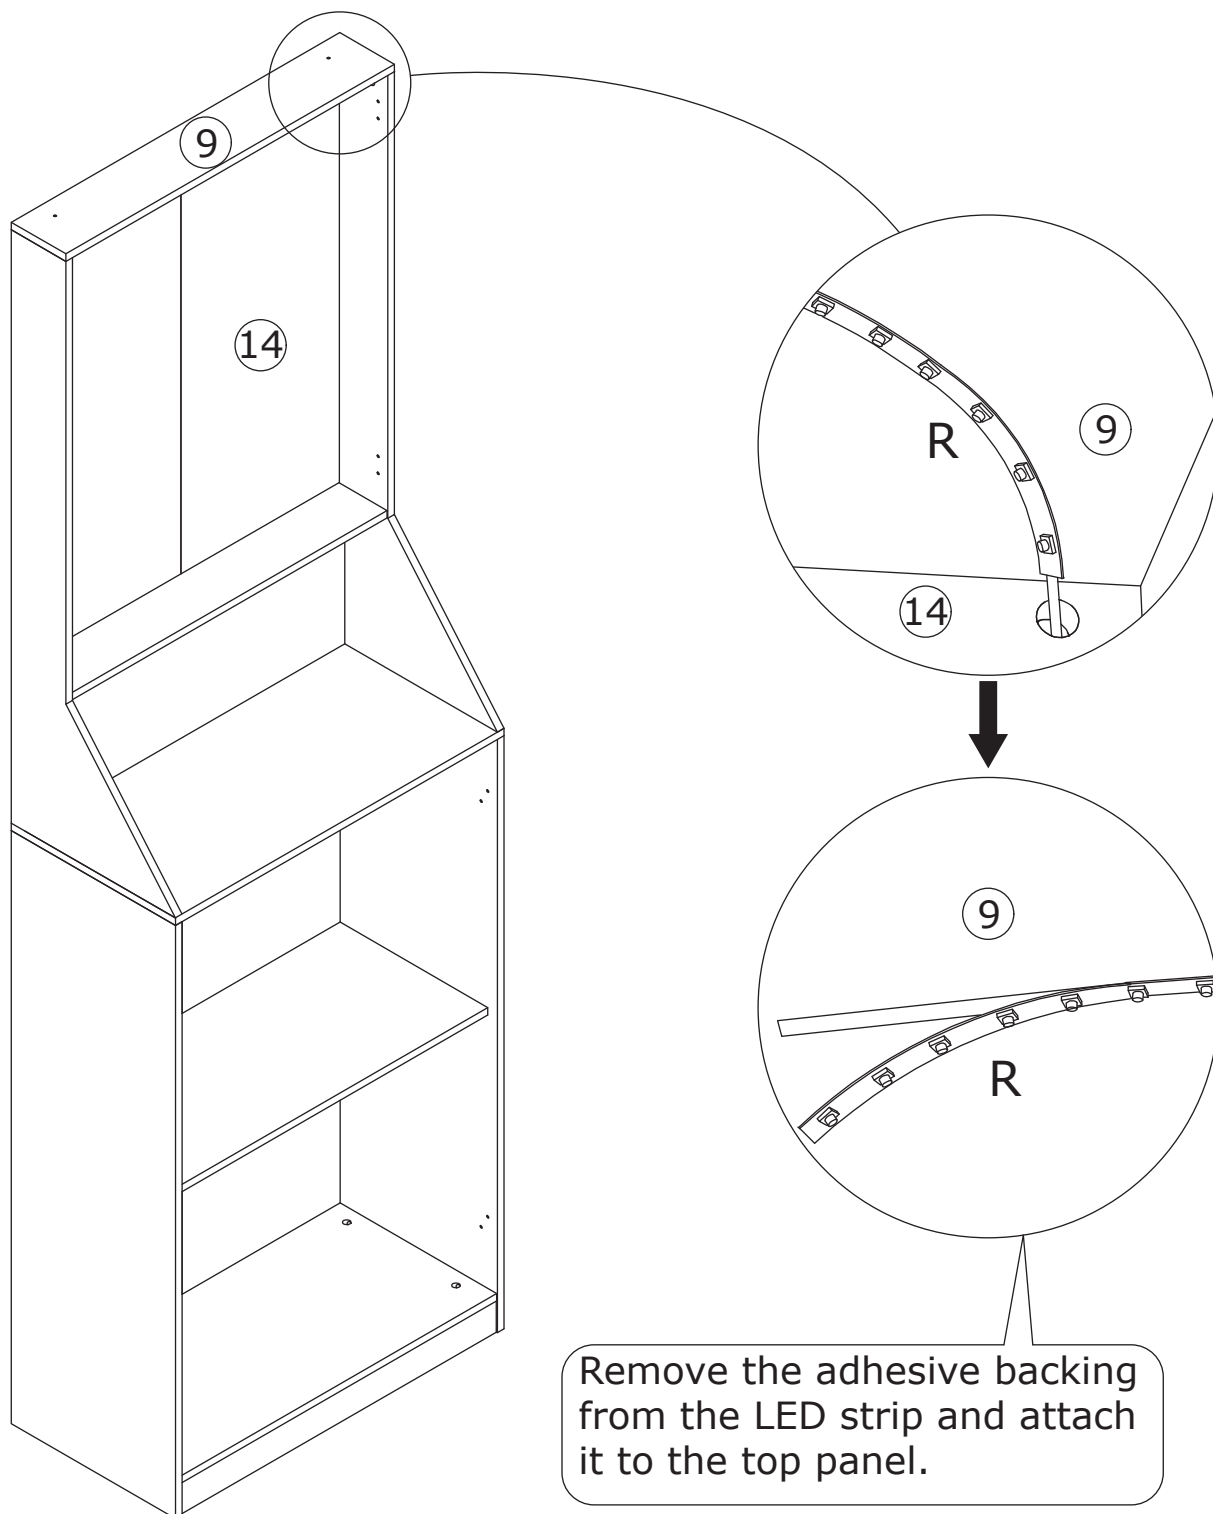

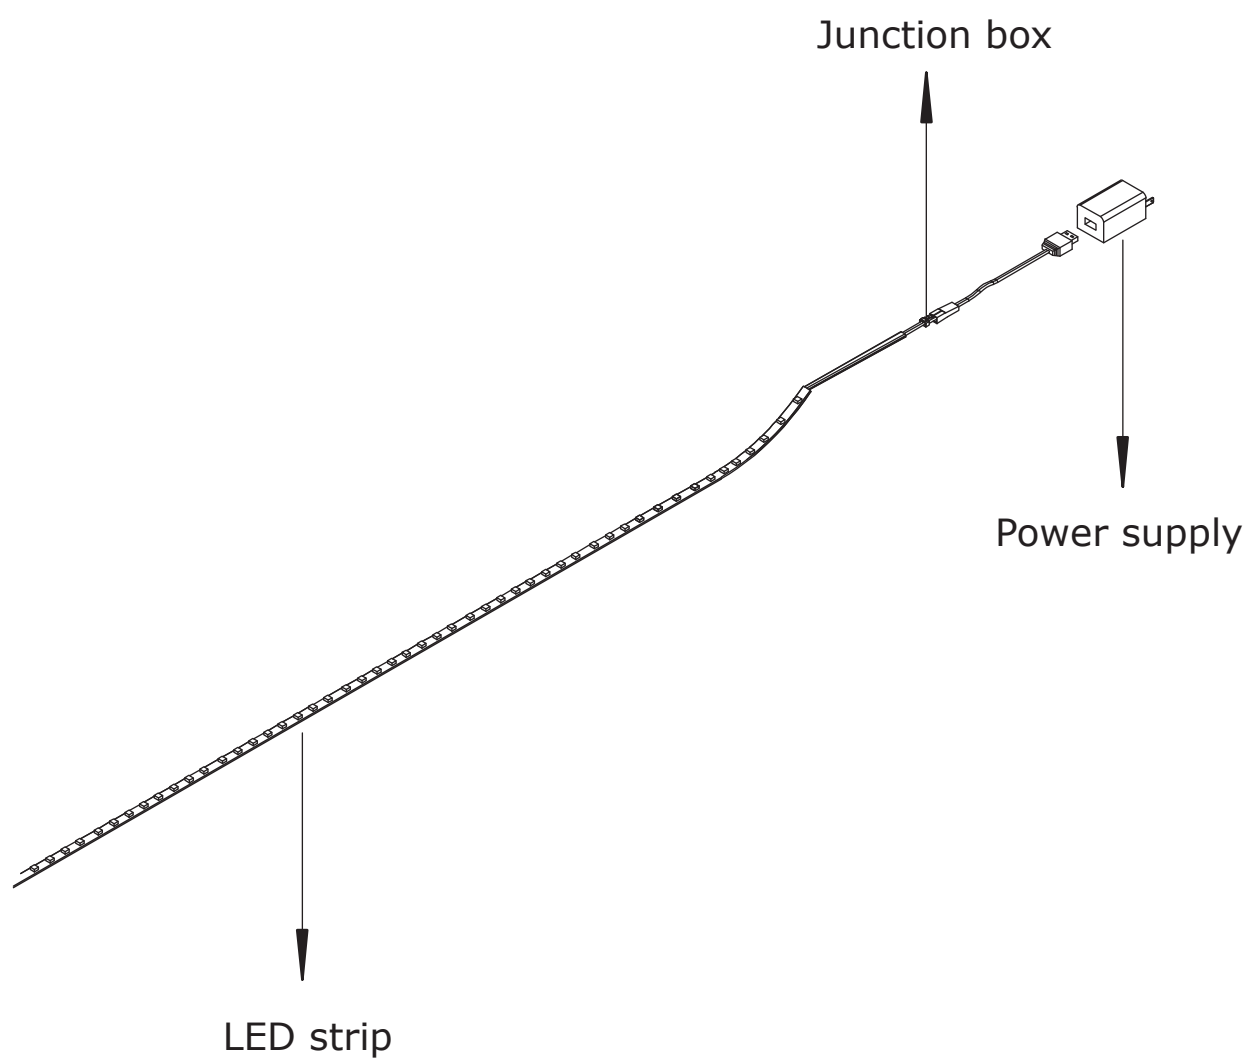



28

E x 8



Ø3 x 14 mm

  L x 4



E



Ø3 x 14 mm

F



 
Ø3.9 x 16 mm

G




Ø3.9 x 10 mm

Secure hinge (L) to panel 15 and 16 using screw (E).

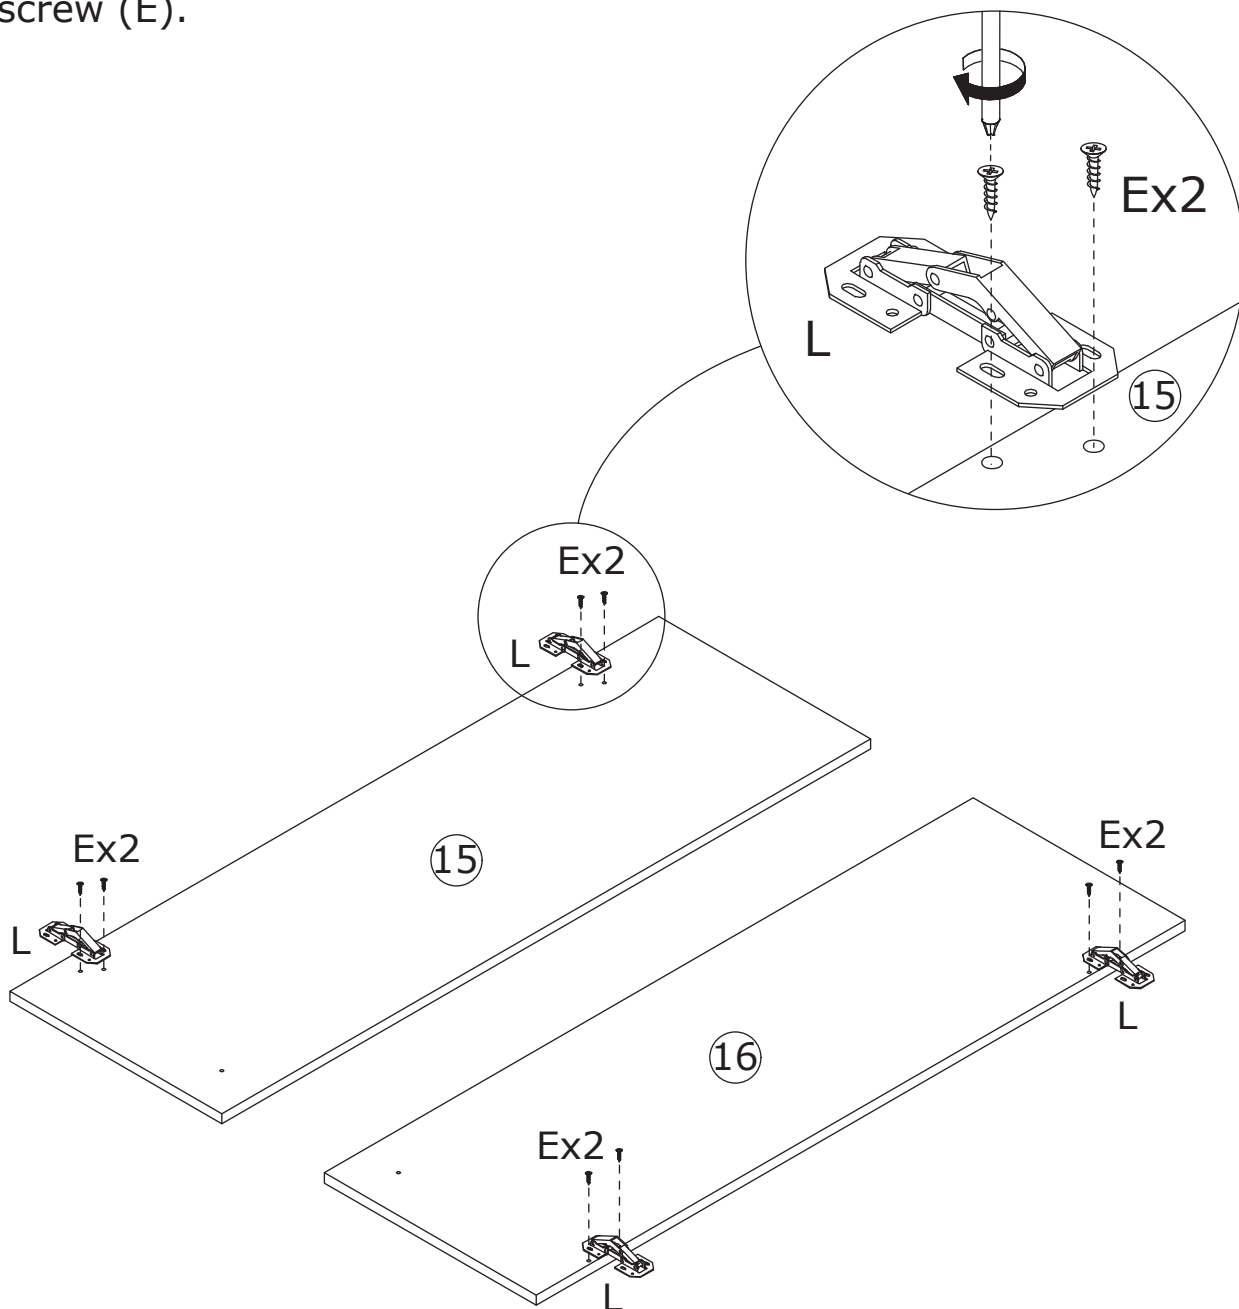


29

 E x 12



Ø 3 x 14 mm

 

Connect panel 15 to the assembly unit via hinges using screw (E).



E



Ø 3 x 14 mm

F

 


Ø 3.9 x 16 mm



G




Ø 3.9 x 10 mm

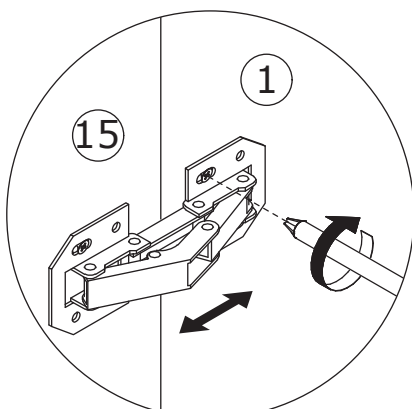


Adjust forward or backward

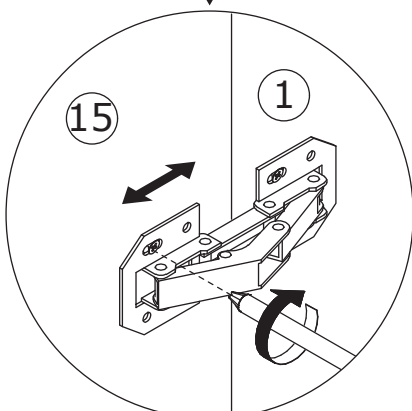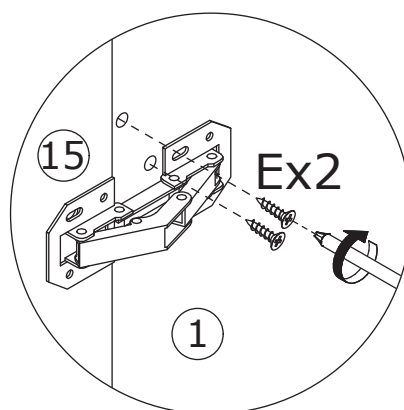  

Adjust left and right

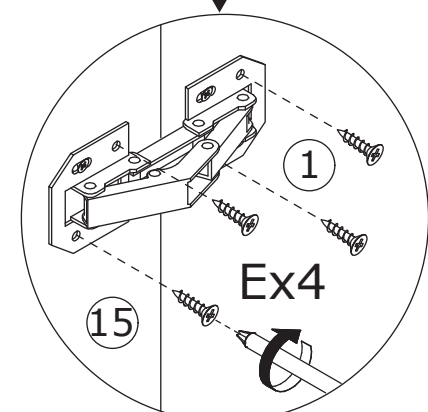 


 After adjust the door panel, secure it with screws.

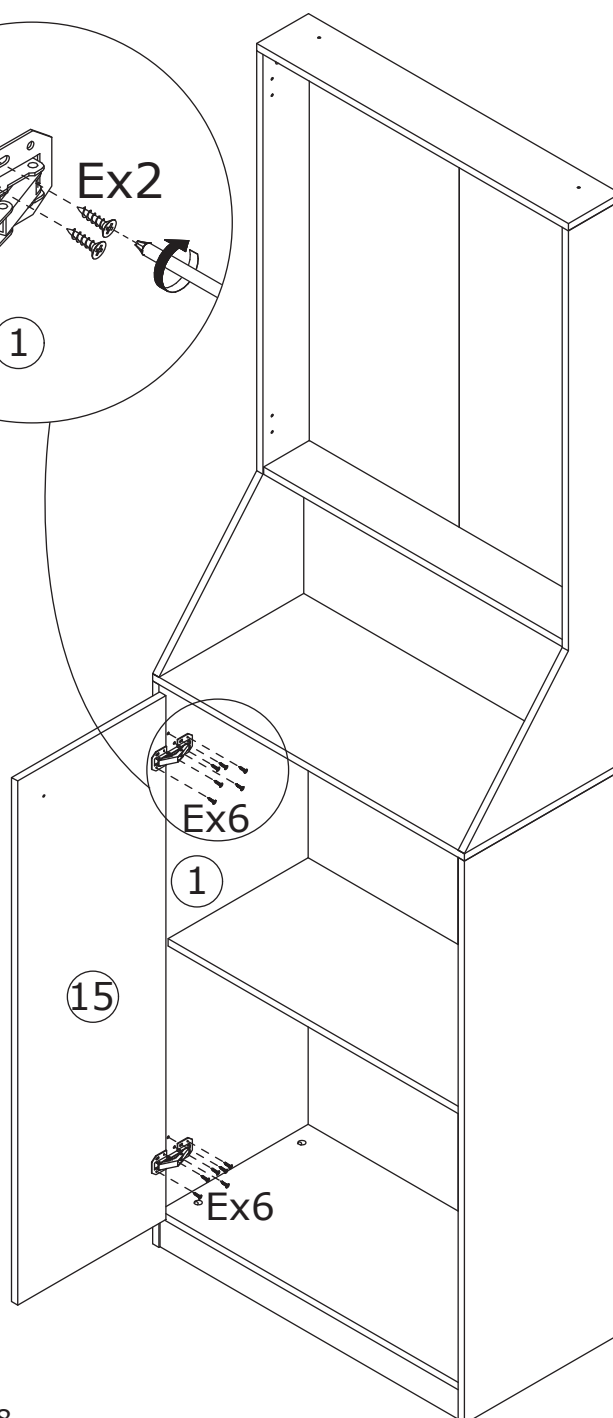


30

 E x 12



Ø3 x 14 mm

 

Connect panel 16 to the assembly unit via hinges using screw (E).



E



 
F




G




Ø3 x 14 mm Ø3.9 x 16 mm Ø3.9 x 10 mm

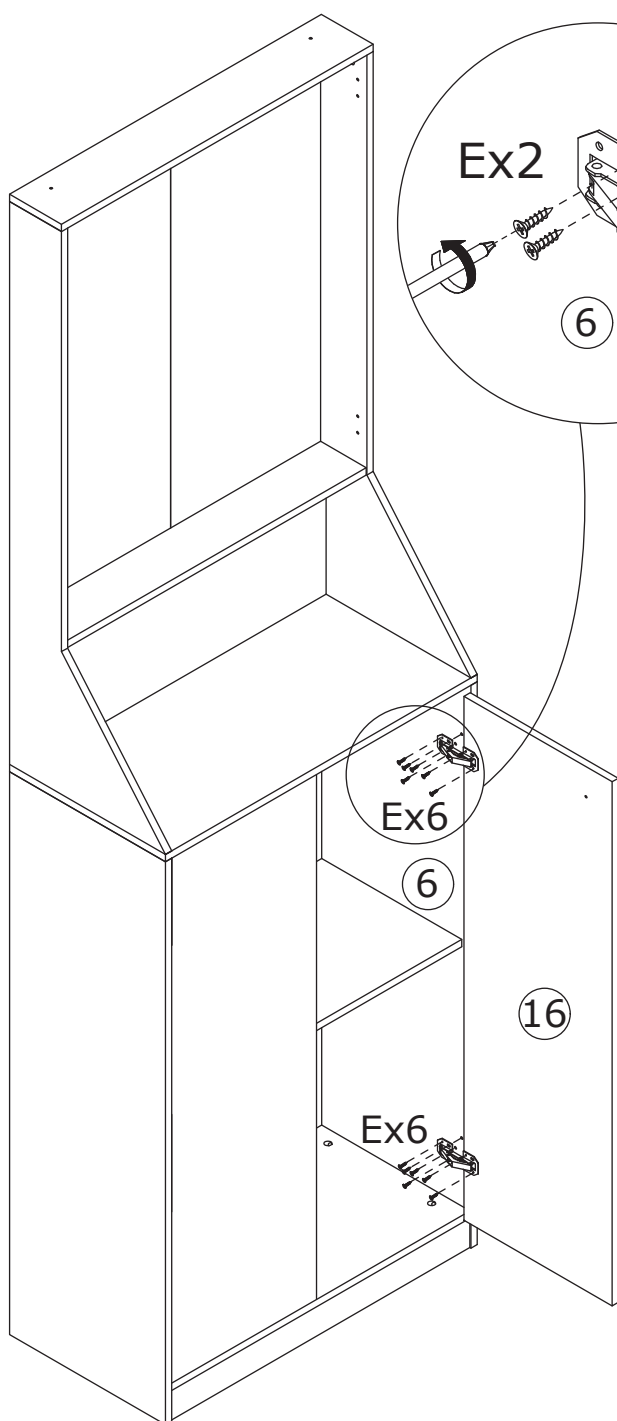


Ex2

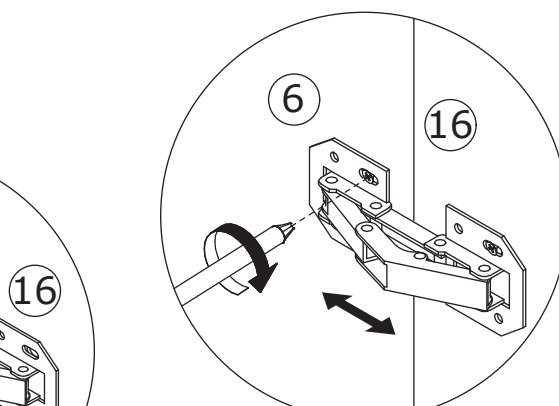 

Adjust forward or backward

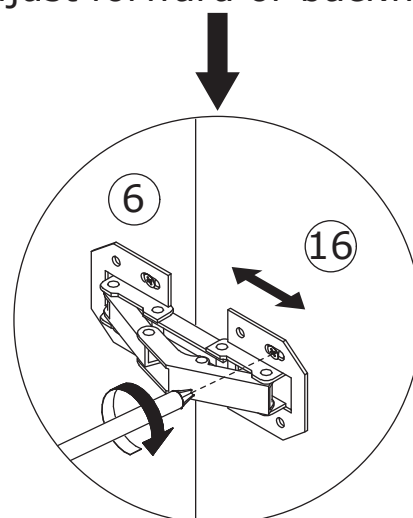 

Adjust left and right

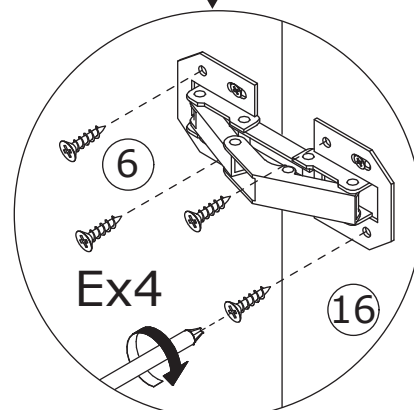 

After adjust the door panel, secure it with screws.

 
 
31

G x 8



Ø 3.9 x 10 mm

K x 4

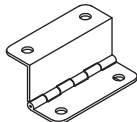

E



Ø 3 x 14 mm

F



 
Ø 3.9 x 16 mm

G



Ø 3.9 x 10 mm

Secure hinge (K) to panel 17 and 18 using screw (G).


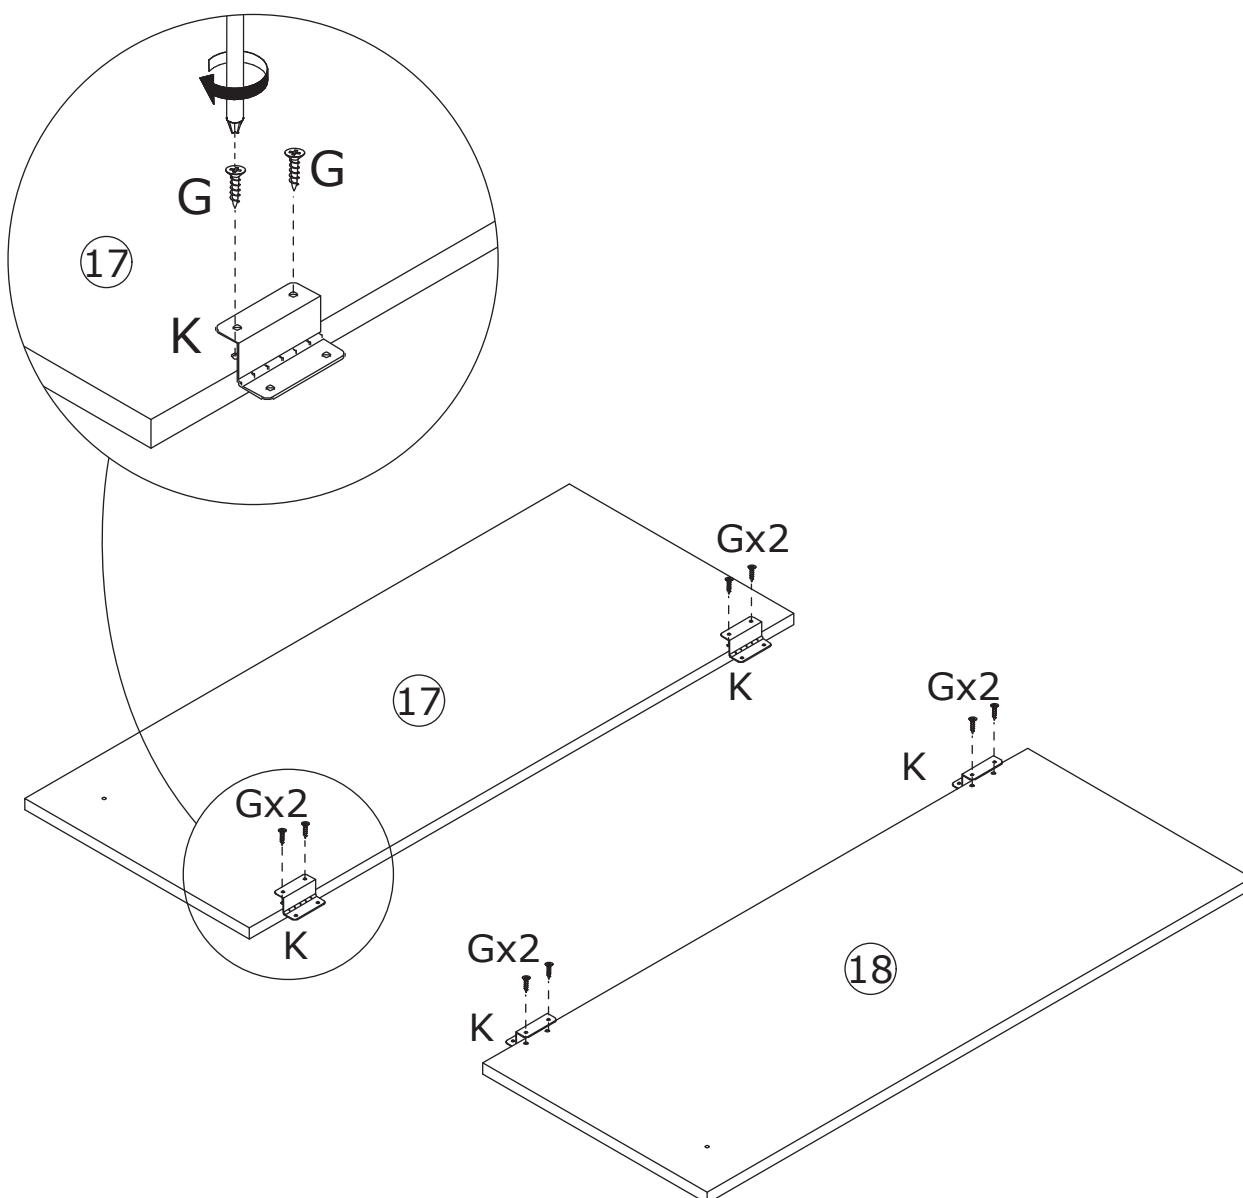


32


G x 4




 
 
Ø 3.9 x 10 mm

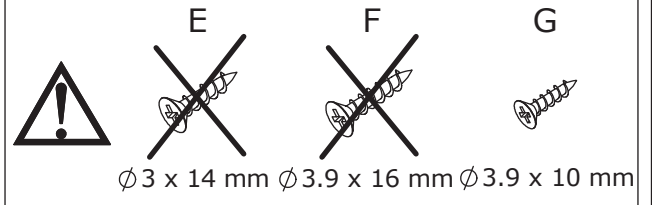


 
Connect panel 17 to the assembly unit via hinges using screw (G).

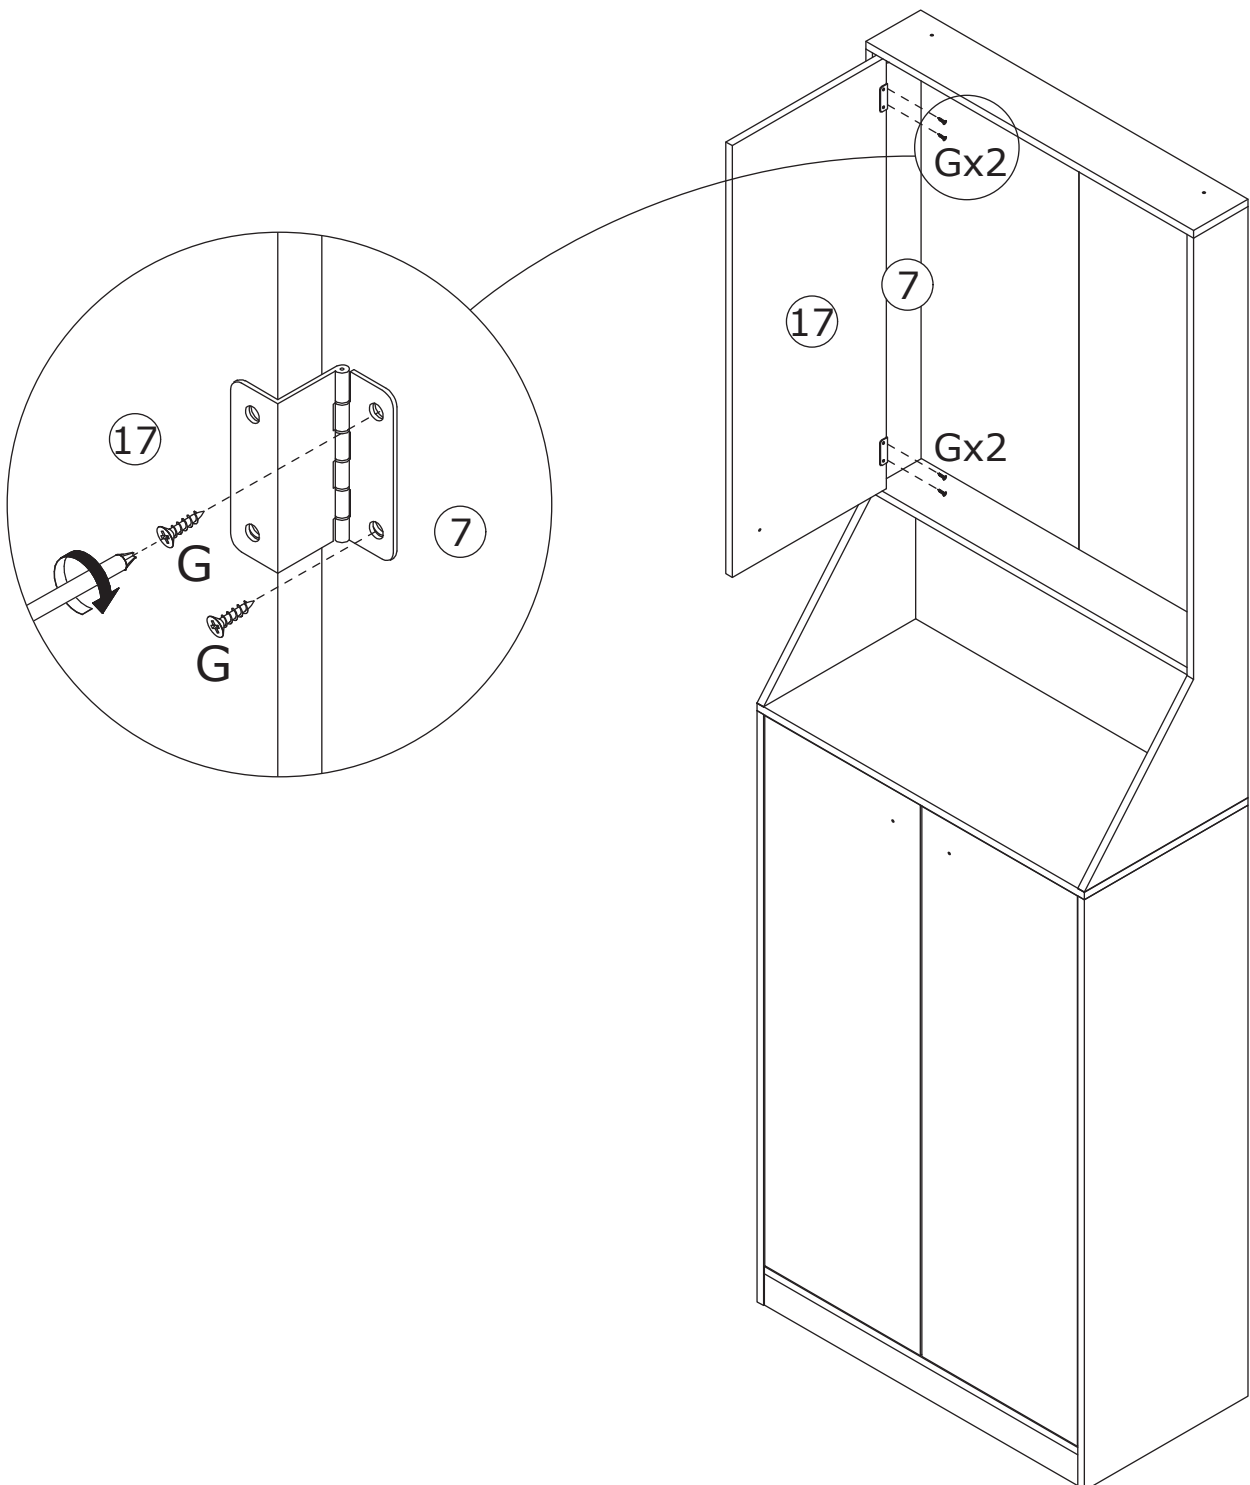



33

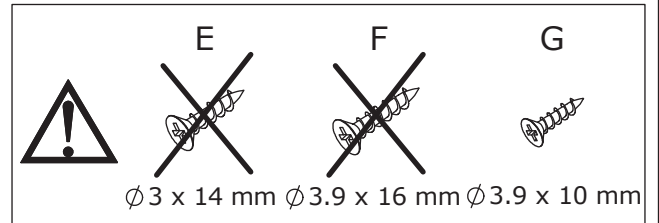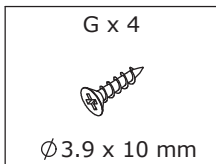   

  
Connect panel 18 to the assembly unit via hinges using screw (G).

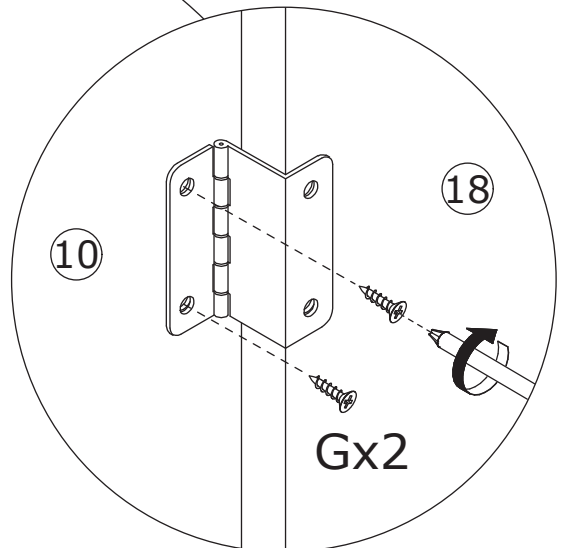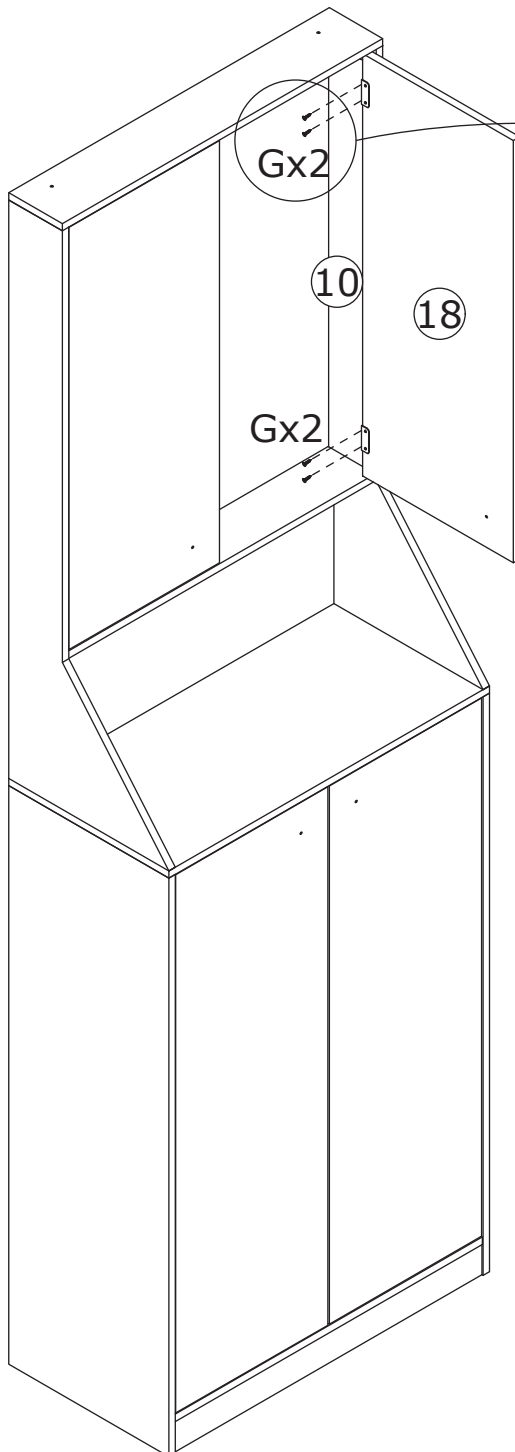



34

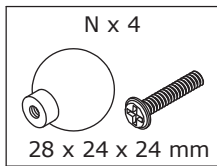  

Secure knob (N) to the door panels.


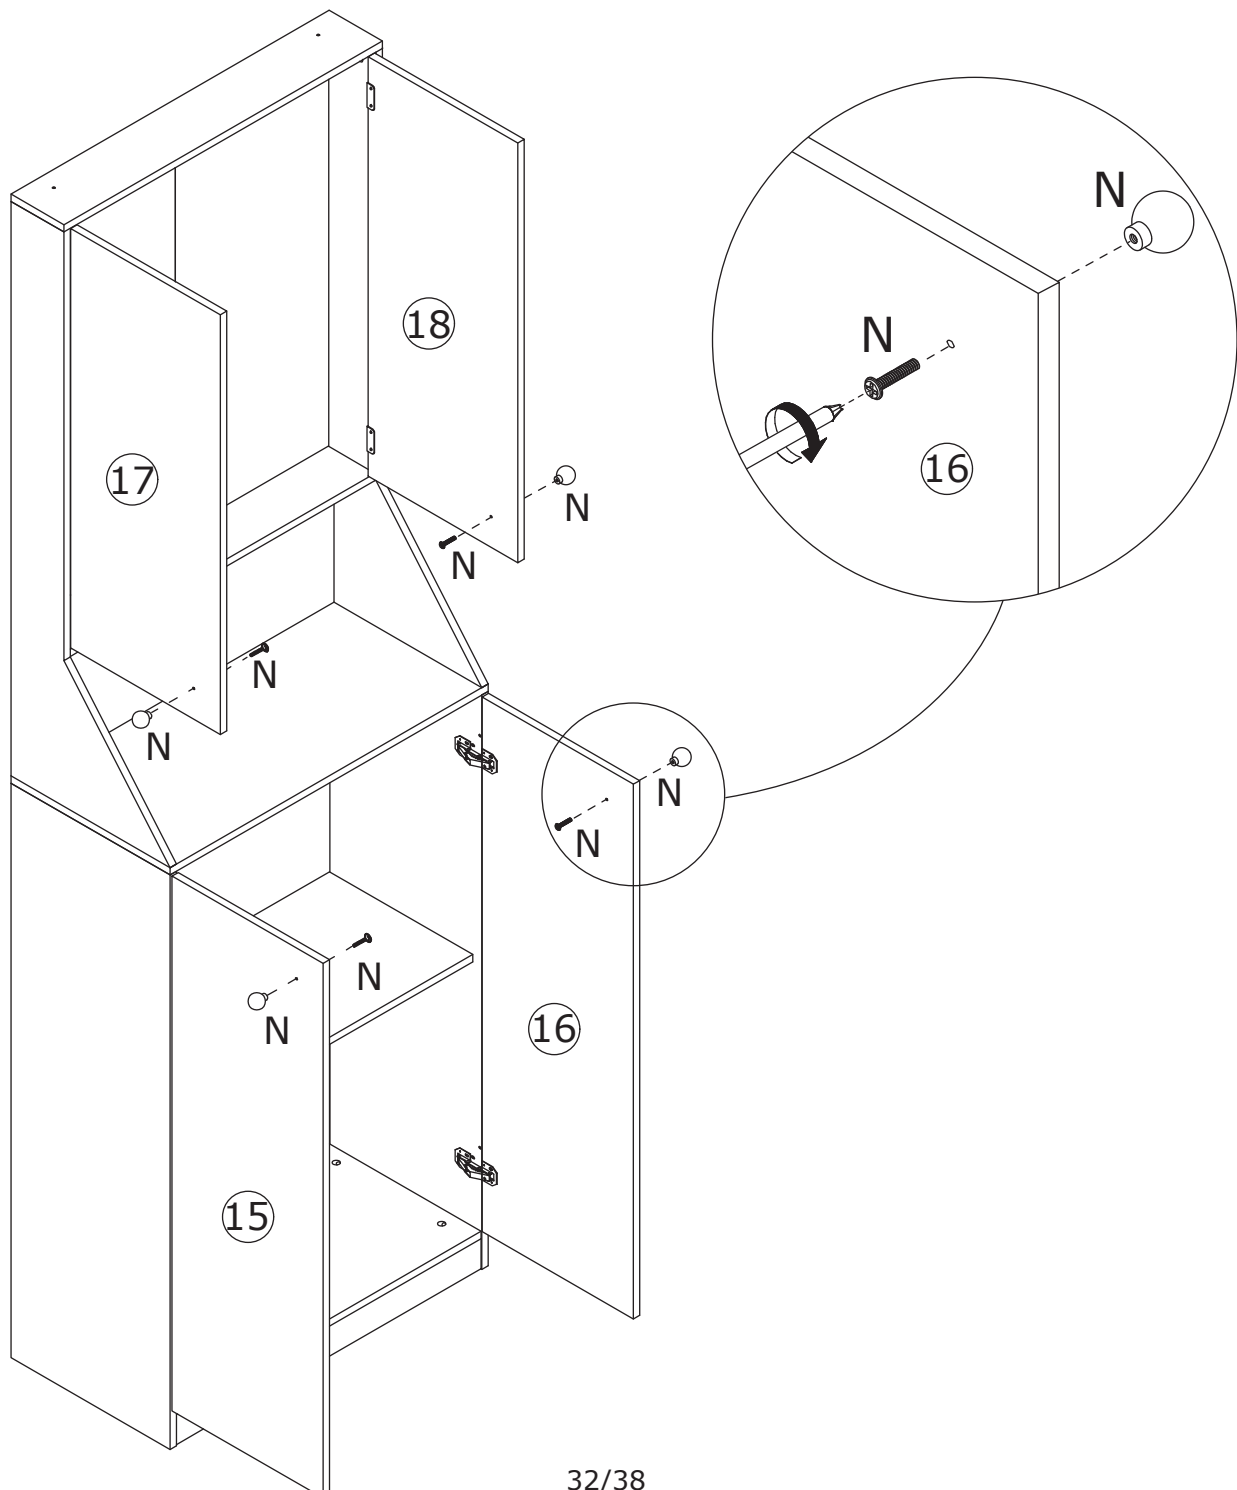 


35

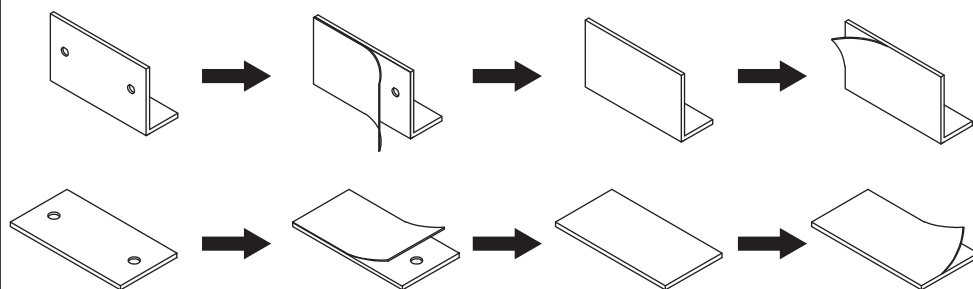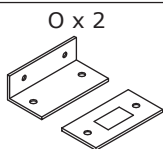  


Apply adhesive to the back of accessory (O) and remove the adhesive film.

  Attach part (O) to the assembly unit.

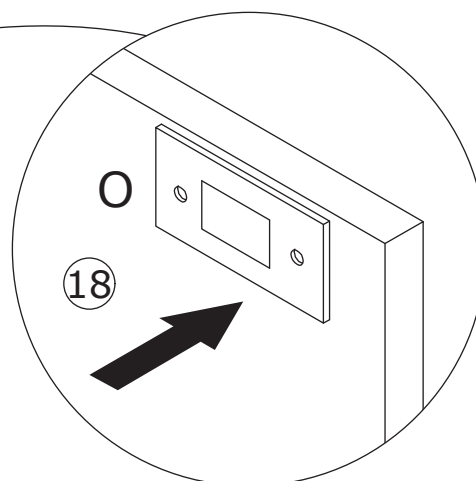
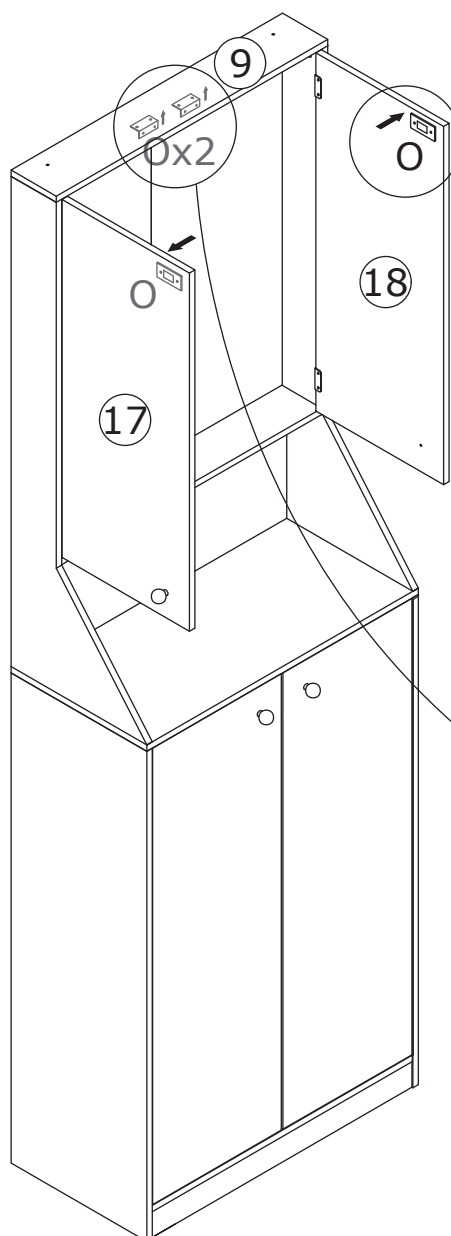


 Press and stick tightly on the back of the door panels.




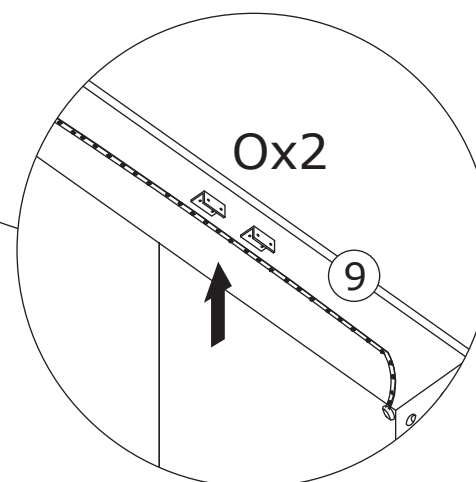


Press an stick tightly at the bottom of the top panel.

  36

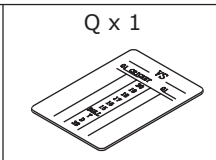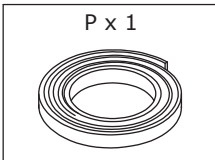


Stick the scoreboard onto panel 17.

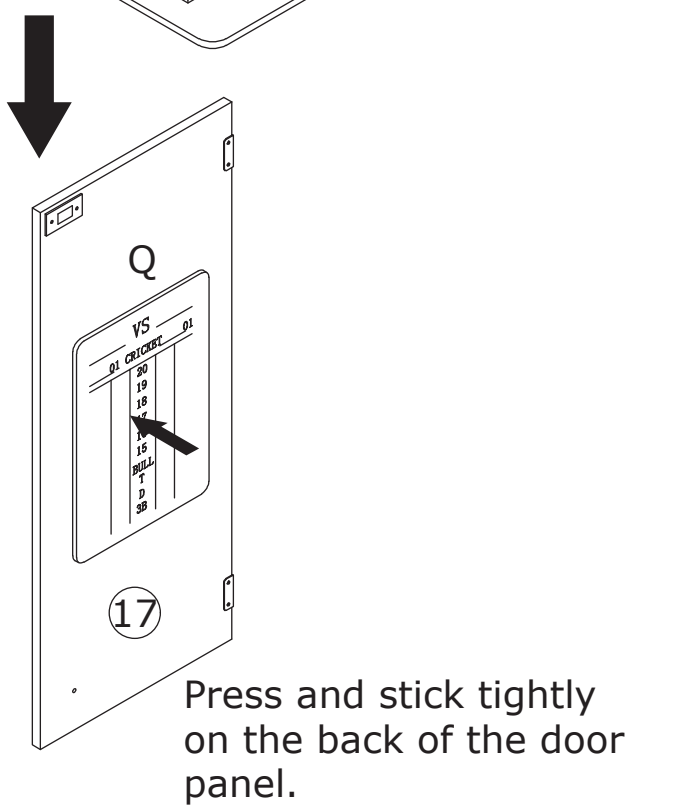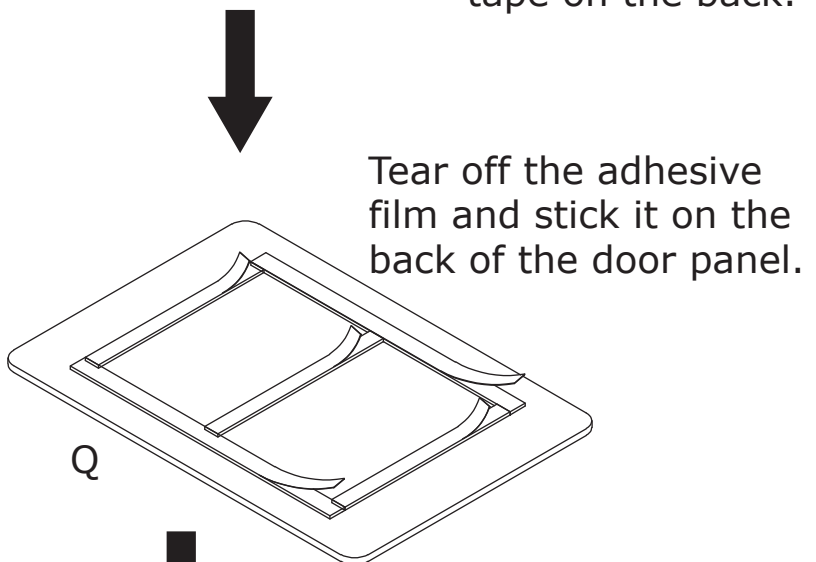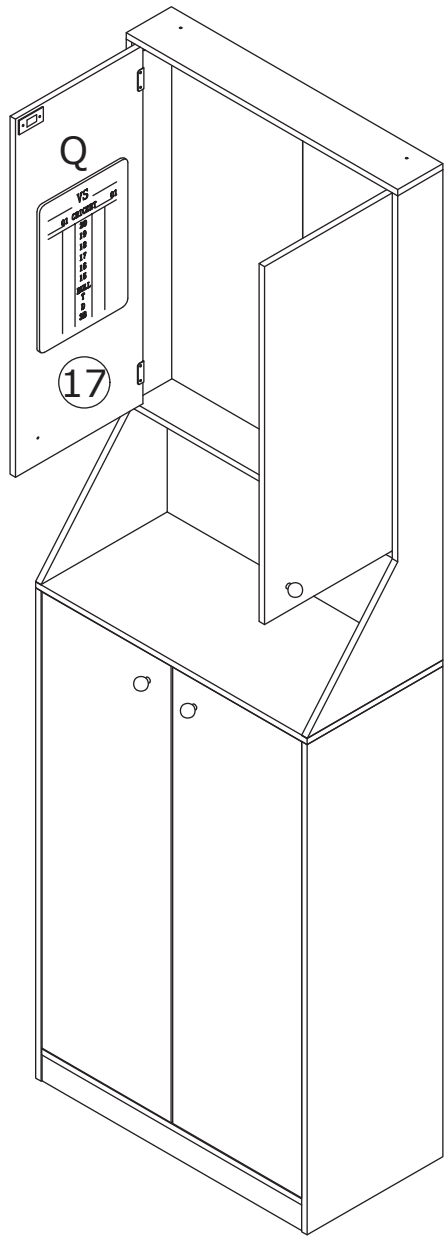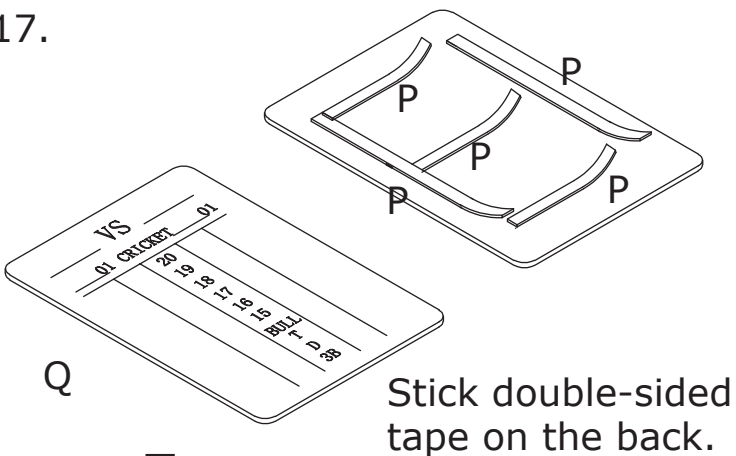    



37



 
Stick the scoreboard onto panel 18.

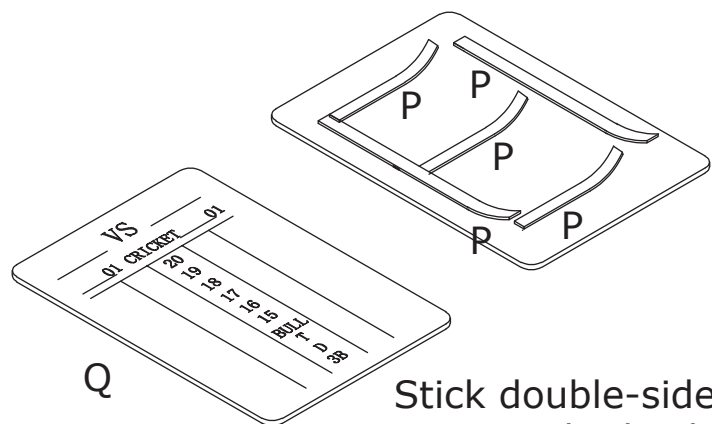

Stick double-sided tape on the back.

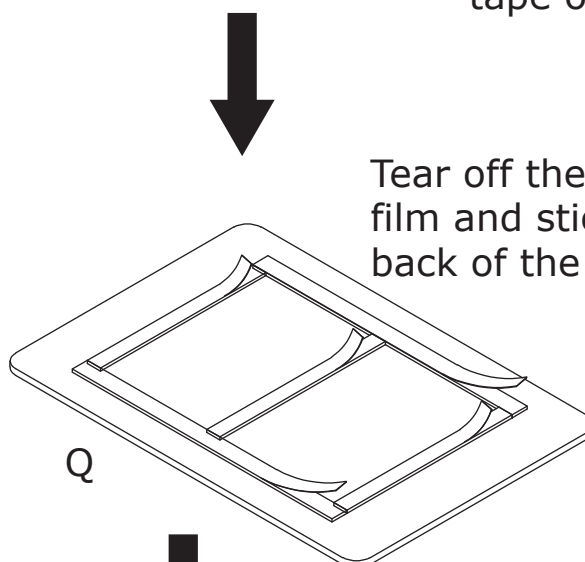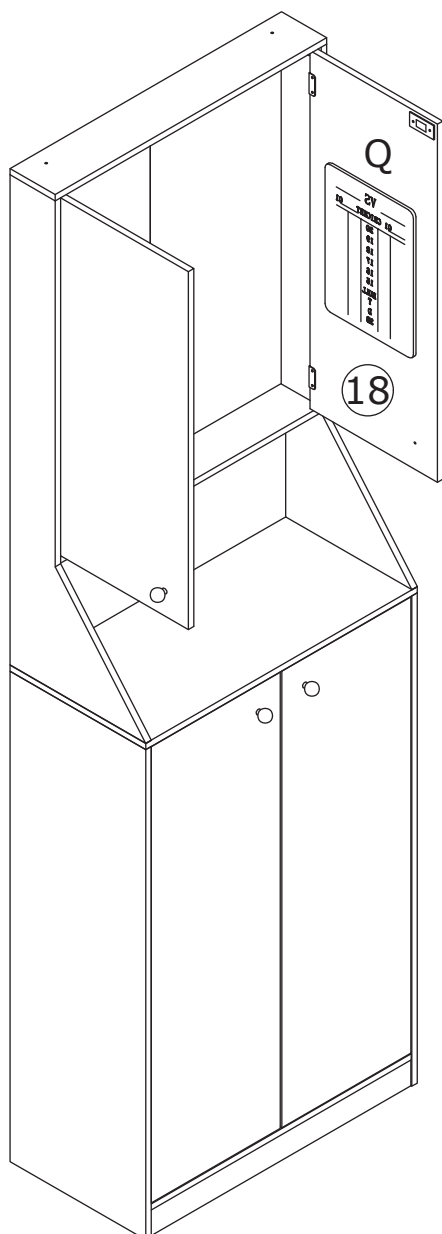  


 Tear off the adhesive film and stick it on the back of the door panel.

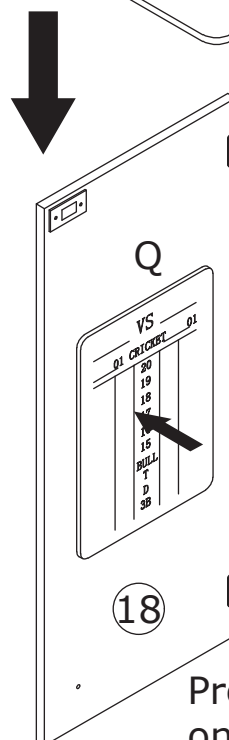

Press and stick tightly on the back of the door panel.

 
38

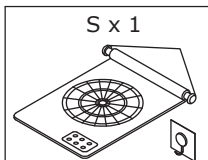

Stick the dartboard hook onto the back panel of the cabinet and hang the dartboard.



Wie in der Abbildung gezeigt, kleben Sie den Dartscheiben-Haken an die Rückwand des Schrankes und hängen Sie die Dartscheibe auf.

 Comme illustré, collez le crochet de la cible de fléchettes sur le panneau arrière du meuble et accrochez la cible.

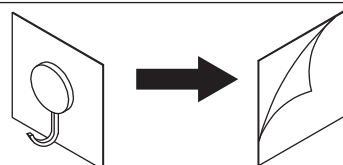


Tear off the adhesive backing of the hook and stick the hook onto the back panel.


 
 
Hang the dart board on the hook.

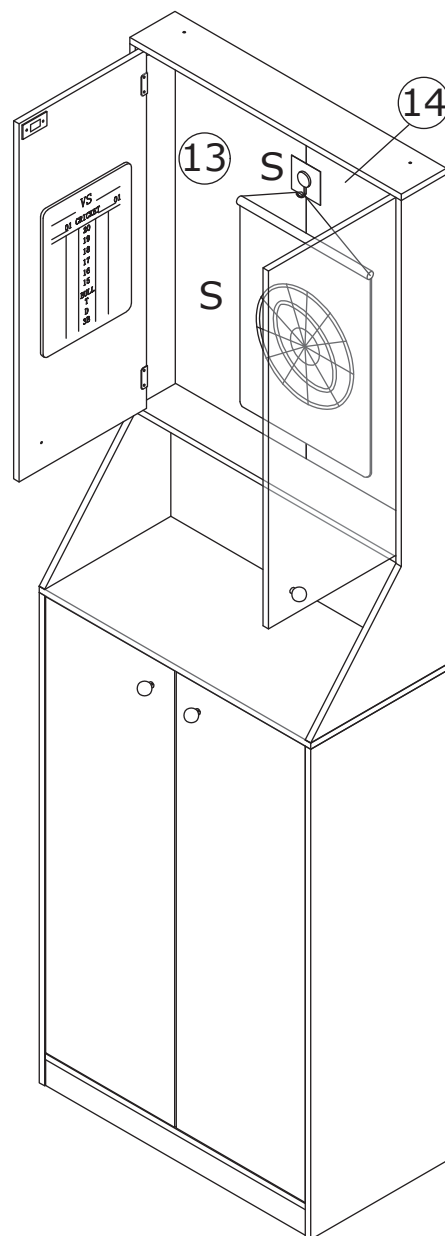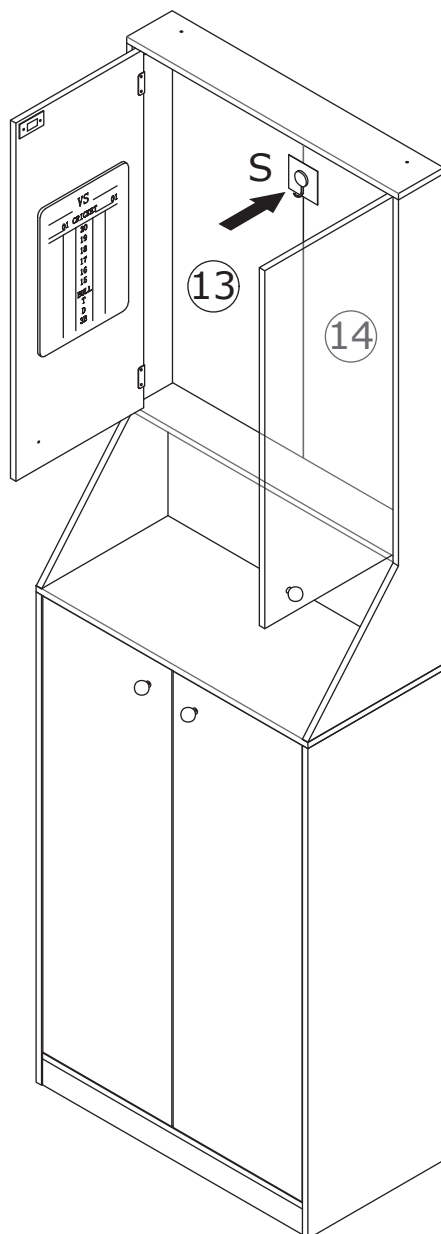

39

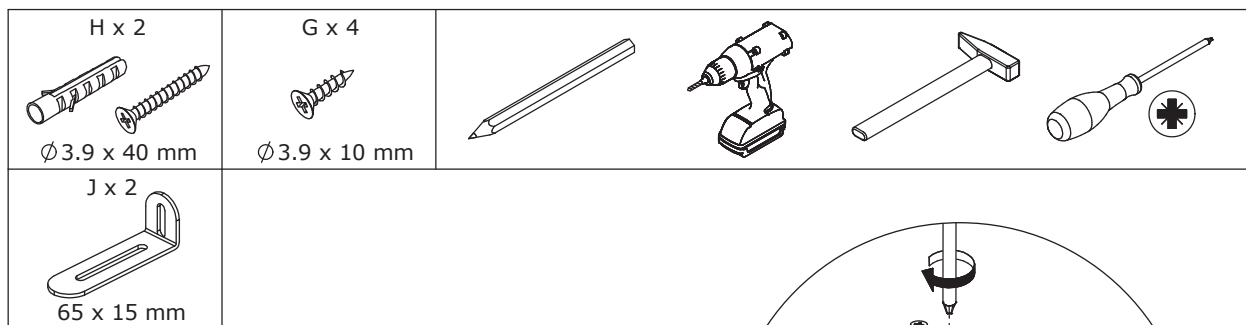 


Install the anti-tip device.

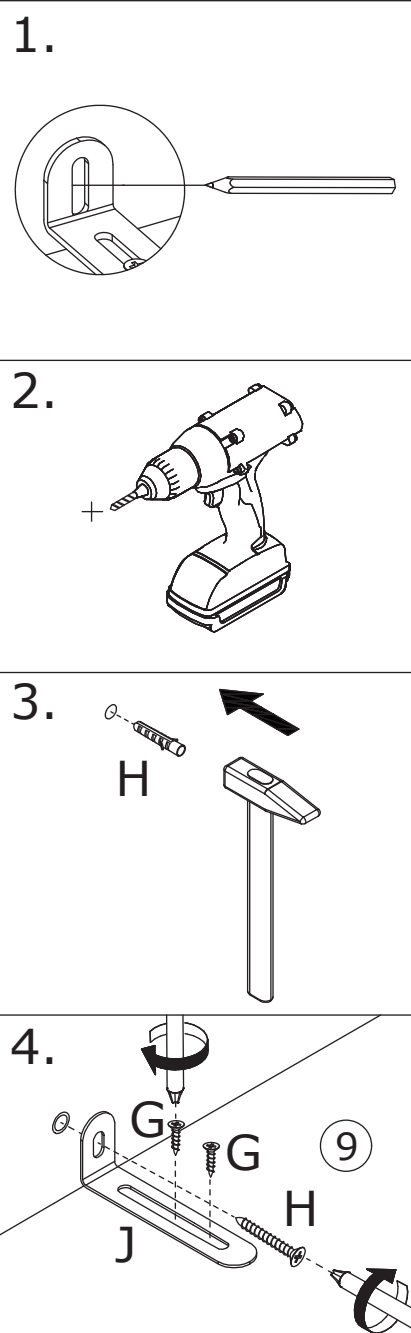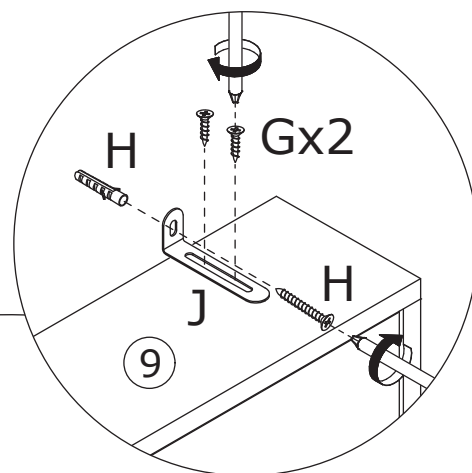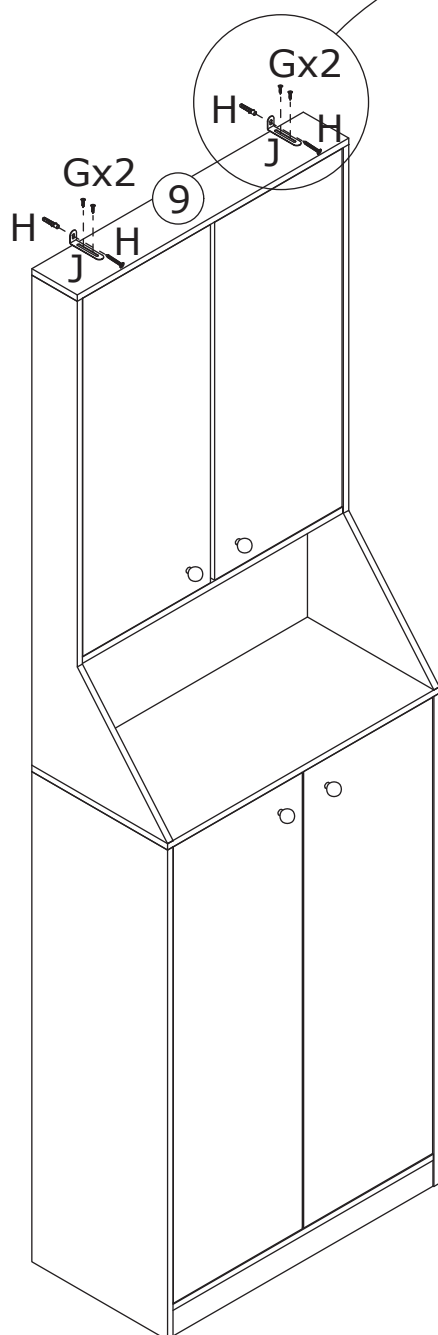   



Adjust the light brightness in a single-color mode; adjust the flashing speed in strobe mode.

 16 Static Color Options

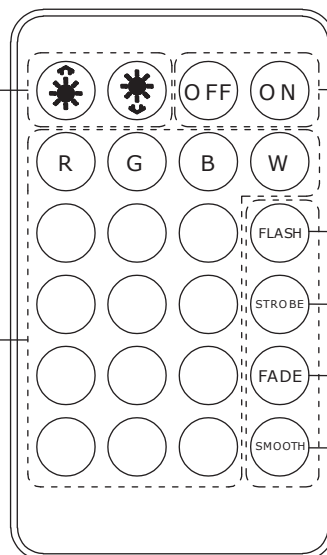

Turn off or on

  Three-color pulse
Seven colors gradually brighten and fade
All fade out & fade in
7-color shifting

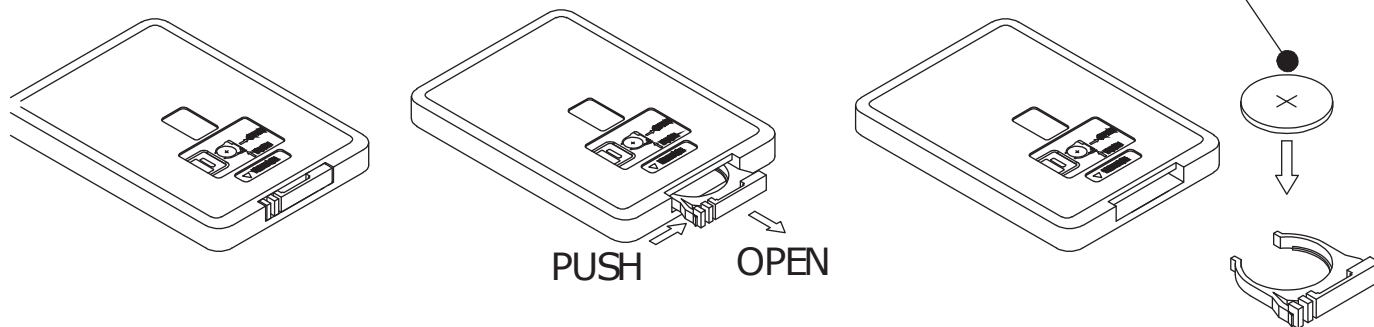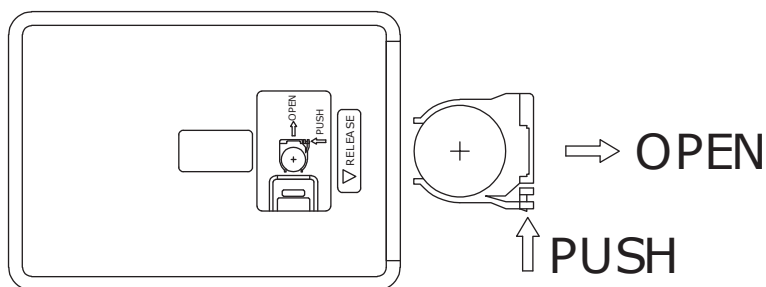

Please bring one CR2005 battery with you

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068