

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223583
Dresser

ITEM: **223583**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A DRESSER

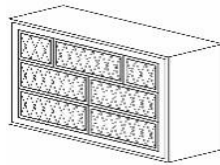

1PC

B LEG



4PCS

C LEG SUPPORT



1PC

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223583**

ASSEMBLY INSTRUCTIONS

STEP 1

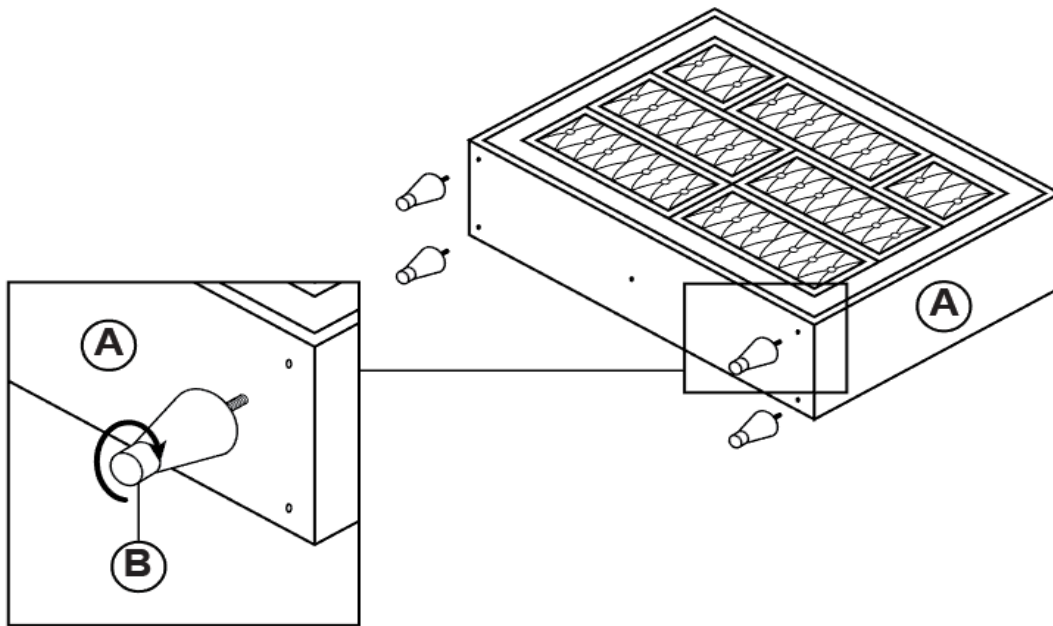

 STEP 2

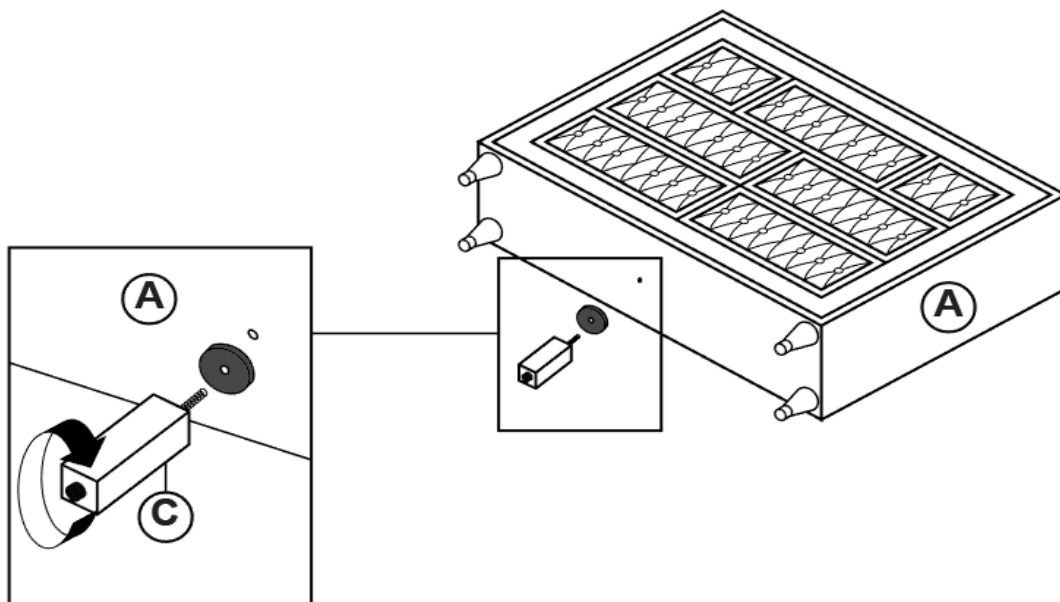


ITEM: **223583**





ASSEMBLY INSTRUCTIONS

 STEP 3

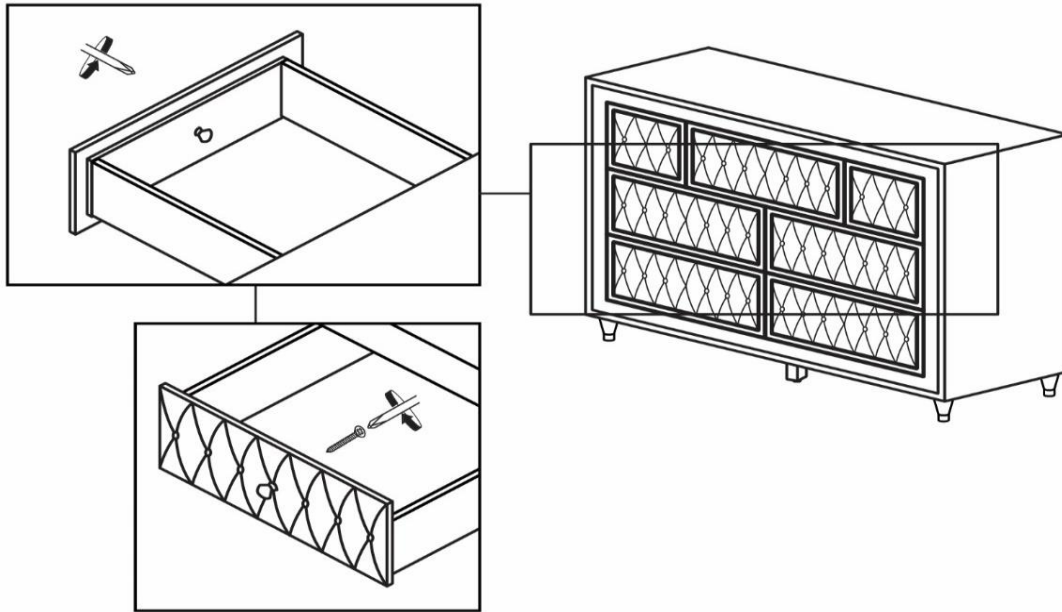

  STEP 4
COMPLETE

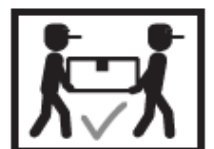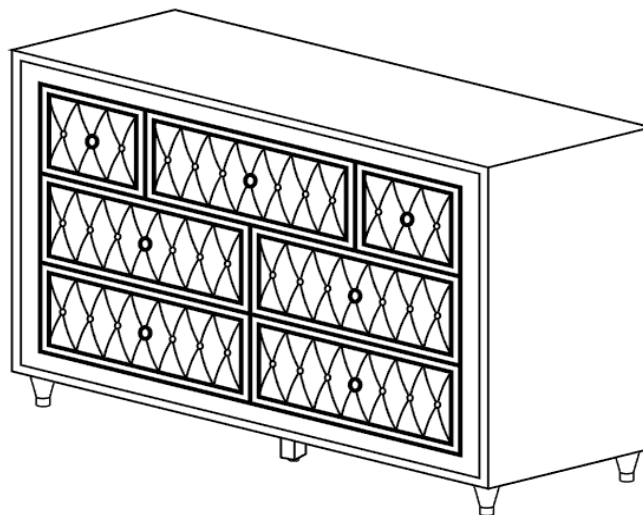

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

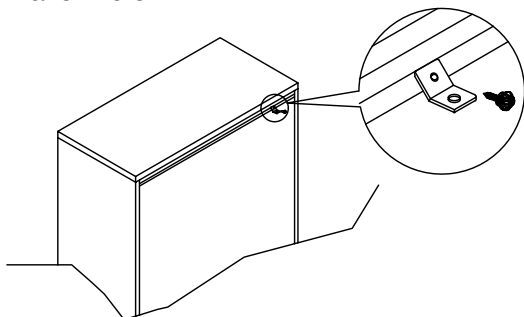



STEP 2

 Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

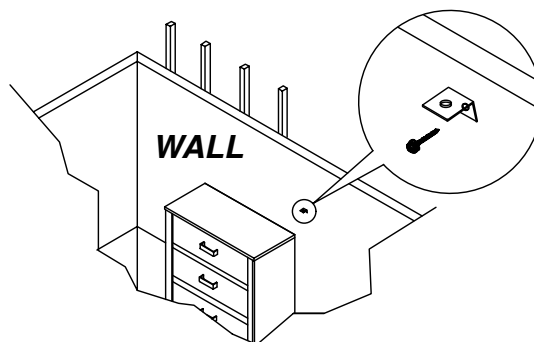

STEP 3

  Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

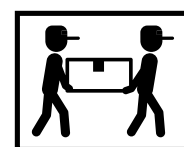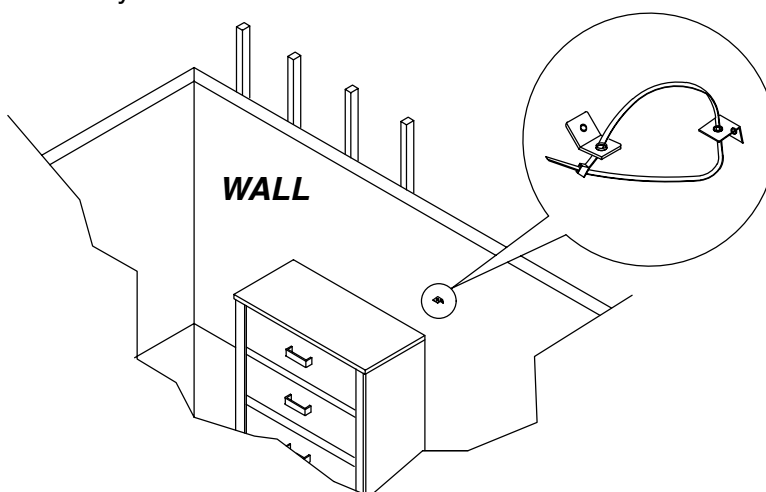

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223583
Dresser

ITEM: **223583**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A DRESSER

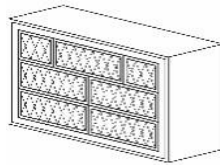

1PC

B LEG



4PCS

C LEG SUPPORT



1PC

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223583**

ASSEMBLY INSTRUCTIONS

STEP 1

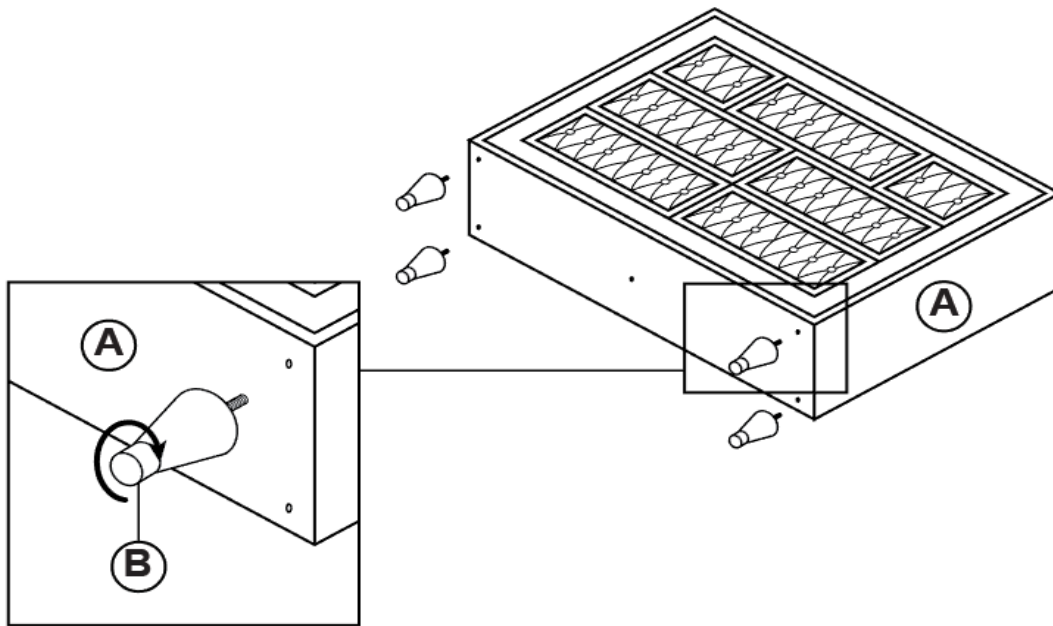

 STEP 2

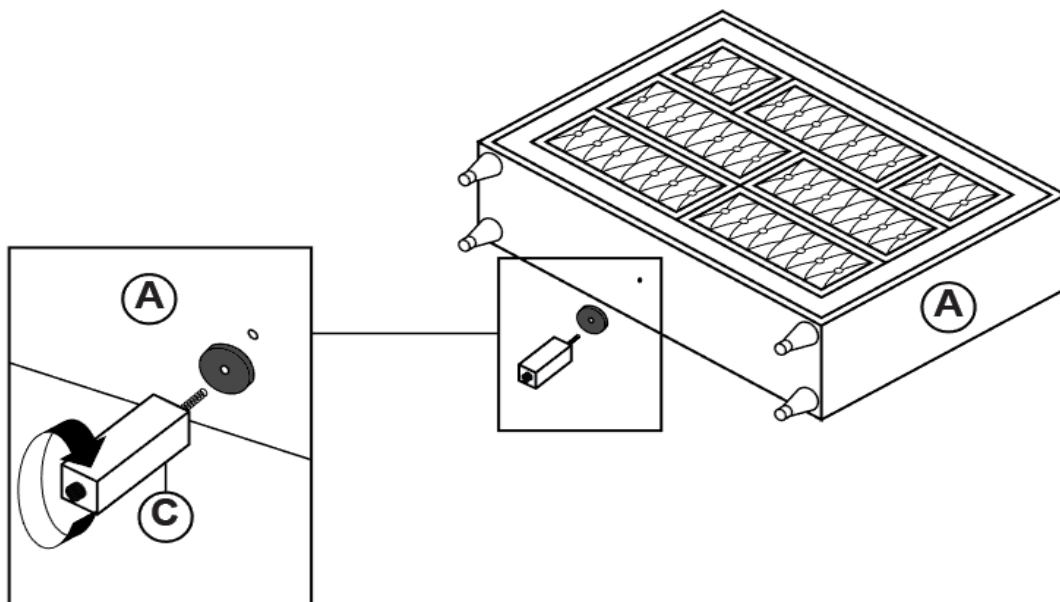


ITEM: **223583**





ASSEMBLY INSTRUCTIONS

 STEP 3

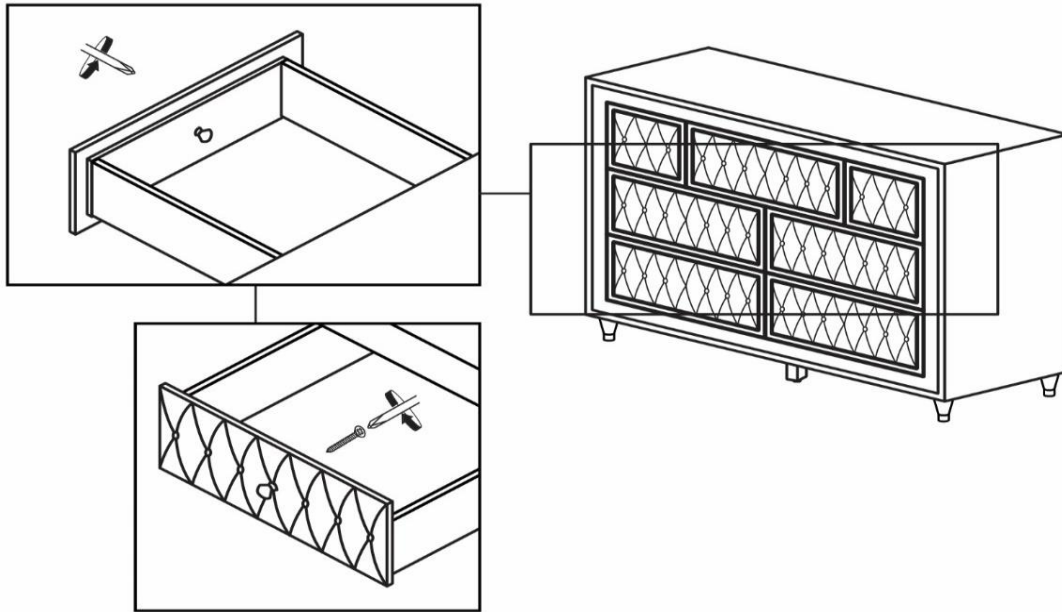

  STEP 4
COMPLETE

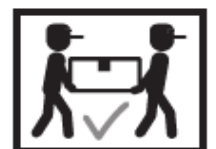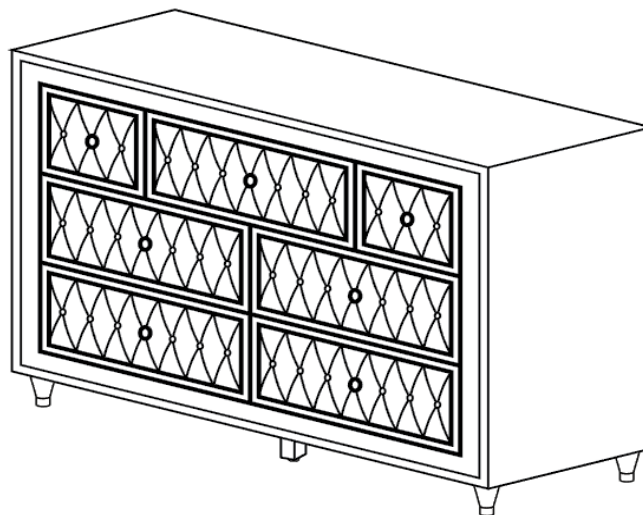

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

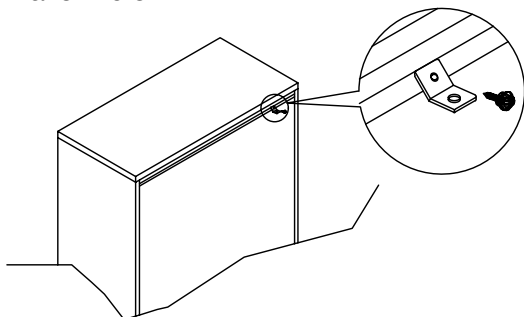



STEP 2

 Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

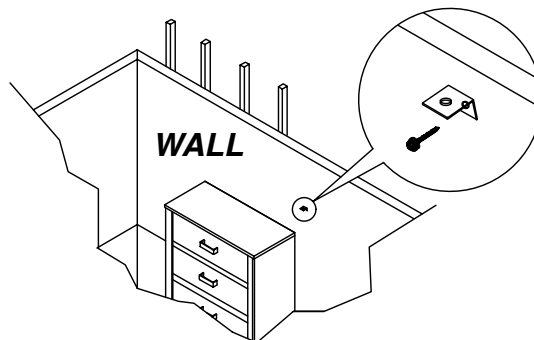

STEP 3

  Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

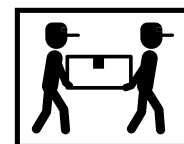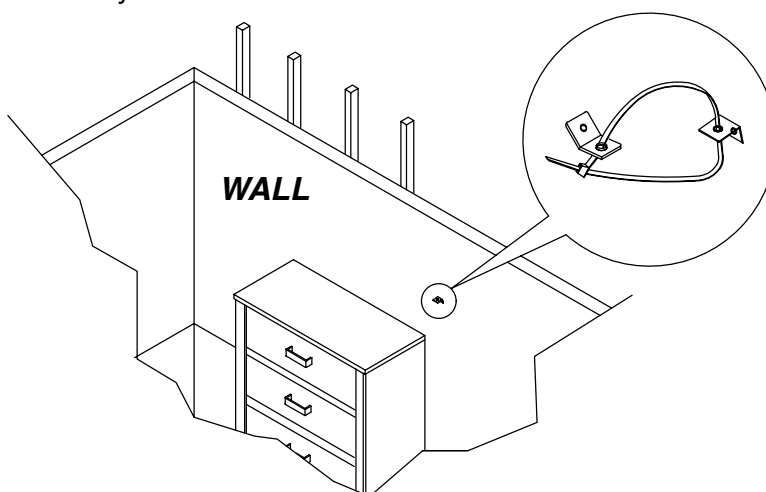


ITEM: **223583**



Inner Size of Drawer A : 11.75"W X 12.75"D X 5.00"H X 0.25"T

 Inner Size of Drawer B : 26.00"W X 12.75"D X 5.00"H X 0.25"T

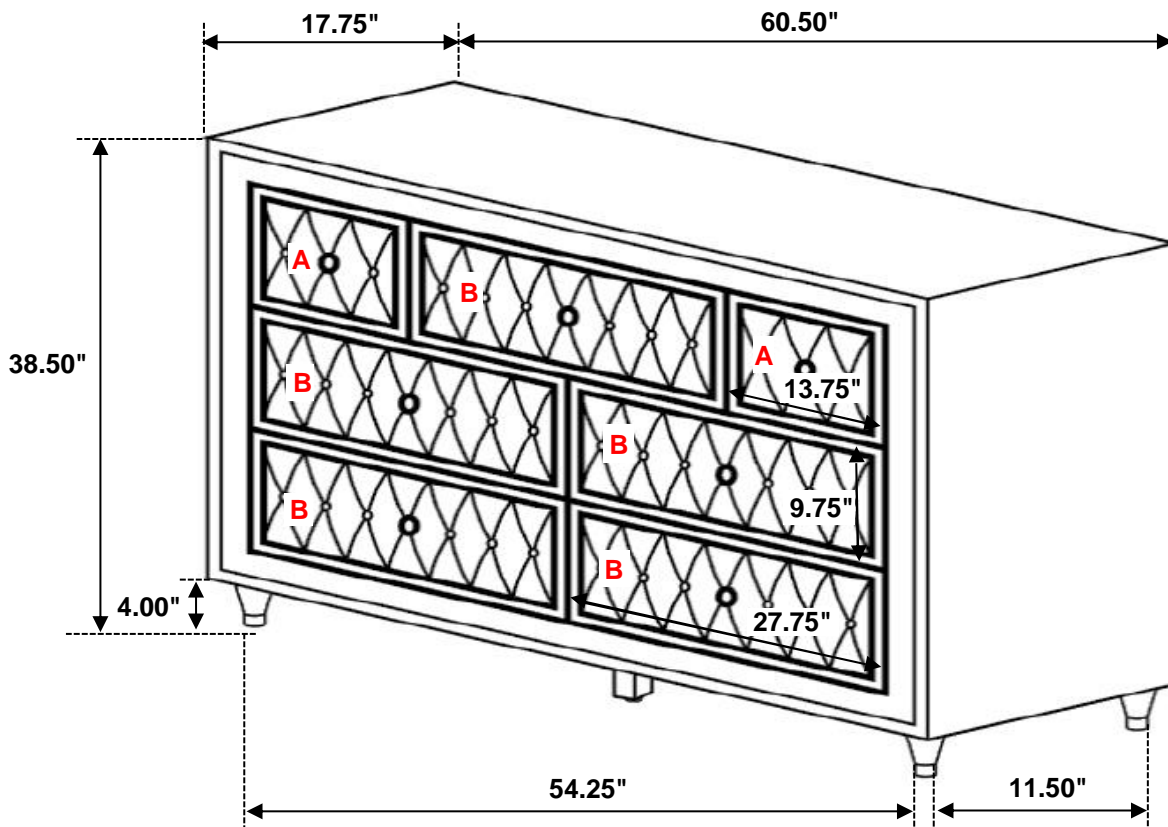

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223584
Mirror

ITEM: **223584**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A MIRROR



 
1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

C DRESSER
* FROM BOX ITEM# 223523

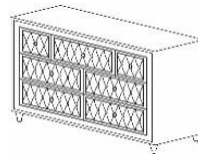

1PC

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(Φ6 - ZINK)



1PC

2 BOLT
(Φ6 X 40mm - RBW)



8PCS

3 LOCK WASHER
(Φ6 - RBW)



8PCS

4 MEDIUM FLAT WASHER
(Φ7 X 19mm X 2.0 - RBW)



8PCS

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223584**

ASSEMBLY INSTRUCTIONS



STEP 1

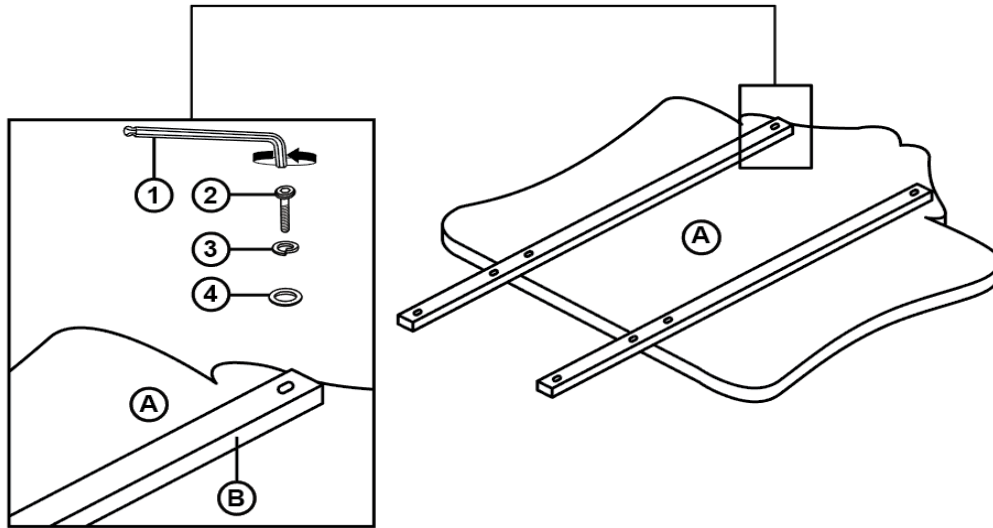

 STEP 2

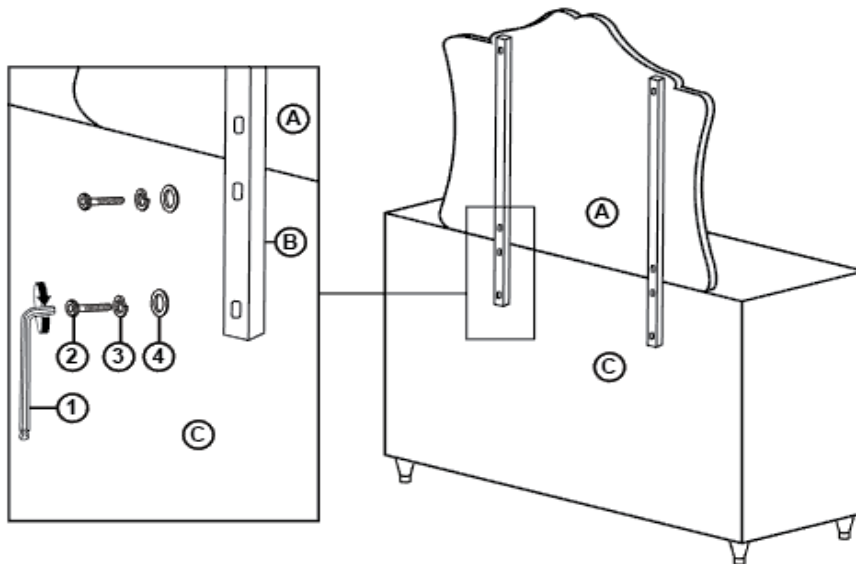


  STEP 3
COMPLETE

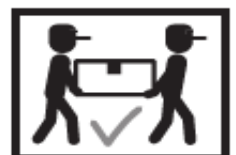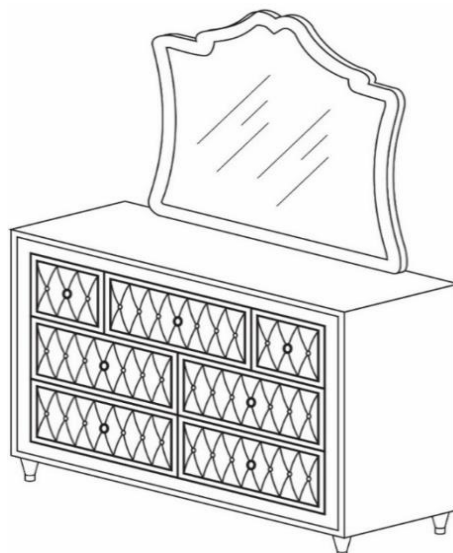

ITEM: **223584**

 COASTER
FINE FURNITURE

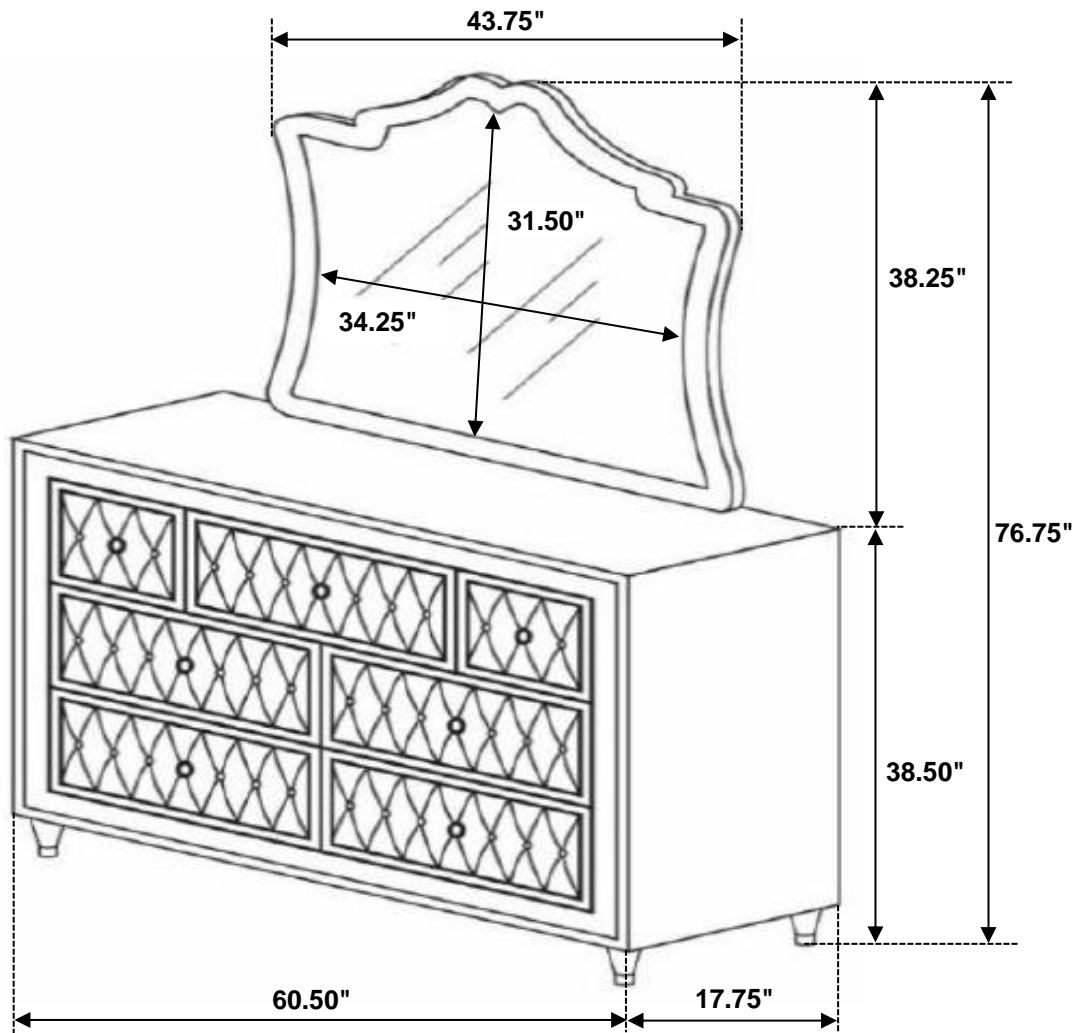

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223584
Mirror

ITEM: **223584**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A MIRROR



 
1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

C DRESSER
* FROM BOX ITEM# 223523

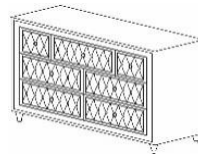

1PC

 
HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(Φ6 - ZINK)



1PC

2 BOLT
(Φ6 X 40mm - RBW)



8PCS

3 LOCK WASHER
(Φ6 - RBW)



8PCS

4 MEDIUM FLAT WASHER
(Φ7 X 19mm X 2.0 - RBW)



8PCS

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223584**

ASSEMBLY INSTRUCTIONS



STEP 1

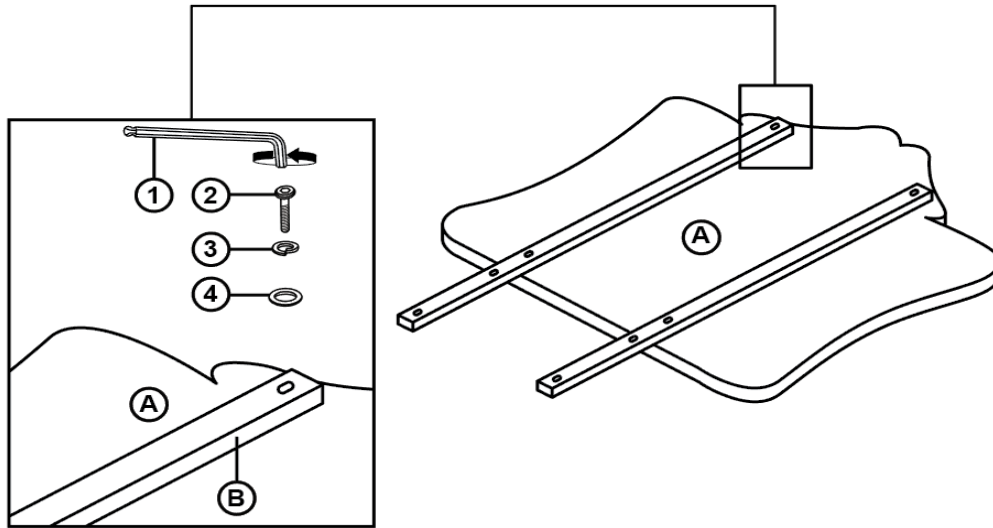

 STEP 2

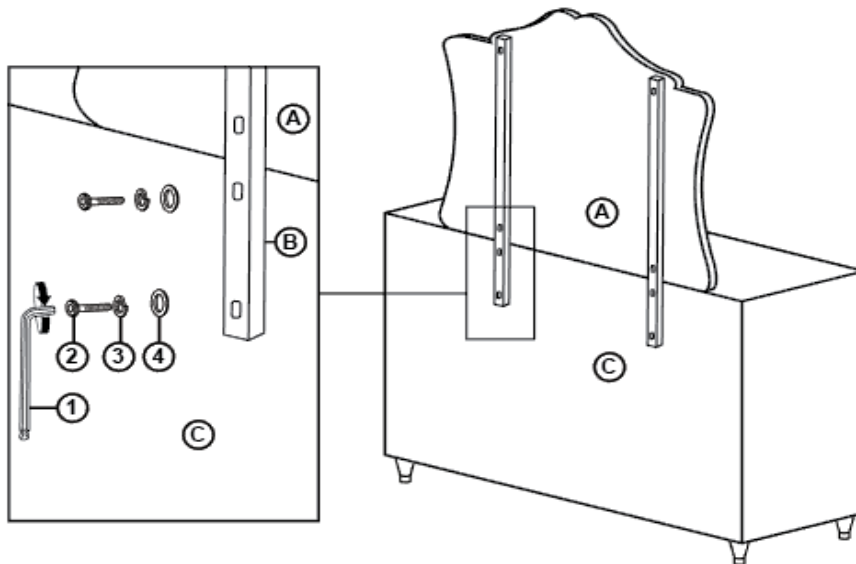


  STEP 3
COMPLETE

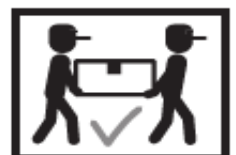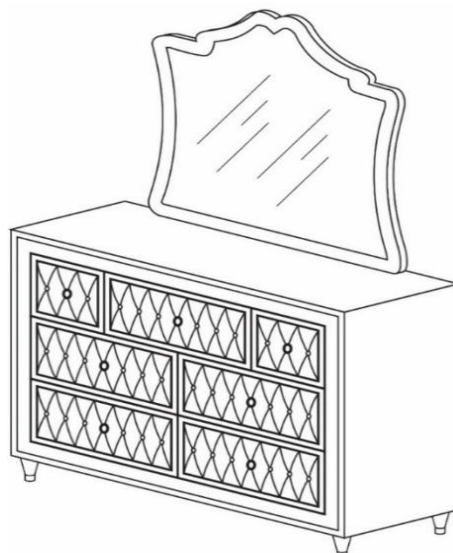

ITEM: **223584**

 COASTER
FINE FURNITURE

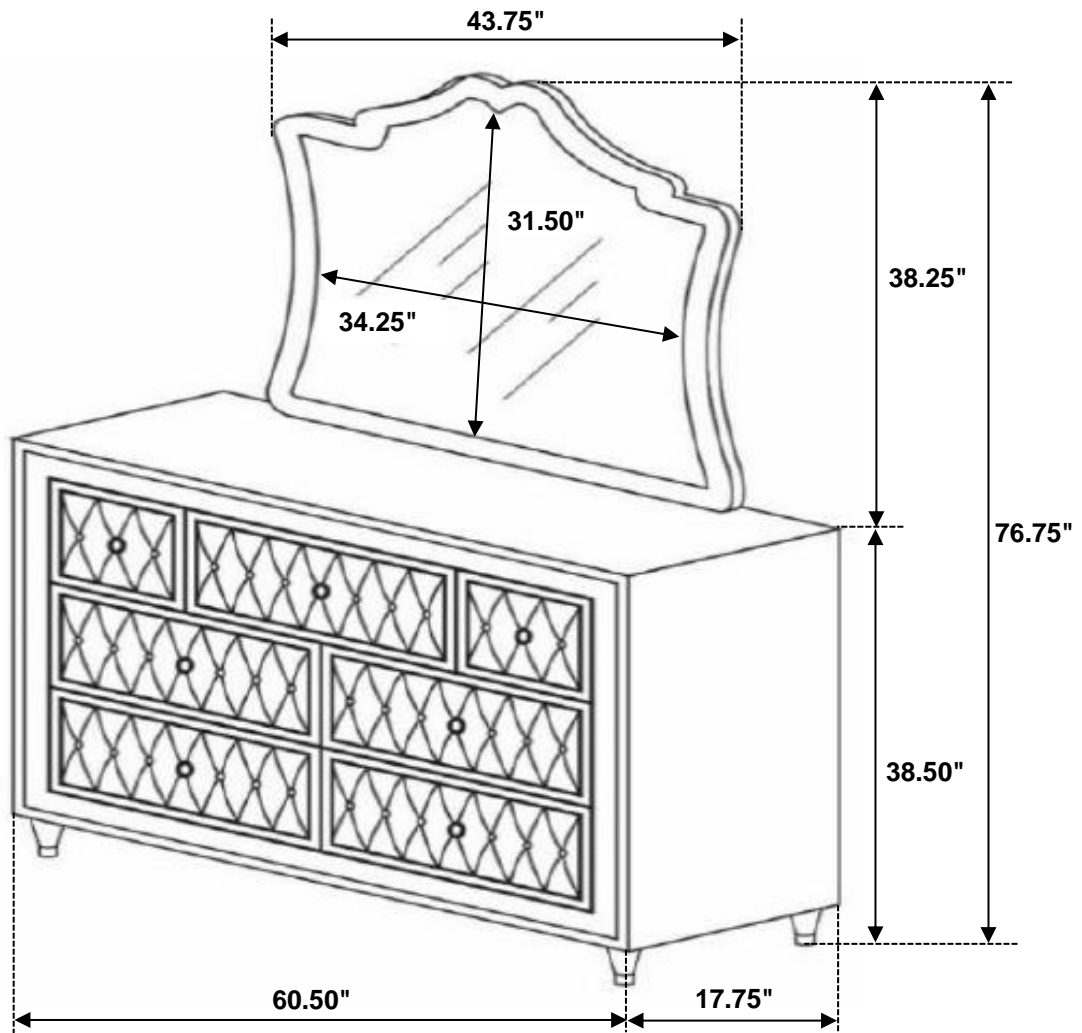

Note : Dimension tolerance $\pm 5\%$