 


Indoor Space Heater

Instruction Manual

AM-QNQ4HGT

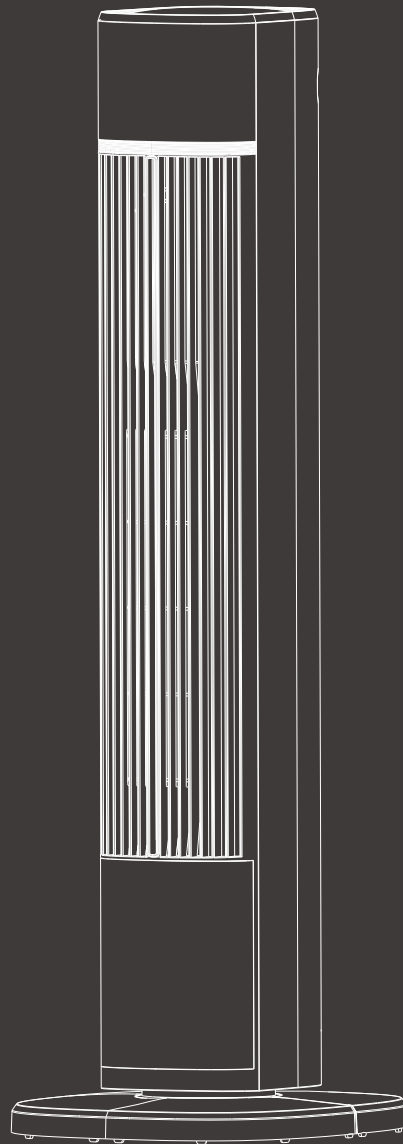

⌚ EST 9:00AM--17:00PM

✉ HJ-Customer-Service@outlook.com

☎ 6269443420 | 6267435564

PRECAUTIONS

- To ensure safe use and avoid injury and property loss to you or others, please be sure to follow the safety precautions below. Improper use or failure to observe these warnings may result in serious accidents.
- This product is not intended for use by unattended young children or individuals with disabilities, nor should it be used as a toy. Such misuse may lead to accidents.

【WARNING】

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

【NOTICE】

Indicates other important safety information.

【CAUTION】

Indicates a hazardous situation that may result in minor injury or property damage.

【WARNING】

 The power supply for this unit is 120V~. Please ensure that the power socket has a rated current of at least 15A. If it does not meet this requirement, the socket must be replaced before use.

 Before use, check the power cord and plug for damage. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid potential hazards.

 Do not use the heater near flammable or explosive materials, heat-sensitive items (such as those that may deform, discolor, or deteriorate), or in areas with heavy dust.

 Do not use the heater in areas where there are hanging objects that may fall. During use, place the unit on a stable, level surface, and do not tip or tilt it.

 Do not insert metal wires or any foreign objects into the openings of the unit to avoid the risk of electric shock.

 Do not place the power cord near the air outlet.

 The product must not be used as insulation or heating equipment for animals or plants.

 Do not use plugging or unplugging the power cord as a substitute for the power switch to turn the unit on or off.

 To avoid overheating, do not cover the heater.

 Do not immerse the product in water. Do not use the heater near bathtubs, showers, or swimming pools.

 Do not rinse the unit directly with water. Use a soft cloth lightly dampened with neutral detergent to gently clean the surface, then wipe it dry. Do not use solvents such as gasoline.

 If the product malfunctions, turn it off immediately and unplug the power cord. Please contact our after-sales service for assistance. Unauthorized personnel are strictly prohibited from repairing or modifying the unit.



Do not plug the heater into the same outlet as other high-power electrical appliances. Never move the unit by pulling the power cord.



This appliance contains hot, arcing, or sparking components. Do not use in areas where gasoline, paint, or flammable/explosive liquids are used or stored. Keep the unit away from heated surfaces and open flames.



To prevent hazards caused by false resetting of the thermal cut-out, the appliance must not be powered through an external switching device, such as a timer, nor connected to a circuit that is regularly switched on and off by a common control device.



Do not direct the heater toward a power outlet, and do not place it directly beneath one.



CAUTION



Before use, please check whether the voltage used is the same as the voltage marked on the product.



To prevent fire hazards caused by covering or improper placement, the heater must not be used with a timer, programmable timer, or any other device that automatically switches the power on.



Before cleaning this unit, make sure to turn off the power switch and unplug it, and wait until it is completely cooled before cleaning.



Children, the elderly who are unable to care for themselves, and patients should use the product only under adult supervision to prevent accidents.



Whether in use or not, keep the product at least 60 inches away from open flames and avoid direct sunlight.



When the product is in use, the power cord should be routed behind the unit. Placing it in front may cause it to overheat, become damaged, or even result in a safety hazard.



To avoid burns, do not allow bare skin to come into direct contact with the air outlet during use.



【NOTICE】



This product is only suitable for indoor use and not for outdoor use.



After cleaning or maintenance, make sure the unit is completely dry before powering it on or storing it.

 


Please unplug the power cord when not in use for a long time. It is recommended to pack it in the original packaging and store it in a dry place.




Avoid impacts or scratches to prevent damage to the surface coating and potential rusting.

Installation Safety Tips

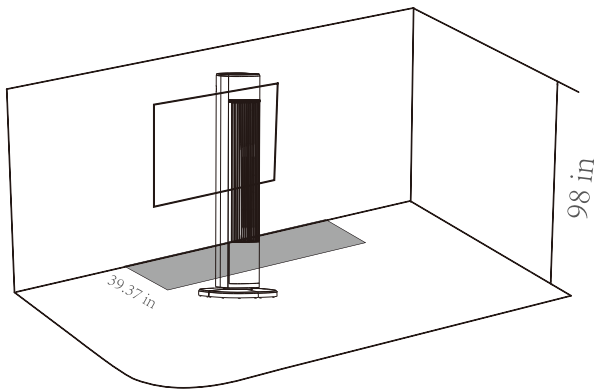

Installation Clearance from Bathtub

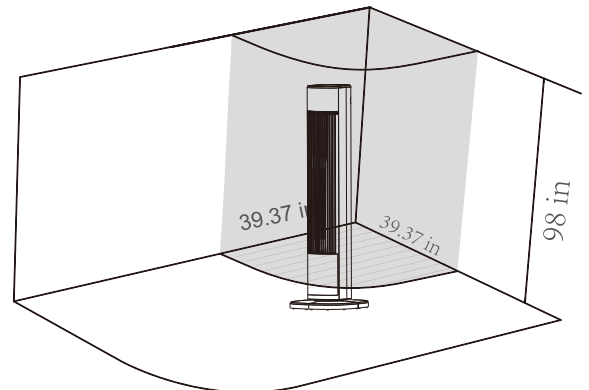 

Installation Clearance from Shower

 
Other Precautions During Use

- If the product suddenly powers off and becomes unusable, unplug the power cord and allow the unit to stand and cool down before plugging it in again to resume normal operation. If the unit still does not operate properly, immediately turn it off, unplug the power cord, and contact our after-sales service for assistance. Unauthorized personnel are strictly prohibited from repairing or modifying the unit.
- The cold air setting is used solely to cool the heating element.
- Always plug the heater directly into a wall outlet. Do not use with extension cords or relocatable power taps (such as power strips).


PLEASE SAVE THESE INSTRUCTIONS AND READ THIS MANUAL CAREFULLY BEFORE USE.

Product Introduction

Product Diagram

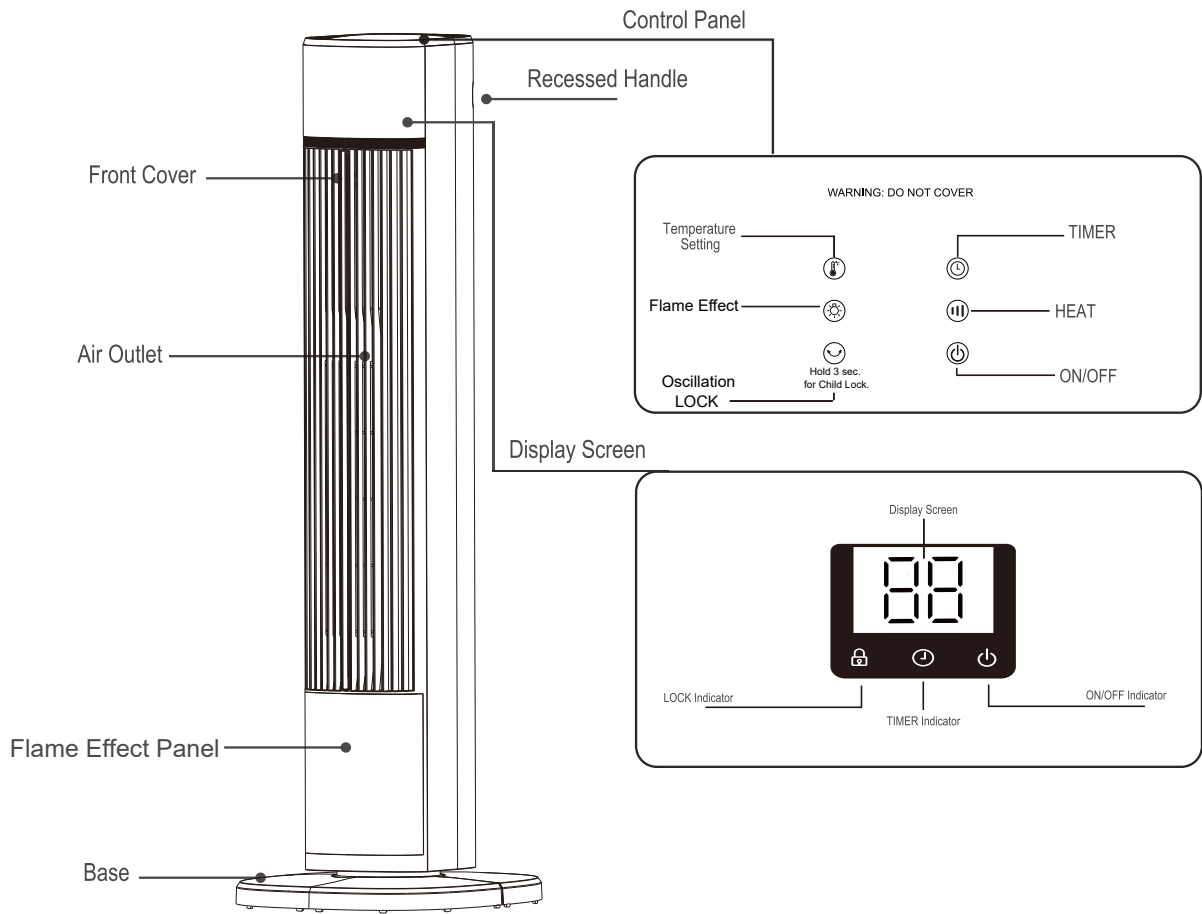

Parts List

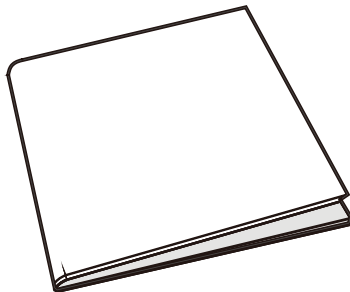 

Instruction Manual x 1



Remote Control x 1

The buttons on the control panel function the same as the corresponding buttons on the remote control.

How to use

Function Instructions

The base must be installed before use. Remove all packaging materials and place the product upright on a flat, stable floor.

1 Pre-startup Inspection

- Check if the power cord is intact.
- The product operates on a 120V~ power supply. Before use, confirm that the power socket's rated current meets requirements and that it has proper grounding; otherwise, replace the socket.

2 ON/OFF

- Plug in the power cord. Press the power button to turn on the heater. The default setting is 1d (low heat). Press the power button again to turn off the heater. The fan will continue running for 15 seconds before stopping.

3 HEAT

- Press the HEAT button to cycle through four settings: low heat (1d), high heat (2d), ECO Mode and natural wind (F).

4 Oscillation

- Press the Oscillation button to turn on oscillation; the heater oscillates in a horizontal direction. Press again to turn the oscillation off.

5 LOCK

- Press and hold the Oscillation button for 3 seconds to lock/unlock the heater control panel.

6 TIMER

- Press the TIMER button to set the timer for 1-15 hours. The display will flash three times to confirm the setting. Press the TIMER button again to cancel the timer function.

7 Flame Effect

- Press the Flame Effect Button to turn the flame effect on or off.

8 Temperature setting

- In heating mode, press  button to adjust the temperature. Each press increases the temperature by 1°F. Press and hold this button or the remote control's +/- button for continuous adjustment. The temperature range is 50 - 95°F. After adjustment, the display will flash for 5 seconds to confirm the setting. The default temperature is 75°F.

9 ECO Mode

- When ECO mode is turned on, heating starts when the ambient temperature falls below **set temperature** and stops when it rises above **set temperature**. This cycle repeats automatically.

 
10 Security Protection

Overheat protection: If the internal temperature becomes too high due to abnormal conditions or improper use, the temperature control system will automatically cut off power to stop the heater. Please unplug the unit. After the unit has cooled down and the abnormal condition has been resolved, reconnect the power to resume normal operation.

Note:

1. When the OFF button is pressed, the fan continues to run for 30 seconds to cool down the internal heating element.
2. The ambient temperature displayed on the screen may not be completely accurate.

Product Assembly

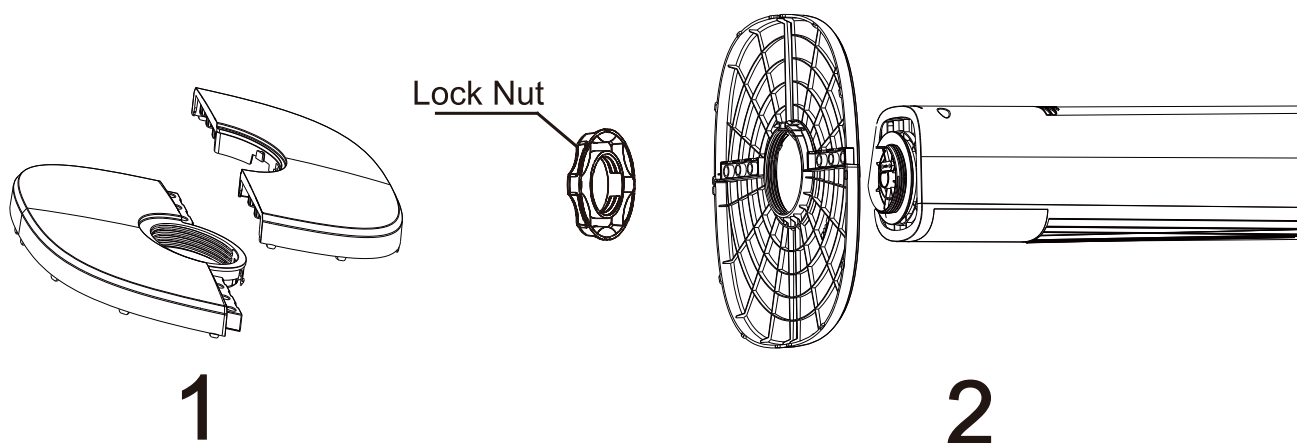


Step 1: Remove all packaging materials and take out the two half-bases and the main unit.

Step 2: Join the two half-bases together by hand.

Step 3: Insert the bottom of the main unit into the center of the assembled base and secure it with the lock nut.

 Replace Battery in the Remote Control

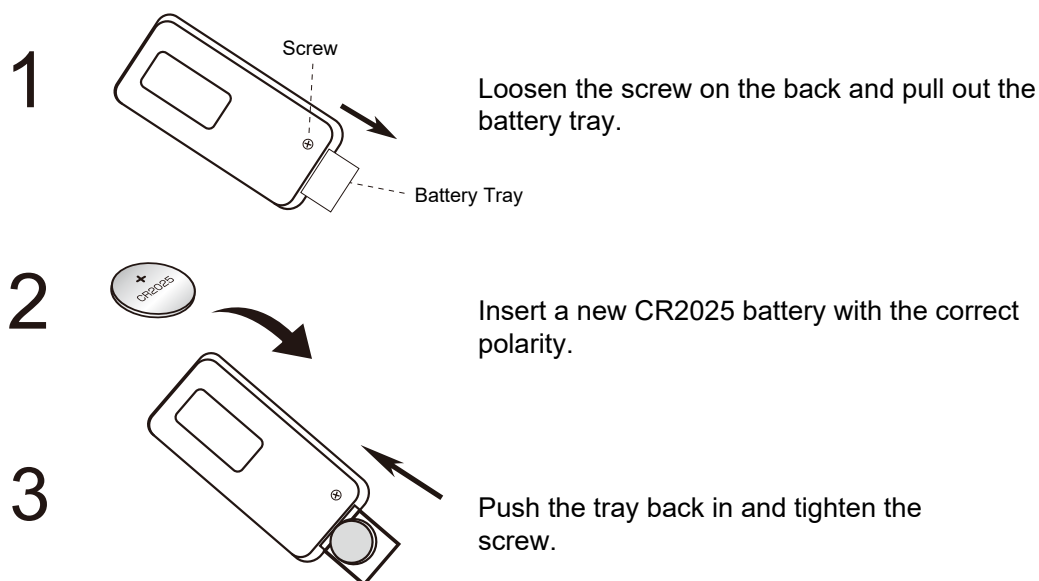

! WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



Battery type CR2025; DC 3V. (Not Included)

Attention

- I. Do not charge this battery.
- II. Please keep the remote control out of reach of children. If someone swallowed the battery, please seek medical attention immediately.
- III. When using the remote control to operate the heater, you need to point the remote control at the display screen. Because the remote control frequency will overlap. To avoid misoperation, please stay away from other electrical appliances when using the remote control.
- IV. Shutting down the unit using the power button or the remote control does not fully disconnect the fan from the power supply.
- V. If not used for a long time, please unplug the power plug; if the remote control is not used for a long time, please remove the battery.

Product Cleaning

Before cleaning this product, you must disconnect the power supply and wait until the product cools down.

After cleaning or maintenance, make sure the unit is completely dry before powering it on or storing it.

Please unplug the power cord when not in use for a long time. It is recommended to pack it in the original packaging and store it in a dry place.

Do not rinse the unit directly with water. Use a soft cloth lightly dampened with neutral detergent to gently clean the surface, then wipe it dry. Do not use solvents such as gasoline.

Avoid impacts or scratches to prevent damage to the surface coating and potential rusting.

Specifications


Product Name	Model NO.	Selectable power(W) and working mode			Rated Voltage	Max. Load Current
		OFF	LOW HEAT	HIGH HEAT		
Indoor Space Heater	AM-QNQ4HGT	0	750W	1500W	120V~	15A

Note: The power supply is 120V~/60Hz AC.

- The performance parameters listed in the table are measured under factory conditions and are for reference only.

Warranty Information

 1. This product is covered by a **one (1)-year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

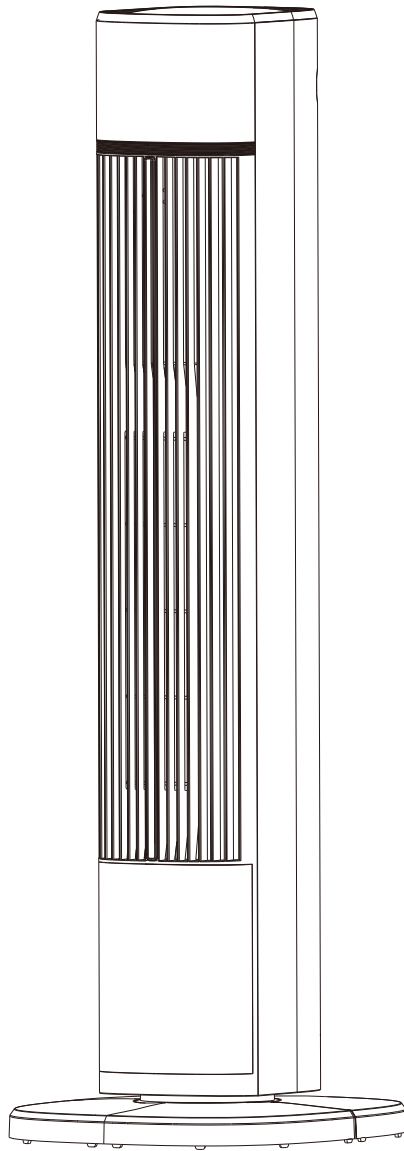

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.