


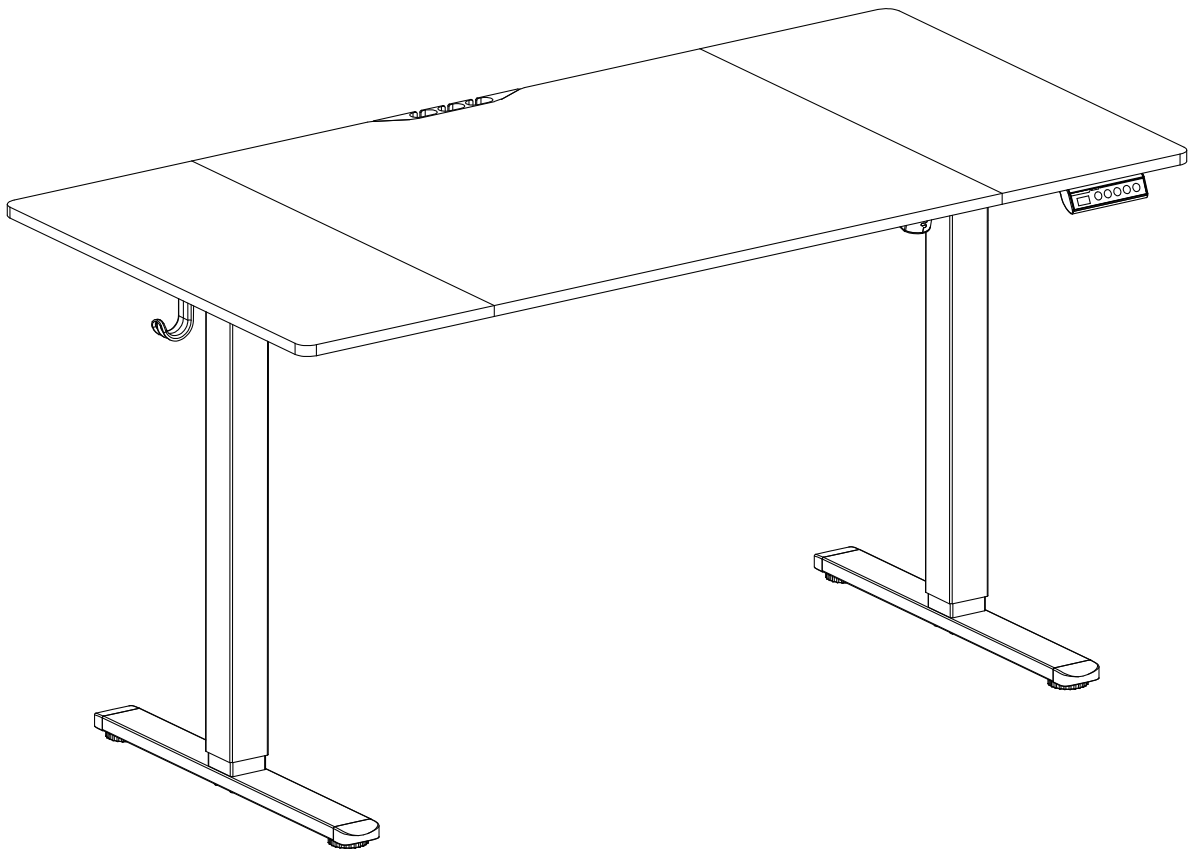

INSTRUCTIONS


Electric Standing Desk










youboleservice@gmail.com

BuUsiness hours 9:00-17:00







ASSEMBLY INSTRUCTION

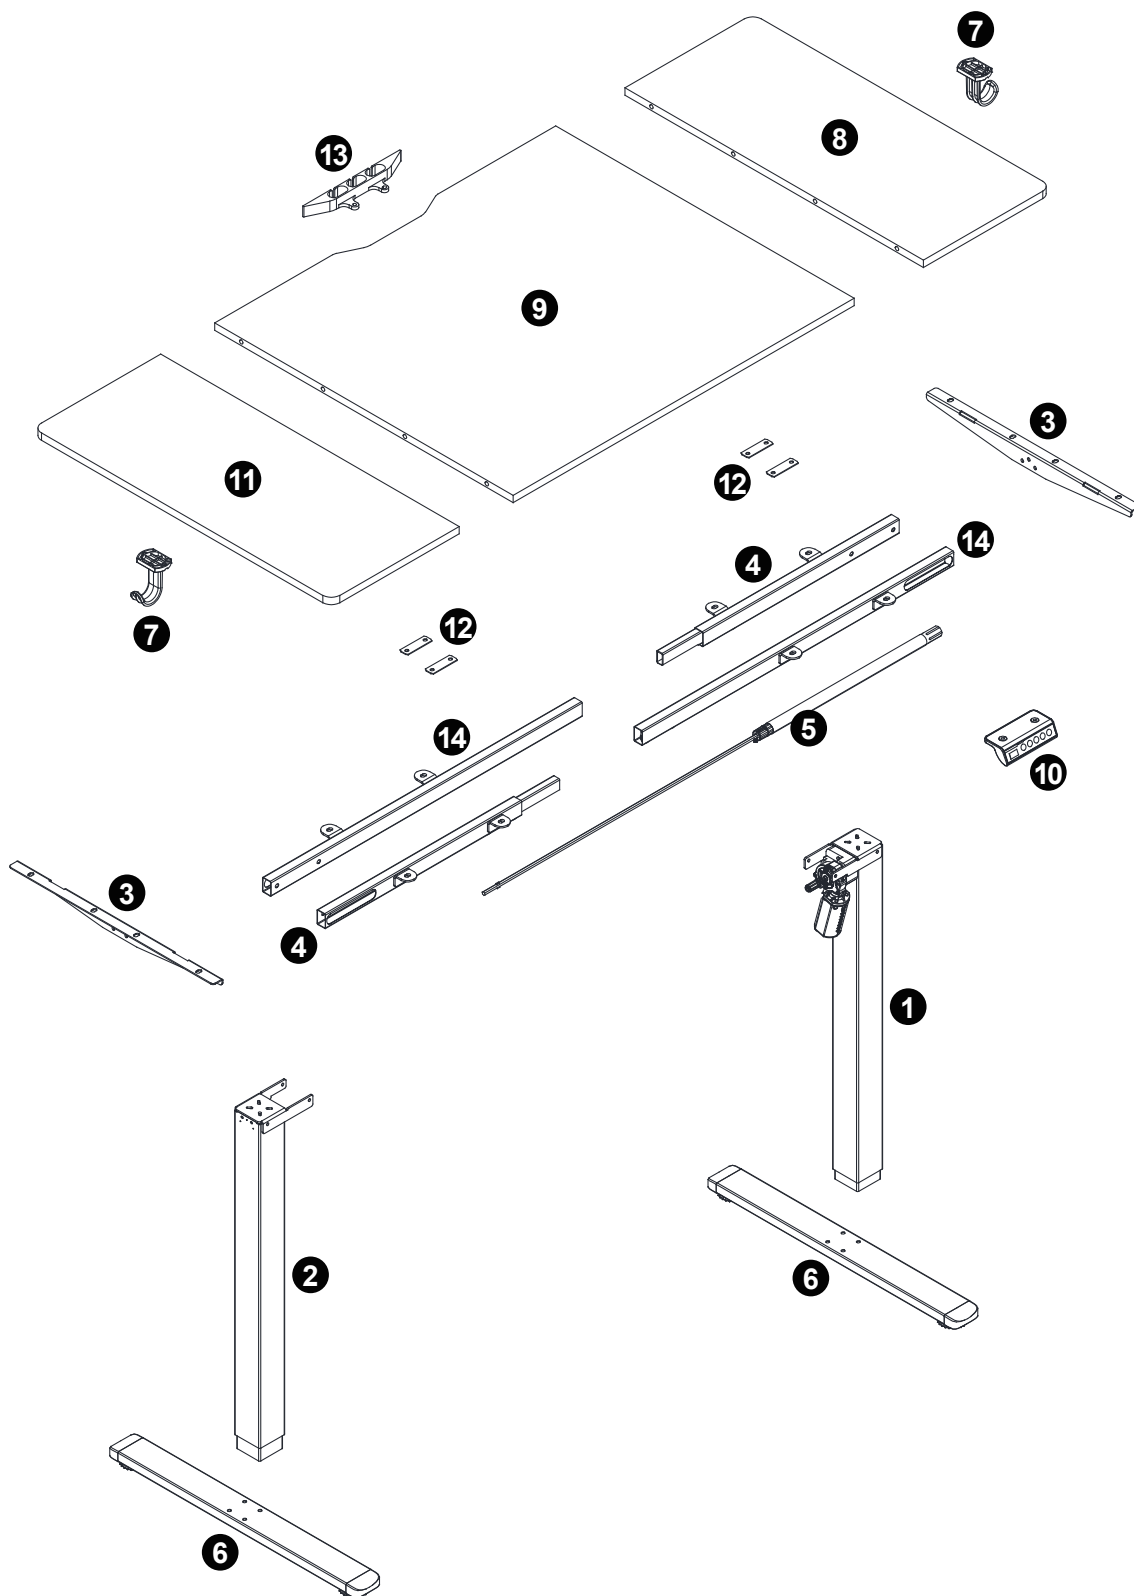







PART LIST

   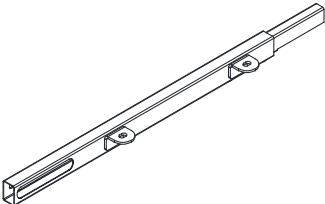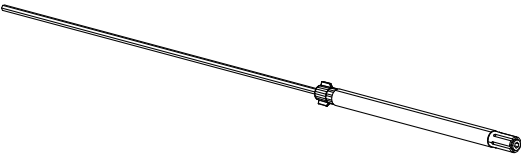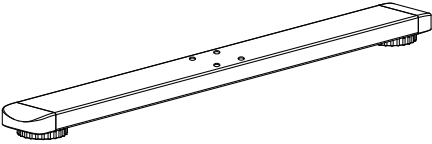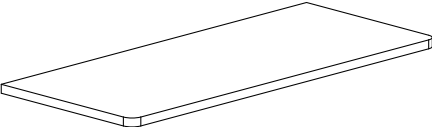1  x1	2  x1
3  x2	4  x2
5  x1	6  x2
7  x2	8  x1

  
PART LIST

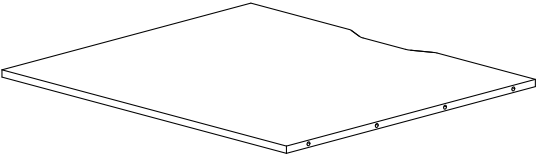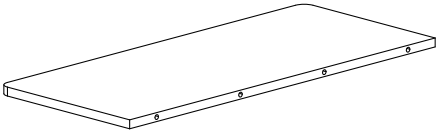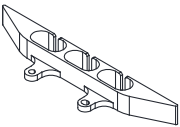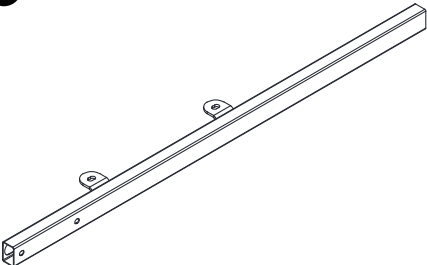9 x1 	10 x1 
11 x1 	12 x4 
13 x1 	14 x2 

   
PART LIST

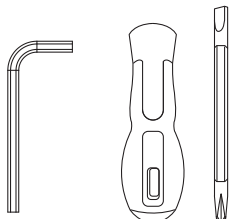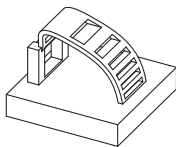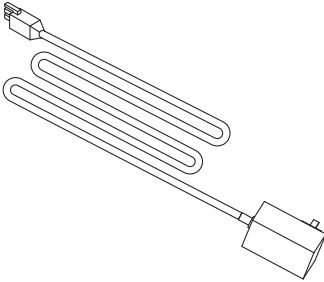A  x30+3	B  x8+1 C  x8+1 D  x8+1
E  5# x1	F  ø8x40mm x8+1
G  x3	H  x1



Note: Loosen the screws a couple of turns as shown.

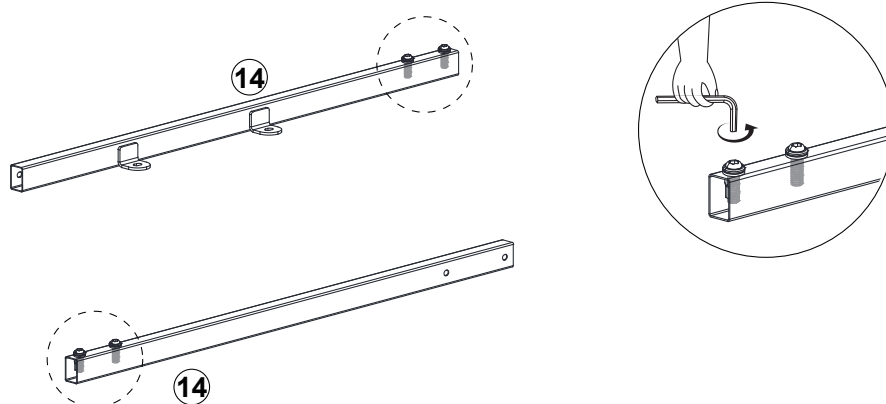



Then, insert Pipe ④ into Pipe ⑭ and tighten the screws.

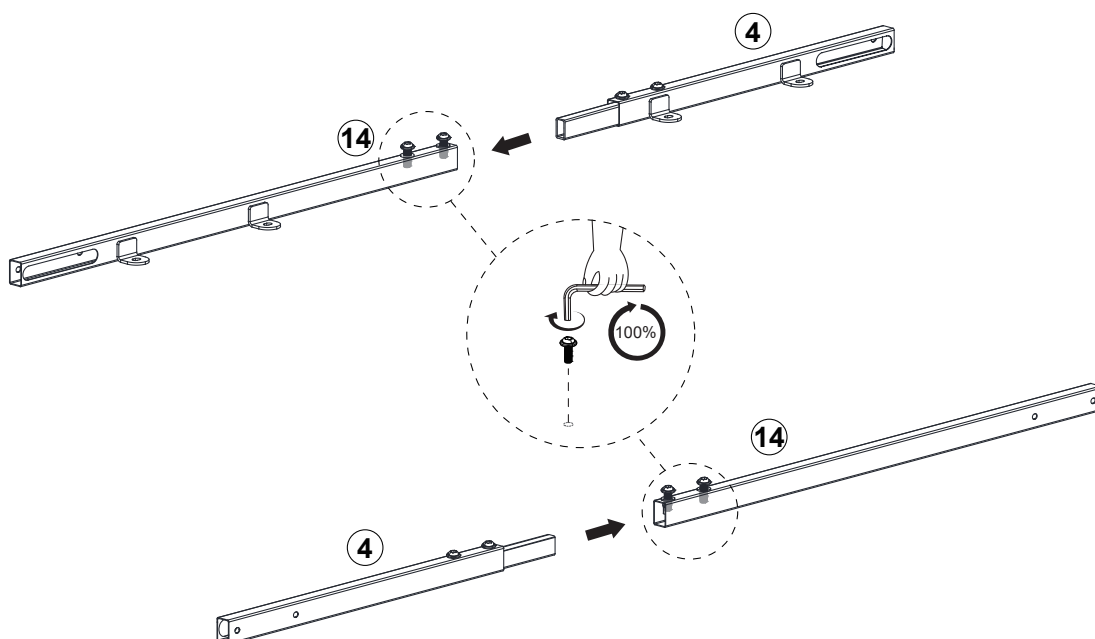

 


Note: Don't over-tighten the screws until all the parts are in place.

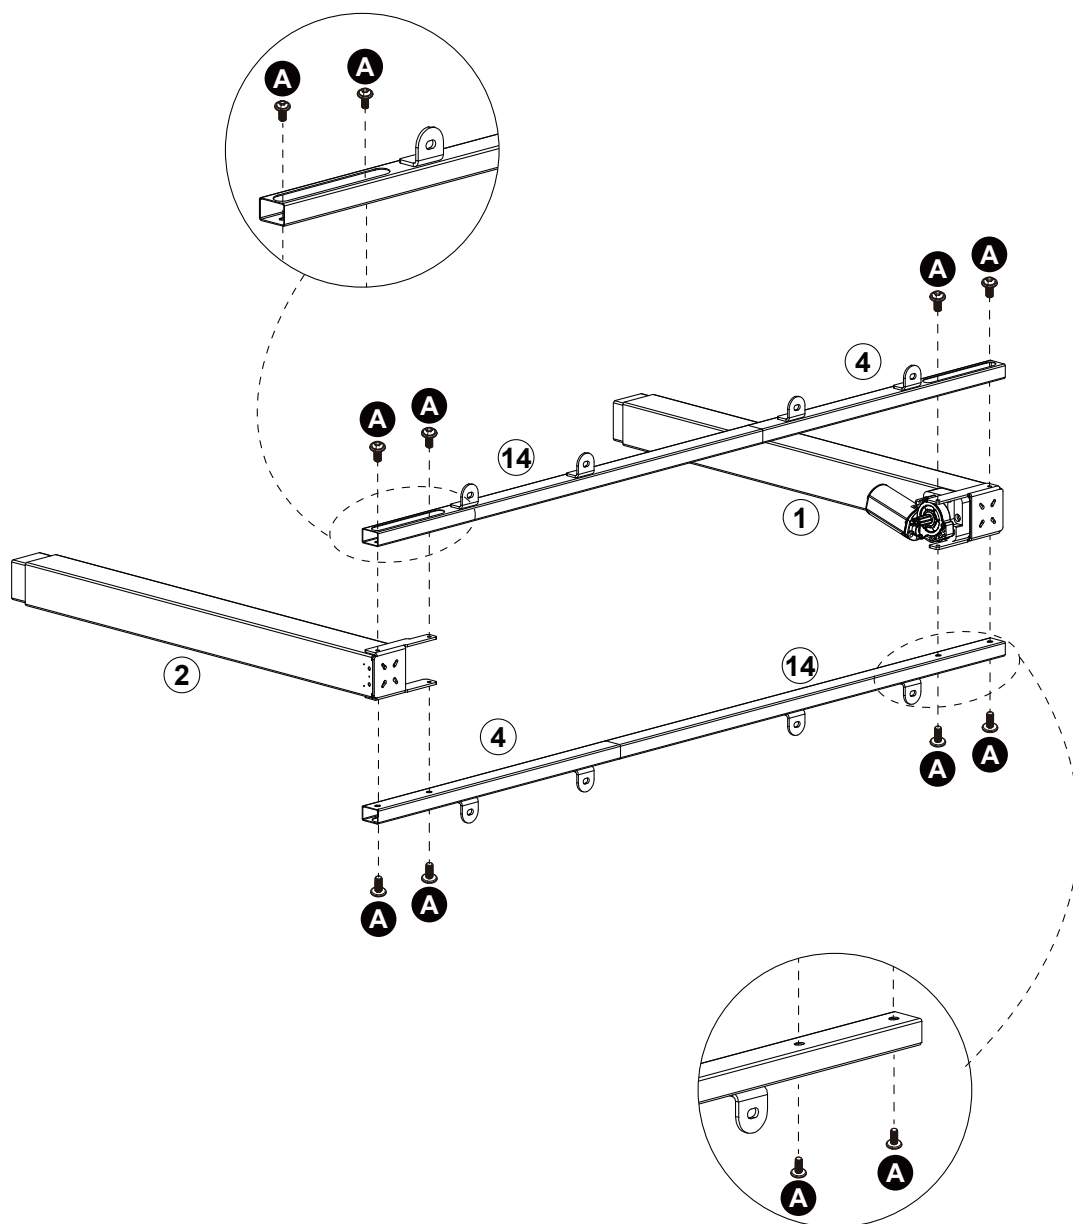

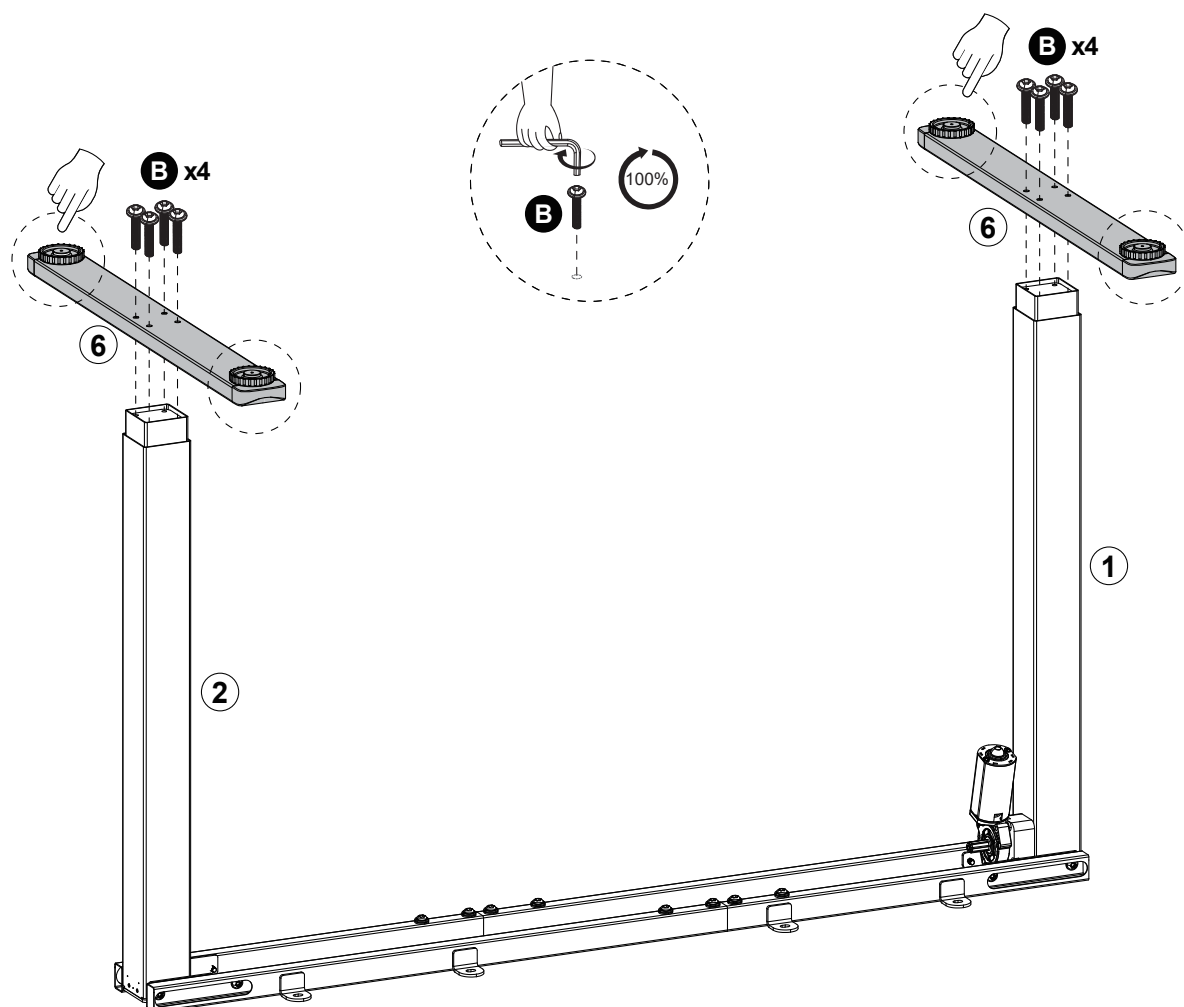

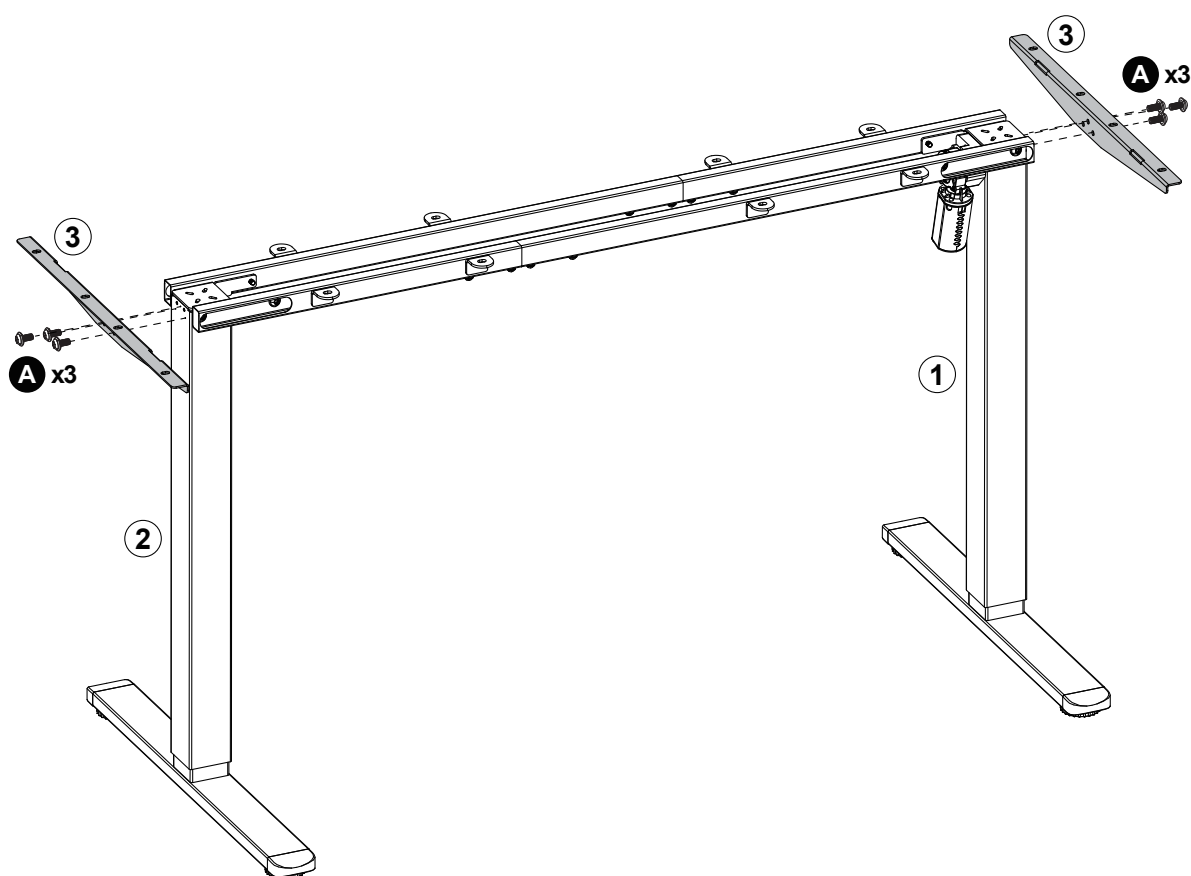

  Note: Pay attention to the holes on Board 8 pointed at by the fingers, they are on a different side from Part 13.



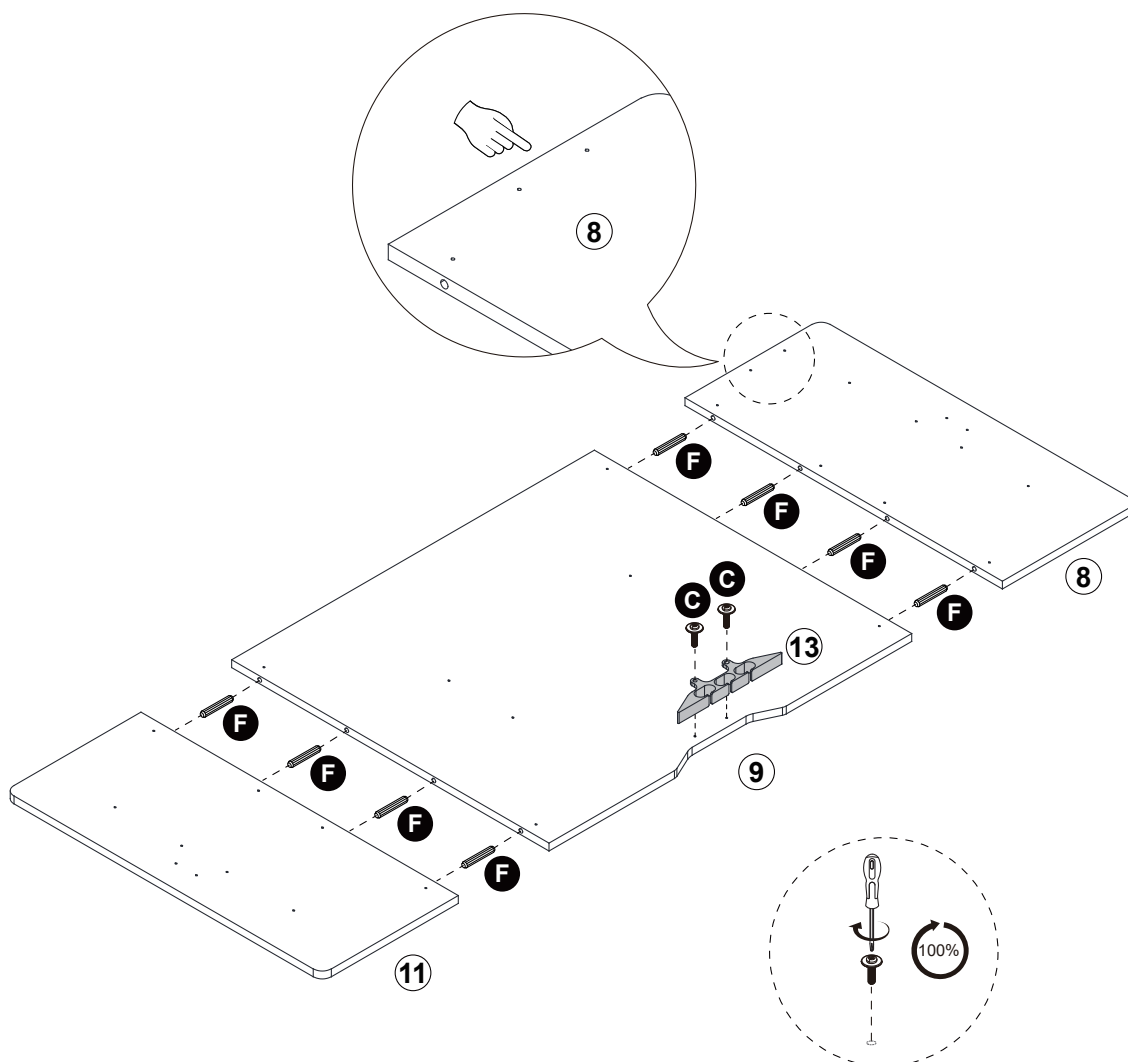


⚠ Possible problems during installation:

- There is a gap between the 3 boards.





- The hole in the bar is not aligned with the hole in the board, and the screw can not be installed.

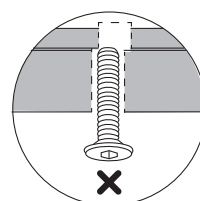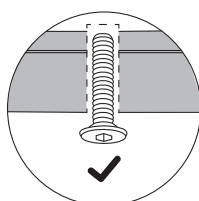
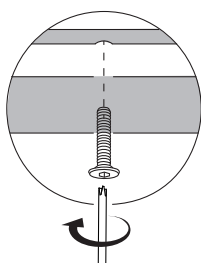


⚠ Recommended solution:

 
- Please loosen the screws which fix the boards, adjust the boards to make them fit together without gaps, then tighten the screws. Since the diameter of the screw hole in the bar is larger than the hole in the bolt, the position of the board can be adjusted.

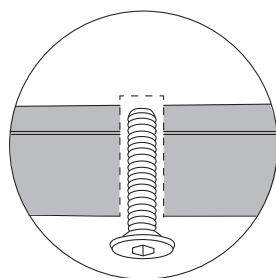

 
- If the above method doesn't work, please contact us with a photo of the holes, we will help you further.

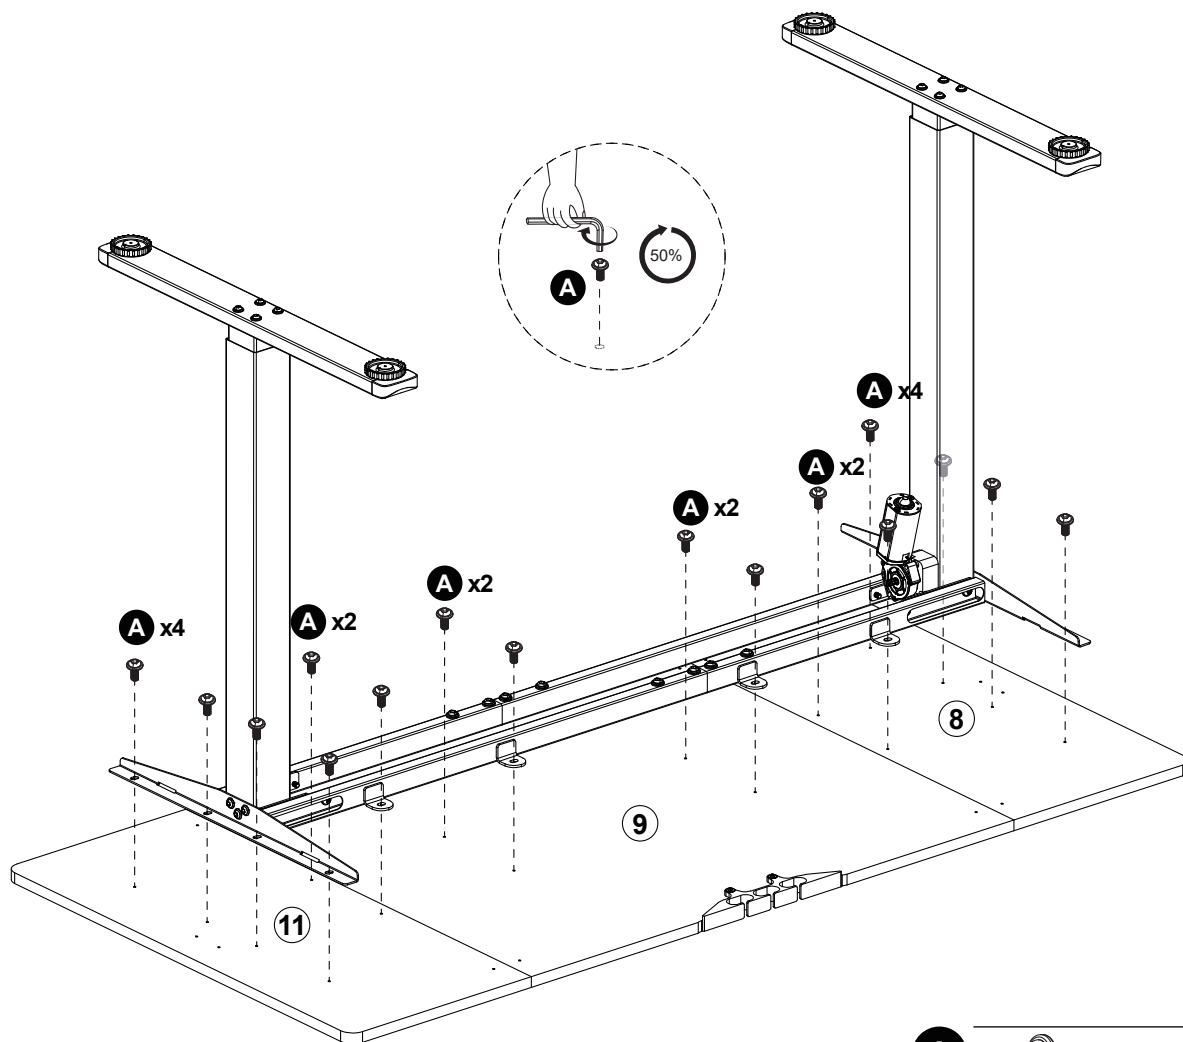




Loosen the coupling nut, and stretch Transmission Rod ⑤.

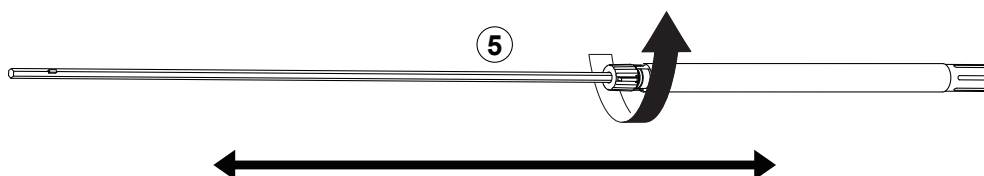


Note: Before attaching the Transmission Rod ⑤, ensure the heights of the two desk legs at the same level.


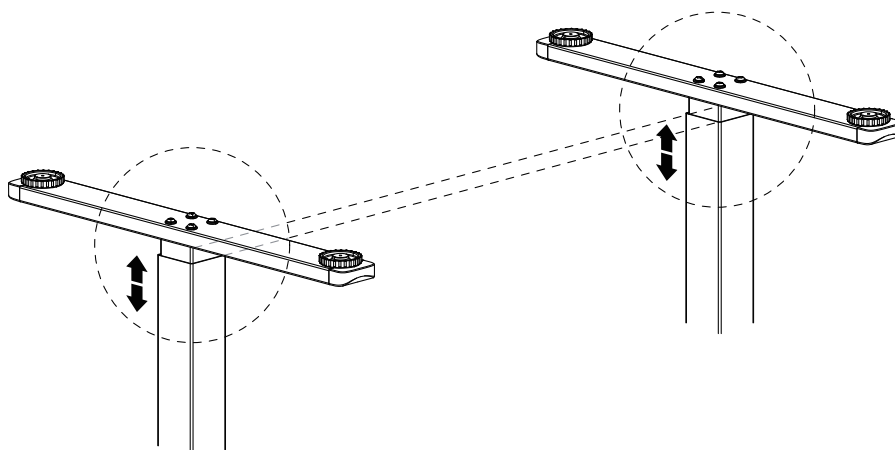




If not, you can turn the rod to adjust the Leg ② so it's level with the Leg ①. Turn the rod clockwise to lower the Leg ② or anti-clockwise to raise it.

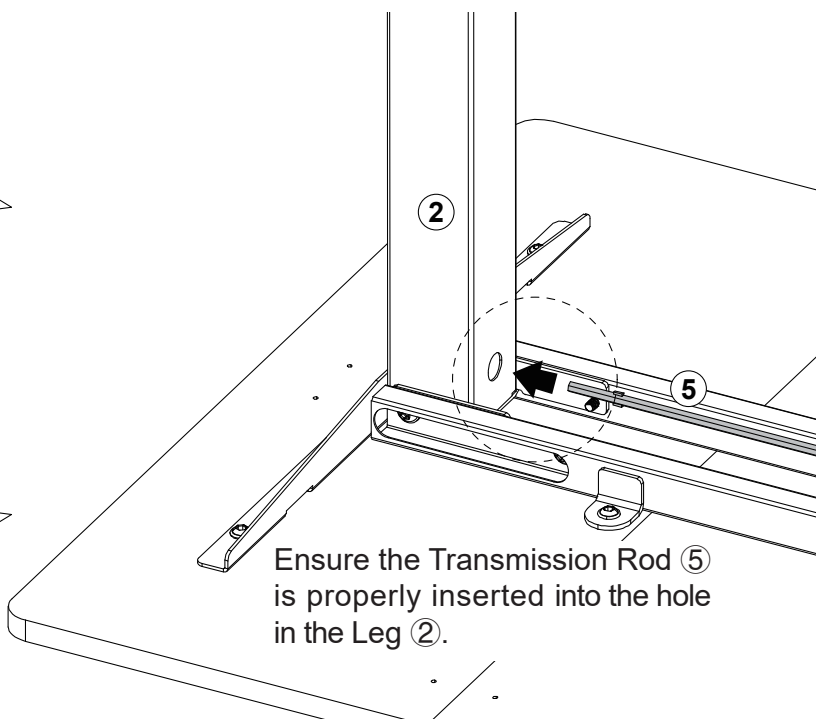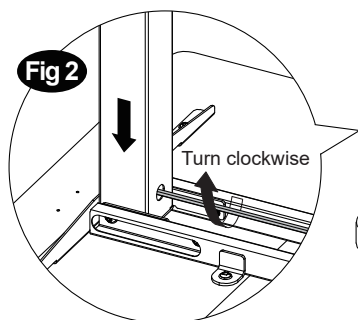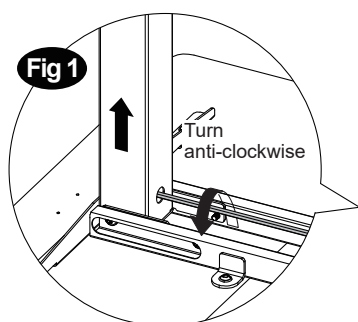


 Note: Smoothly connect the other end of the rod to the end of the motor drive shaft.

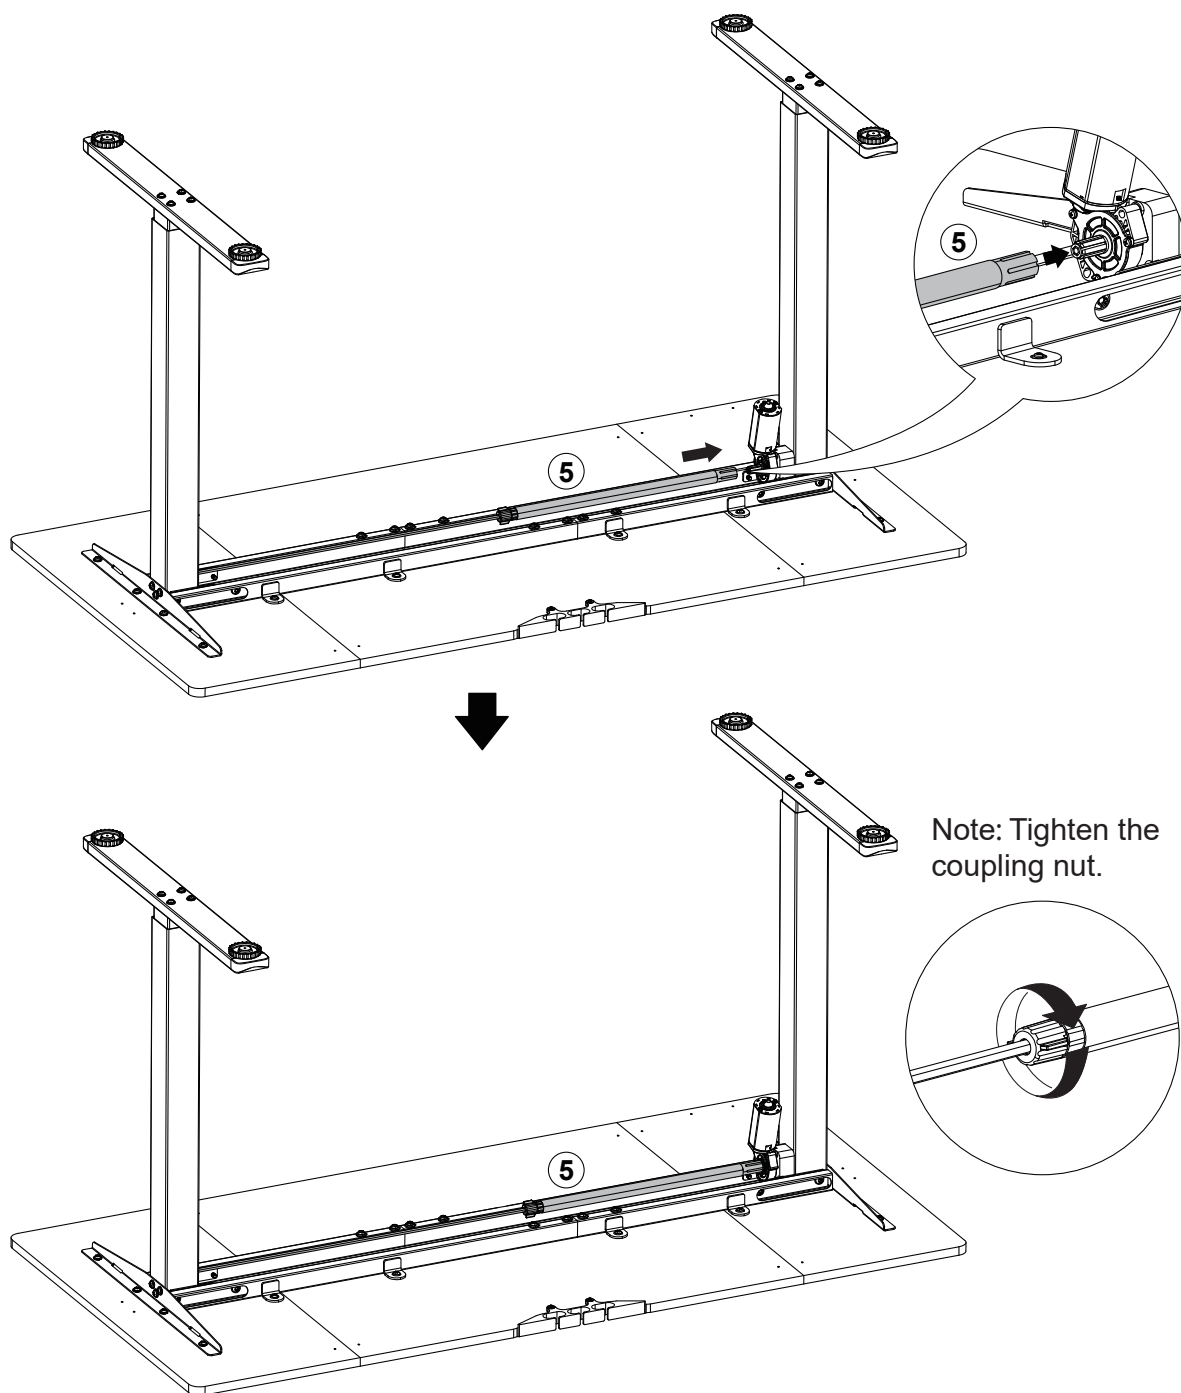

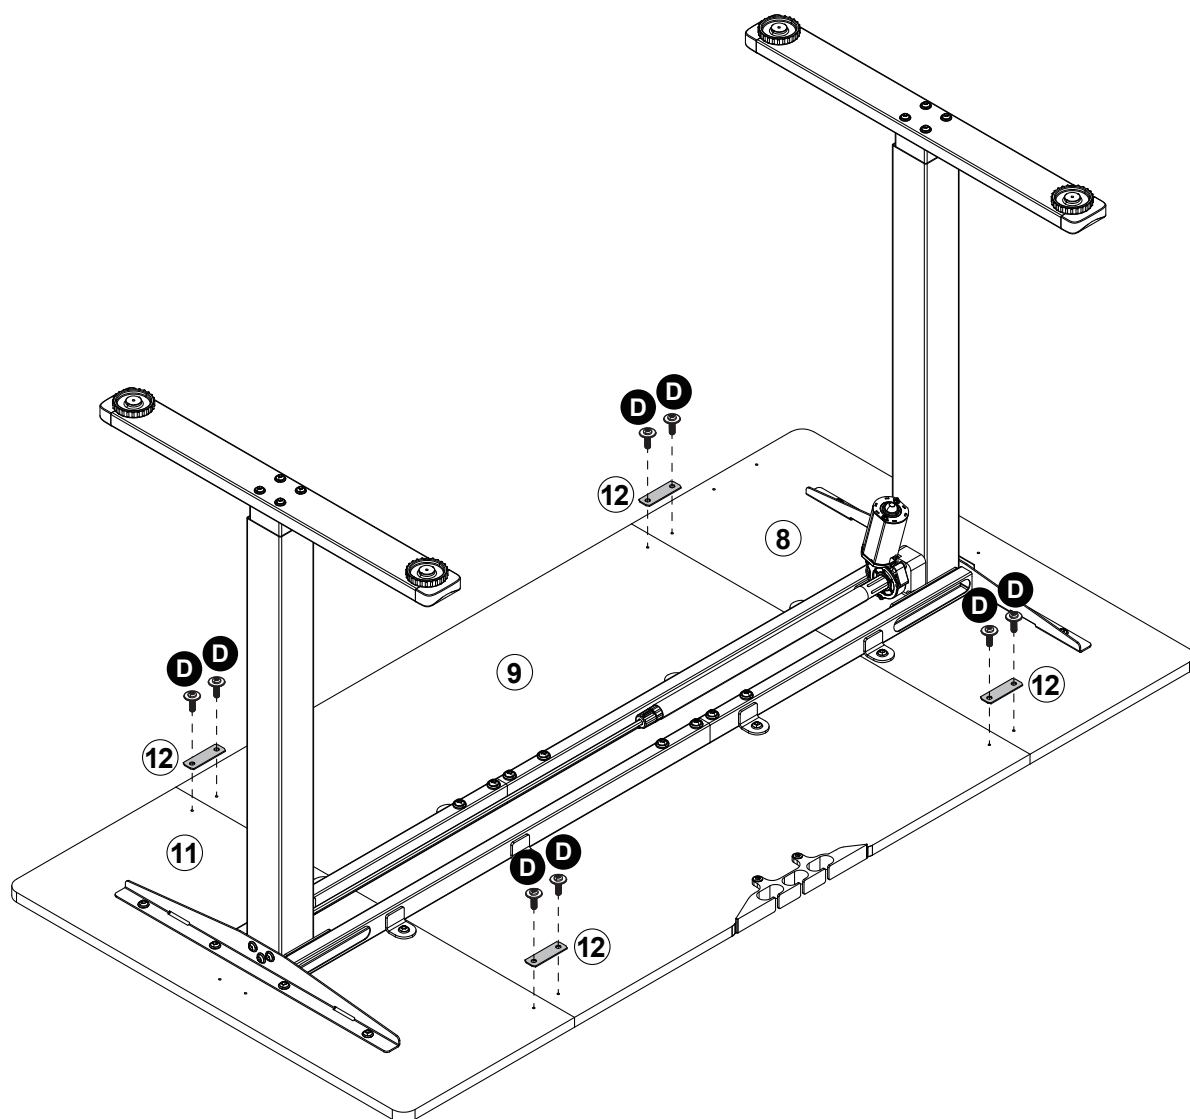

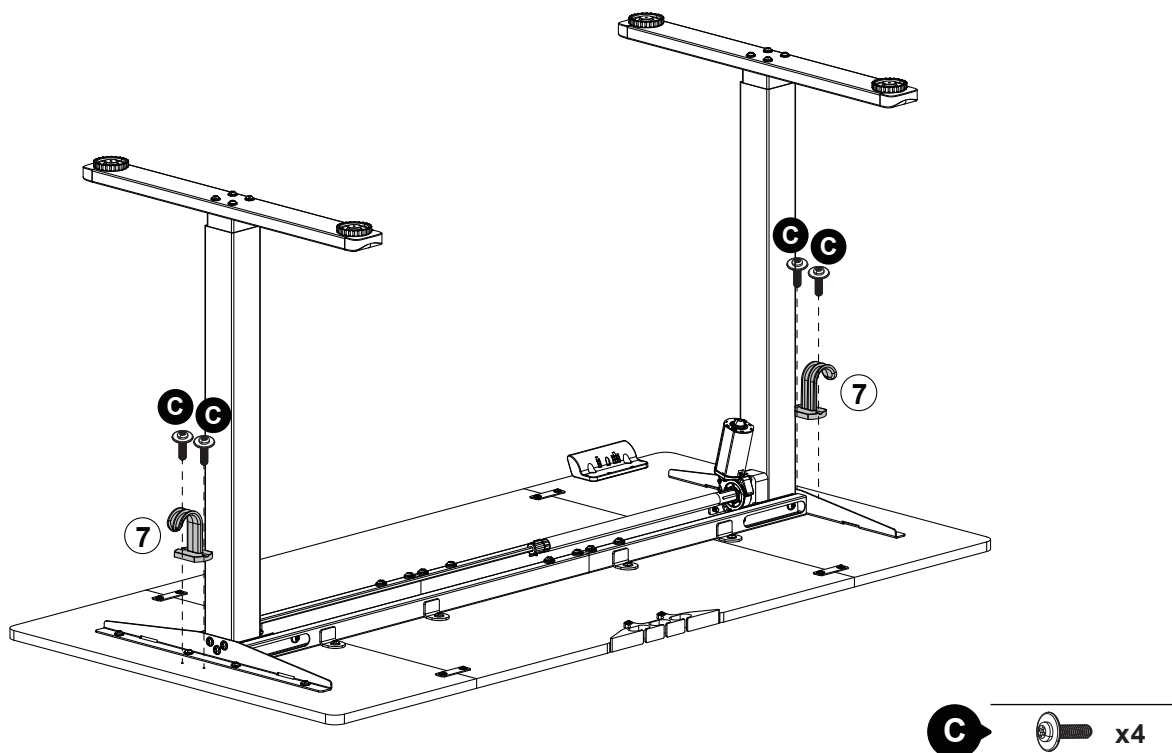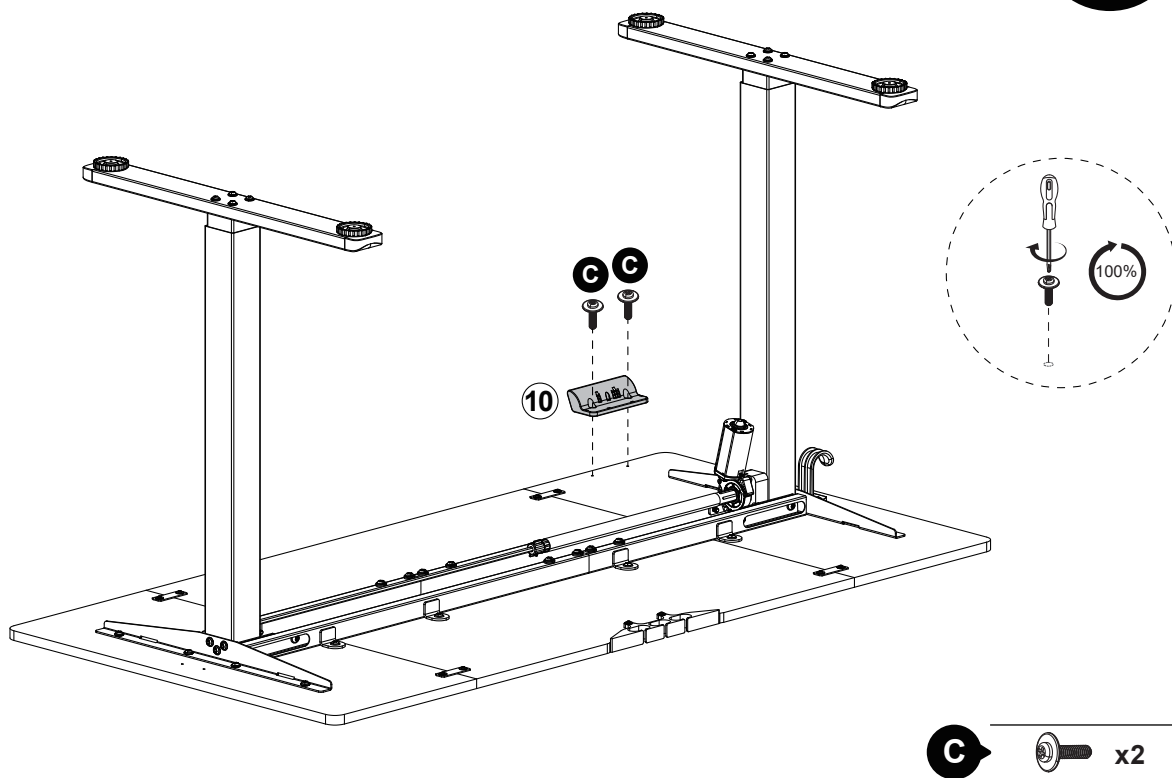

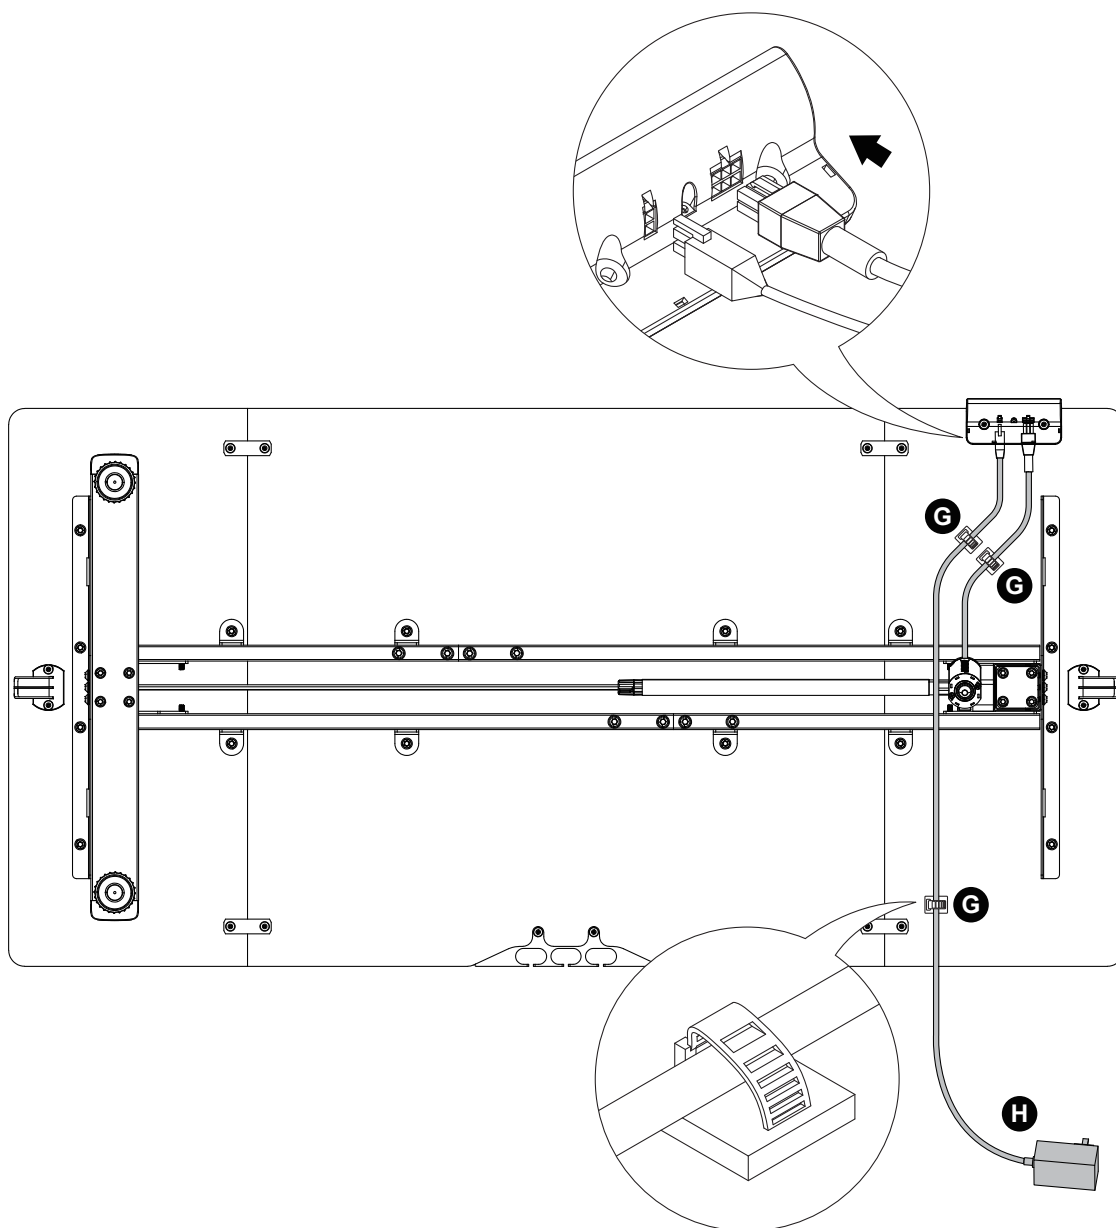


Note: After the above steps are completed, tighten all the screws.



CONTROLLER INTRODUCTION

Reset	When the height of the desk is 28.3" (LED display shows 28.3), long press ⏴ for 5 seconds, display RES and keep pressing until the digit height on the panel displays then release the ⏴ button. In the process, the desk goes down to the lowest and its height will be reset to 28.3".
Child Lock	Press and hold the ⏴⏵ buttons for 5 seconds until 'Loc' displays on the panel, then release the buttons. In the process, the desk will lock in its current position. Repeat this operation to unlock.

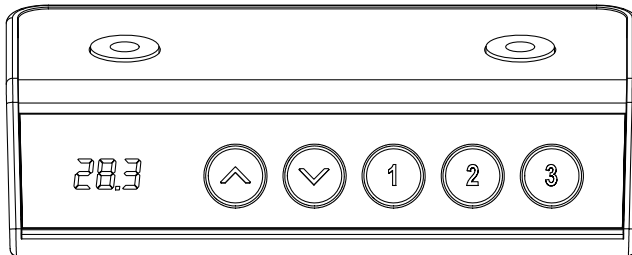

! Notes:

- The desk's movement can be stopped at any time by pressing any button.
- The height settings of the desk will remain even if the power is cut.

28.3 LED Display: Press any button once to wake up the display to show the height (in inches) of the desk at this point.



Long press the ⏴ button to raise the desk continually, and the desk will stop when the button was released or at the max. height (46.5").



Long press the ⏵ button to lower the desk continually, and the desk will stop when the button was released or at the lowest height (28.3").



Memory button: Adjust the desk to the height you prefer, then long press the ① or ② or ③ button until S-① or S-② or S-③ displays, and the height memory setting is done.

Protection Mode Error Codes

Hot	Overheat protection: When the motor operates continuously, it will stop running to prevent damage caused by overheating. Wait for a period of time before making any further height adjustments.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables, connect the power, and follow the reset instructions again.
E20	Overloading Warning: Exceed the max. loading weight. Power off, unplug the cables of the controller, take the items off the desk, power back on, plug in the cables and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables, connect the power, and follow the reset instructions again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables, connect the power and follow the reset instructions again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables, connect the power and follow the reset instructions again.