

Assembly Instructions

Chairs may vary for different SKUs




For any missing hardware, damaged parts and other problems.
WELCOME to email us.

When sitting on a chair, the one on the right hand side is the right armrest, and the other parts divided into left and right are the same .

PRE-ASSEMBLY PREPARATION:

- A cordless drill is recommended for ease of assembly.
- Clear out the space for assembly and lay out all of the parts based on the Parts List, extra room will allow you to easily determine if all the pieces are present.
- Keep small parts and pieces away from children until fully assembled.

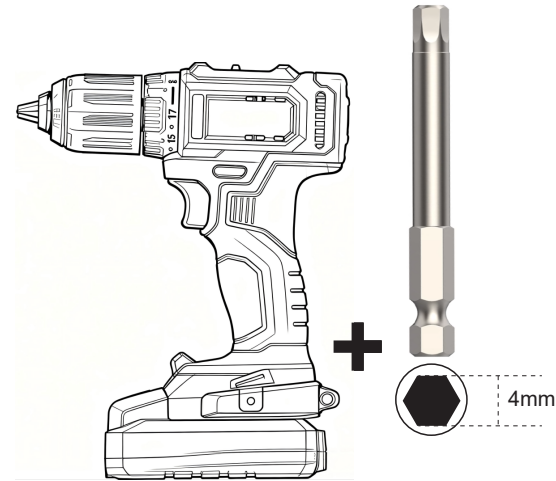

A

Platform

1 pc



D

Middle
Tube

2 pc



F2

Right
Support

2 pc



The notch faces outward

B

Square
Track

2 pc



E

Wheel
Connecting
Rod 2 pc

G

Wheel 4 pc



2 screw holes on the rod



H

Table
Leg

2 pc



C

Top Track


2 pc



F1

Left
Support

2 pc

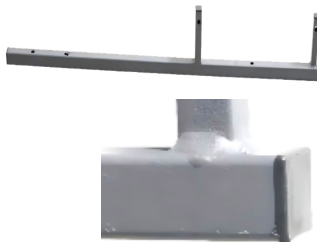












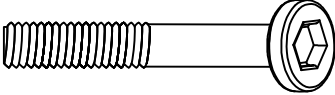

The notch faces outward

I


Table
Panel

1 pc




No.	Part/Size	QTY	Image	No.	Part/Size	QTY	Image
J	Bolt M6*20mm	4	**Actural Scale 	Q	Nut M6	12	
K	Bolt M6*35mm	4	**Actural Scale 	R	Nut M8	8	
L	Bolt M6*55mm	12		S	Allen Wrench	1	 4mm
M	Bolt M8*80mm	8		T	Allen Wrench	1	 5mm
N	Screw PB5*10mm	8		U	Wrench M6	1	
O	Small Washer M6	32		V	Wrench M8	1	
P	Big Washer M8	16					


Step 1 : Attach platform A to square track B with 4pcs bolts L , 8pcs washers O , 4pcs nut Q , using Allen wrench S and wrench U .

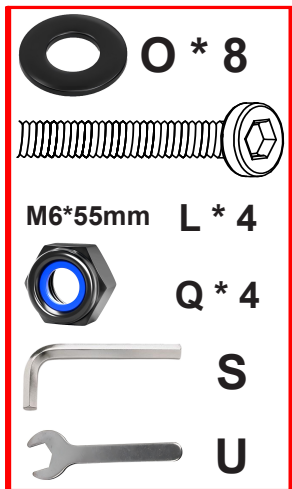

Note: Fully tighten the bolts L !
Please tighten the bolts slowly .

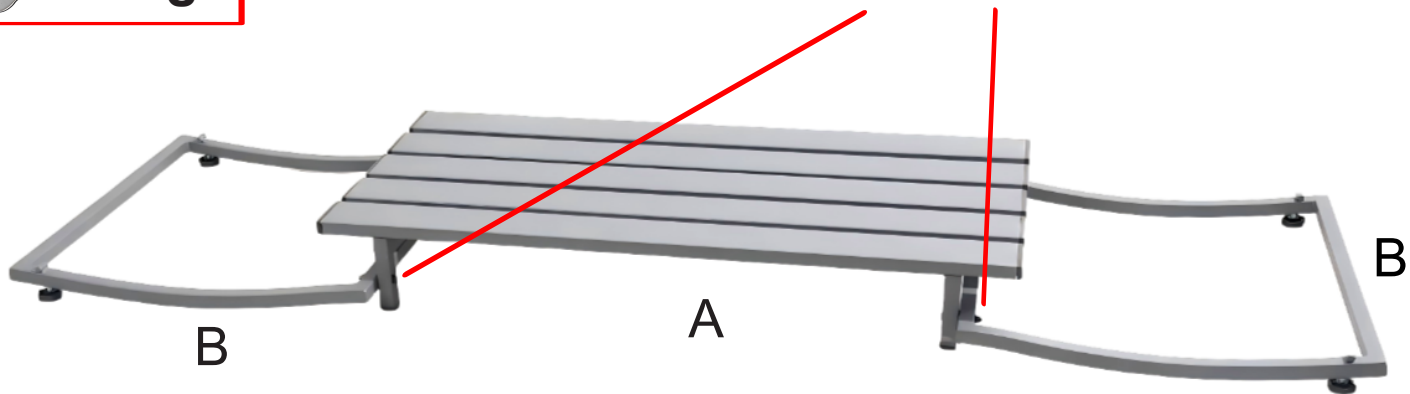

Step 2 Attach top track C to middle tube D .

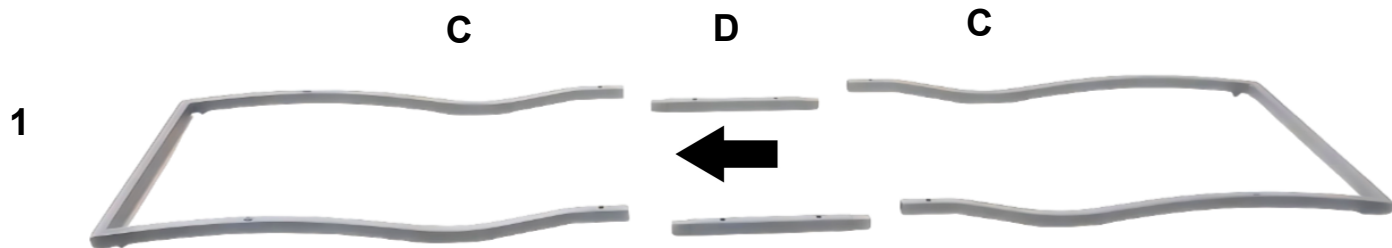

Step 3 Attach top track C to left support F1 and right support F2 with 4pcs bolts K and 4pcs washers O,using Allen wrench S.



K*4





O*4

Note:Don't fully tighten the bolts !





The notch faces outward !

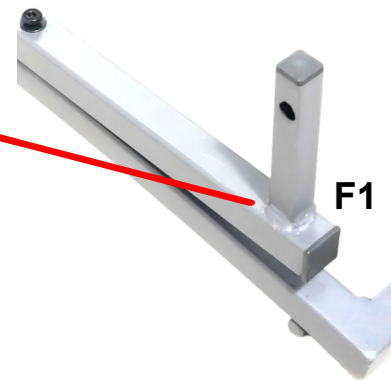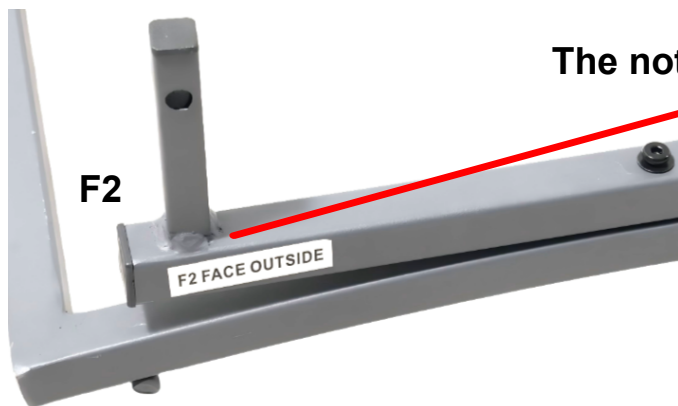


Step 4

Attach table legs H to top tracks C , middle tubes D ,left supports F1 and right supports F2 with 8pcs bolts M and 16pcs washers P and 8pcs nut R.

Note: Don't fully tighten the bolts !

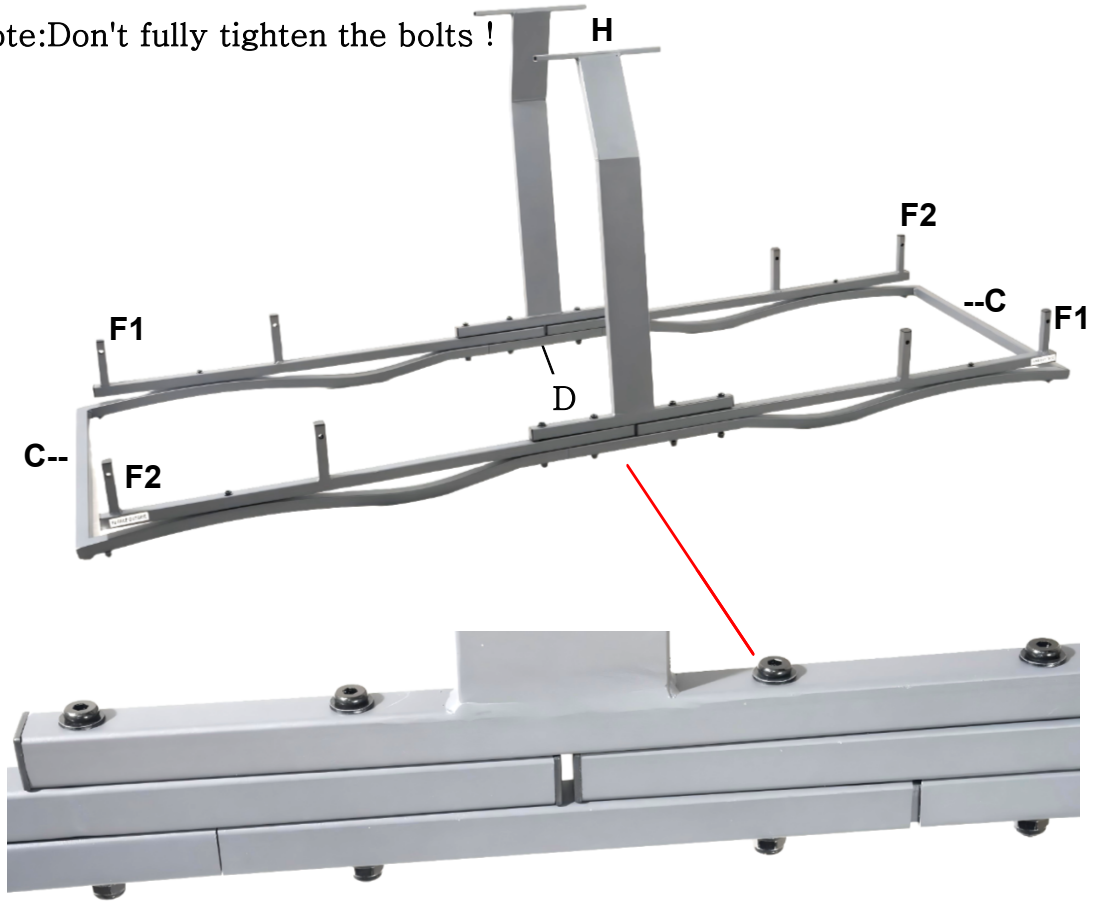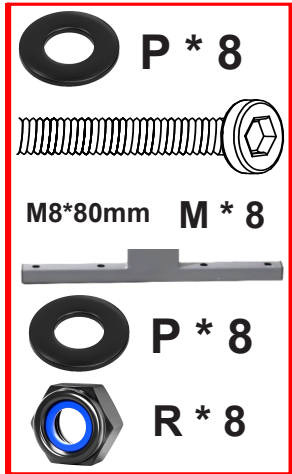



Step 5 : Attach table panel I to table legs H with 4pcs bolts J and 4pcs washers O ,using Allen wrench S.

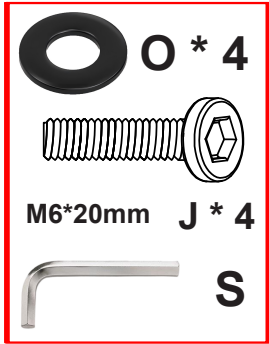

Note:Don't fully tighten the bolts !



Step 6 Put chair onto the supports F1 and F2 . Attach chair arms 2 back holds to left support F1 and right support F2 ,then 2 front holds with 8 bolts L , 16pcs washers O , 8pcs nut Q . Insert four bolts then nuts .

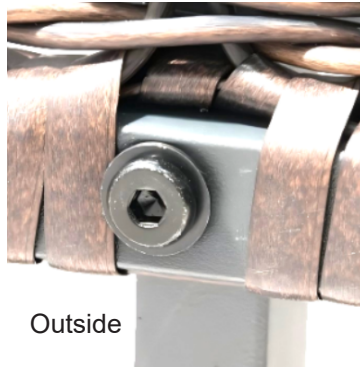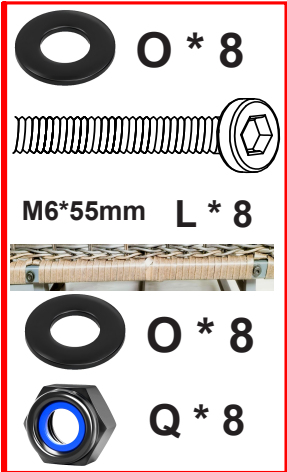

Note: Don't fully tighten the bolts , including chairs !



Step 7 Fully tighten ALL the bolts !

Please tighten the bolts slowly .



Step 8

Attach wheels G to connecting rod E with 8pcs N . The holes on the wheel are aligned with those on the connecting rod then attach other one in the same way. Press wheel down .



N*8

Note: Fully tighten the screws N !





Please tighten the screws slowly



Press wheel down



Step 9 Put wheels G onto the square track B . Don't tilt the wheels . It is normal for there to be a gap between the edge of the wheel and the track .

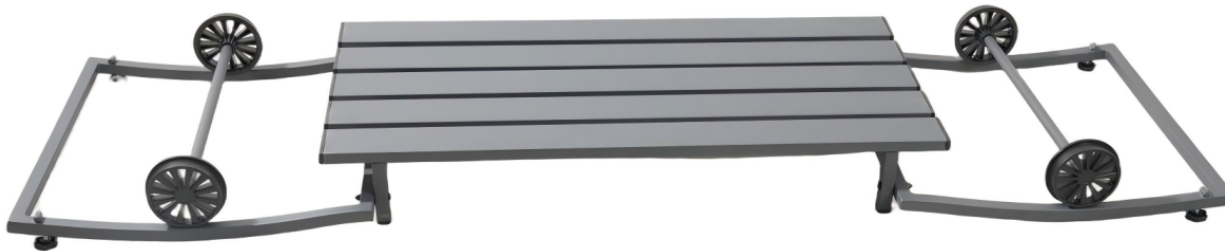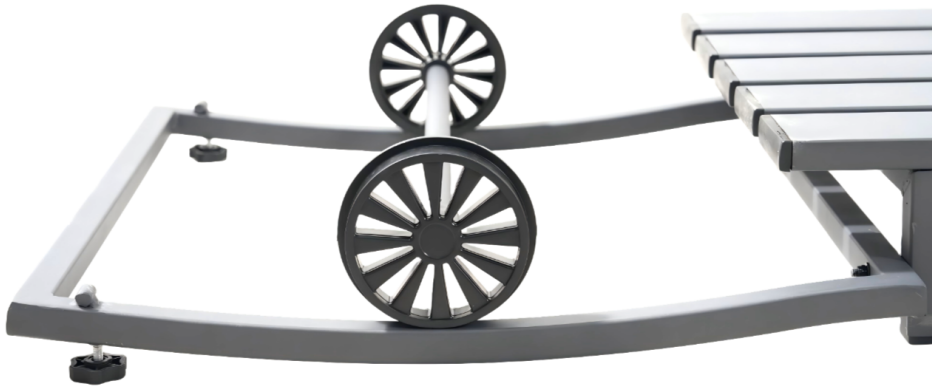

Step 10 Put top track onto the wheels . Don't tilt the wheels .



Step 11 Put the cushions onto the chairs .Rotate the adjusting foot to the appropriate position.

In order for you to fully understand the product and enjoy it safely and comfortably, please read the precautions before using it.



WARNING

This product is not a toy ! Don't lean on the chair !

Before use, please walk around and check if there are any small animals or children under the chair, and if the wheels are tilted or there are any obstacles on the track. Please do not allow infants, children , people with mobility difficulties or pets to use it.

This product can be used by up to two people. One chair is only for one person to sit on.

 
When you want to sit down or leave the chair, the chair must remain stationary !

Keep your feet on the platform and don't lift your feet ! When used by one person, the center of gravity will shift , so only a GENTLE shake is allowed. Do not shake vigorously! Don't kick your legs forcefully ! Otherwise, the chair might fall off the track. It is suggested to place some heavy objects on the empty chair. For example, several thick cushions , several dumbbell pieces , barreled water .

Don't let anyone stand nearby or behind when the chair is shaking.

Please stop immediately when the wheel hits the limit block or you felt the impact force. After confirming that the wheels are not tilted, use less force to shake chair by your legs.

Please pour in half a cup of water, do not fill it up !

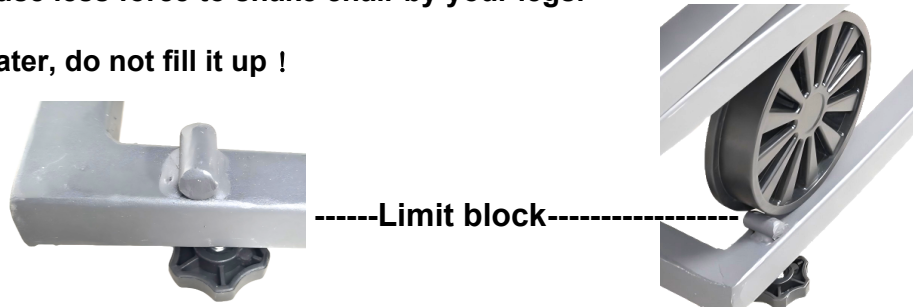

**This product is not a toy !
Please do not wear slippers, flip-flops, high heels or go barefoot.
Please don't do these things :**

WARNING



Don't kick your legs forcefully



Don't shake the chair vigorously or lift your feet



Don't stand on the chair



Don't push the chair behind it !



Don't sit or stand on the table

Q & A:

Q: Frame drilling holes not align?

A: If discrepancy less than 1/8 in., please loosen other relative bolts first, then adjust parts position and re-tight all bolts.

if discrepancy more than 1/4 in., it should be parts deformation during violent transportation, please contact us for parts replacement.

Q: Why cushion shrink packing and how to help it rebound faster?

A: We shrink packing cushion is to improve product value to cost, because it can save transport cost a lot. We filled it with more and high-quality filling than normal cushion to make sure it can be fully rebound.

Q: Coffee table legs un-even?

A: Loosen bolts, then press table downwards, then tighten bolts again. If it can not solve problem, please contact us for parts replacement.

Q: Wicker colors different on parts?

A: We make wicker stripes to fit for nature environment, colors may various circularly. So when those wicker stripes hand-woven on product randomly, it may looks different on parts.

Q: Why some swivel plate not work well?

A: Swivel plate may need a running-in period like 10~20 cycles. If it still not swivel well, please contact us for swivel plate replacement.

Q: Bolts are not long enough for assembly sometimes?

A: Sometimes gaps maybe larger than the bolts to reach out when assembly, please contact us for longer bolts. After all, those parts are woven by hand-made. But after it assembled and all bolts tightened, the gaps will be disappeared, because wicker parts are flexible surface.

Q: Parts received damaged?

A: Although we had already did our best to pack products well, there are also unpredictable transport damages accident happened from time to time. When it happens, please contact our after-sales email, state the order number/which shopping platform it comes from/one of the parcel tracking number, and provide the relevant pictures of the problem, we will immediately provide you with a suitable replacement parcel.

Q:Received item but missing hardware or parts

A:Please contact our after-sales email, state the order number/which shopping platform it comes from/one of the parcel tracking number, and provide the relevant pictures of the problem, we will immediately provide you with a suitable replacement parcel.

How to take care of the product

1. Maintain your outdoor furniture by using furniture covers or storing out of the elements when not in use.

2. Wicker: Wipe surface dust with warm water

3. Frame: Clean frames with a mild soap and warm water, rinse with clean water and dry thoroughly. Do not use abrasive materials or strong detergents

4. Fabric: Clean with mild soap and water. Do not put cushions in dryer.

5. In cold climates, drain any water accumulated inside the frames before storing.