



# Compact Kettle

Model No: JEA33



Please read this instruction manual carefully before use and save for later reference.



V002

**UNPACK YOUR COMPACT KETTLE CAREFULLY AND REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.**

## Identifying the parts of your Judge Compact Kettle

---

(with *Part Numbers* for customer replaceable items)

- ① Kettle body
- ② Lid (*JEA33LD*)
- ③ Handle
- ④ Indicator
- ⑤ Off/On Switch
- ⑥ Mains lead and plug
- ⑦ Cups (2 included)  
(*JEA33CP* - 1 cup)
- ⑧ Mains voltage selector switch (110V/230V)



## Before first use

---

1. Remove any labels or swingtickets.
2. Wash the inside of the Kettle Body ① with liquid detergent and warm water, rinse and dry.
3. Wipe the outside of the Kettle Body ① with a cloth, using liquid detergent and warm water.
4. Wash the Lid ② in liquid detergent and warm water.
  - DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER, EXCEPT THE LID ②.
5. Turn the Kettle upside down and use a screwdriver to set the Mains Voltage Selector Switch ⑧ to correspond to the mains supply voltage in your location, 110V or 230V.
  - IF YOU TRAVEL TO ANOTHER LOCATION, CHECK THE MAINS SUPPLY VOLTAGE AND, IF NECESSARY, ADJUST ACCORDINGLY. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE KETTLE.
6. Follow the “How to use” instructions to boil the maximum amount of water, then discard the water.

## How to use

---

1. Position the Kettle on a dry, level and stable surface, away from direct heat.
2. The Mains Lead ⑥ should be positioned so as not to cause an obstruction or to overhang the edge of the surface. The Kettle should not be positioned directly below a mains socket.
3. Remove the Lid ②.
4. Pour the required amount of cold water into the Kettle, ensuring that the level is below the MAX 0.5l mark.
  - DO NOT OVERFILL, OR USE WITH LESS THAN A CUP FULL OF WATER.
5. Replace the lid ②.
6. Insert the Mains Plug ⑥ into a mains socket and switch on at the socket.
7. Flick the Off/On Switch ⑤ down to begin to heating the water.
  - When the water has begun to boil, the Kettle will switch off automatically and the Indicator ④ will extinguish.
8. Switch off the mains socket and remove the Mains Plug ⑥.
9. Pour water from the spout of the Kettle, as required.
  - TAKE CARE WITH VERY HOT WATER.
  - Once the water has cooled, it can be reheated by flick the Off/On Switch ⑤ down. This will not function while the water is still hot.
  - THE KETTLE HAS OVERHEATING PROTECTION, WHICH WILL AUTOMATICALLY SWITCH IT OFF. HOWEVER, YOU SHOULD TAKE CARE NOT TO ALLOW IT TO BOIL DRY.

## Cleaning & Care

---

- Allow the Kettle to cool completely before cleaning.
10. Wash the inside of the Kettle Body ① with liquid detergent and warm water, rinse and dry.
  11. Wipe the outside of the Kettle Body ① with a cloth, using liquid detergent and warm water.
  12. Wash the Lid ② in liquid detergent and warm water.
- DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER, EXCEPT THE LID ②.
  - Do not use harsh abrasive cleaners or a brush with metal bristles.
  - When the Kettle is not in use, store in a dry place.
  - Descale the kettle regularly.
  - To minimise scale build-up, empty the kettle and rinse it thoroughly after each use.

## Cautions

---

- Before use, check that your mains power supply corresponds to the voltage set by the Mains Voltage Selector Switch ⑧ located on the underside of the Kettle Body ①.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always keep the appliance out of the reach of children.
- Do not connect the Plug ⑥ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- THE APPLIANCE MUST ALWAYS BE EARTHED - always connect to a mains socket with an earth connection.
- Never leave the unit unattended when it is operating.
- The Mains Lead ⑥ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- Do not use the Kettle outdoors.
- Do not place the Kettle close to a heat source.
- Ensure that the Mains Lead ⑥ is not near any hot surface.
- Pull the plug (do not pull Mains Lead ⑥) to disconnect from mains socket.
- Do not pull the Mains Lead ⑥ to move the appliance.
- It is not recommended that the Kettle be used with an extension lead. If this cannot be avoided, ensure that the extension lead is of the correct rating.
- As the Kettle becomes hot during use, take care when handling it and use only the handle to lift.
- Do not tilt the kettle backwards when filling or carrying it.
- Do not pour from the kettle while it is switched on.
- The Kettle should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not use the Kettle to heat liquids other than clean water.
- Do not use the Kettle with a timer or programming device.
- Do not switch on or attempt to operate the Kettle if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the Kettle yourself - contact Judge Customer Services at the address given in the warranty section.
- DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER, EXCEPT THE LID ②.
- Should the Kettle accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- Please keep your purchase receipt.

## Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power	Capacity
Judge Compact Kettle	JEA33	110-120V / 210-230V	60/50Hz	1000W	500ml



### Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

**HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.**

*Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.*

Errors and Omissions Excepted.

#### **JUDGE**

#### **CUSTOMER SERVICES**

Horwood, Avonmouth Way,  
Bristol, BS11 9HX, Great Britain

[www.judgecookware.co.uk](http://www.judgecookware.co.uk)

[customerservice@horwood.co.uk](mailto:customerservice@horwood.co.uk)

Tel: 0117 940 0000



**FOR DOMESTIC USE ONLY**

#### **CORRECT DISPOSAL OF THIS PRODUCT**



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.